 


Swish[®]

Plastic Curtain Track

Installation & Care Instructions

Suitable for Pencil Pleat Curtains

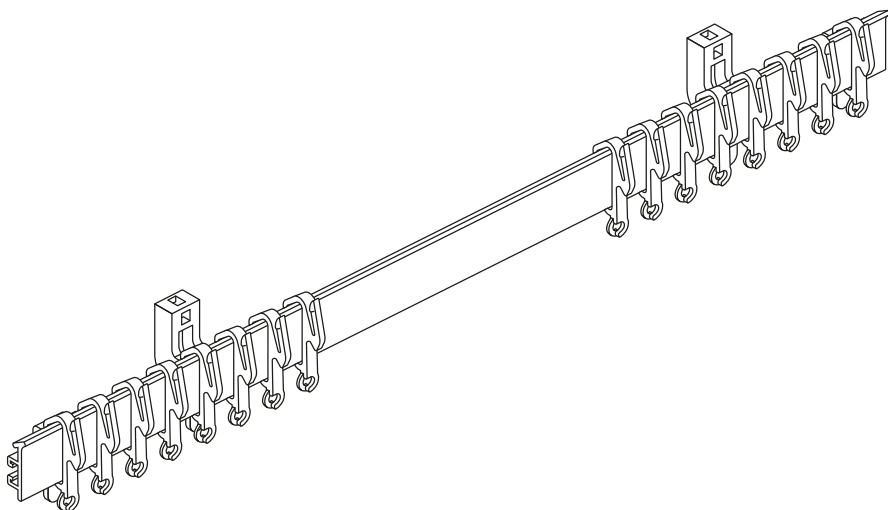

Plastic Pencil Pinch Pleat Curtain Track

Quick and easy installation without the need for special tools.

- A. Check you have received all parts supplied listed and the correct quantity of each. Beware that sometimes parts are packaged within the product so not immediately visible after opening.
- B. Please check the installation guide section for more details. If anything is missing, stop installing the product and contact our customer service team.
- C. Check all parts are intact and undamaged. Any issues, contact our customer service team.
- D. Check you have the right tools for the job. Required tools which are not provided are listed overleaf. If you are unsure of how to use these tools, please contact a professional tradesperson. We recommend Airtasker as an easy way to find trades people in your local area.
- E. Ensure that all wall plugs and screws provided are suitable for your type of wall/window. If in doubt consult a professional.
- F. We recommend two people to fit longer length tracks 400cm and above.

Care Advice

Wipe clean only.

Note:

Modification of the design or configuration of the track or its integral or non-integral component parts shall not be made without consulting the manufacturer.

 
 
 
 


Important Safety Instructions





Dear customer

- **IMPORTANT** - The first step you need to take is to ensure your safety! Please take the time to read and understand these instructions before installing the curtain track.
- Please keep these instructions for future reference.
- This item is intended for indoor use only - unless otherwise specified.
- During installation children should be kept away from the product due to possible risk of injury. The product may contain small parts that could also cause choking if swallowed.
- Products can be dangerous if incorrectly fitted or assembled. Installation should be carried out by a competent person and instructions followed. No liability will be accepted for damage or injury caused by incorrectly installed or assembled products.
- Restrain children from climbing or playing on or around the product. Always consider where products are positioned to ensure children cannot get access to long cords or windows.
- Keep all plastic wrapping materials away from babies and children to avoid danger of suffocation.
- Ensure that all packaging is disposed of carefully and responsibly. Please recycle where possible.
- Once items are part or fully installed, they are not returnable unless faulty.

Tools

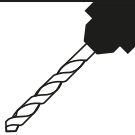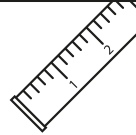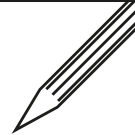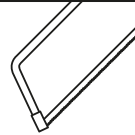
Tools required which are not included						
Drill	Cross head screwdriver	Spirit level	Tape measure	Pencil	Hacksaw (if adjusting the track size)	File (if adjusting the track size)
						

    Parts Supplied For Track

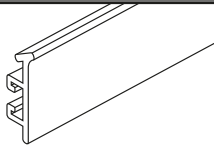Ref	Part	Visual	Qty for 125cm Track	Qty for 150cm Track	Qty for 200cm Track	Qty for 250cm Track	Qty for 300cm Track
1	Track		1	1	1	1	2
2	Gliders		16	18	26	32	38
3	End Stop		2	2	2	2	2
4	Brackets		4	4	5	6	6
5	Screws & Wall Plugs		4	4	6	8	11
6	Joiner		N/A	N/A	N/A	N/A	1*

*Joiner supplied with track lengths of 300cm and over only.

 Exploded Diagram






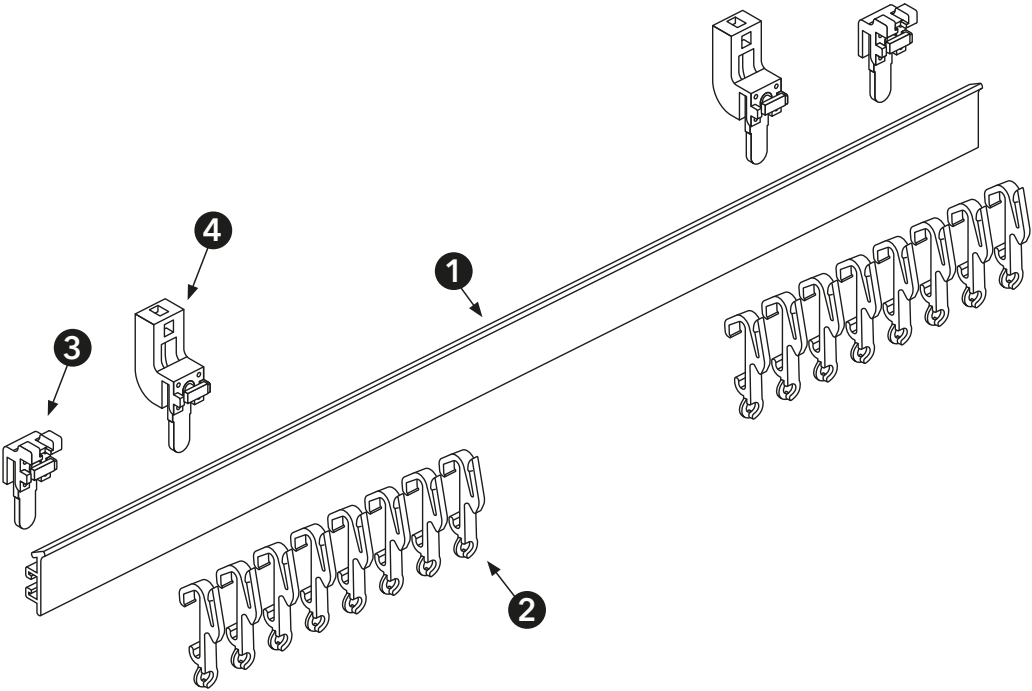


Important

When drilling into walls always check there are no hidden wires or pipes etc. Make sure that the screws and wall plugs being used are suitable for supporting your blind. If you are unsure of the below guidance, consult a qualified tradesperson for advice or help.

Hints

      - General Rule; Always use a larger screw and wall plug if you are not sure.
- Ensure you use the recommended drill bit to match the wall plug and hole size.
- Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
- Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure the plug is fitted below the ceramic tile to avoid splitting or cracking.
- Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

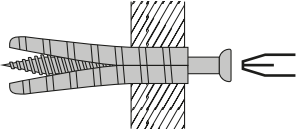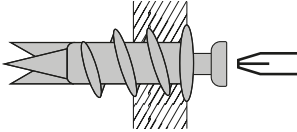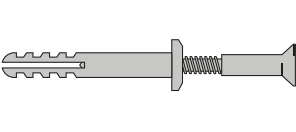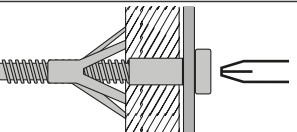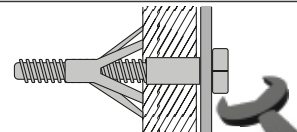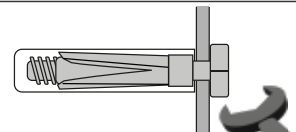Wall Plug Types		
You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone, wood or plastic board.		
GENERAL PURPOSE	PLASTERBOARD	HAMMER
		
For light loads only. Options available for most wall types.	For light loads only. Attach into plasterboard.	For light loads only. For solid walls covered with plasterboard. Allows the fixing to be attached into brick behind.
CAVITY - LIGHT LOAD	CAVITY - HEAVY LOAD	SHIELD ANCHOR
		
Light load cavity wall plug for use into plasterboard or hollow wooden doors.	Heavy load cavity wall plug for use into plasterboard or hollow wooden doors.	For heavier loads into masonry, brickwork or concrete.

Care and maintenance

Regularly check the fixings to ensure the wall plug or screws have not become loose. Tighten or stop using the product if they have.

 
Important - Keep these instructions for future reference

- Ensure that all wall plugs and screws provided are suitable for your type of wall/window. If in doubt consult a professional. See wall fixing guide within this document for guidance.
- Make sure the screws and wall plugs used are suitable for your wall type and that they can support the weight of the product. Consult a qualified tradesperson if unsure.
- Before drilling into walls, always check there are no hidden wires or pipes behind.

1. Measuring your window


First check the width of your window recess, the width of the track should be a minimum of 20cm wider than the windows recess (minimum 10cm each side).

Note: The track length can be reduced if required - see step 2 for further detail.

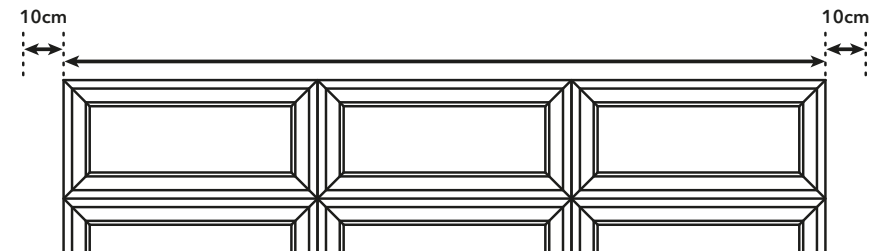


Wall fix:

 Mark a line on the wall, 10cm over the top edge of the window. Centre the track to the window and mark the position for the end brackets no more than 7cm from the end of the track. Mark the position of the remaining brackets by distributing them evenly along the track.

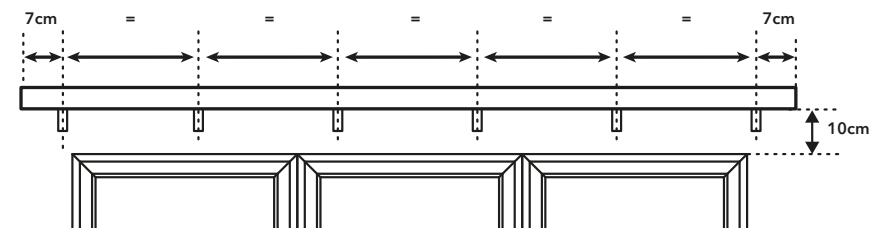


Ceiling fix:

 Mark a line parallel to the wall where you wish to install the track. We recommend the track to be installed at least 10cm from the wall. Centre the track to the window and mark the position for the end brackets no more than 7cm from the end of the track. Mark the position of the remaining brackets by distributing them evenly along the track.

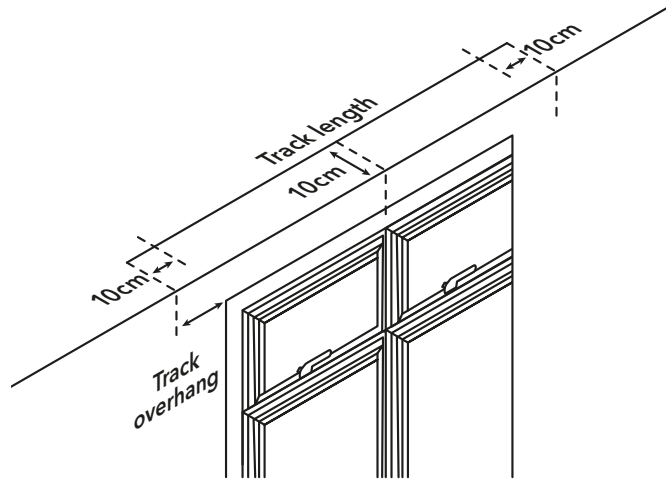

For bay windows:

 Follow below drawing for bracket positions in corners. If you are using two tracks joined together, the brackets must be placed 4cm on either side of the join.

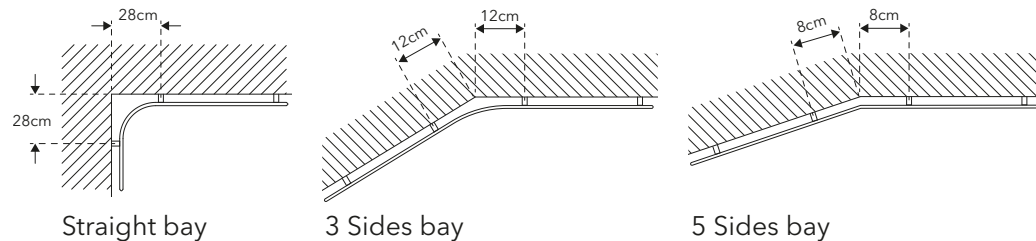

Note: Additional Swish lever lock brackets are sold separately if required.

2. Shortening the track

 
Please ensure you have the correct size of track before cutting down to size.

For tracks up to 300cm: Cut from one end only.

For tracks 300cm and over: Cut equal amounts from the end of both track pieces.

Eg. To reduce the overall length by 10cm you need to remove 5cm from one end of each piece.


- Using a hacksaw, carefully cut to length ensuring a straight edge remains. Remove all burrs using a file.

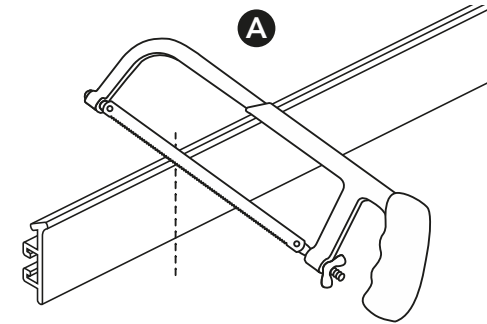

3. Preparing the brackets

Once you are happy with the bracket positions marked in step 1, secure fixing brackets as required ensuring the correct drill bit & fixings are used.

 Locate Locking Lever (B) into each bracket in a vertical position as shown.

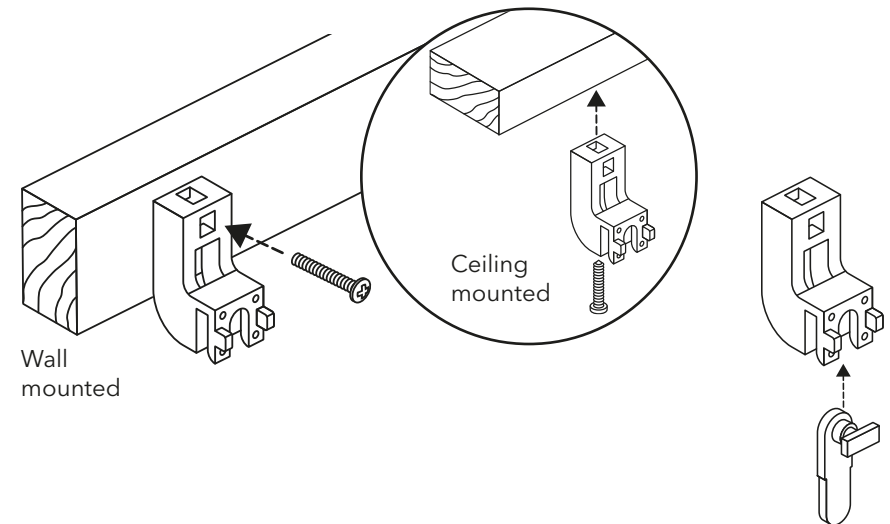


4. Assembling the track


Note: When installing longer lengths, assistance may be required to support the rail at the other end. We recommend two people to fit longer length tracks.

For tracks over 250cm:

 
Join the two pieces of track together using the joiner piece. The joiner is to be slotted equally into the back channel of both tracks and secured into position using screws provided. Note: Additional joiners can be purchased separately if required.

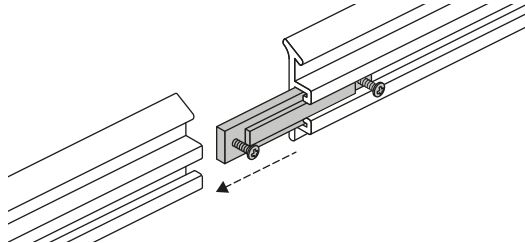

 - Assemble the levers into end stops.
- Fit one end stop and position 2.5cm from the track end and lock into position by rotating the lever through 90 degrees until horizontal.

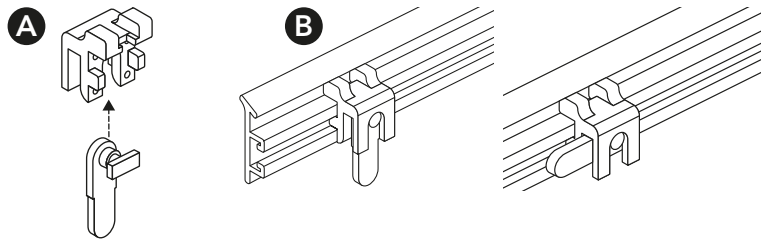


 - Fit the glider over the end stop.
- Add the remaining gliders from the other end.
- Repeat step 2 and 3 at the other end of the track.

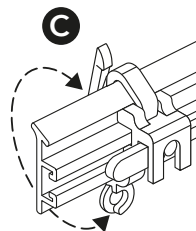

5. Fixing the track to the wall

 
- Starting at one end offer the rear channel of track up to fixing brackets.
- Secure by rotating bracket lever arm through 90° to a horizontal position.
- Proceed with this method along the whole track until all the brackets and track are securely in position.

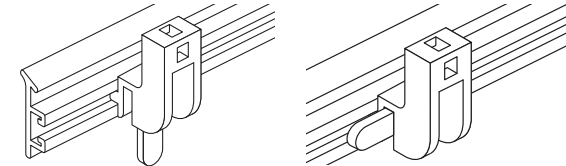

6. Attaching the curtains


The supplied gliders can be attached to a curtain header tape with the hook or curtain hooks can be used in the lower eyes.

 Using a header tape, insert the glider hooks into the curtain tape pockets at approximately 8cm intervals.

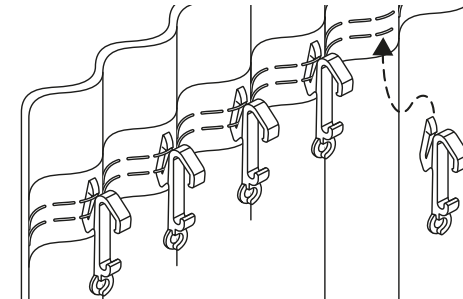

Glider can be clipped onto the rail by engaging the upper part with the top edge of the rail and then snapping the bottom onto the bottom rail edge.

 To fix the curtain ends in place, snap the last glider over the end stop brackets.

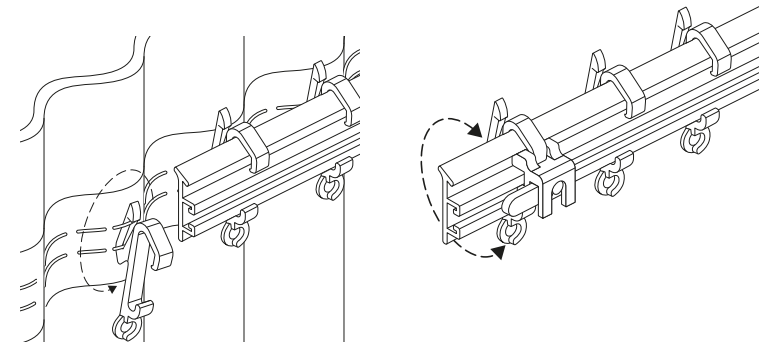

Customer Service Centre

If you have any issues with this product, you can call our **Customer Service** team on:
0345 165 6565 Monday to Friday **9am to 5:00pm**.

Alternatively, you can contact our team by Live Chat on:

Dunelm.com

Monday to Friday 8am - 8:30am

Saturdays 8am - 5:30pm

Sundays and bank holidays 9am - 4:30pm



Dunelm (Soft Furnishings) Ltd. LE7 1AD &
Dunelm (Soft Furnishings) Holdings Ltd. Dublin D12 WR25

OPRL

FSC

Manufactured in China