 


Winslow Wall Cabinet

INSTRUCTIONS



 
30MINS



2 PERSON ASSEMBLY







MEDIUM DIFFICULTY

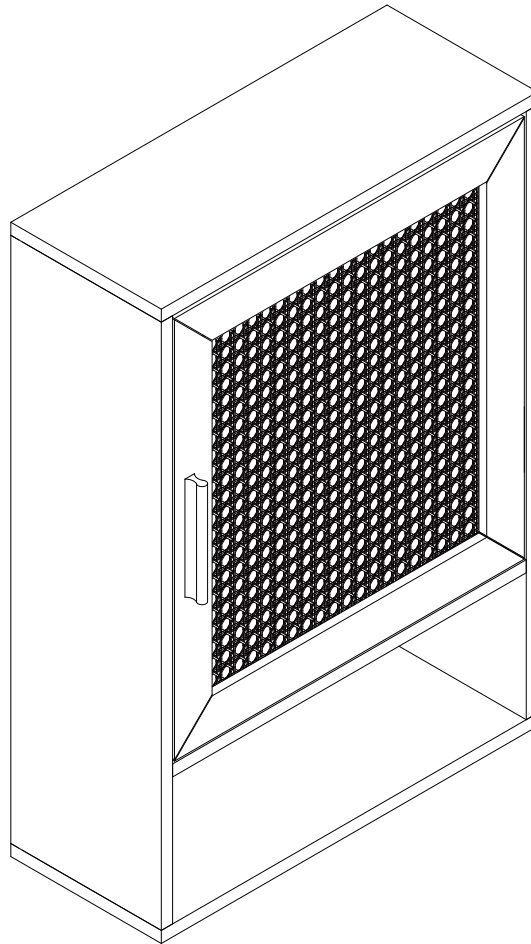

Dunelm

    www.dunelm.com

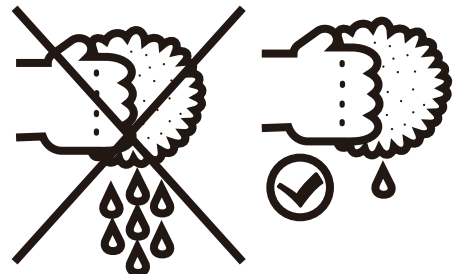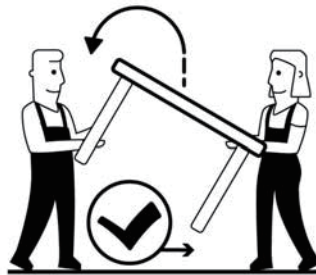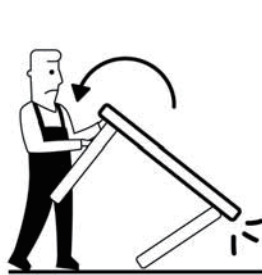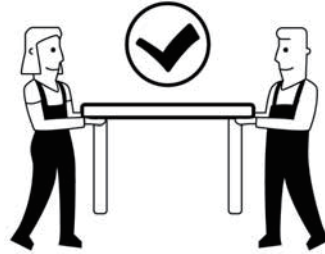

Thank you

Dear Customer

Thank you for purchasing your new piece of furniture from Dunelm. We put a lot of effort in the design and construction of our products to ensure they set the standard for quality, durability and ease of assembly.

If for any reason you feel we haven't lived up to the high standards we set ourselves, please don't hesitate in contacting us on 03451 656565 where our team will be very keen to understand what has gone wrong and, more importantly, put it right.

The next step...

There is no need to feel daunted by the number of parts and fittings in front of you, we have compiled this straight forward, step-by-step guide to make sure that assembling your furniture is as easy as 1, 2, 3. Before you begin, we advise that you check that you have everything you need to get started.

Top tip

Find a space to spread everything out across the floor before you begin assembling the item. Lay each panel down on a clean and level area, ideally in the room of intended use, ensuring there is enough room to manoeuvre around the item. It is recommended that two people assemble this product together. The full list of furniture parts, fixtures and fittings, as well as the tools you will need for assembly can be found on page 2 and 3 of this manual.

Top tip

Identify all of the fittings, make sure that you have them all prepared and familiarise yourself with each component, to make things easier when you are putting it all together.

Safety and care advice

IMPORTANT - The first step you need to take is to ensure your safety! Please take the time to read and understand these instructions before assembling your furniture.

Please keep these instructions for future reference.

Keep children and animals away from the assembly area. This furniture contains small parts that could cause choking if swallowed.

Keep all plastic wrapping materials away from babies and children to avoid danger of suffocation.

Ensure that all packaging is disposed of carefully and responsibly.

From time to time check that there are no loose fittings on the unit, re-tighten when necessary.

 
 
 
 
 
 
Two people may be required for the assembly of this product.


Once items are part or fully assembled they are not returnable unless faulty.

This item is not for outdoor use – unless stated otherwise.

Some items will be supplied with a wall fixing strap, which we recommend is used to secure the item to the wall, to prevent a child from accidentally pulling furniture over. Furniture can be dangerous if incorrectly installed. Assembly should be carried out by a competent person. No liability will be accepted for damage or injury caused by incorrectly installed or assembled furniture.

Component parts supplied


Ref	Dimensions	Visual	Qty
1	57x18.8cm		1
2	57x18.8cm		1
3	36.6x17.3cm		1
4	57x36.6cm		1
5	40x19cm		1
6	40x19cm		1

 Ref	Dimensions	Visual	Qty
7	38.4x36cm		1





 Parts and fittings

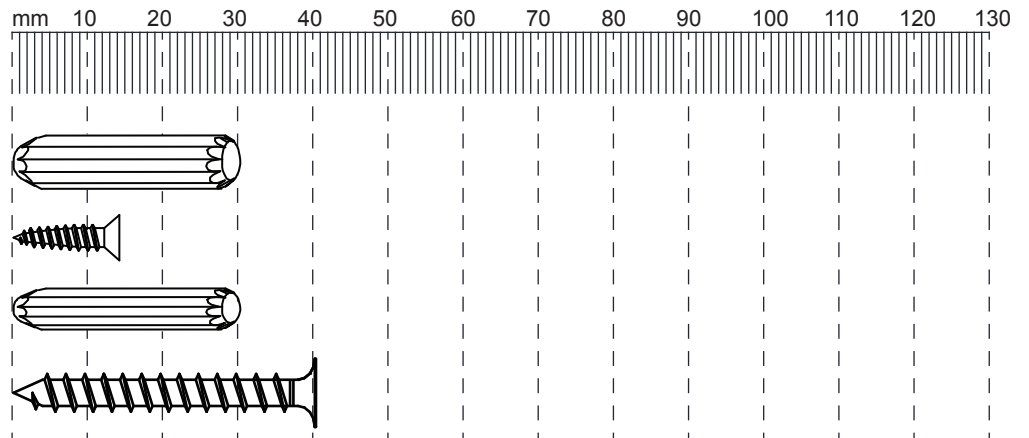
 

 
Fixtures and fittings supplied(actual size)

Re	Dimensions	Qty
C	8X30mm	12
D	3.5X14mm	14
E	6X30mm	8
F	5X40mm	5




Fixtures and fittings supplied(not to scale)

Re	Dimensions	Visual	Qty
A	N/A		12
B	N/A		8
G	N/A		4
H	N/A		2

Re	Dimensions	Visual	Qty
I	N/A		1
J	N/A		2
K	N/A		2
L	N/A		1


 
Exploded view

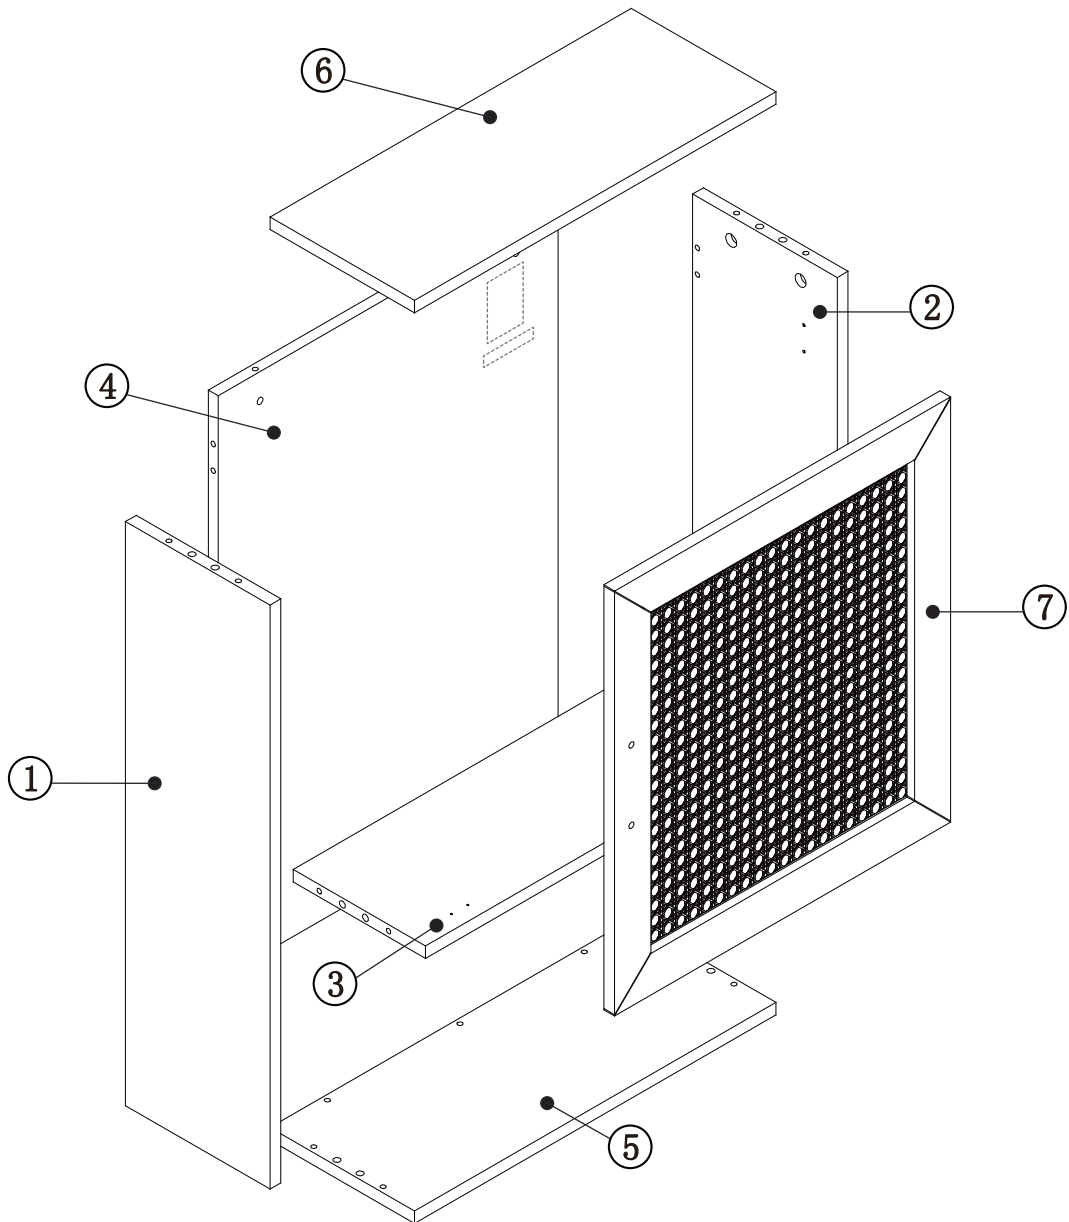




Step 1:

   
CAM-LOCK

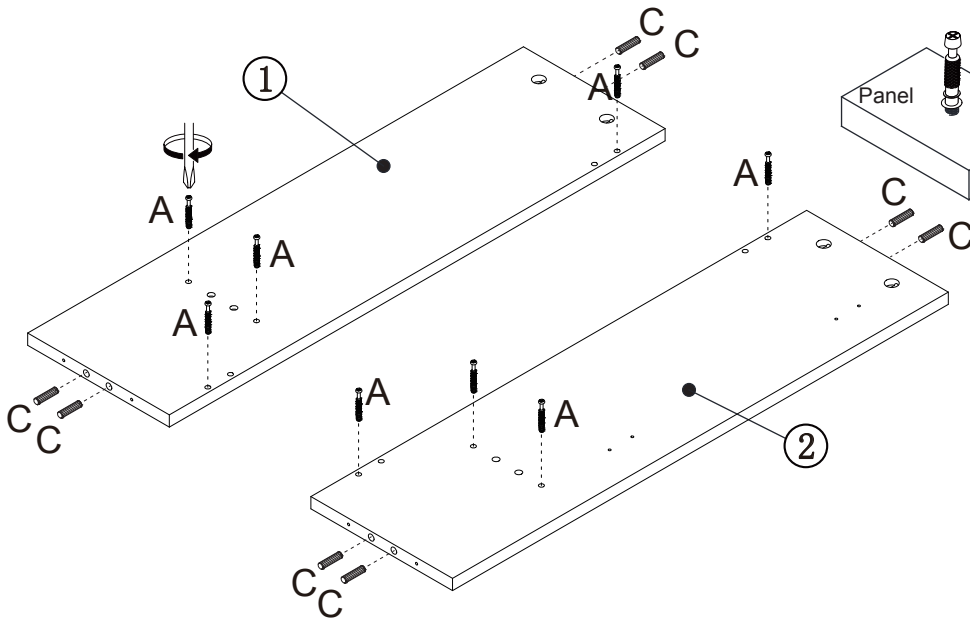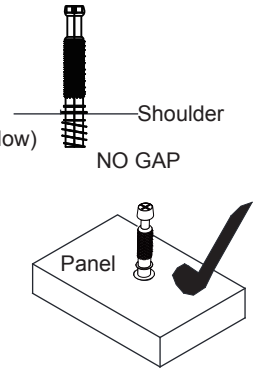




 Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

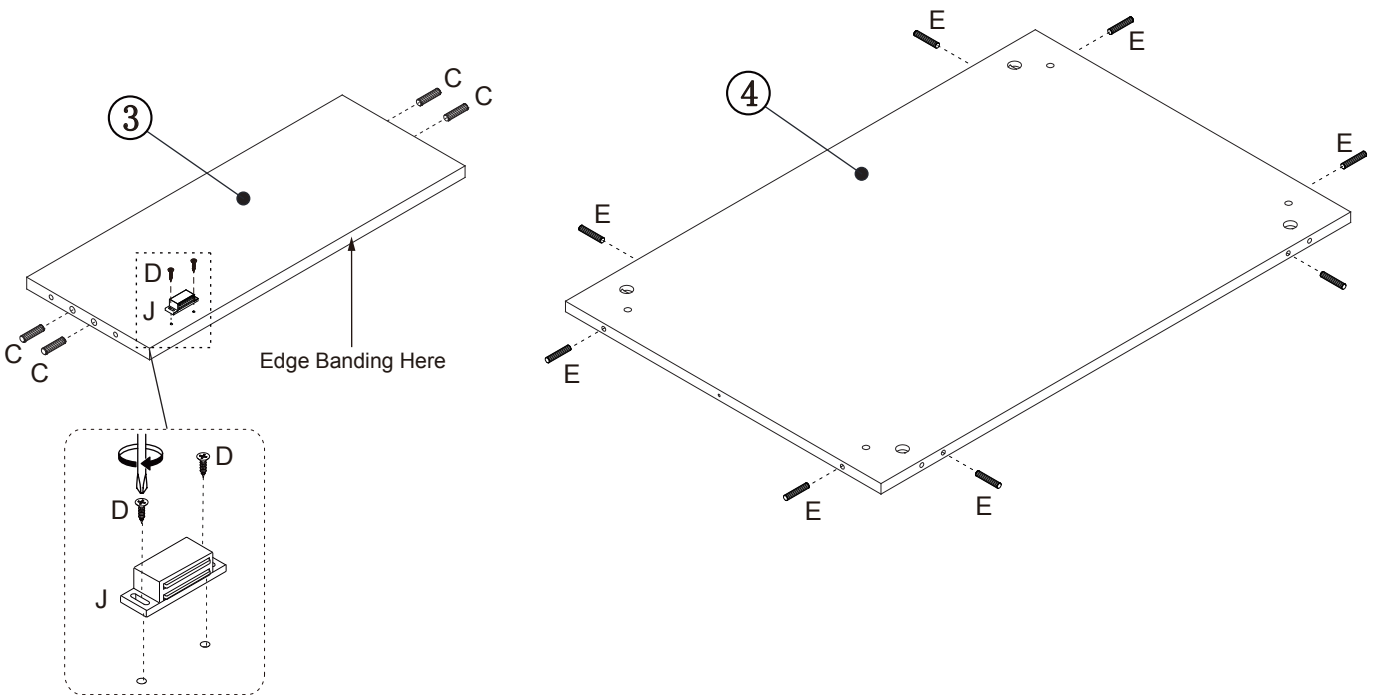





	A x 8 	C x 8 
---	--	--

 Step 2:







	D x 2 	C x 4 	E x 8 	J x 1 
---	--	--	--	--

  
 
 
Step 3:

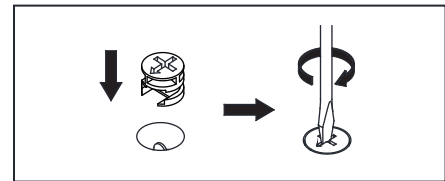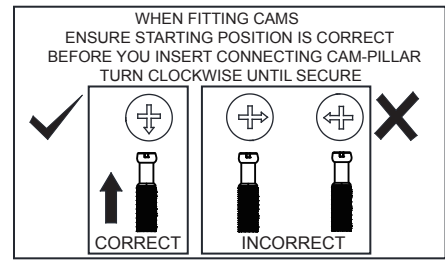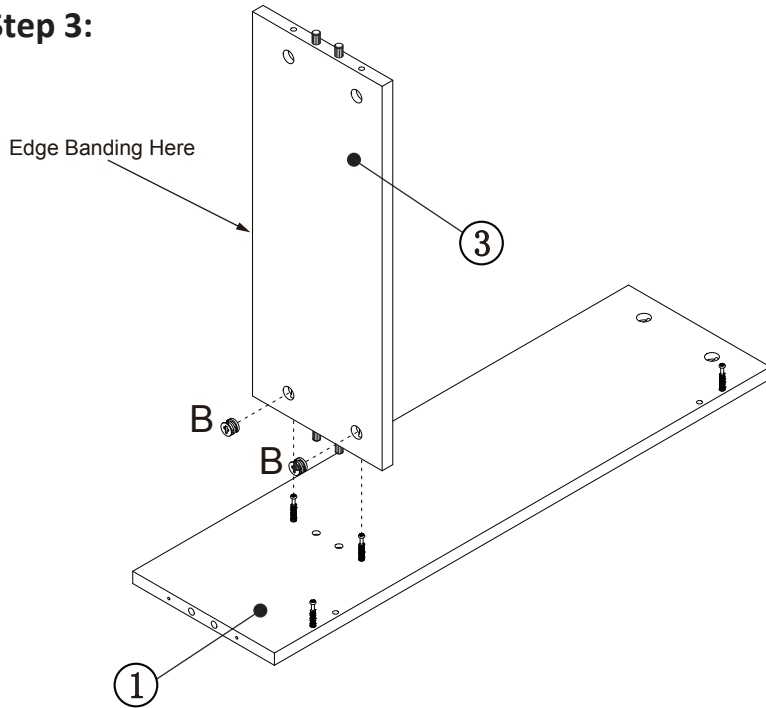

   
 
Step 4:

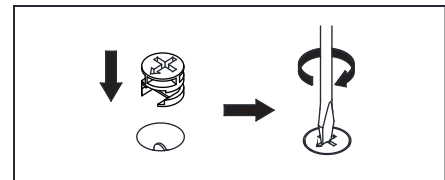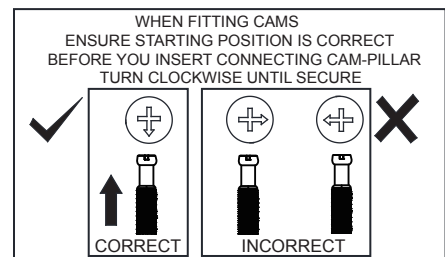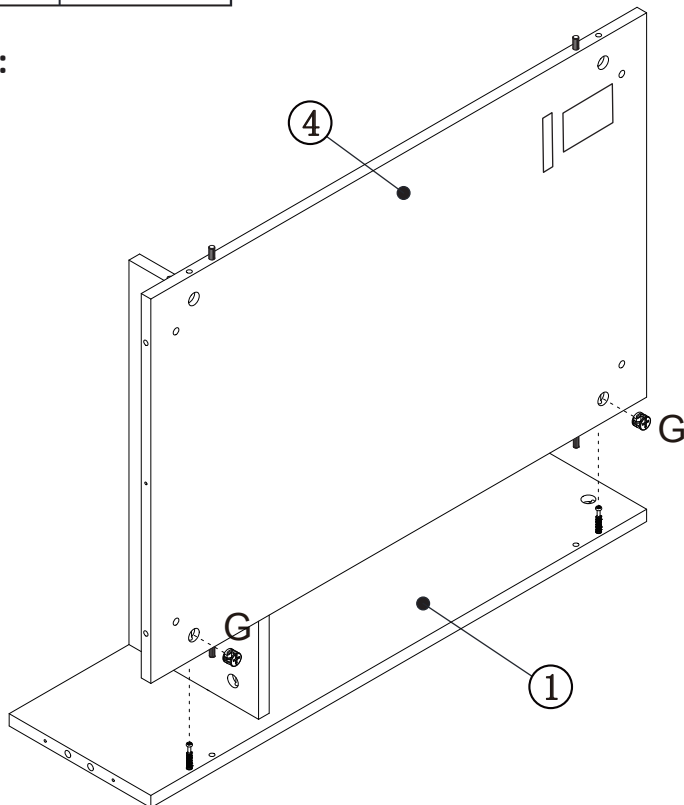

   
Step 5:

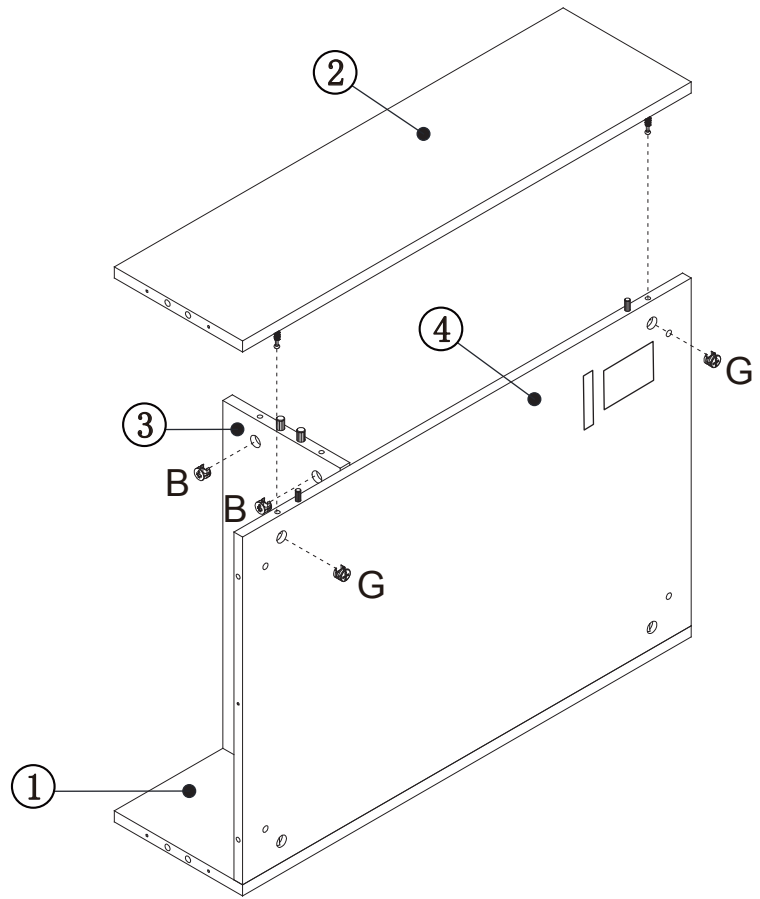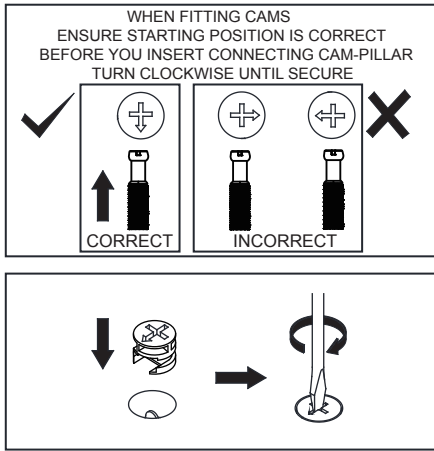

  Step 6:


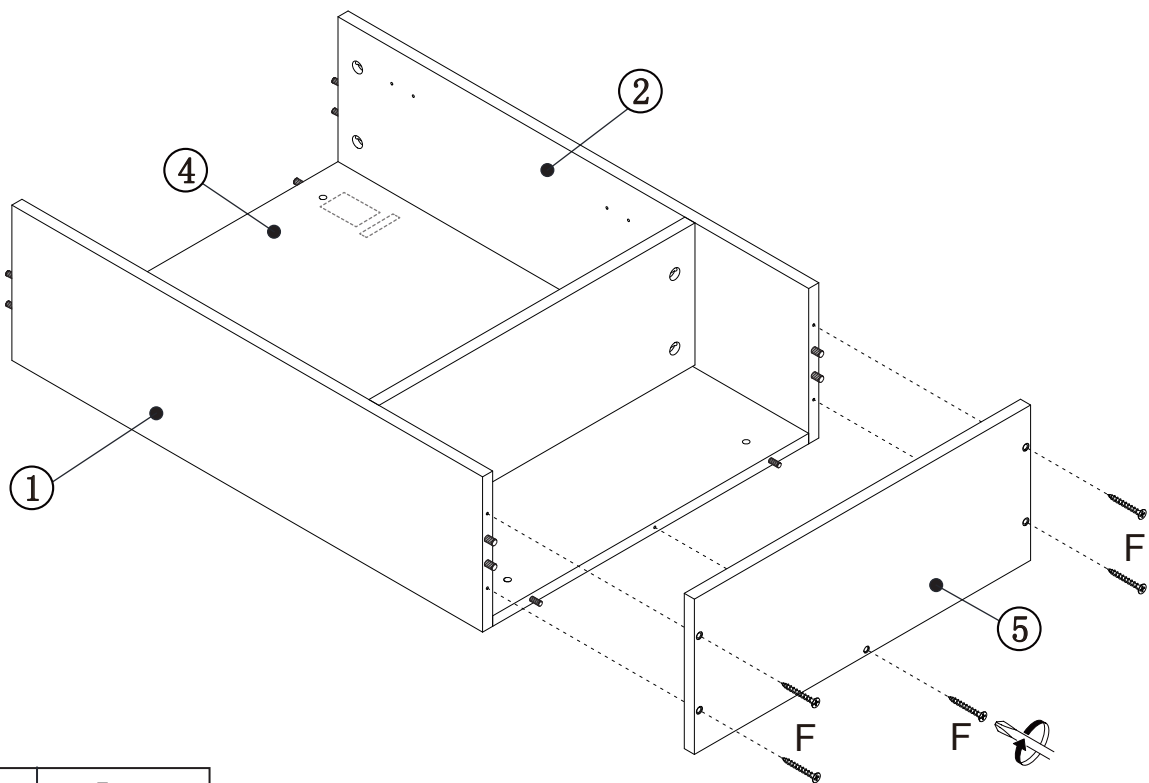


 Step 7:

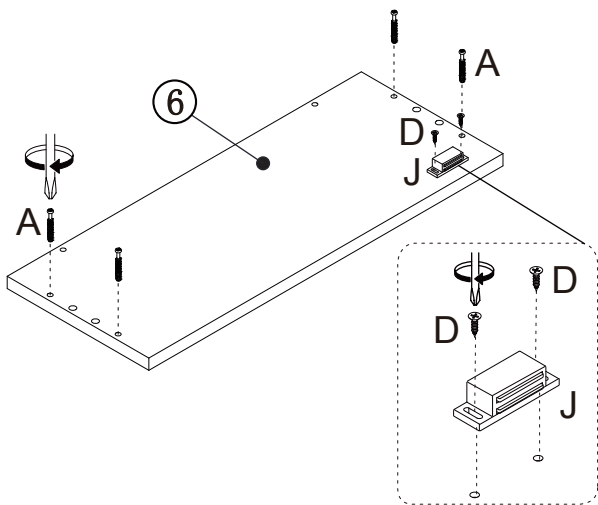



CAM-LOCK

  Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

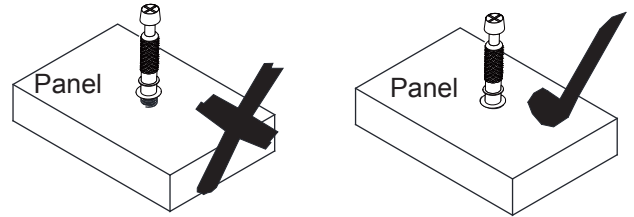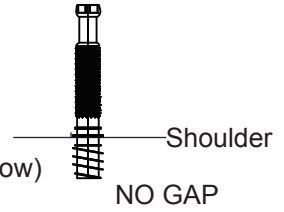



	A x 4	D x 2	J x 1
--	-------	-------	-------

  Step 8:

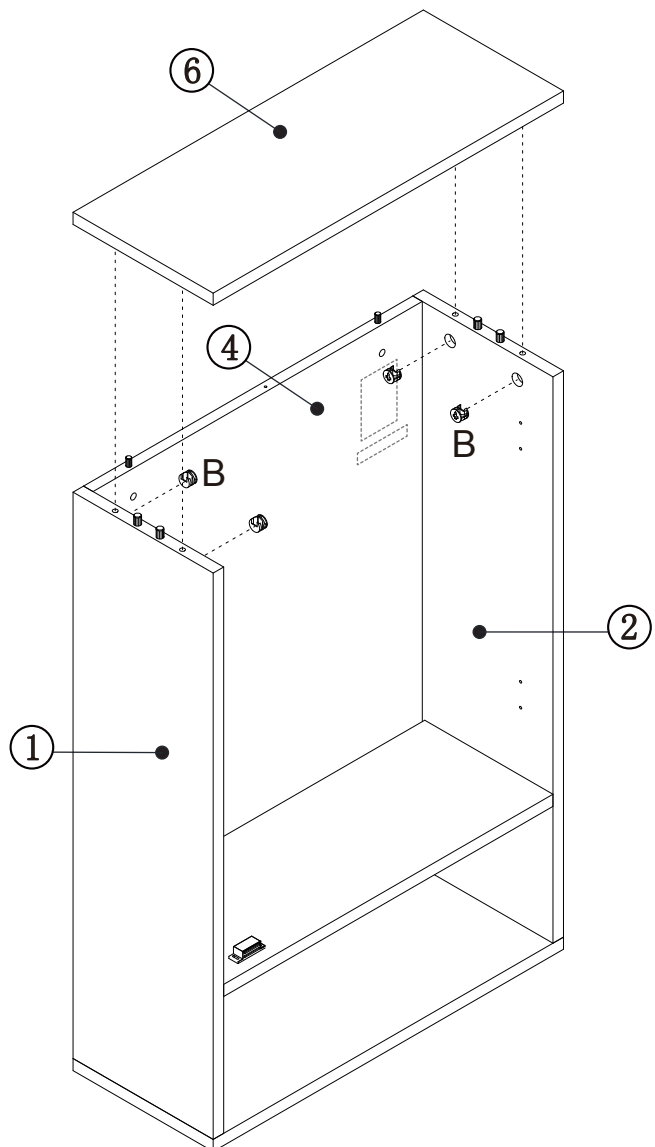
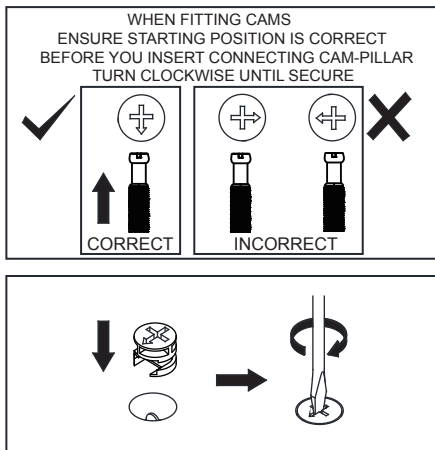


	B x 4
--	-------




 
 
Step 9:

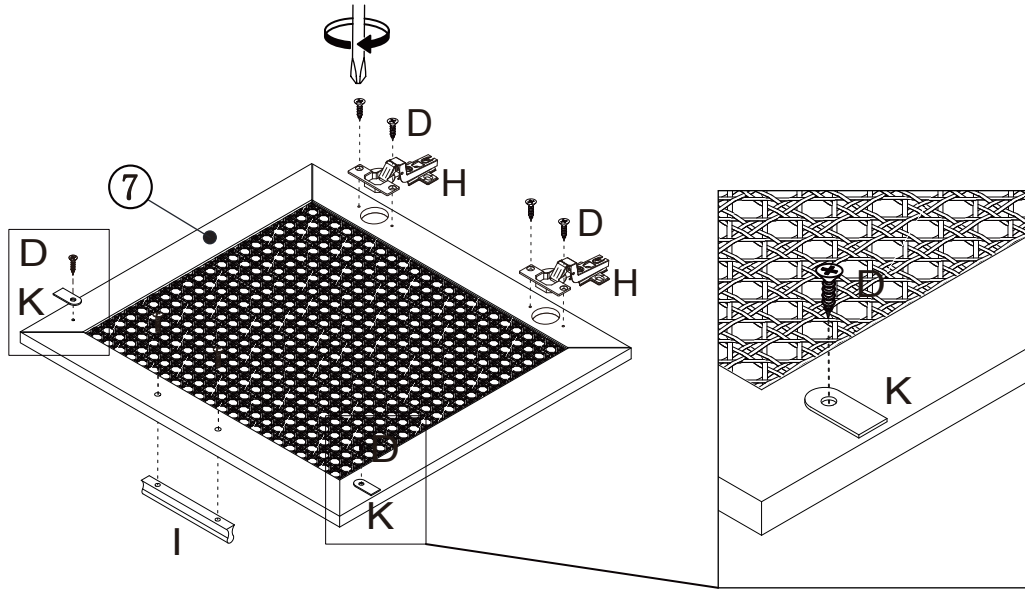





 
 
Step 10:

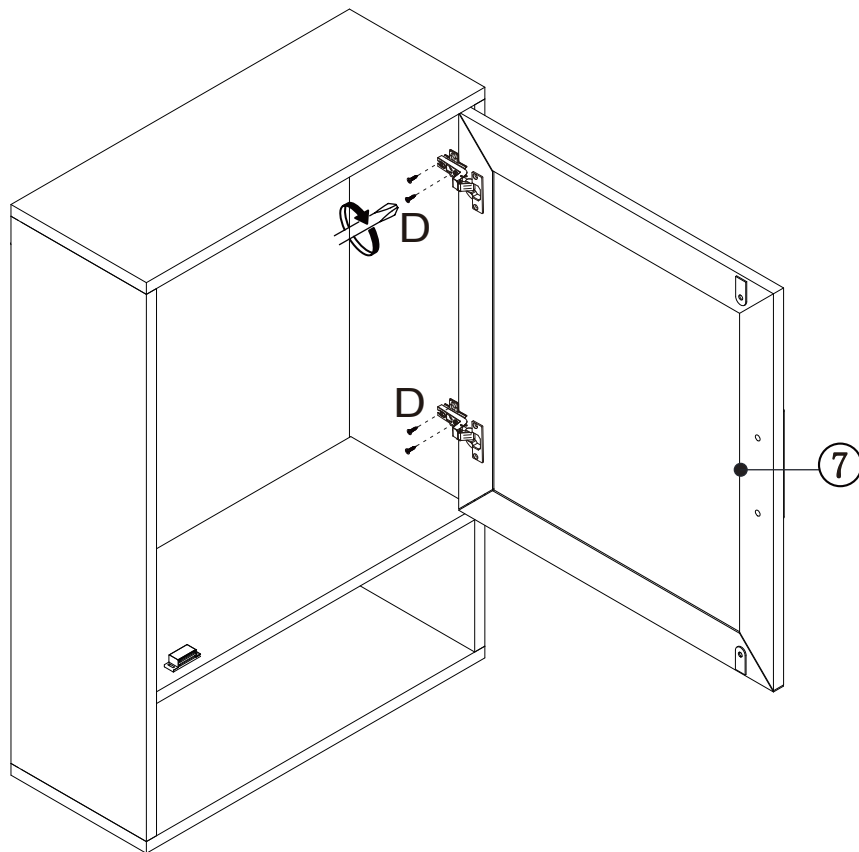

     Step 12: Use stickers (L) on all visible holes.

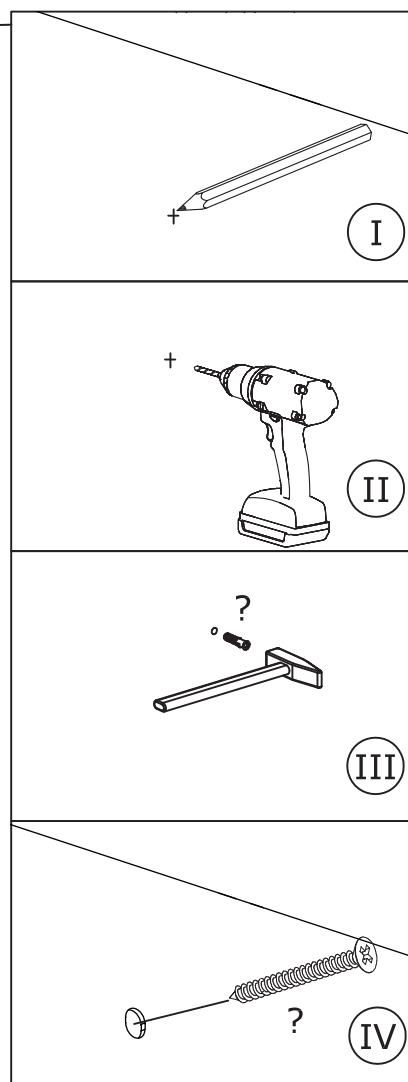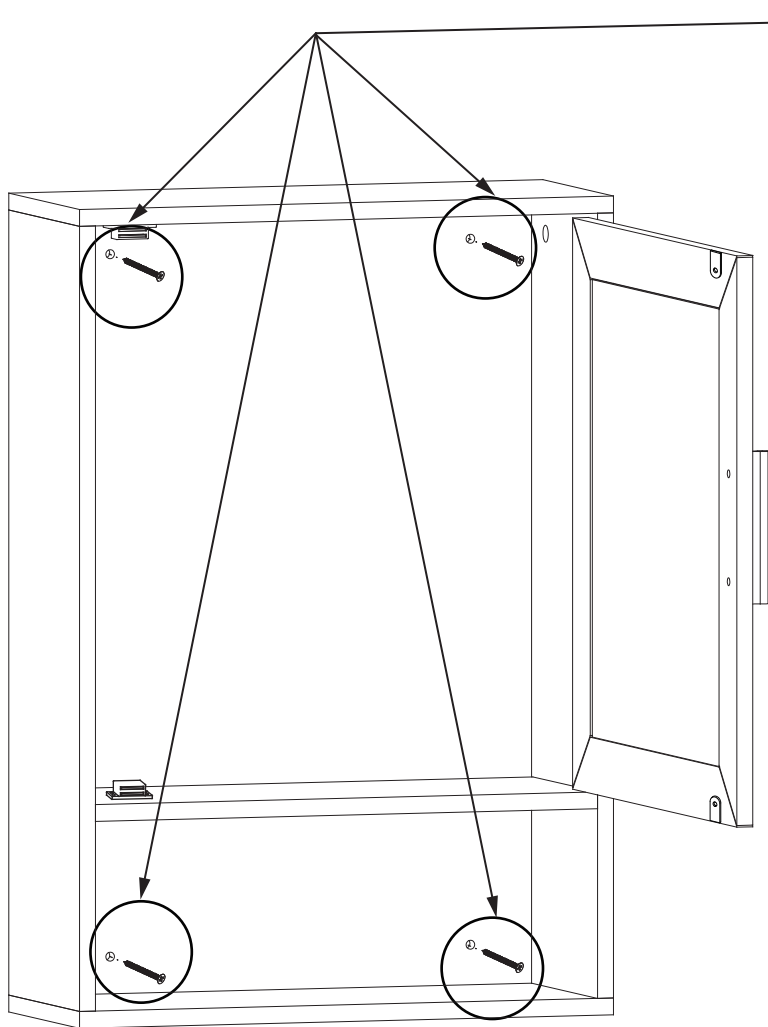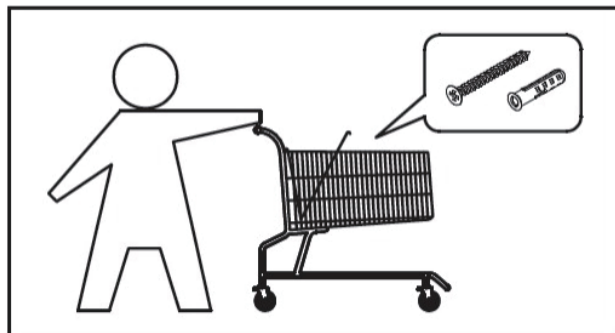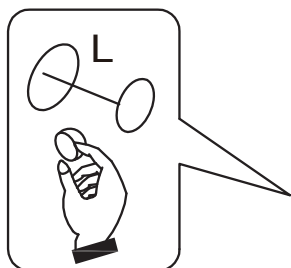


      Step 11:

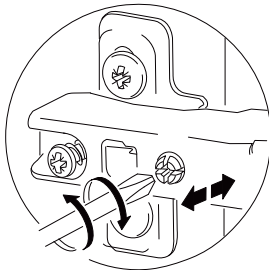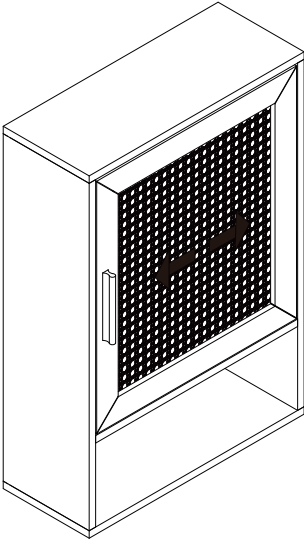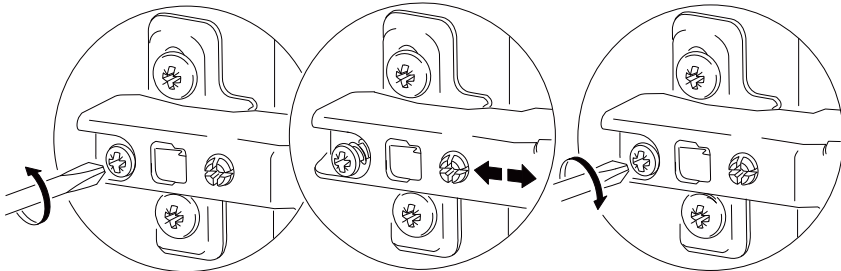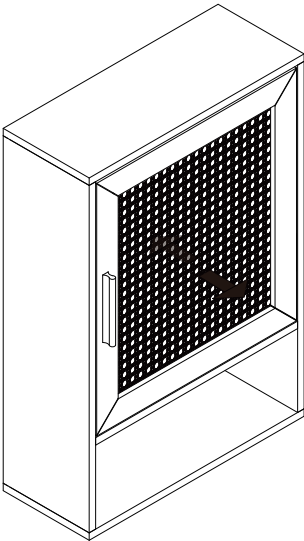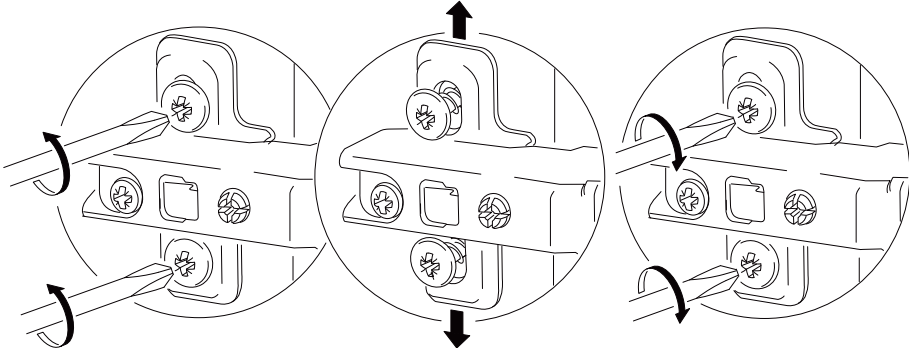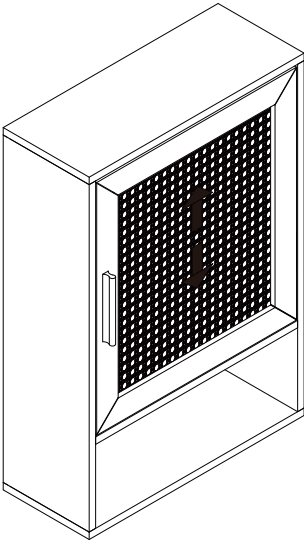

Wall fixings

 Step by step

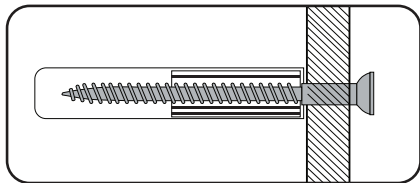

Important

When drilling into walls always check there are no hidden wires or pipes etc. Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

 
Hints

1. General Rule; Always use a larger screw and wall plug if you are not sure.
2. Ensure you use the recommended drill bit to match the wall plug and hole size.
3. Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
4. Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure the plug is fitting below the ceramic tile to avoid splitting or cracking.
5. Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of Walls

You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone, wood or plastic board.


1. STANDARD Wall Plug General wall materials

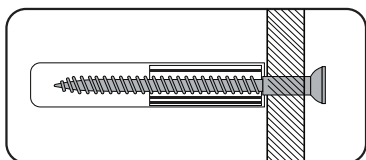

These come in various sizes and are made from plastic or sometimes wood fibre.


2. GENERAL PURPOSE Wall Plug

 Aerated/Breeze block

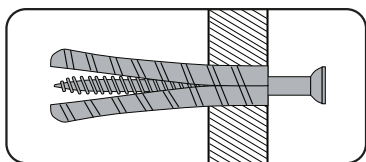


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, a General Purpose Plug can be used.

 3. SHIELD ANCHOR Wall Plug Heavy loads

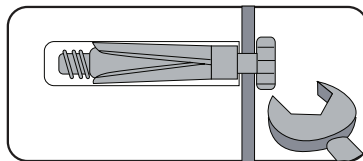


For use with heavier loads such as TV & Hi-fi Speakers and Satellite Dishes etc.

 4. CAVITY FIXING Wall Plug

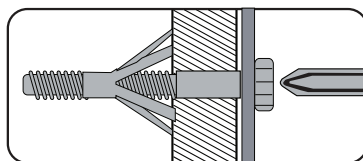


For use with plaster board partitions or hollow wooden doors.

 5. CAVITY FIXING HEAVY DUTY Wall Plug

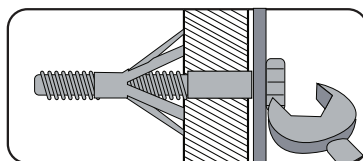

For use with plaster board partitions or hollow wooden doors.

 6. HAMMER FIXING Wall Plug

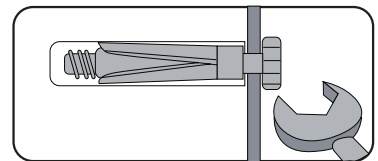

For use with walls stuck with plaster board. The hammer fixing allows it to be fixed to the wall rather than the plaster board. Always check the fixing is secure to the retaining wall.

Care and Maintenance

 
! Safety

Always check the fitting and location to ensure your safety in and around the home.

! Fitting

From time to time check the fitting to ensure the wall plugs or screws do not become loose.

Assembly instructions

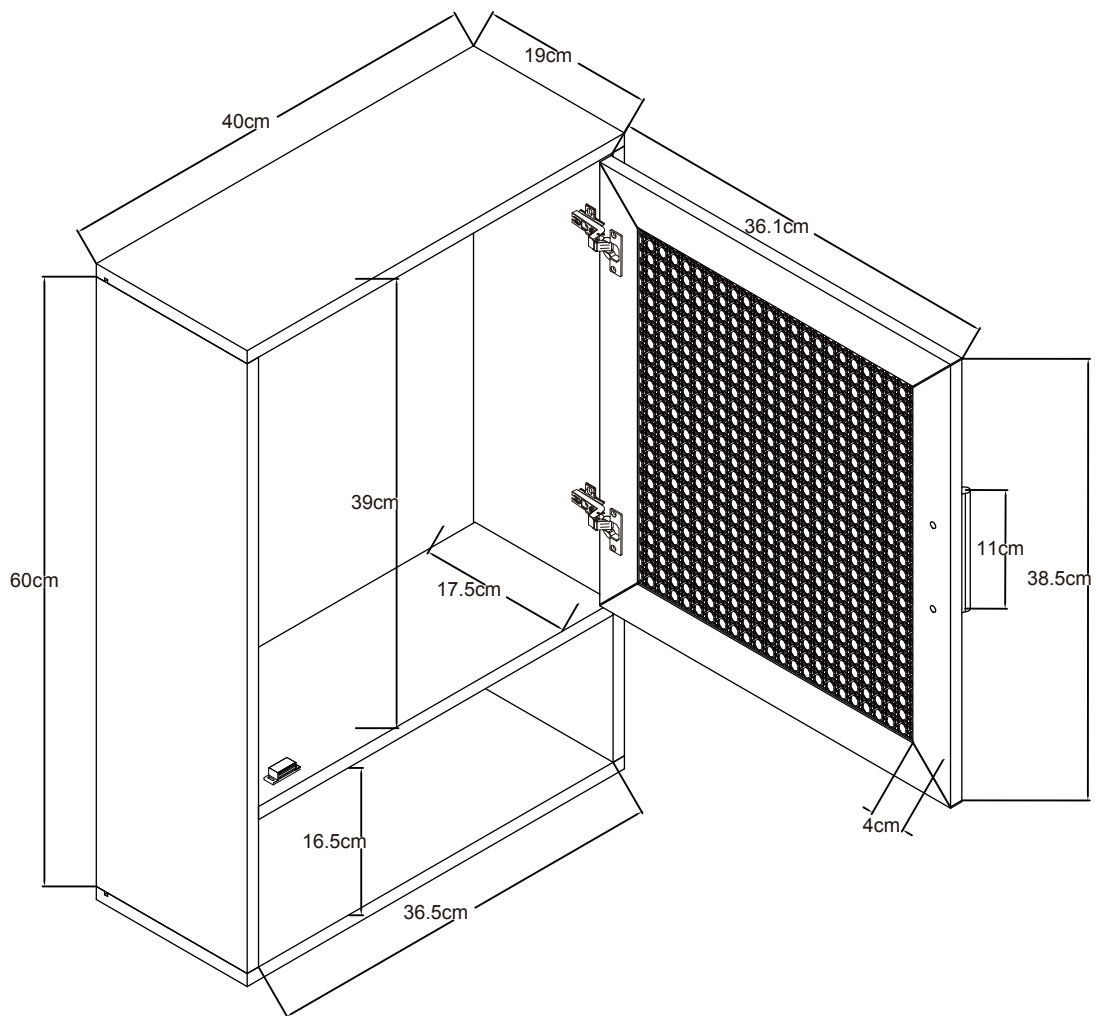

Wood care advice

Wood care advice

Wood is a natural product and each piece is individual.

As a natural product, wood is affected by temperature and humidity. We recommend that you avoid placing the furniture directly in front of heat sources such as radiators or fires as this can cause cracking or warping over time.

The colour will mellow over time and new items can vary in shade from items that you have already purchased.

Strong direct sunlight can affect the colour dramatically, so try to avoid this as much as possible, we also recommend that any ornaments, coasters and items placed on the product are periodically moved around to allow the colour to mellow evenly.

Always use mats and coasters to protect the surface when placing items on the furniture. This will help to protect the finish from heat, liquids or items that might scratch your furniture.

If items are to be placed on the surface of your furniture and have rubber feet, it is advisable to use mats to prevent marking.

Always lift your furniture into place, avoid dragging it across the floor as this can cause damage to joints.

When placing furniture on a wooden or laminate floor, please ensure that the plastic or felt protectors are securely fitted and in place.

Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

From time to time check that there are no loose screws on this unit.

Remove any spills immediately to avoid staining.

Dust regularly with a soft lint free cloth or duster.

The use of abrasive polish or silicon based polishes is not advised as these can affect the polished finish and joints over time.

Uneven floors could give the impression that doors of wall units and wardrobes are out of alignment. Be aware of this and compensate if necessary by adjusting the hinges or packing a corner to level the item. Please refer to the instructions, included with your furniture, and adjust accordingly.

If your furniture becomes stained, scratched, chipped or suffers other damage, we recommend professional help is sought to restore it. Please contact our customer services line for recommended agents.

Always follow fitting instructions carefully and retain them for future use.

WARNING

- Not suitable for wetrooms.
- Keep dry and do not allow contact with water for long periods as this will damage the surface.