



**GARDEN
MUST
HAVES**

"Essential items for your garden"


PACKAGE INCLUDES

- Instant Gazebo Frame
- Two-Tone Polyester Top
- Top Fabric (A) / Larger Fabric (B)
- (4) Corner Skirts (C)
- Roll Away Bag
- 4-Piece Stake Kit




INITIAL SET UP


Please read each step before you attempt to set up. Save these instructions for future reference.

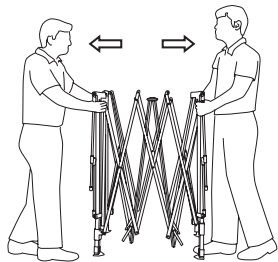

- 1 Place your Instant Gazebo frame in the center of area to be shaded. With partner, grasp two outer legs, slightly lift off the ground, and step backwards, stopping at full arms' length.

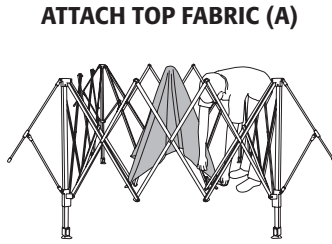


- 2 Spread the top vent fabric (A) over the peak vent section and slide the (4) fabric corners over the spring loaded (4) vent fingers.

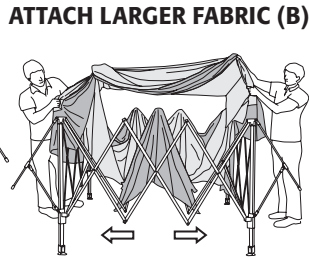


- 3 Expand the frame to approx. 2/3 open. Spread the larger fabric (B) over the frame, tuck the fabric under the top vent fingers and secure the top to the trusses at (8) different points.

SET UP


- 1 With partner on opposite side of canopy, grasp the top and bottom of the truss on opposite sides. Lift up and step backward until canopy is 3/4 opened. *Be careful not to pinch fingers.* Expand frame to fully open. Make sure the vent fingers are released – over the LARGE FABRIC.

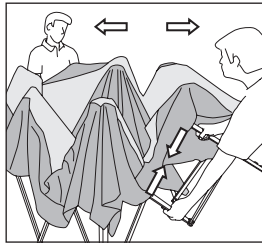


- 2 To engage push button lock at each corner, first lift the fabric off of the corner, then with one hand hold the top of the leg while pushing up on the push button lock with the other hand. The push button lock will engage the hole. Repeat on all 4 corners.

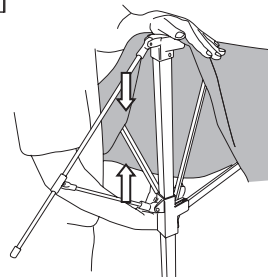


- 3 To secure corner fabric to the leg, pull the fabric out over the end of the extension arms and secure using the sewn pockets. Repeat on all 4 corners.

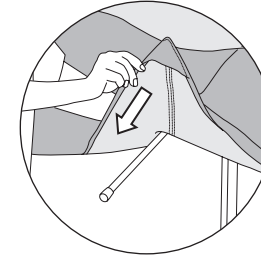

- 4 Lift outer legs until push button engages. Use push button to adjust legs to desired height. Repeat on opposite legs.

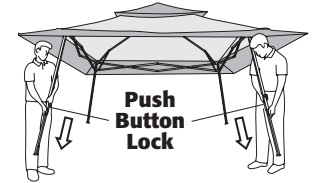


5 ATTACHING CORNER SKIRTS (C)

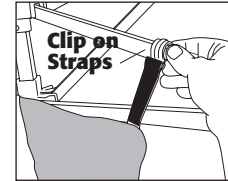


- 1) Erect frame to the lowest setting.
- 2) Wrap the skirt around the outside. Non-coated side facing outward.
- 3) Connect the clip on straps around the top truss on both sides.
- 4) Use the attached tie-back straps to gather the skirt. Repeat on all 4 corner skirts.

TAKE DOWN

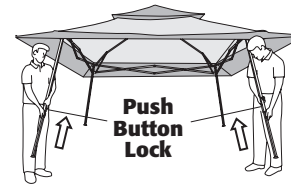


- 3 PUSH button locks to release each corner by first lifting fabric away from slider. With one hand push up on truss near the corner.

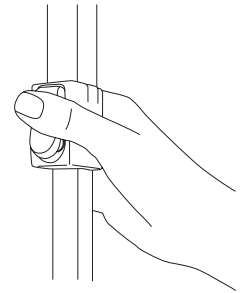

- 1 With partner, slightly lift up 2 adjacent outer legs, depress push button to release and telescope inner legs into outer legs. Repeat on opposite legs.
- 2 Now, with the canopy in lowered position. Pull the fabric back out from the sewn pockets to gain access to extension arms. Repeat on all 4 corners.

- 4 With partner on opposite side, grasp top and bottom area of trusses. Lift the canopy up slightly and shake it while stepping towards your partner until the unit is 3/4 closed. With each partner grasping two outer legs, push frame together to fully close it. *Be careful not to pinch fingers!* Store canopy in roller bag.

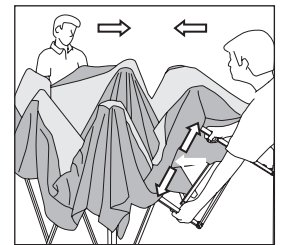

WARNING: Our Gazebos have a one year limited manufacturer's warranty against defects in material and workmanship. Gazebos and canopies make excellent kites, damage caused by wind and weather conditions are not covered. Gazebos are treated to withstand a small shower but are not sold as waterproof. This treatment may deteriorate over time. Keep all flame and heat sources away from all product fabrics. We recommend that the gazebo is taken down if strong weather is predicted. We recommend that the canopies are anchored securely. Fabric care advice - brush off loose dirt and dust regularly when the fabric is dry. If marked, sponge lightly with a mild soap solution and rinse thoroughly with clean water. Do not use harsh cleaning agents or bleach. Do not iron. Do not dry clean. Fire Retardant to BS 7837 : 1996

Temporary structure. Do not leave unattended or use in windy conditions