



# INSTRUCTIONS

## LUNO / VENI WARDROBR

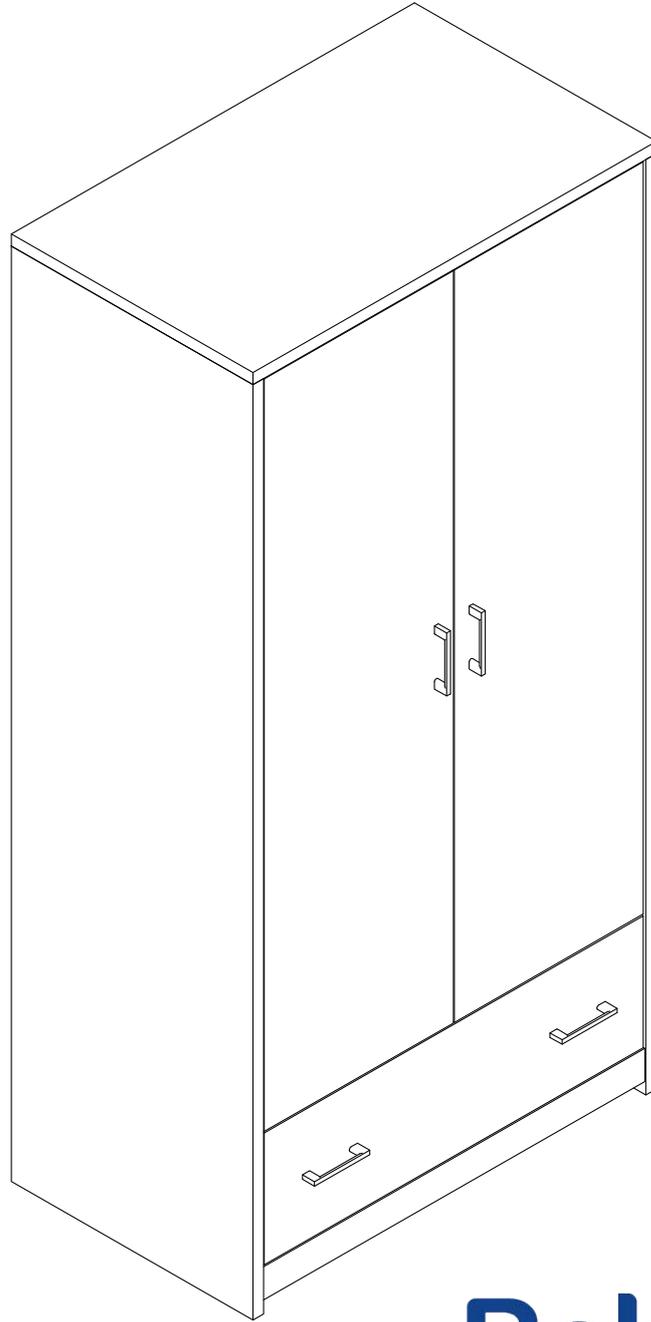

**Babymore**  
more for your baby

 LVW: V1/20  
Babymore Ltd. 2020



# IMPORTANT: READ CAREFULLY AND RETAIN FOR FUTURE REFERENCE

## INSTRUCTIONS FOR SAFE USE

The correct use and maintenance of your changer will ensure it gives long and trouble-free use.

Please ensure everyone use your wardrobe know how to use it. The safety of your child is your responsibility.

- **WARNING: DO NOT LEAVE THE CHILD UNATTENDED.** The safety of your child is your responsibility
- Check regularly that all the fittings and screws are correctly tightened and are not damaged. Loose screws can pinch part of the body and clothing resulting in the risk of strangulation.
- Do not use replacement parts that are not recommended or supplied by Babymore
- Do not place your product in the near vicinity of open fires or other sources of strong heat, such as electric or gas fires.
- Always leave your product clean and dry. Wipe away any spillage straight away. Your product can be cleaned with a damp cloth. Never use harsh abrasives, bleach or strong detergents
- Before use, ensure the wardrobe is on a stable, level surface.
- Do not allow children to climb on the wardrobe.
- Never use the wardrobe if any parts are broken or missing.
- Never pivot or drag the wardrobe on its feet, must always be lifted by at least two people when moved.

### **WARNING:** WALL STRAP INFORMATION

- The wall strap is only intended to be used with the Babymore product that is supplied with.
- Never attempt to modify or change the wall attachment strap in any way. Never use any other fittings for attaching the strap to your furniture than those supplied.
- Never use the screw provided to attach the strap to the wall. No wall attachment fittings are supplied. This is because the type of fittings required to attach the strap to the chosen wall is determined by the composition of the wall. If you are in any doubt about the correct type of fittings to use, consult a professional before attempting to attach the strap to the wall.
- The wall strap must not be used to replace any other fitting supplied with your piece of furniture.
- Furniture falling over is generally due to the surface the furniture is placed on. A warped floor or wall-to-wall carpeting will enable the furniture to rock, so greatly increasing the potential for the furniture to fall. If the furniture is placed on a flat level wood or tiled floor the risk is reduced, but we still recommend the wall strap is fitted.


## BEFORE ASSEMBLY

- Unpack all the parts and identify them against the components and fittings lists
- Do not discard any packaging until you are sure you have all the parts and the pack of fittings.
- If you do find that any parts are missing or damaged or incorrect, contact customer services.
- Read the instruction thoroughly before construct.
- You may find the construction easier with help of another person, in the room for use, on a soft and clean floor so there is no damage cause to the furniture during construction.
- Follow each stage of construction step-by-step

Thank you for purchasing Babymore If you need assistance, spare parts or you are unhappy with the goods







**Call: 020 3475 5588 or email: [customerservices@babymore.co.uk](mailto:customerservices@babymore.co.uk)**

# COMPONENTS

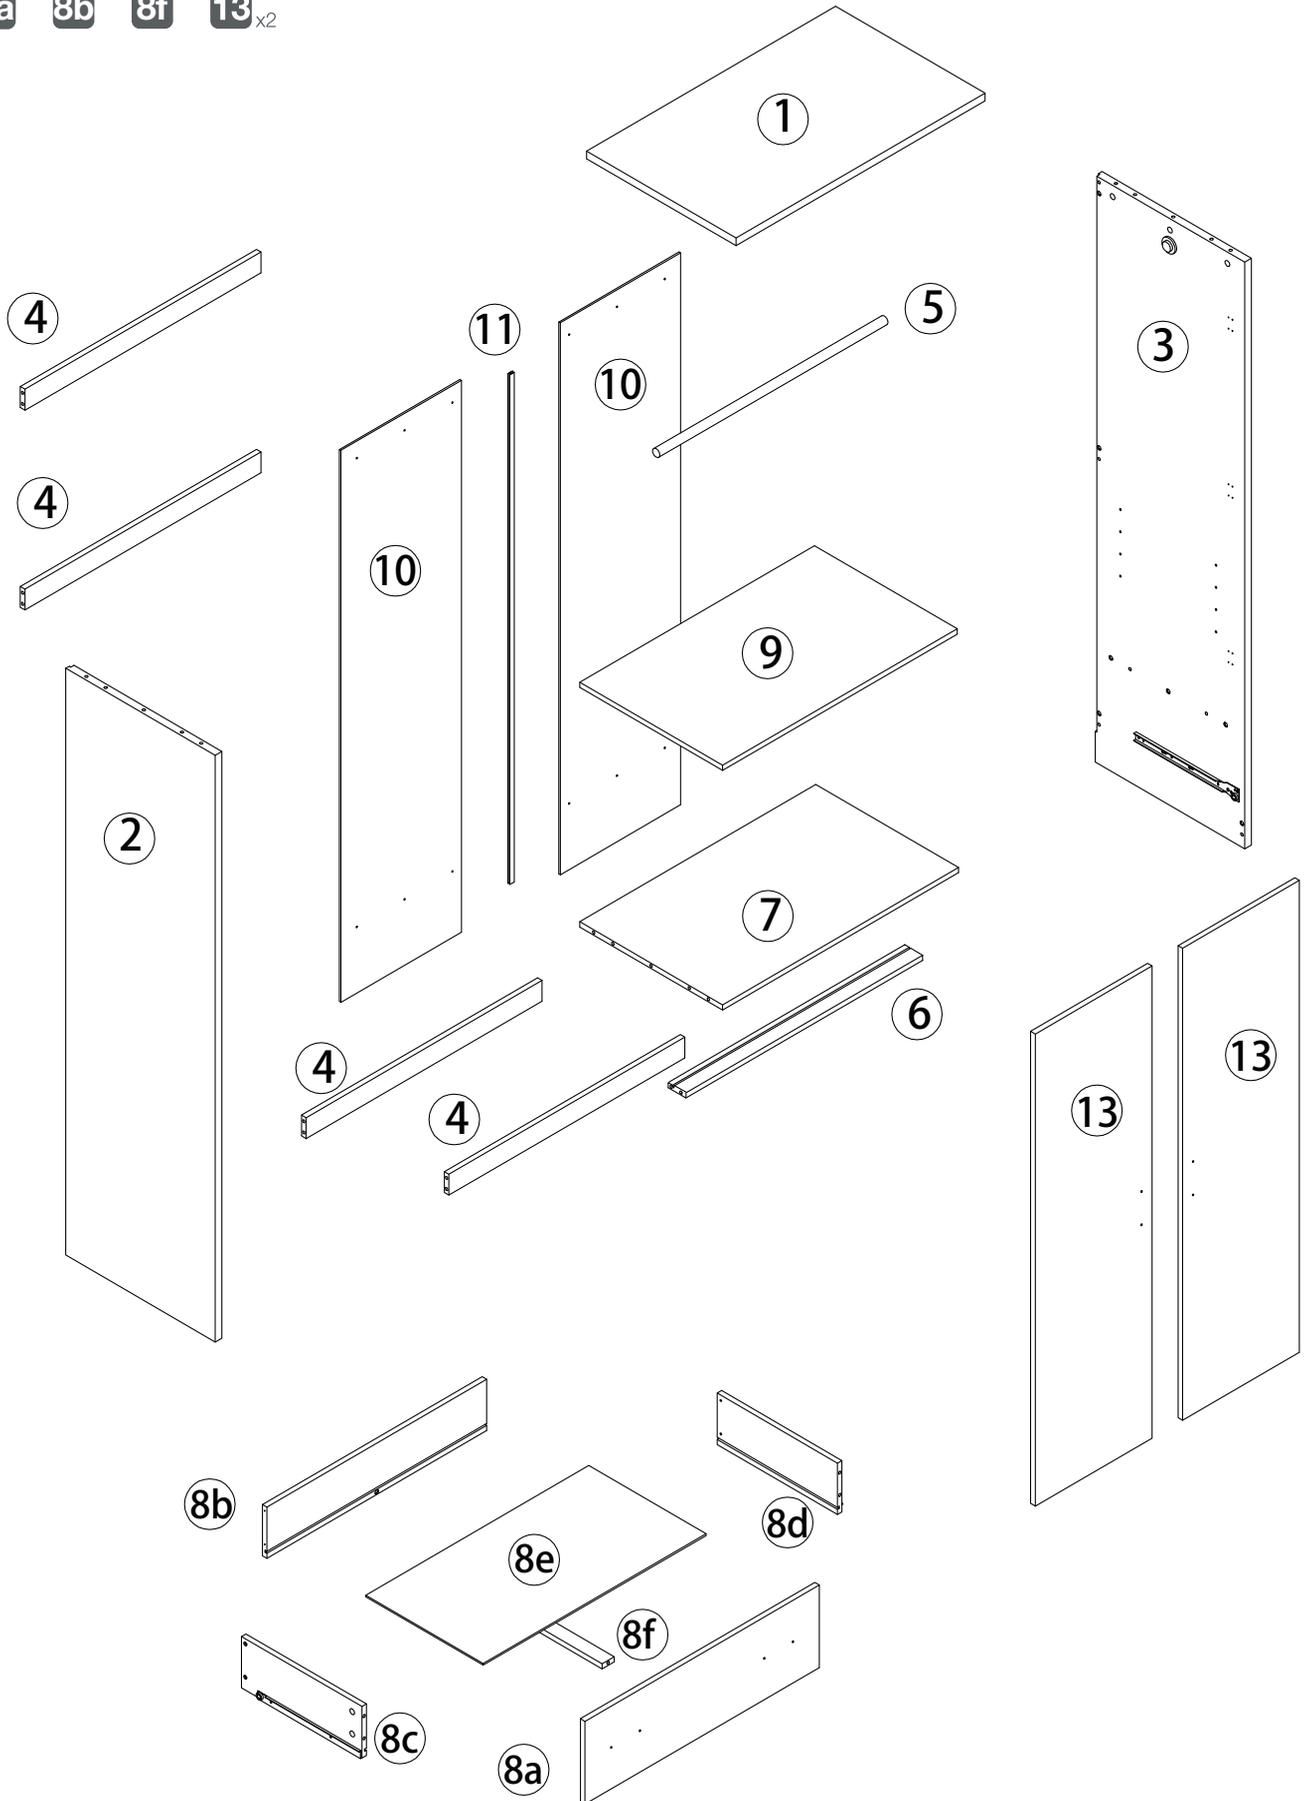


# FITTINGS

   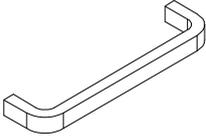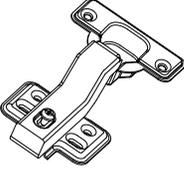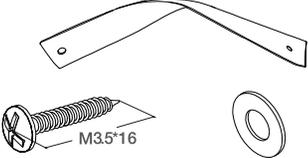


|  |  |
|--|--|
| <p><b>A</b> x4</p> <input checked="" type="checkbox"/>    | <p><b>B</b> x8</p> <input checked="" type="checkbox"/>    |
| <p><b>C</b> x18</p> <input checked="" type="checkbox"/>   | <p><b>D</b> x32</p> <input checked="" type="checkbox"/>   |
| <p><b>E</b> x32</p> <input checked="" type="checkbox"/>   | <p><b>F</b> x4</p> <input checked="" type="checkbox"/>    |
| <p><b>G</b> x12</p> <input checked="" type="checkbox"/>  | <p><b>H</b> x36</p> <input checked="" type="checkbox"/>  |
| <p><b>I</b> x6</p> <input checked="" type="checkbox"/>  | <p><b>J</b> x2</p> <input checked="" type="checkbox"/>  |
| <p><b>K</b> x1</p> <input checked="" type="checkbox"/>  |  |

 
**D** x5




**E** x5

 

1

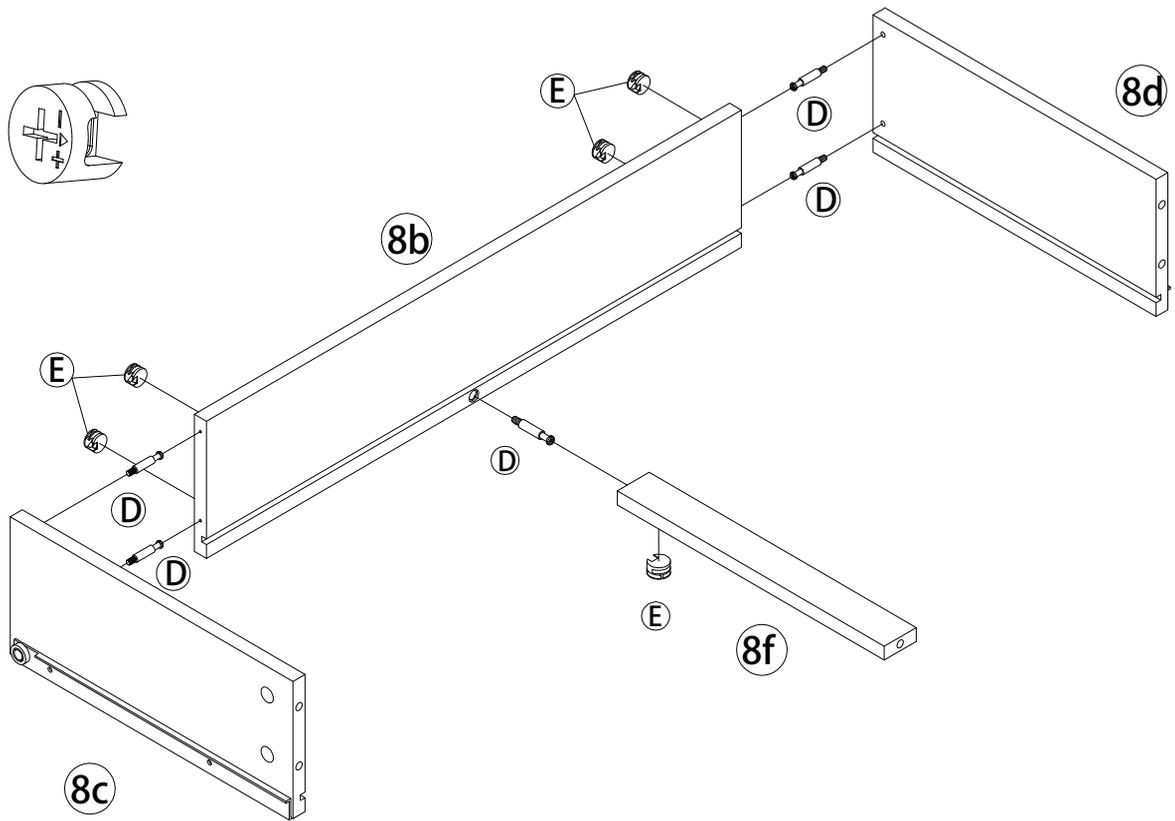


2

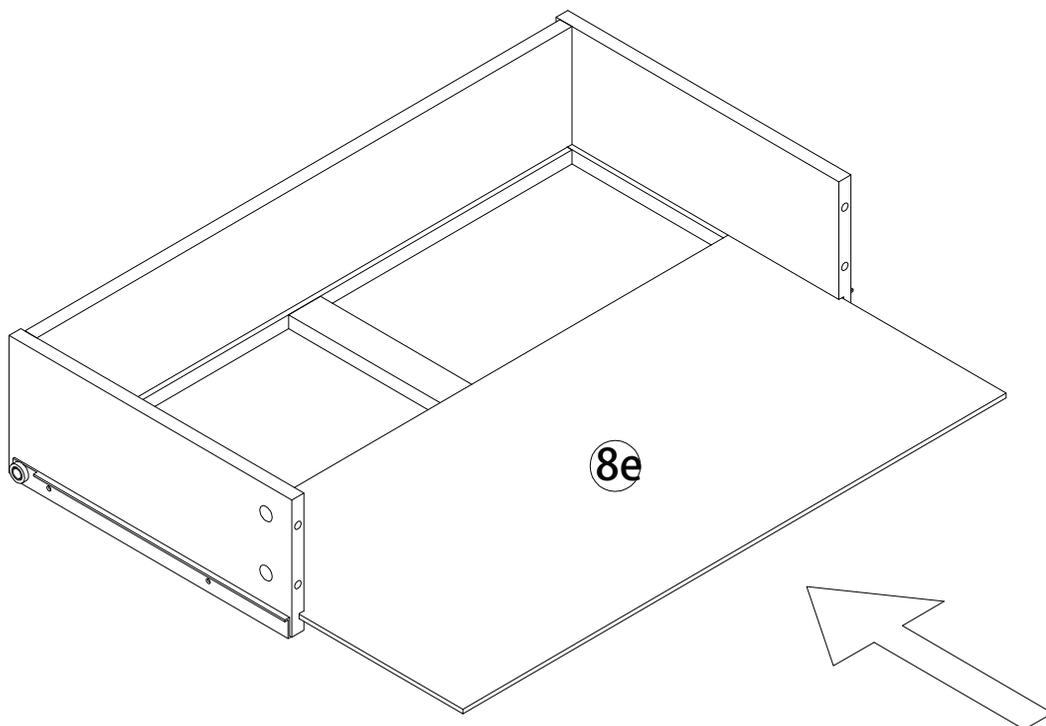

3

**A** x2

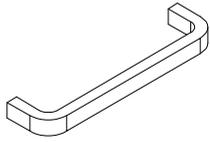



**B** x4




**D** x5



 **E** x5

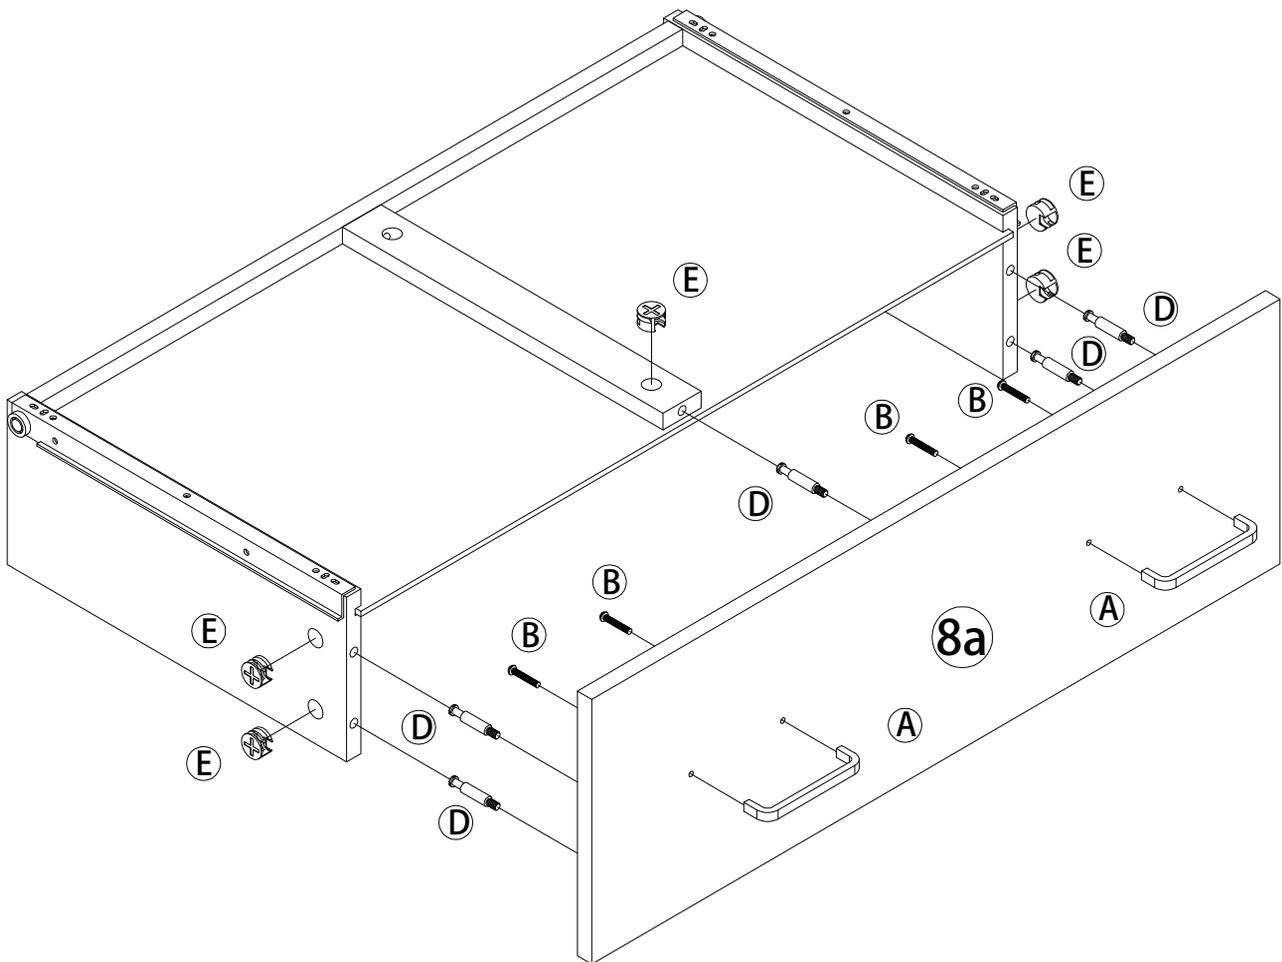



**C** x7

 


**D** x8





 **E** x8

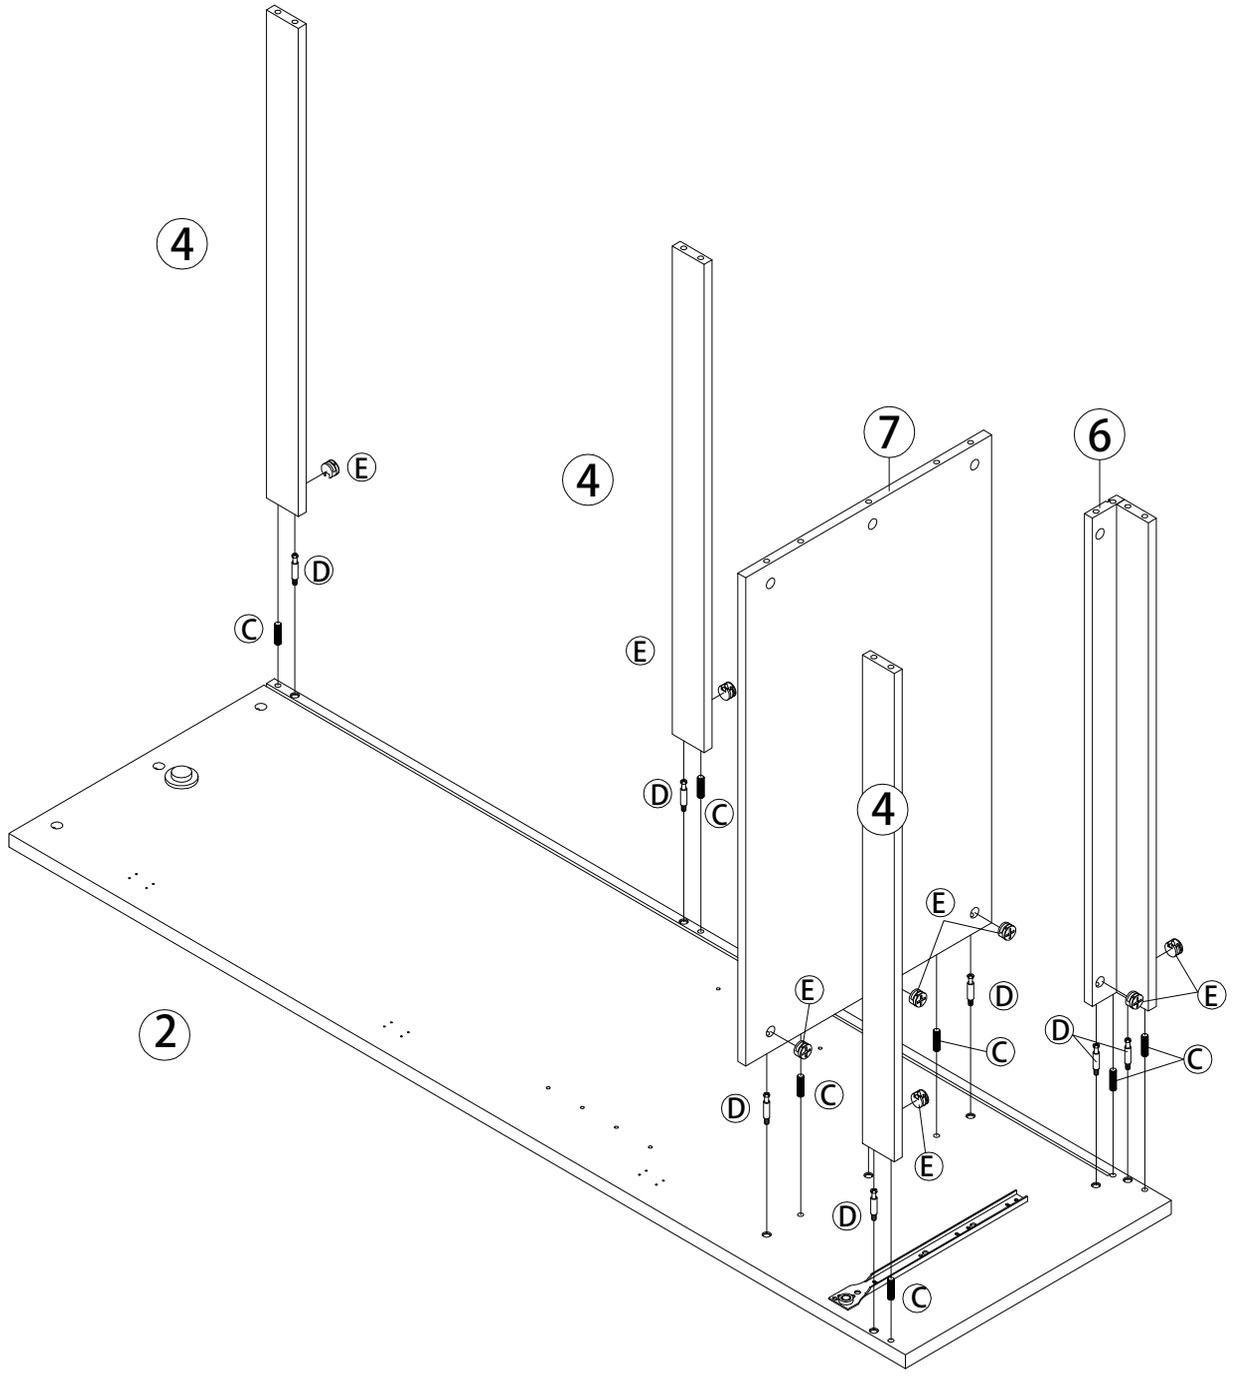



5



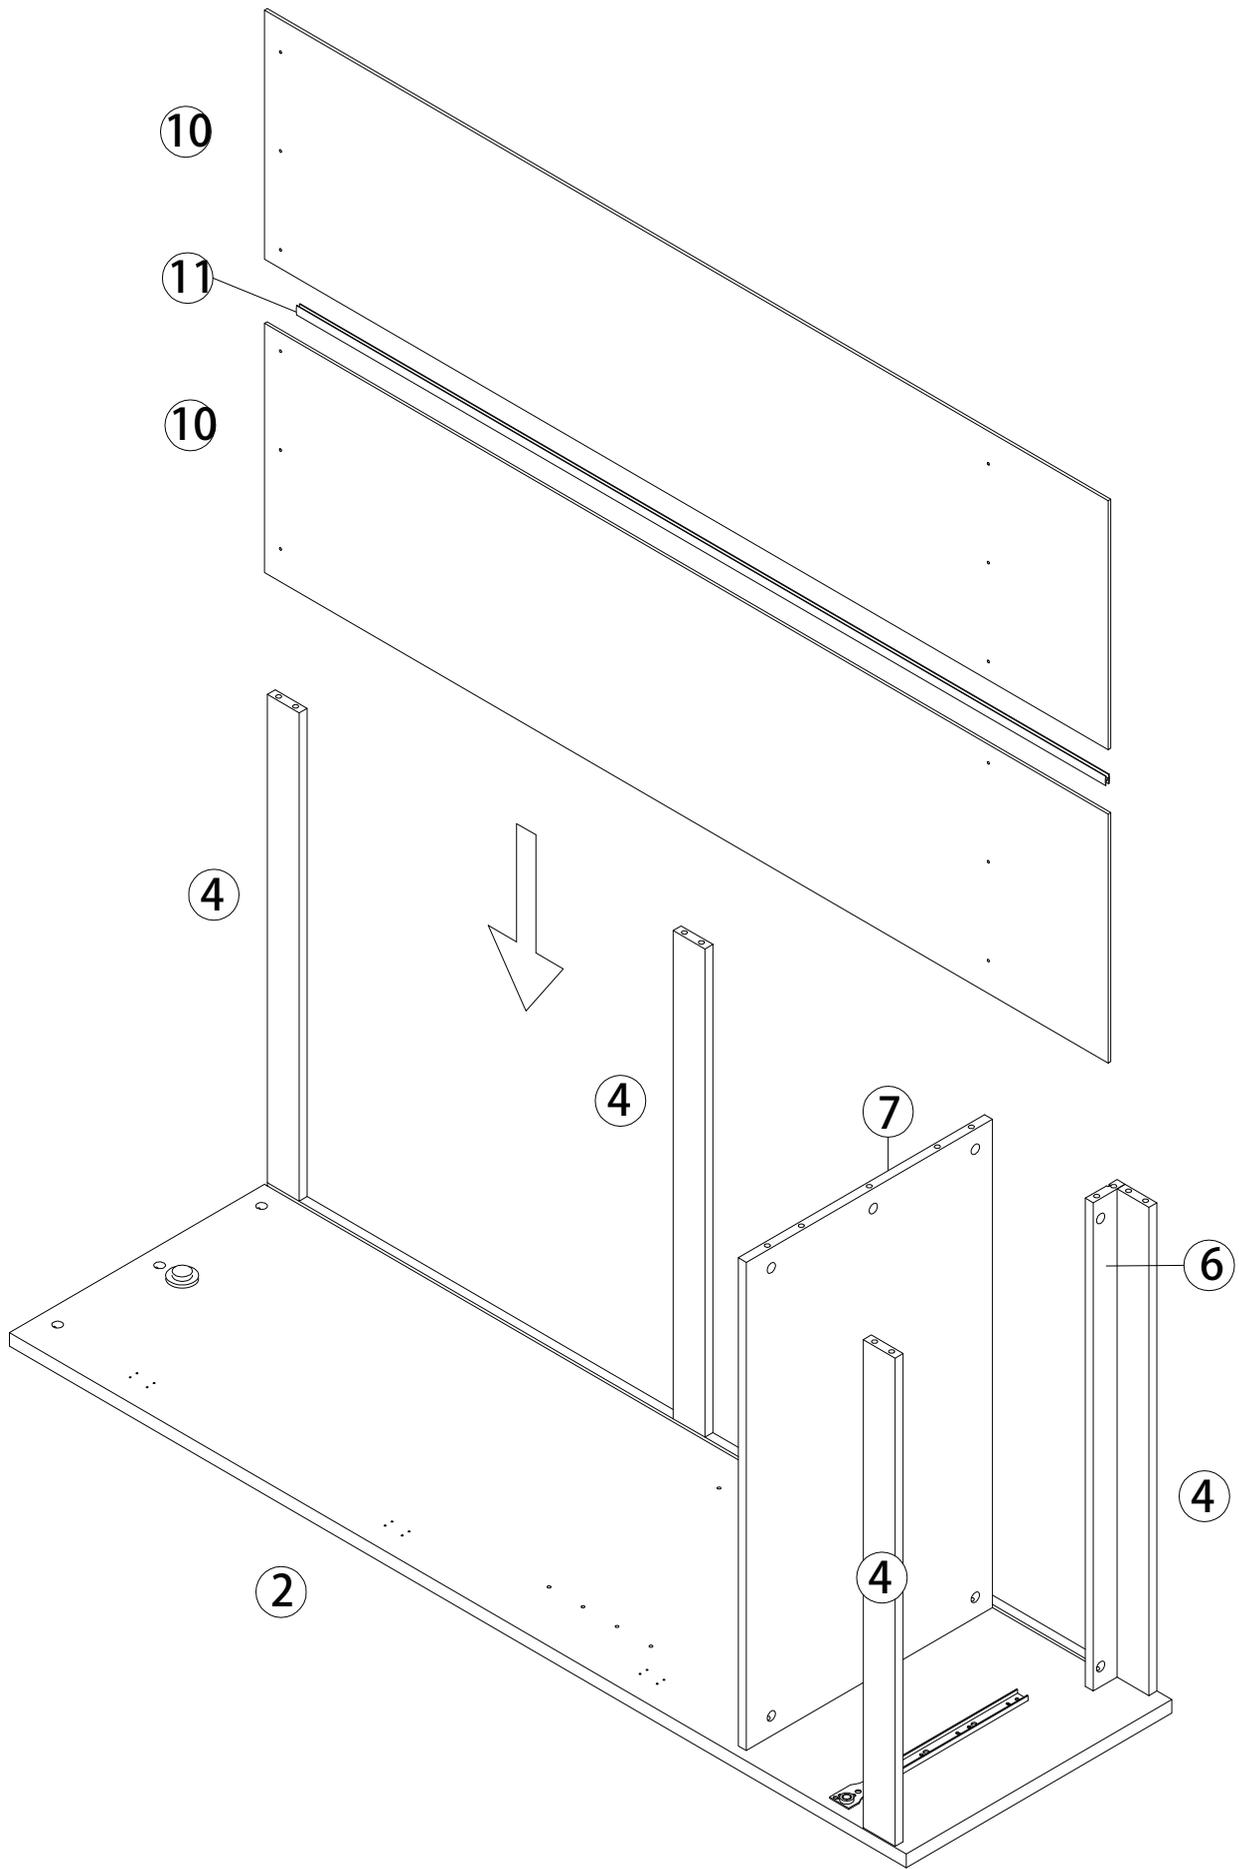




 
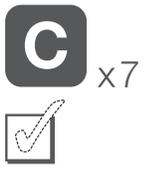


6

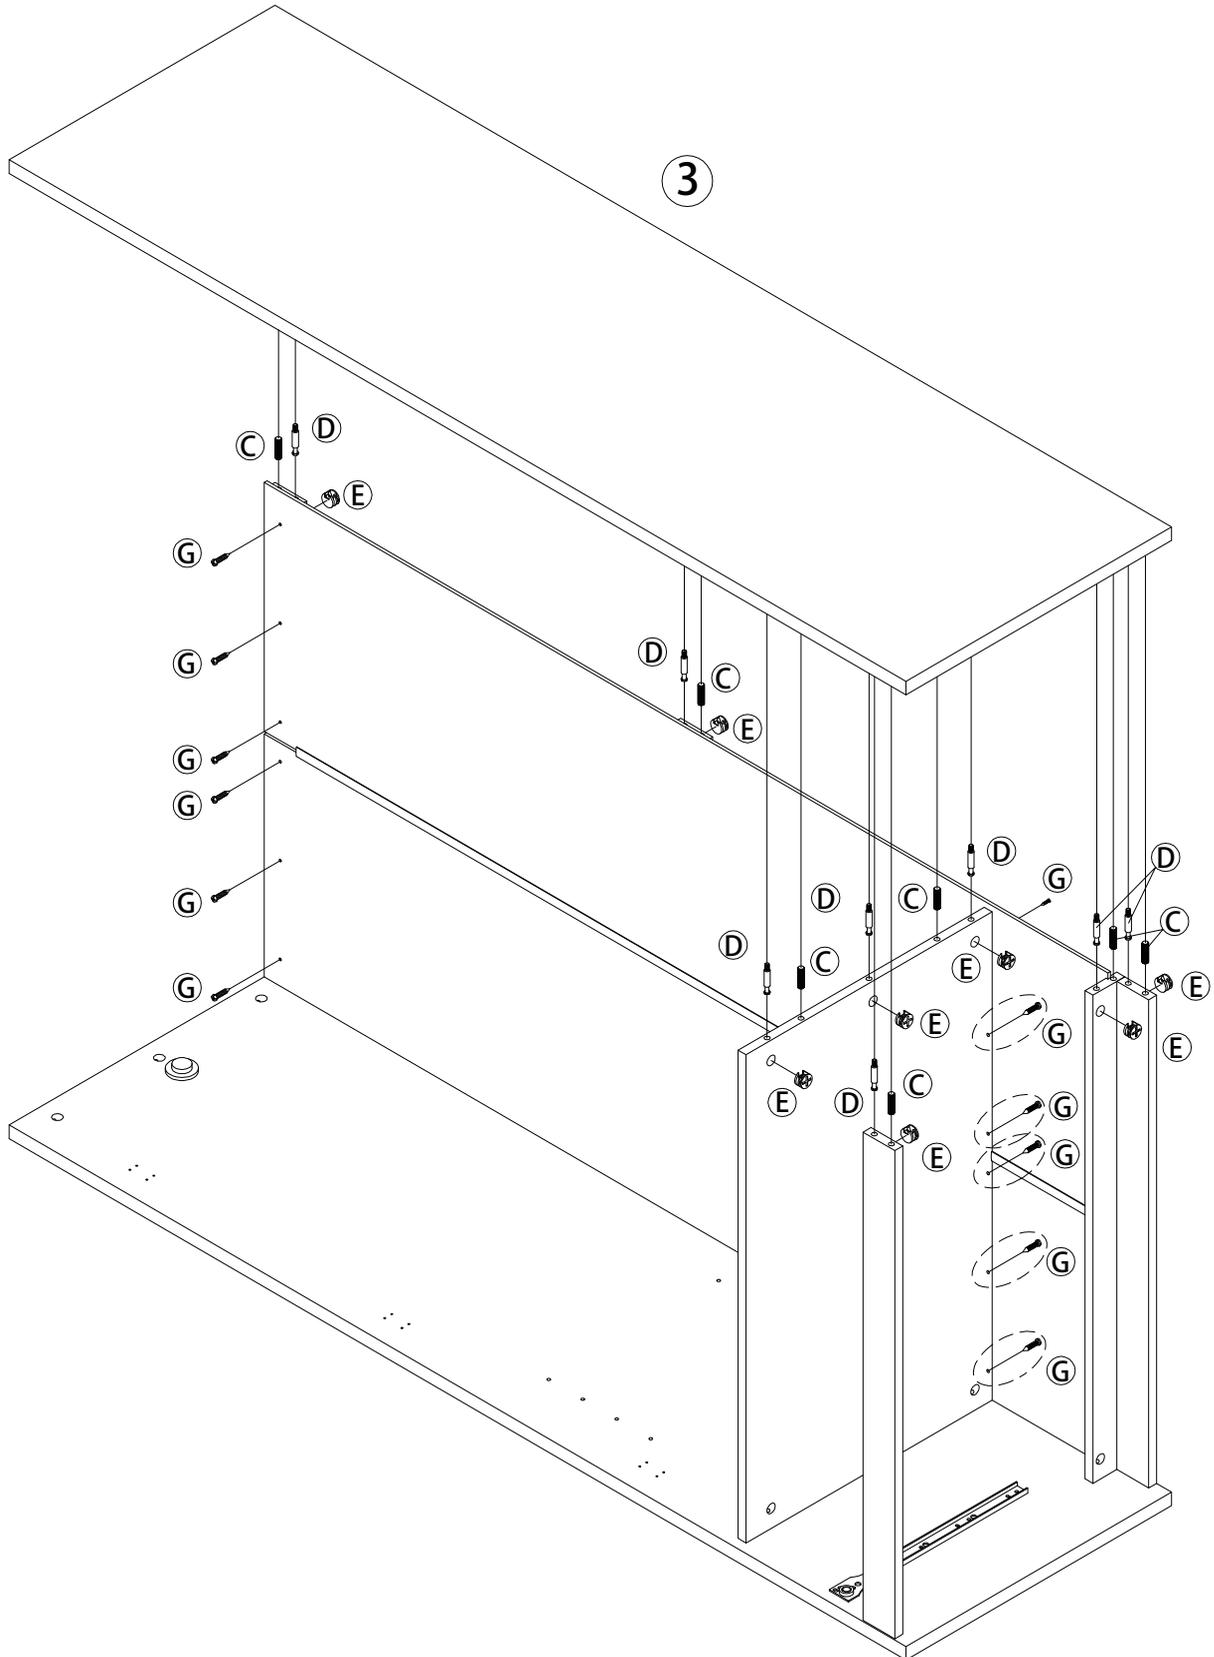 


7

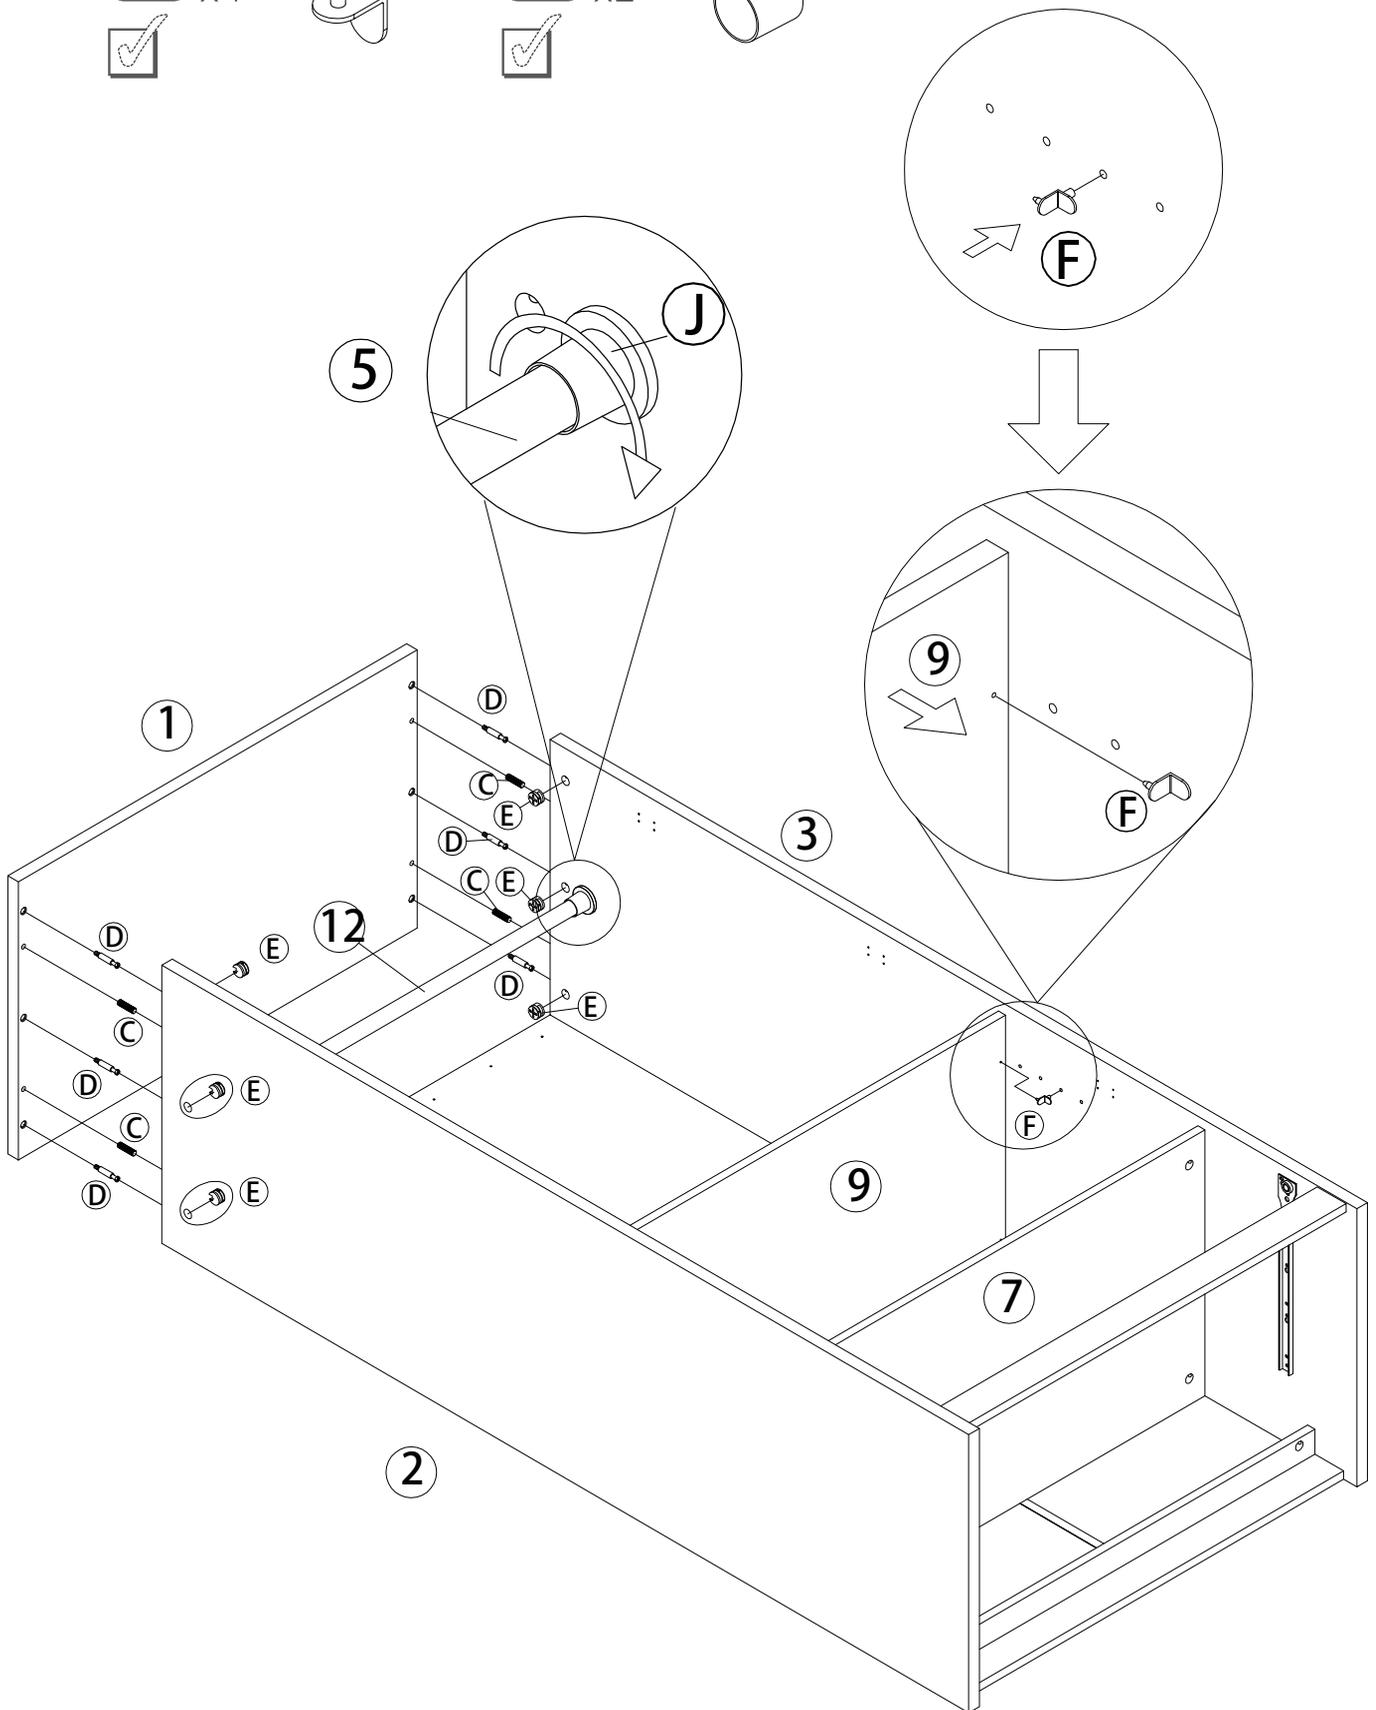  

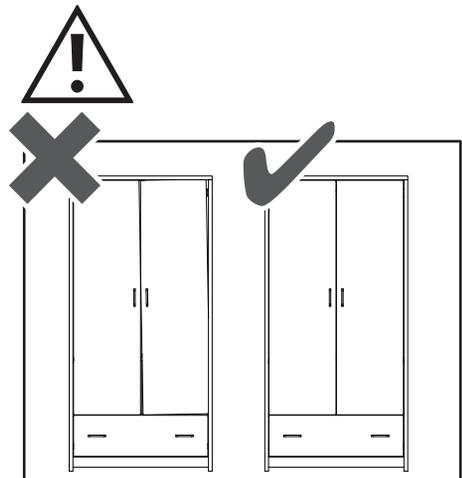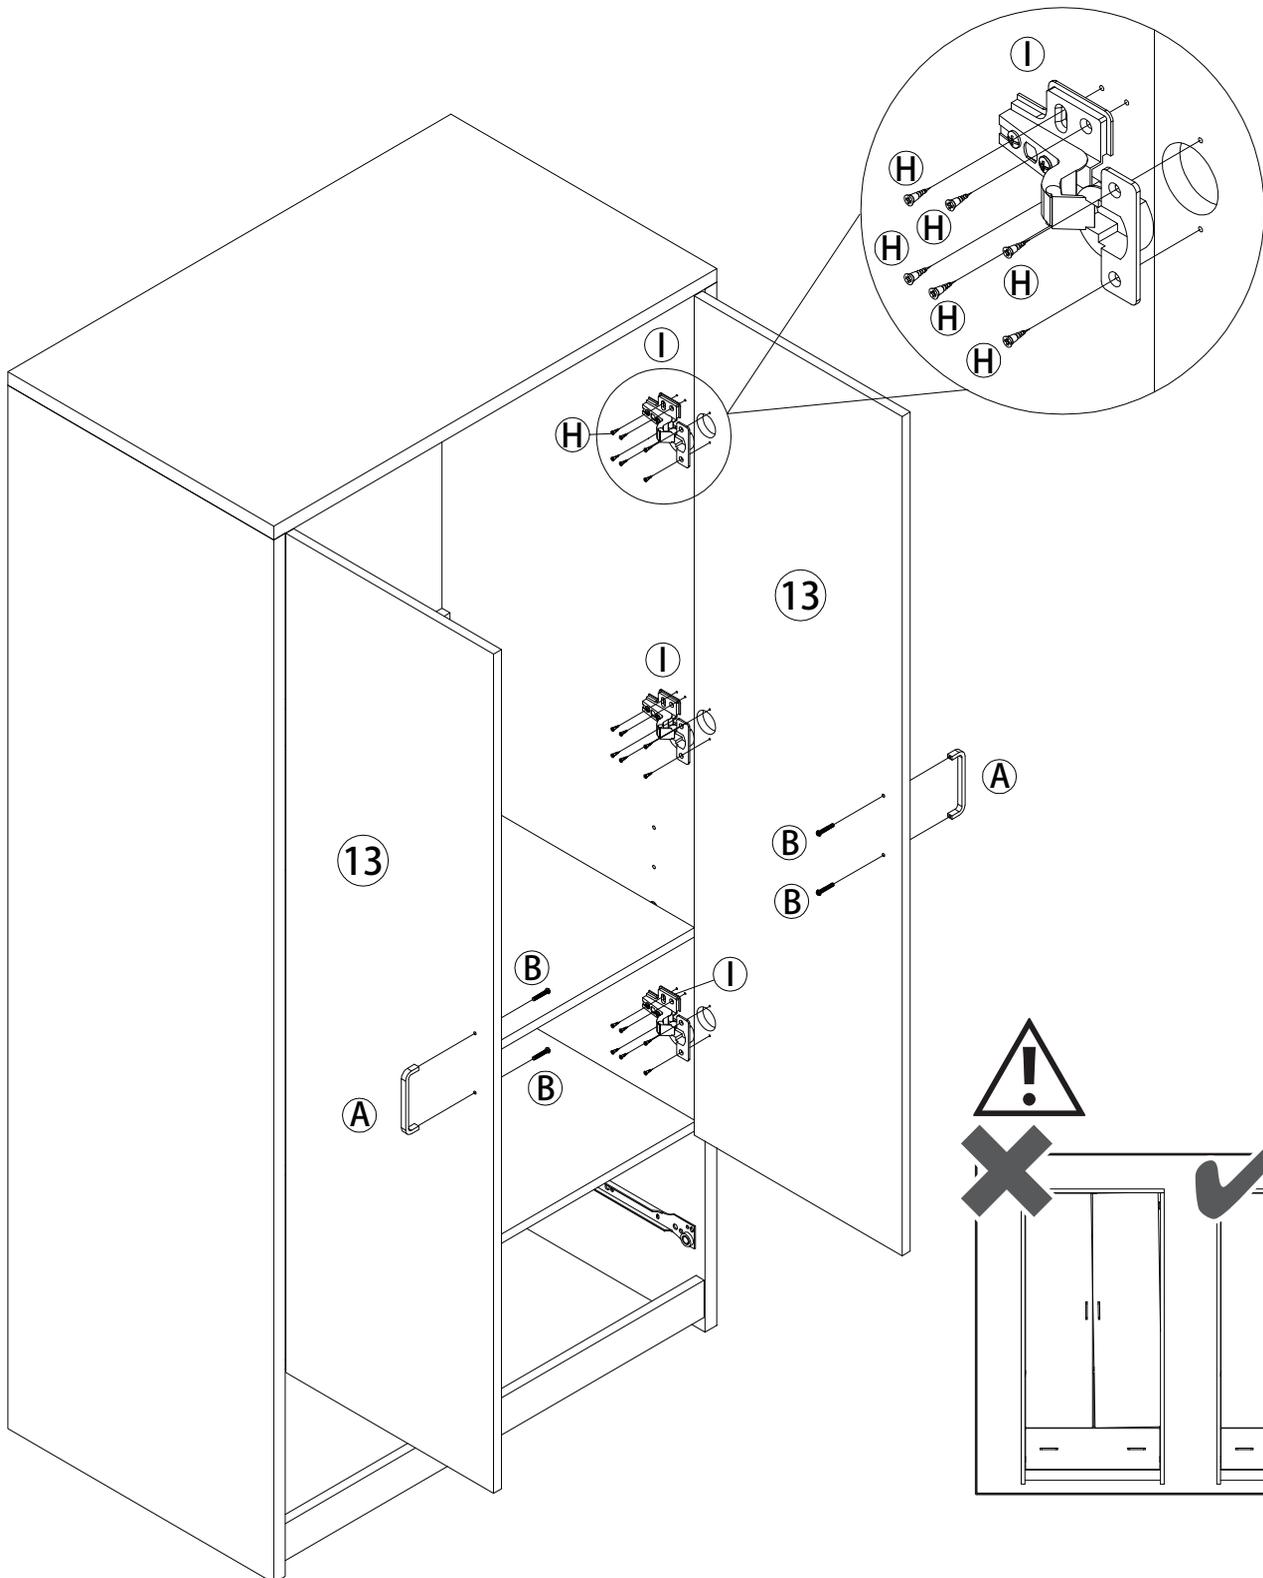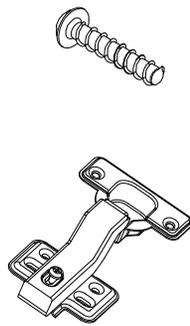 


9

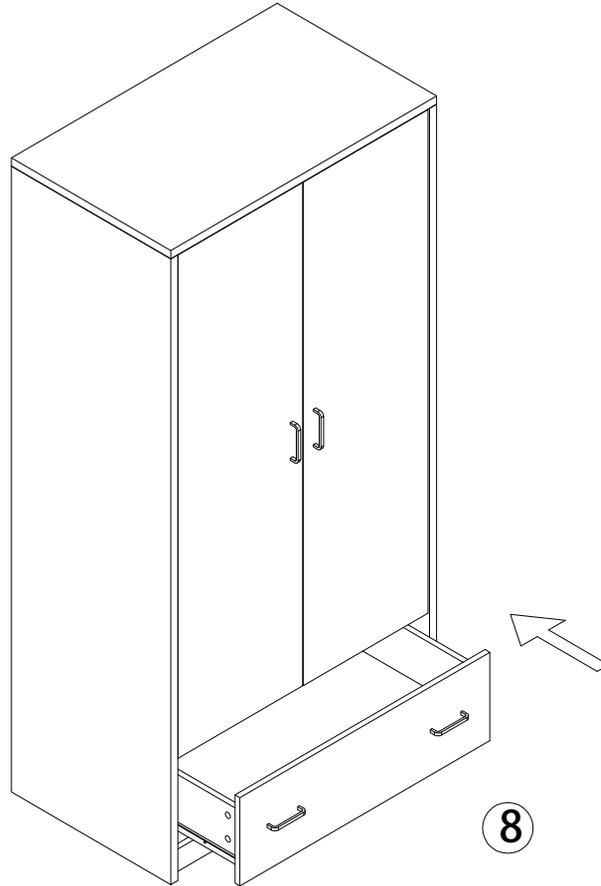

10


**Warning:** Never use the screw provided to attach the strap to the wall. No wall attachment fittings are supplied. This is because the type of fittings required to attach the strap to the chosen wall is determined by the composition of the wall. If you are in any doubt about the correct type of fittings to use, consult a professional before attempting to attach the strap to the wall.

This hardware is only deterrent. Adult supervision is the only proper deterrent to prevent improper use of the units. Tipping furniture may injure young children. Use of this tipping restraint hardware is highly recommended.

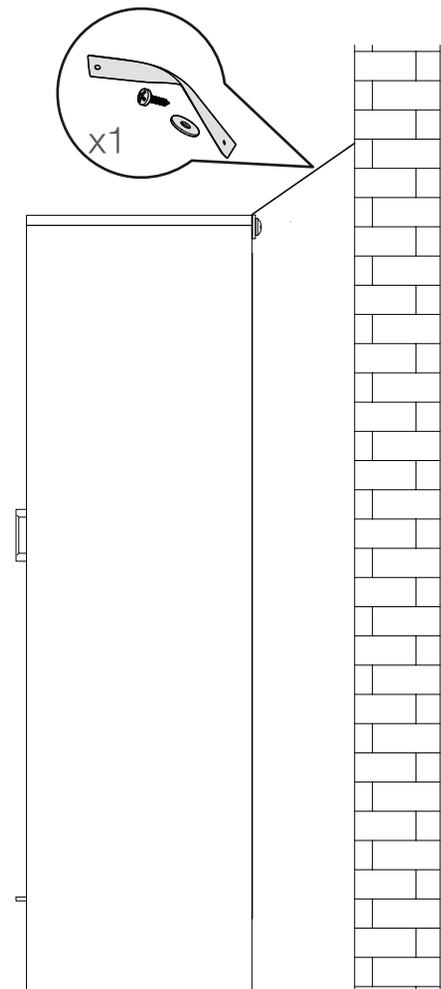


## Adjusting the doors

1

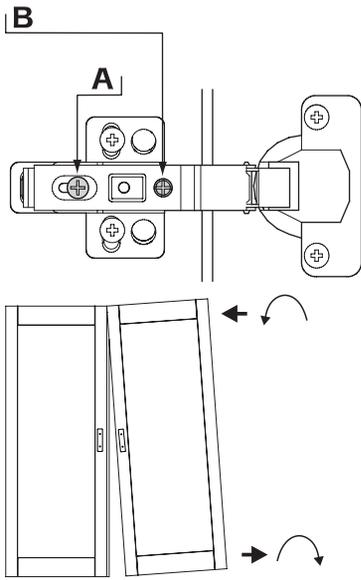


Adjusting the gap between the doors. Loosen screw 'A' slightly. Turn Screw 'B' clockwise to move the door away from the side, turn anti-clockwise to move the door towards the side. When gap is equal tighten screw 'A'.

2

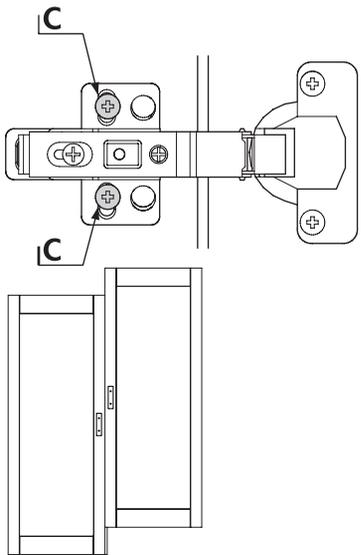

Adjusting the height of the doors. Loosen screws 'C' then slide the hingeplates up or down until the doors are even then tighten the screws.

3

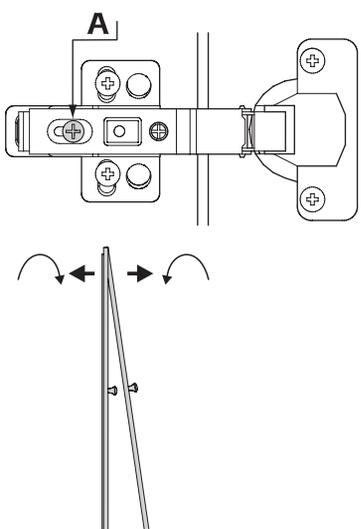

Adjusting the angle of the door. Loosen screw 'A' and slide the hinge arm either forwards or backwards until the door is vertical then tighten screw 'A'.

Due to constant updating and improvements, some components may occasionally differ slightly from the diagrams shown in these instructions.

Any spare components should only be thrown away after you have fully constructed your product. After disassembly, it is important to retain all metal fixings and components for reassembly in future.

We reserve the right to change the specifications of any piece of product without prior notice.

## Care & Maintenance

To preserve the hand crafted quality of Babymore furniture, we recommend using a cotton cloth and a non-toxic cleaner. Periodic use of furniture polish will maintain the good looks of your furniture. Scuff marks may be removed with a damp cloth.

## SIX MONTHS LIMITED WARRANTY

We will replace any missing parts at the time of purchase or any defective item within 6 months period from the date of original purchase. Please keep your receipt so that we may process your warranty request. This warranty only covers new units with original packaging and ownership, and is not transferable. It does not cover any used, second hand or demo models.

This warranty does not cover any damaged or defective parts that result from installation and assembly, normal wear and tear, abuse, negligence, improper use, incidental damages or alteration to the finish, design, and part or fitting of the item. This in no way affects your statutory rights.

Each Babymore item is a unique piece, made of high quality wood and material. Due to the handcrafted nature of our products and our use of solid woods, each piece is unique and may contain irregular qualities, there will occasionally be natural markings, miniscule burrs, or slight discolorations. These natural characteristics are inherent in wood and are not considered manufacturing defects. Because of this, the merchandise will be considered normal and of good quality and do not merit replacement.

Thank you for purchasing Babymore If you need assistance, spare parts or you are unhappy with the goods  
Call: 020 3475 5588 or email: [customerservices@babymore.co.uk](mailto:customerservices@babymore.co.uk)

