


# INSTRUCTIONS

## UNIVERSAL WARDROBE

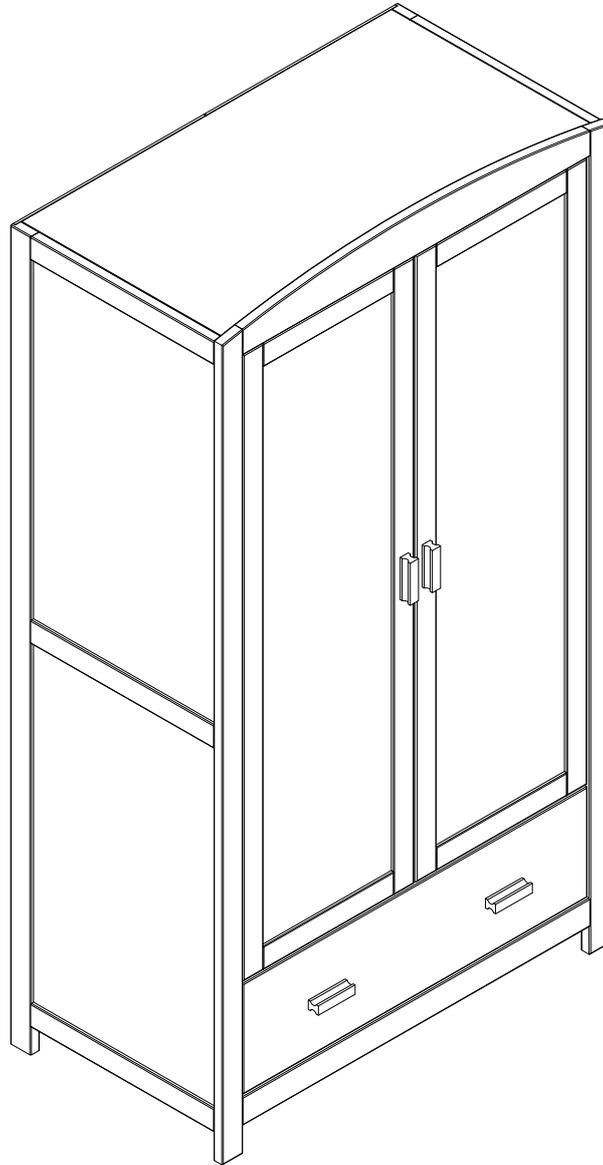

**Babymore**  
more for your baby

UNIW: V1/23  
Babymore Ltd. 2023



# IMPORTANT: READ CAREFULLY AND RETAIN FOR FUTURE REFERENCE

The correct use and maintenance of your furniture will ensure it gives long and trouble free use. Please ensure everyone use your changer know how to use it.

- **WARNING:** DO NOT LEAVE THE CHILD UNATTENDED. The safety of your child is your responsibility.
- Check regularly that all the fittings and screws are correctly tightened and are not damaged. Loose screws can pinch parts of the body and clothing resulting in the risk of strangulation.
- Do not use replacement parts that are not recommended or supplied by Babymore.
- Do not place your product in the near vicinity of open fires or other sources of strong heat, such as electric or gas fires.
- Always leave your product clean and dry. Wipe away any spillage straight away. Your product can be cleaned with a damp cloth. Never use harsh abrasives, bleach, or strong detergents.
- Before use, ensure the dresser is on a stable, level surface.
- Do not allow children to climb on the product.
- Never use the product if any parts are broken or missing.
- Never pivot or drag the furniture on its feet, must always be lifted by at least two people when moved.
- Assembly to be carried out by a competent adult only.
- During assembly children should be kept away from the product due to possible risk of injury.
- Designed and manufactured to BS EN 14749:2016+A1:2022
- The standard is applicable to all types of domestic seating, tables and storage furniture for use by children from 3 years old to 12 years old. The maximum load of the unit is 32 kg.



## WALL STRAP INFORMATION

- **WARNING!** IN ORDER TO PREVENT OVERTURNING THIS PRODUCT MUST BE USED WITH THE WALL ATTACHMENT DEVICE PROVIDED.
- An attachment device is provided with your product, However you will need to source suitable fixings for your wall type.
- No wall attachment fittings are supplied. This is because the type of fittings required to attach the strap to the chosen wall is determined by the composition of the wall. If in doubt, please consult a qualified tradesperson. Always ensure the wall to be drilled is free from hidden electrical wires, water and gas pipes.
- The wall strap must not be used to replace any other fitting supplied with your furniture. Never use the screw provided to attach the strap to the wall.
- Furniture falling over is generally due to the surface the furniture is placed on. A warped floor or wall-to-wall carpeting will enable the furniture to rock, so greatly increasing the potential for the furniture to fall. If the furniture is placed on a flat level wood or tiled floor the risk is reduced, but we still recommend the wall strap is fitted.
- Serious or fatal crushing injuries can occur from furniture tipping over. To help prevent this item of furniture tipping over:
  - Use the wall attachment device provided.
  - Do not let children climb or hang on drawers, doors or shelves.
  - Place the heaviest items in the lower drawers or shelves.
  - Do not place TV's or other heavy objects on top of this product. unless it has been specifically designed to support them.
  - Never open more than one drawer at a time.

## BEFORE ASSEMBLY








- Unpack all the parts and identify them against the components and fittings lists.
- Do not discard any packaging until you are sure you have all the parts and the pack of fittings.
- If you do find any parts are missing or damaged or incorrect, contact customer services via above.
- Read the instructions thoroughly before attempt construct.
- You may find the construction easier with help of another person, in the room for use, on a soft and clean floor so there is no damage caused during construction.
- Follow each stage of construction step-by-step.






# COMPONENTS

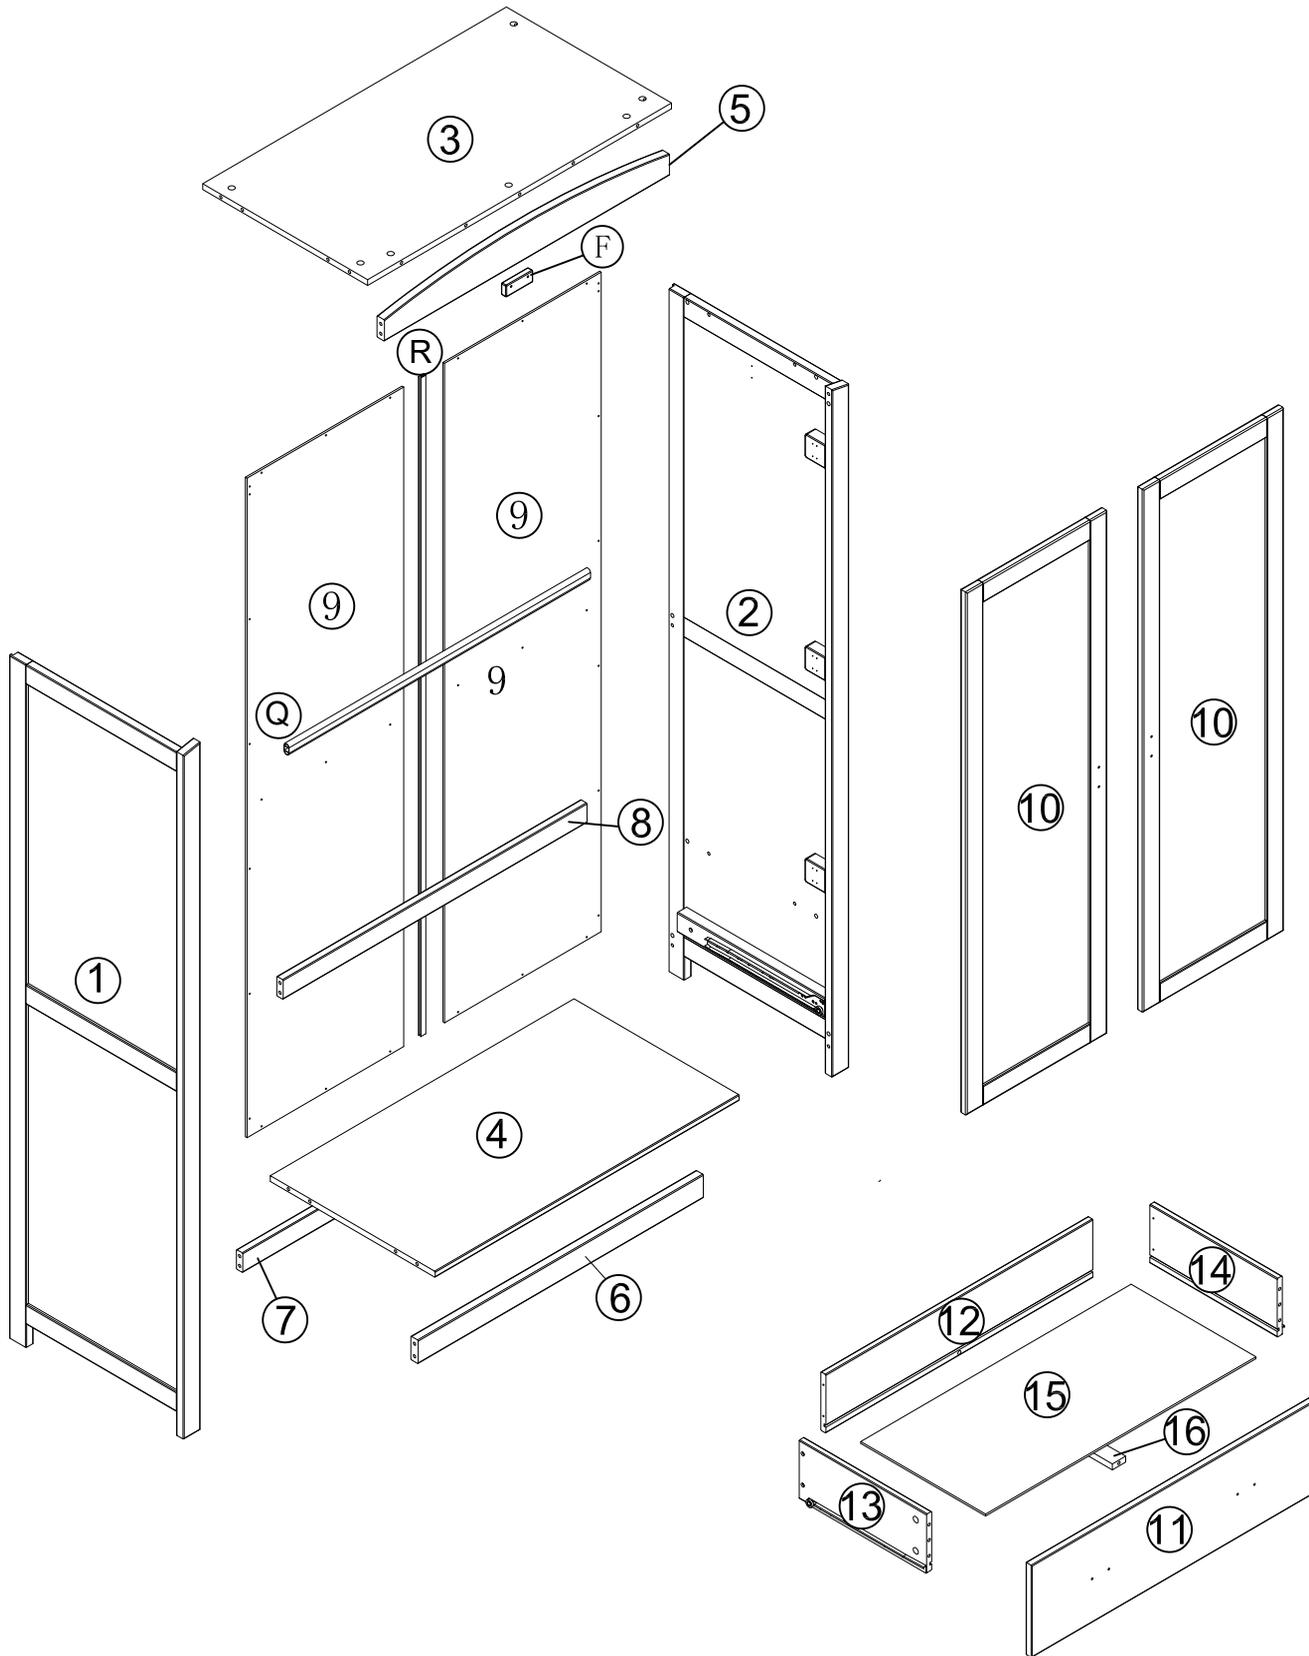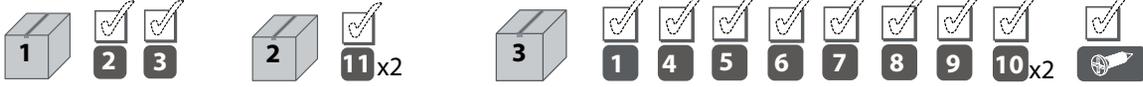




# FITTINGS

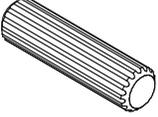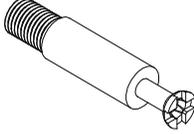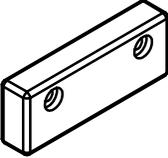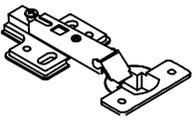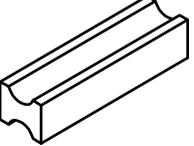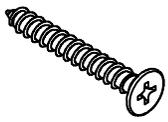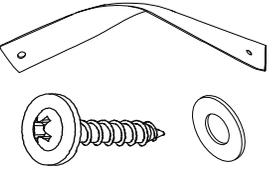


<p><b>A</b> x 20</p> <p><input checked="" type="checkbox"/></p> 	<p><b>B</b> x 25</p> <p><input checked="" type="checkbox"/></p> 
<p><b>C</b> x 25</p> <p><input checked="" type="checkbox"/></p> 	<p><b>D</b> x 30</p> <p><input checked="" type="checkbox"/></p> 
<p><b>E</b> x 2</p> <p><input checked="" type="checkbox"/></p> 	<p><b>F</b> x 1</p> <p><input checked="" type="checkbox"/></p> 
<p><b>G</b> x 2</p> <p><input checked="" type="checkbox"/></p> 	<p><b>H</b> x 4</p> <p><input checked="" type="checkbox"/></p> 
<p><b>I</b> x 6</p> <p><input checked="" type="checkbox"/></p> 	<p><b>J</b> x 36</p> <p><input checked="" type="checkbox"/></p> 
<p><b>K</b> x 4</p> <p><input checked="" type="checkbox"/></p> 	<p><b>L</b> x 8</p> <p><input checked="" type="checkbox"/></p> 
<p><b>M</b> x 4</p> <p><input checked="" type="checkbox"/></p> 	<p><b>N</b> x 2</p> <p><input checked="" type="checkbox"/></p> 

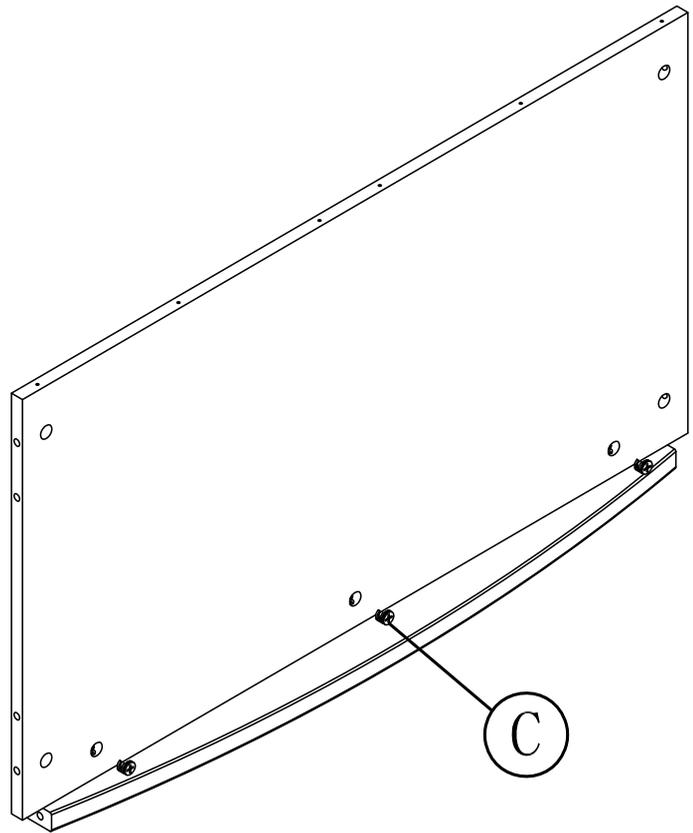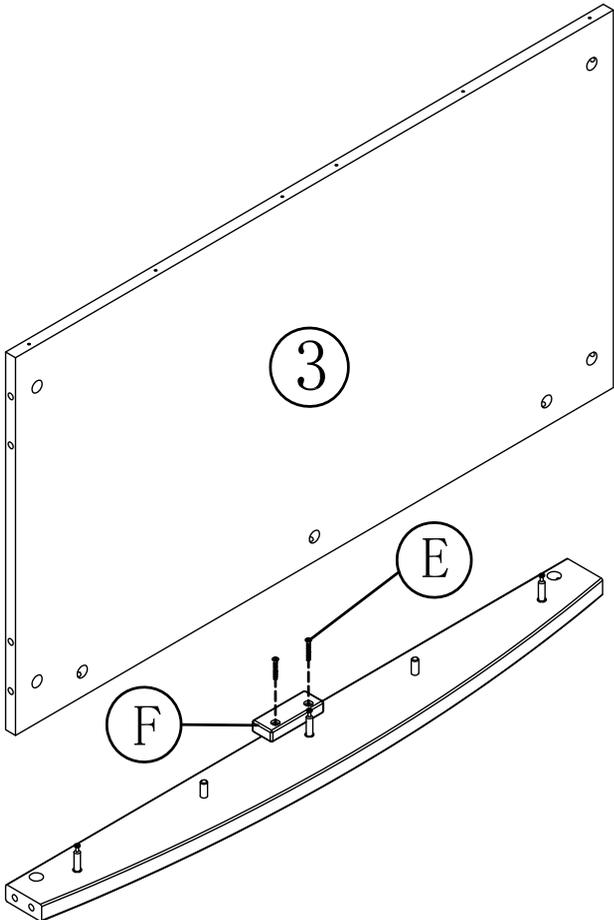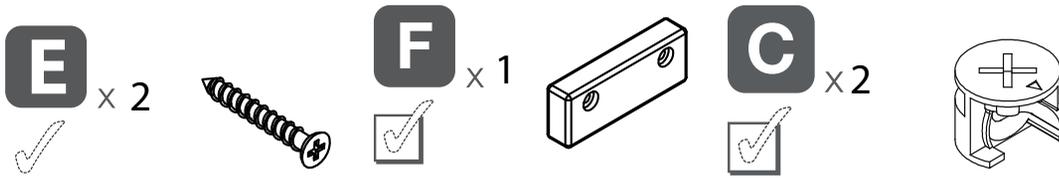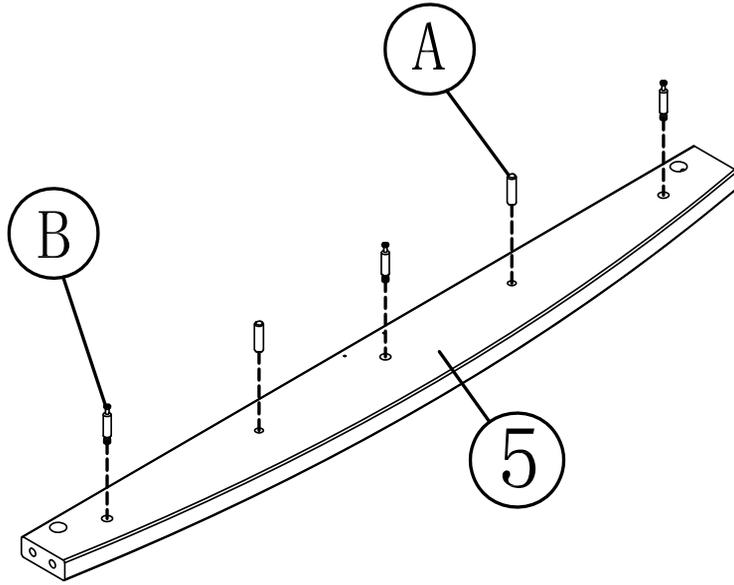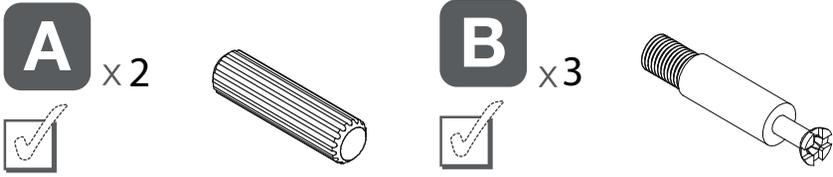


3

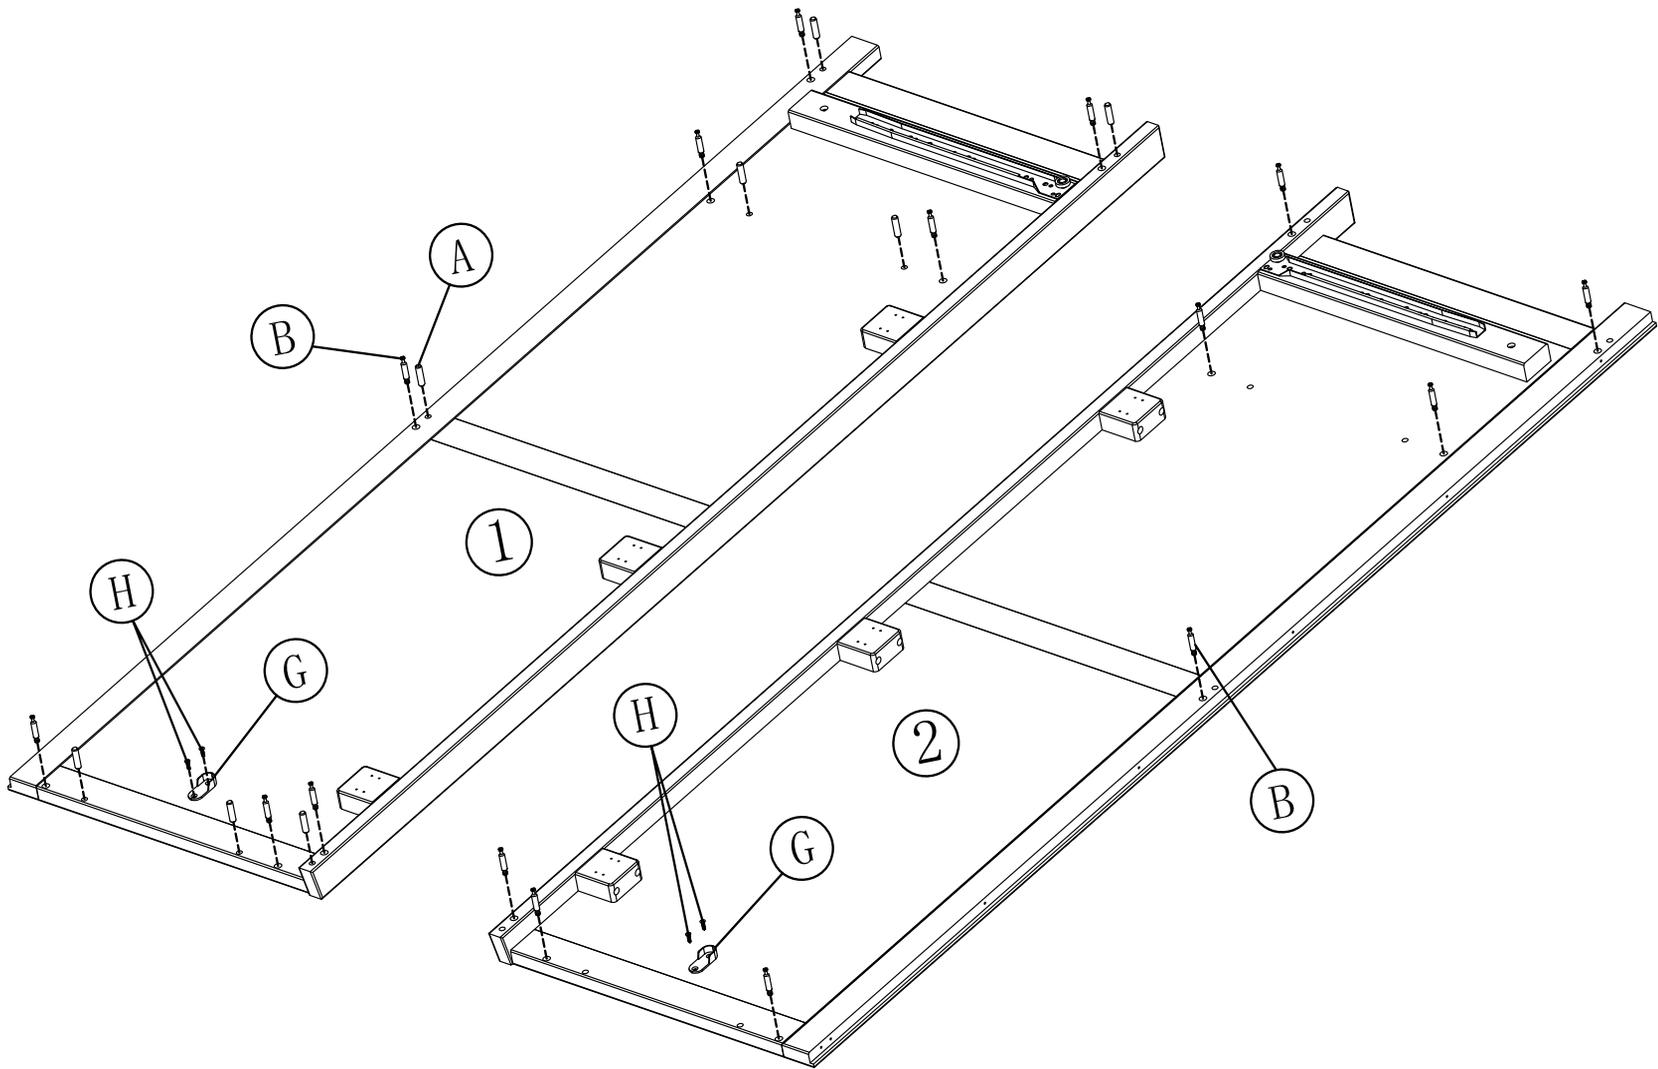  


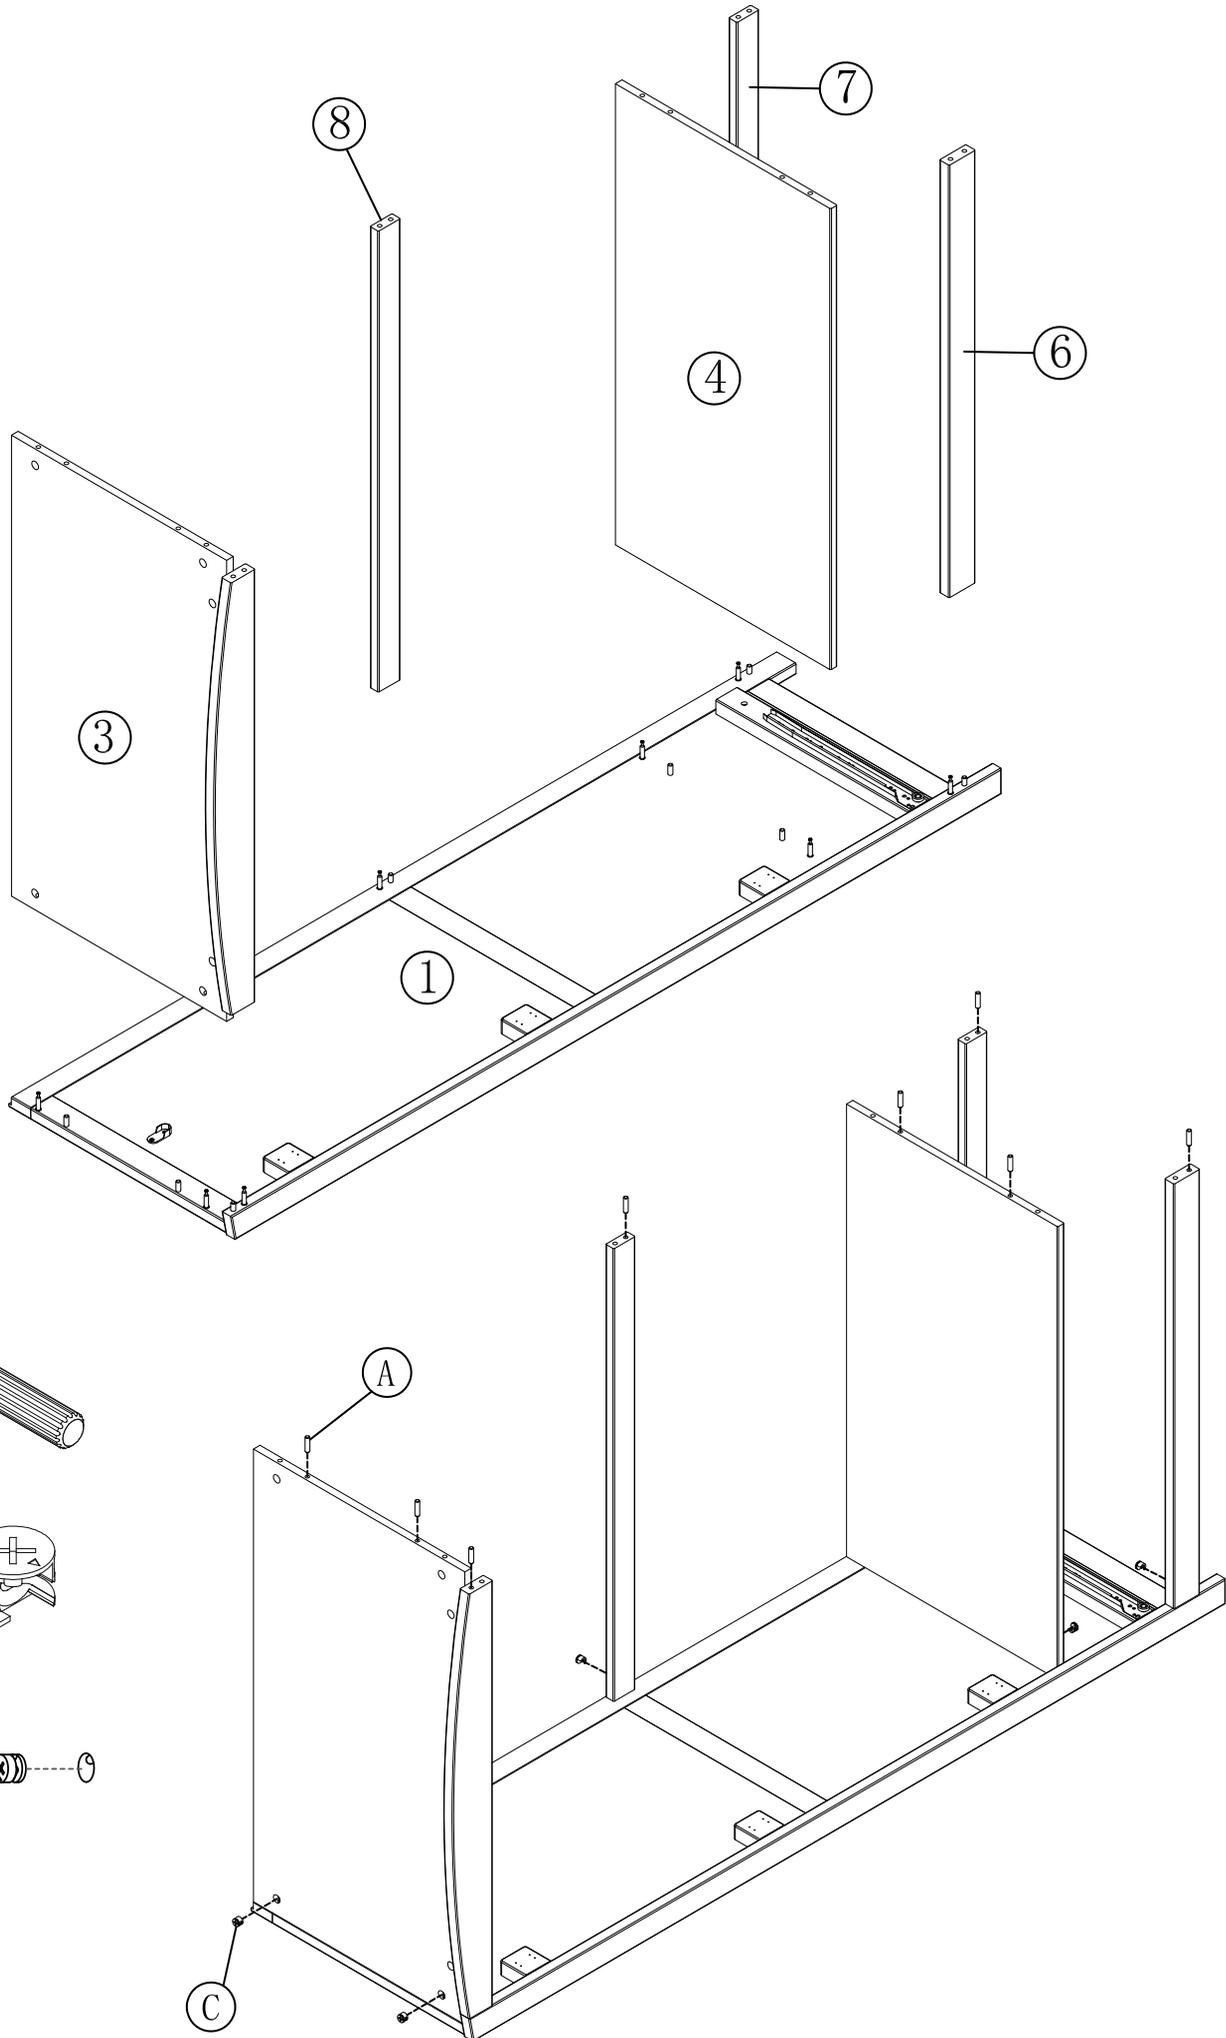


**A** x8

 




**C** x8

 

5

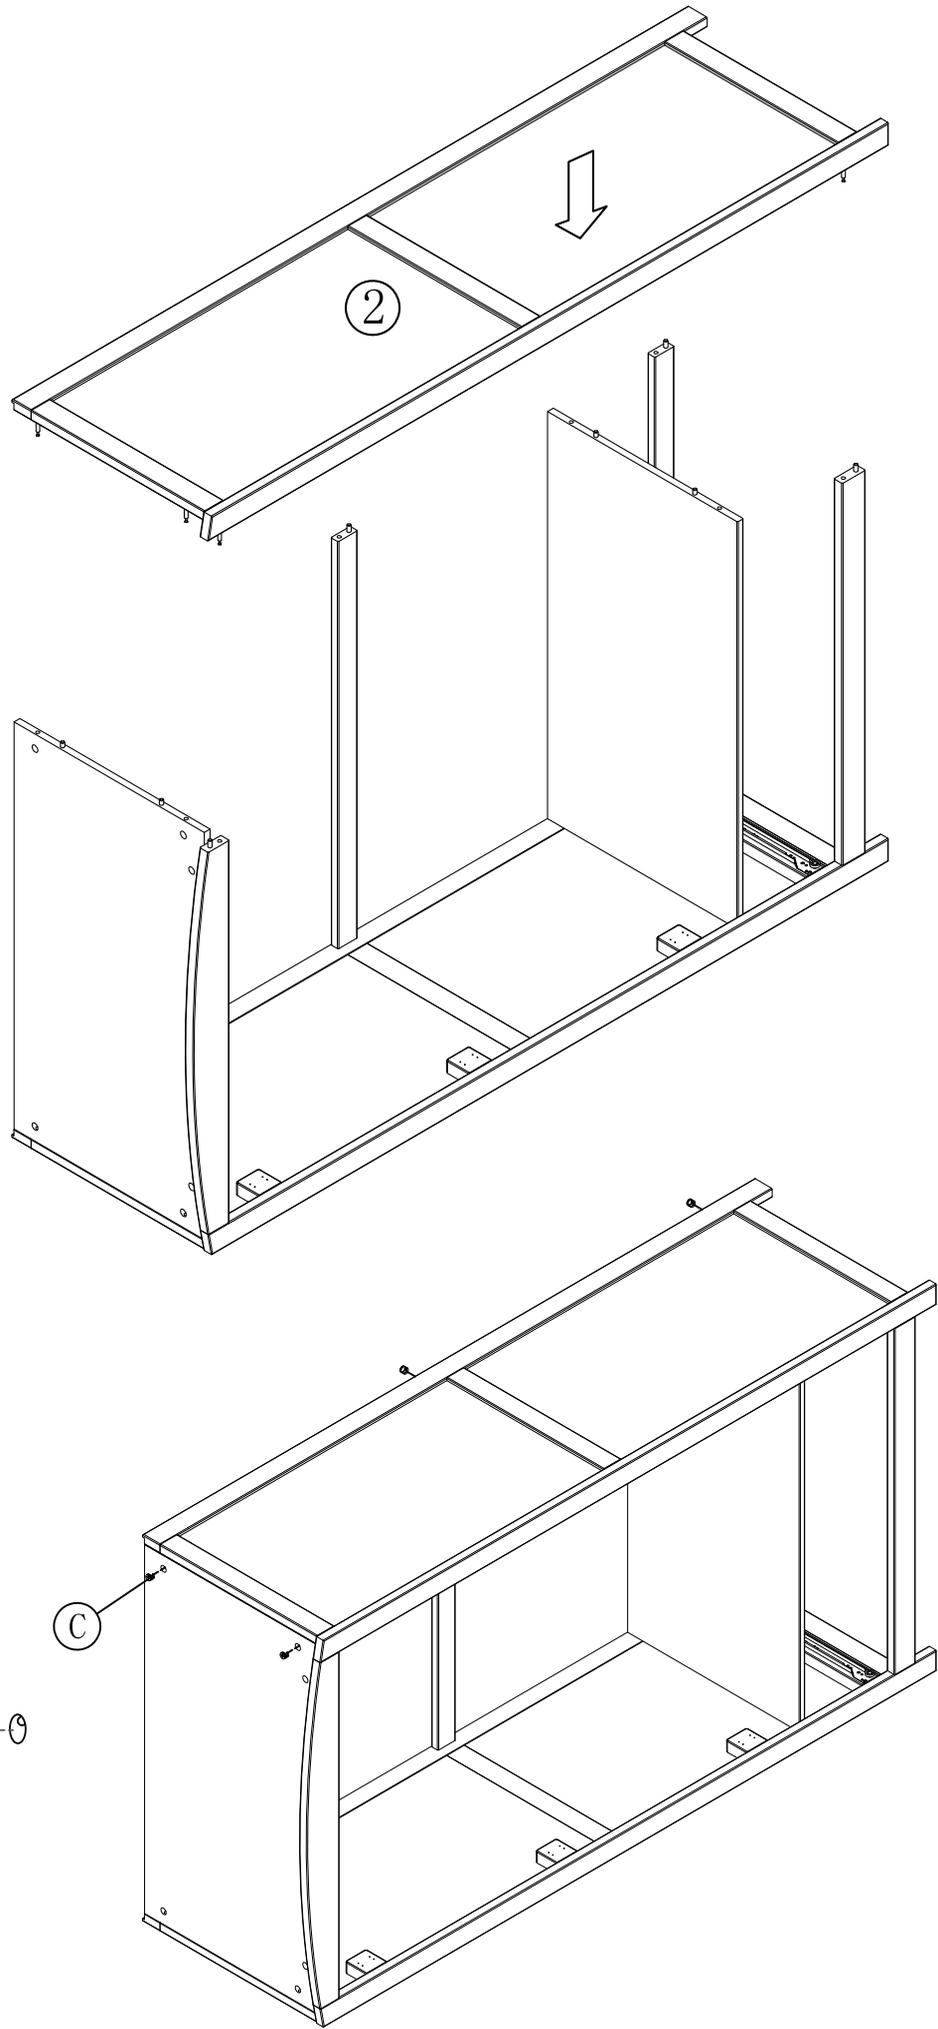

6

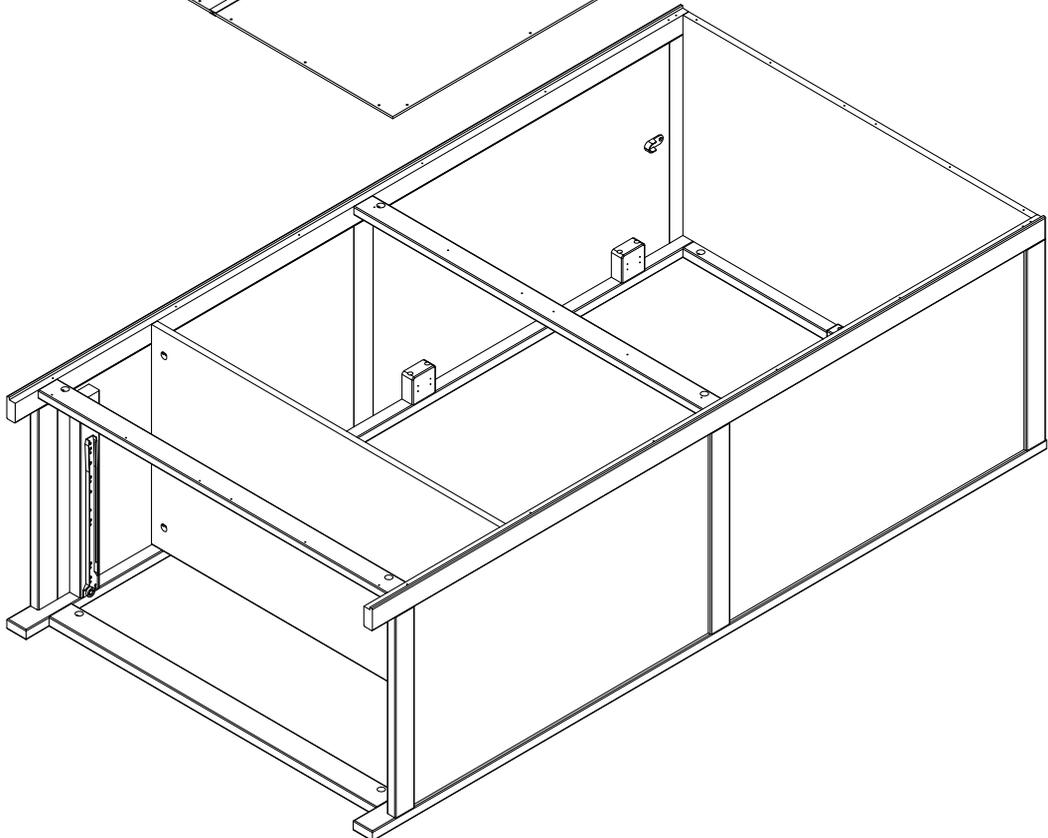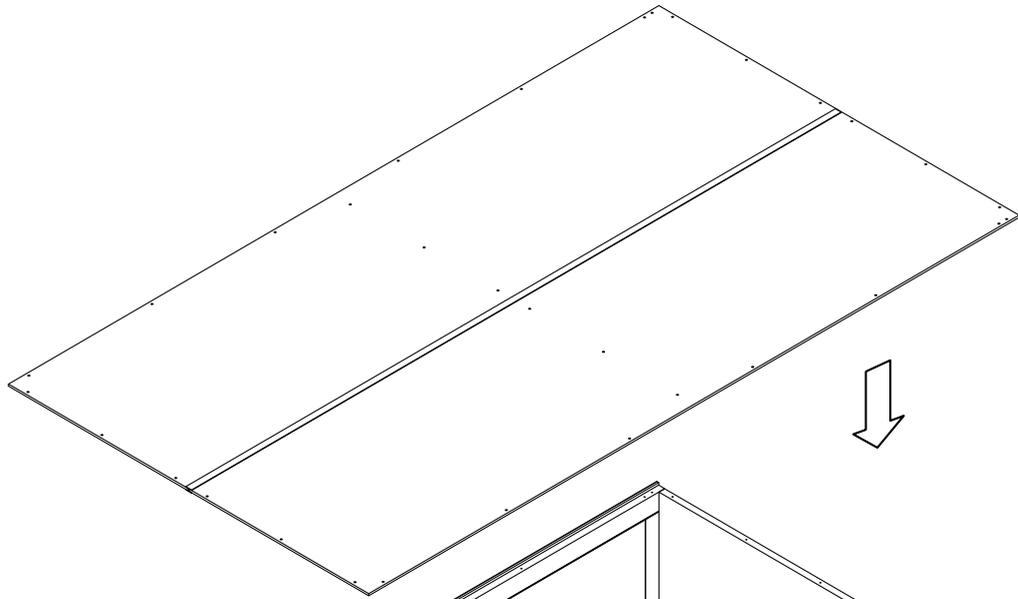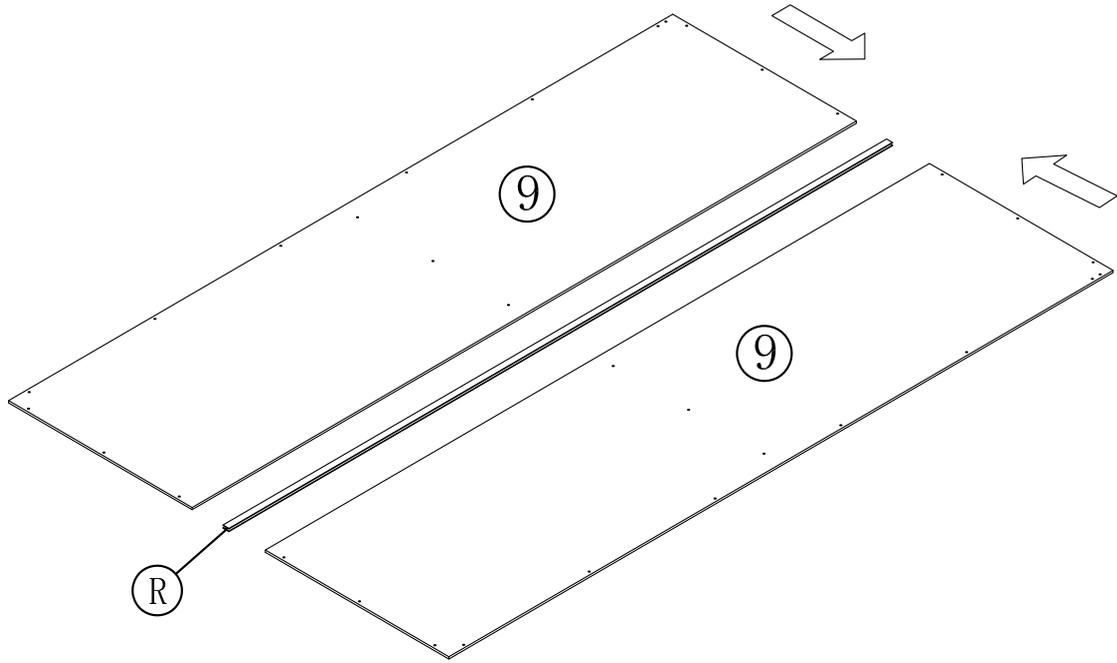


7

**D**

x 30






D

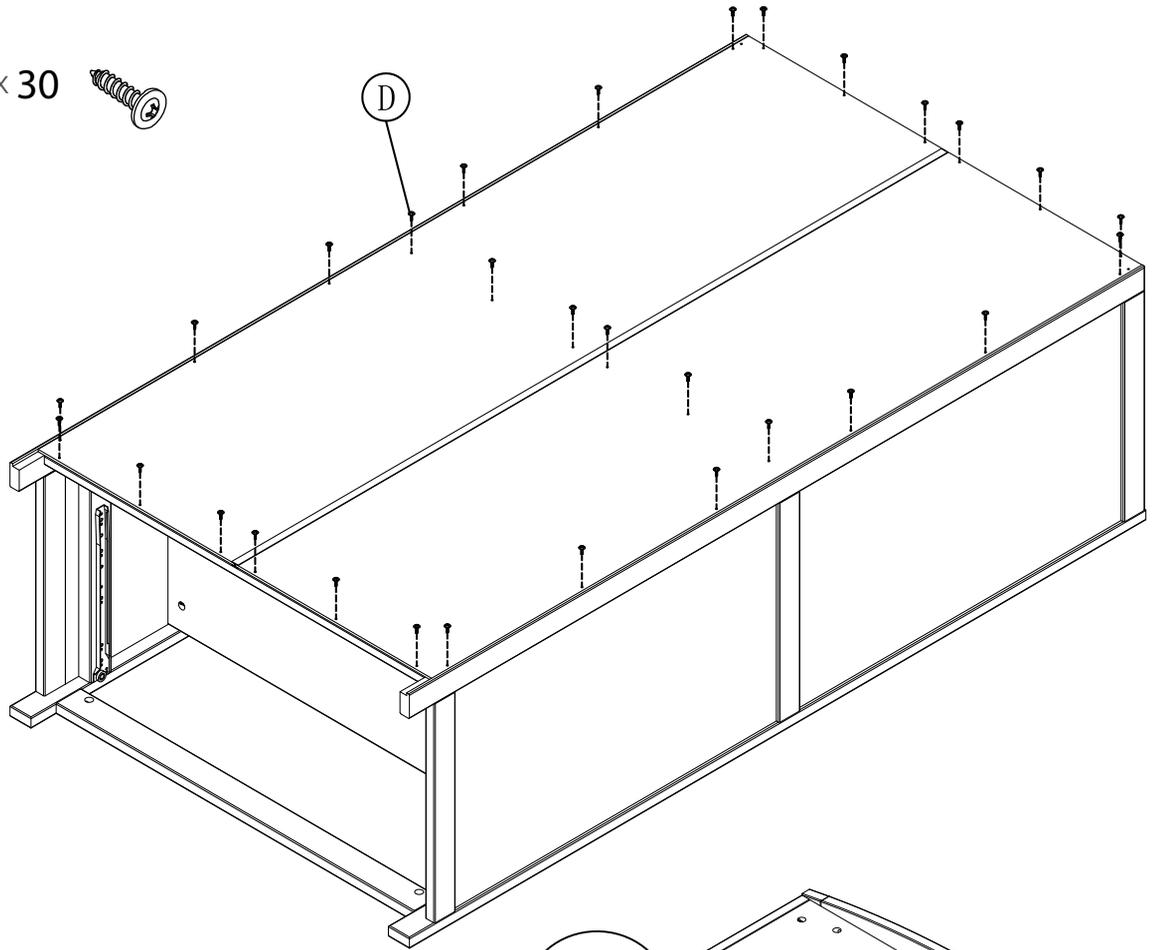


**N**




x 2

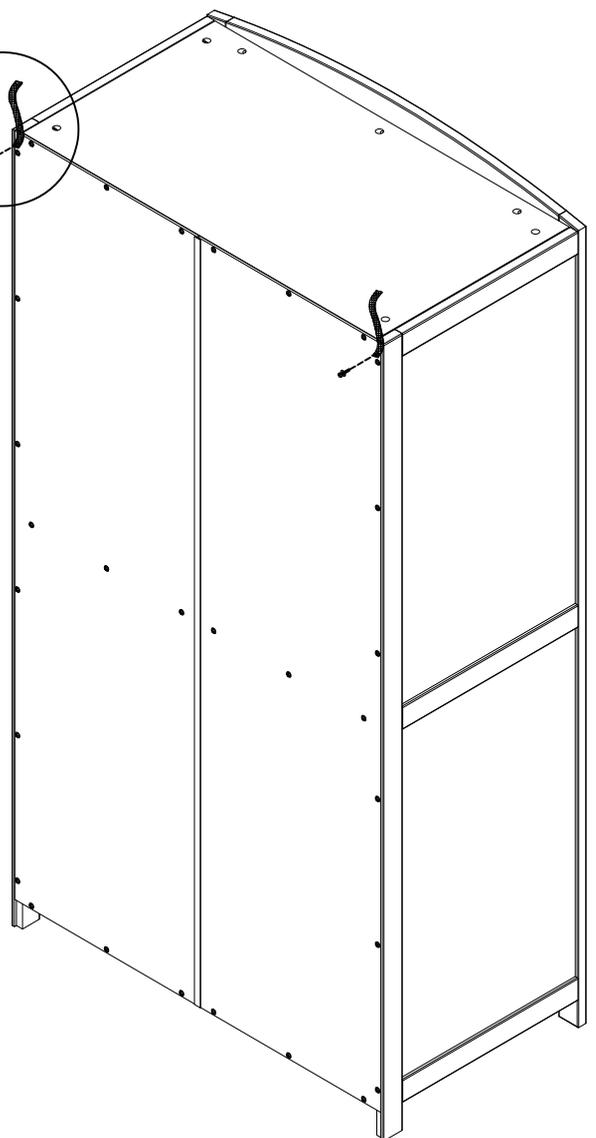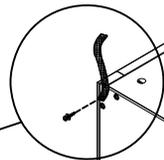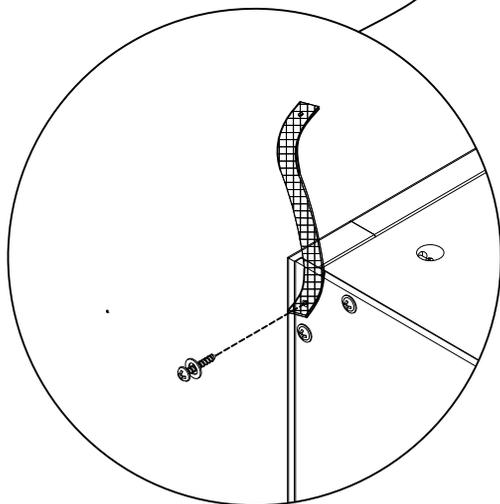

8

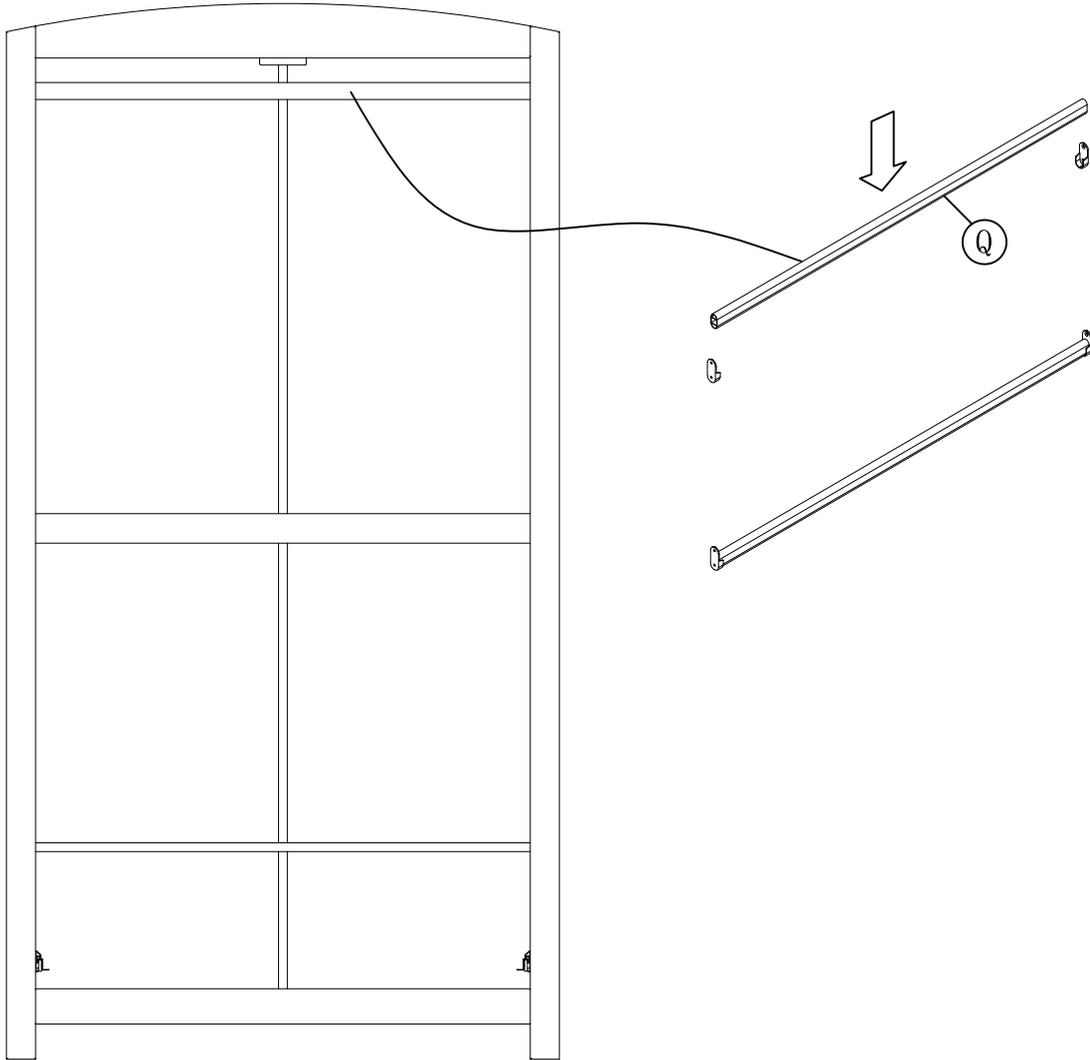


9

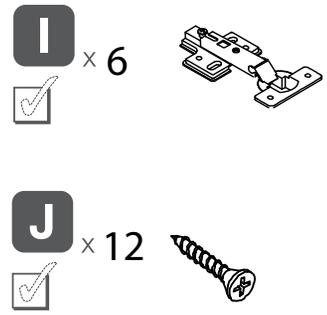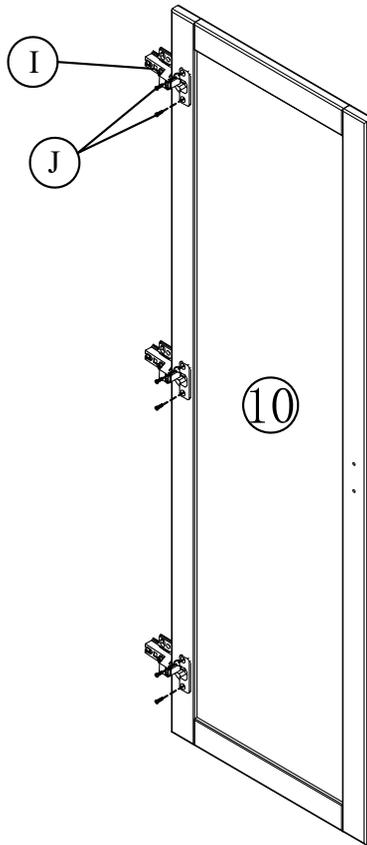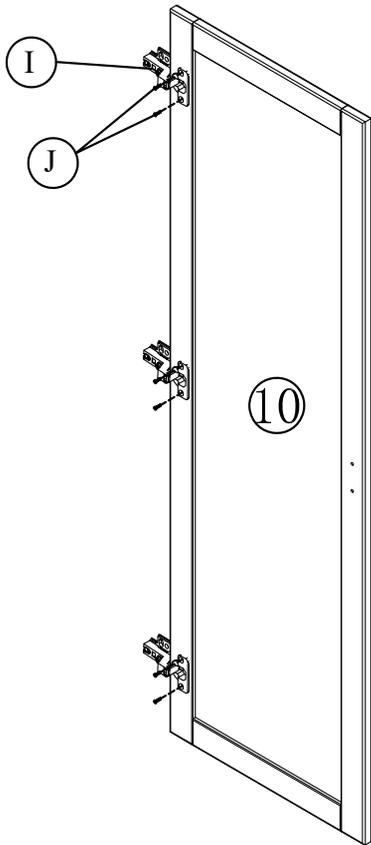

10





x 30

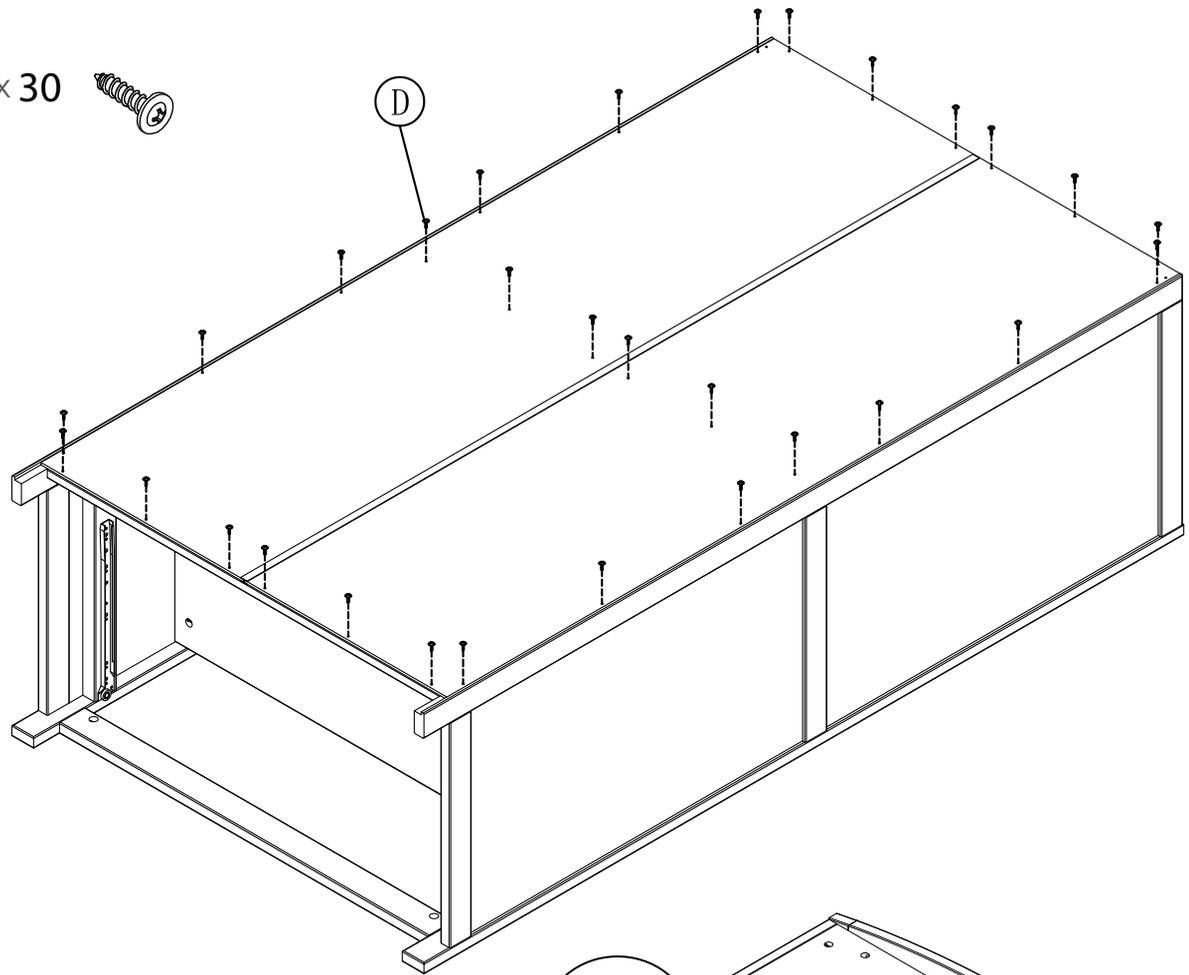


11





x 2

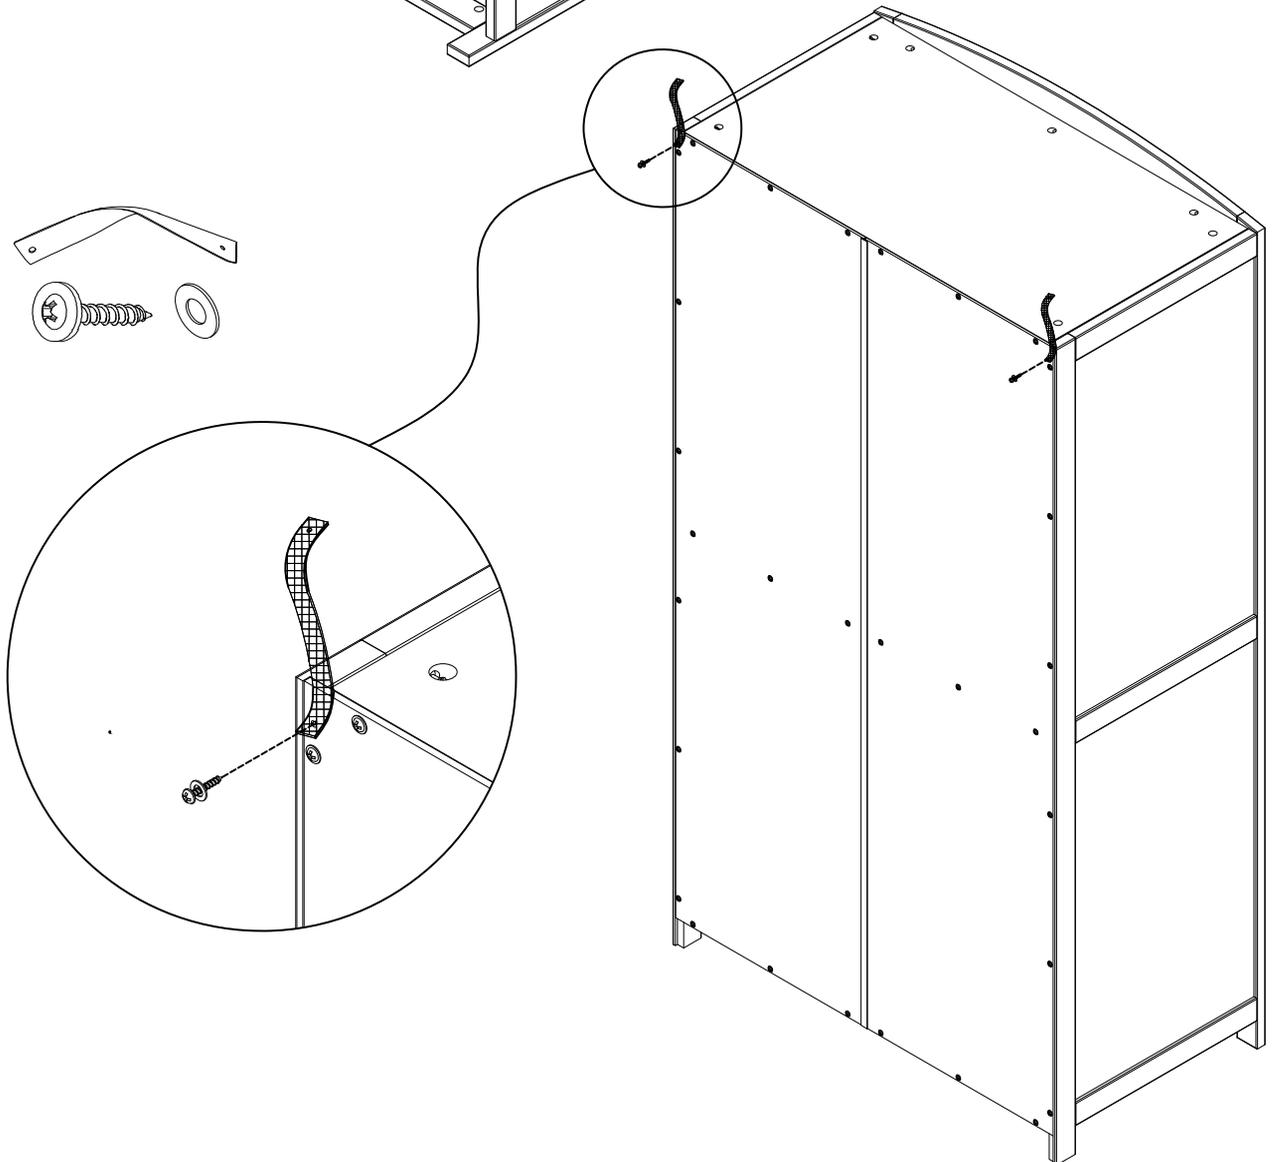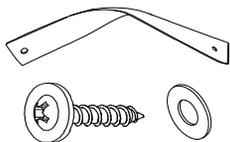


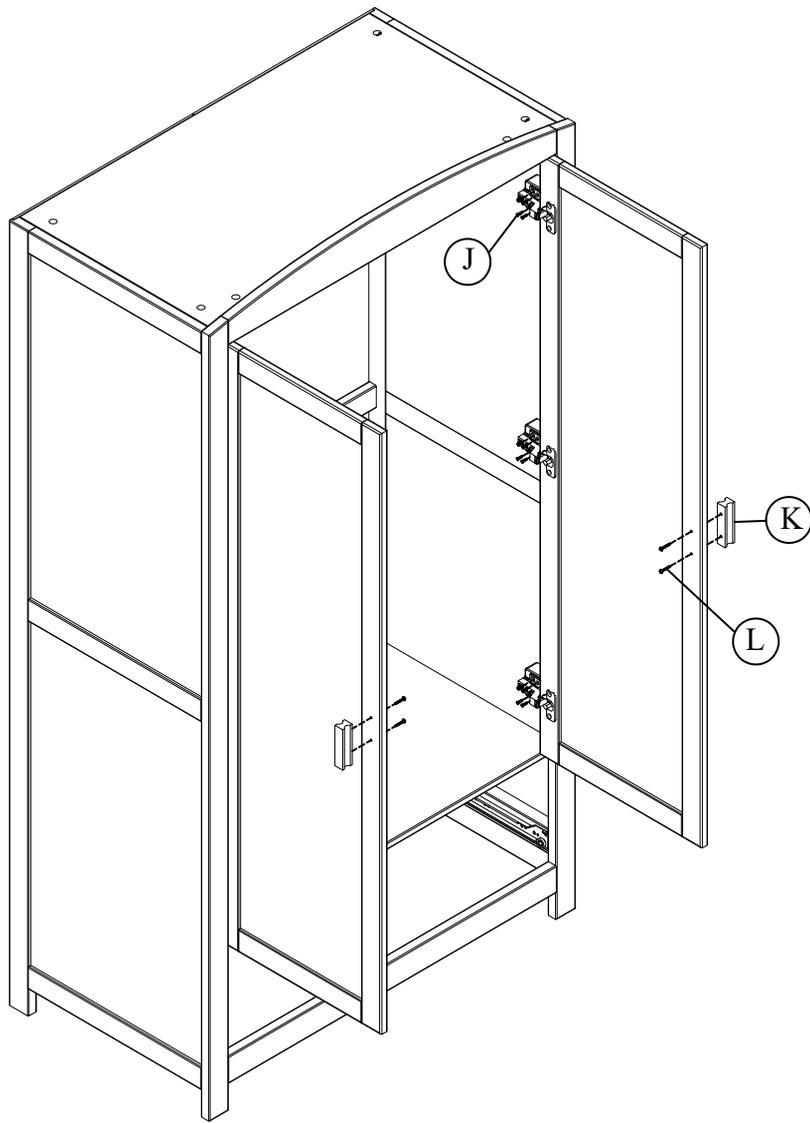


12

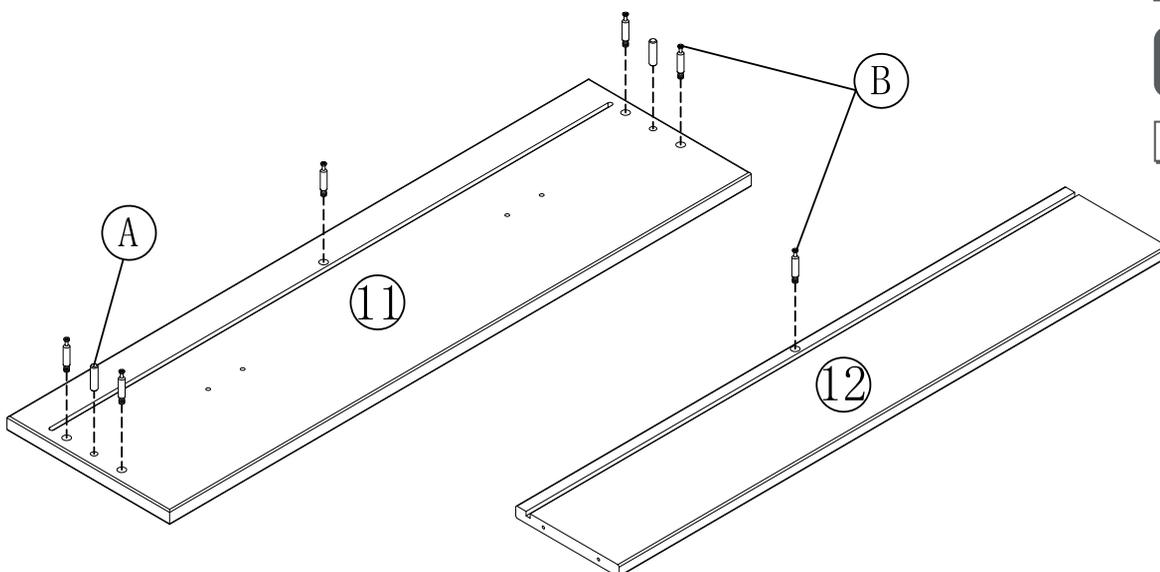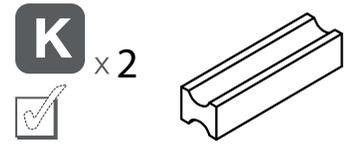


13

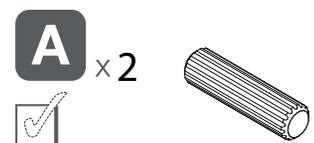


14

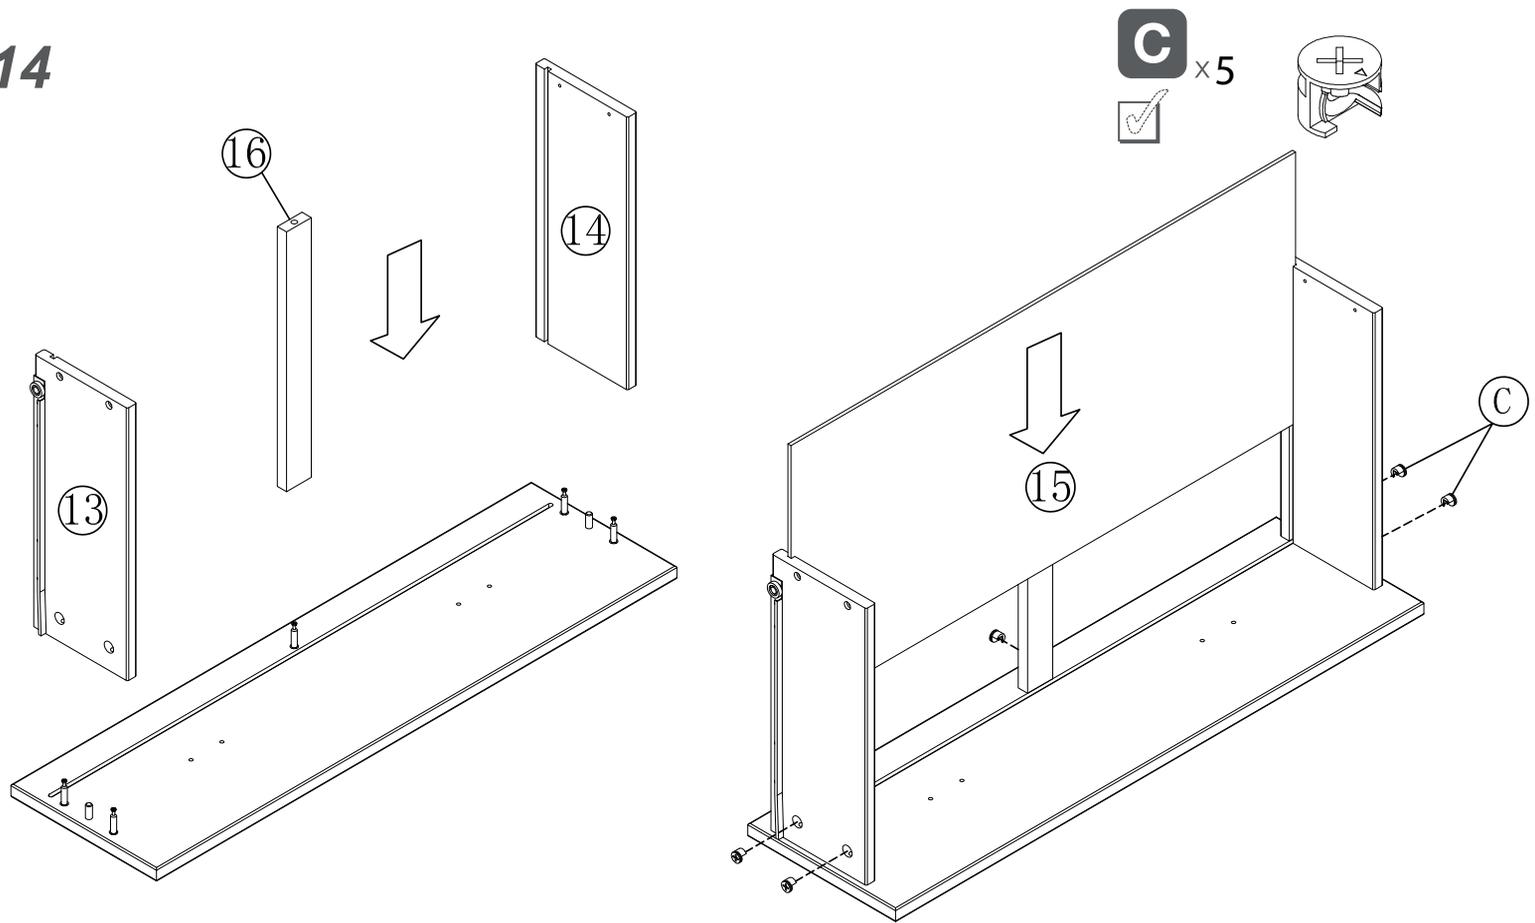


15

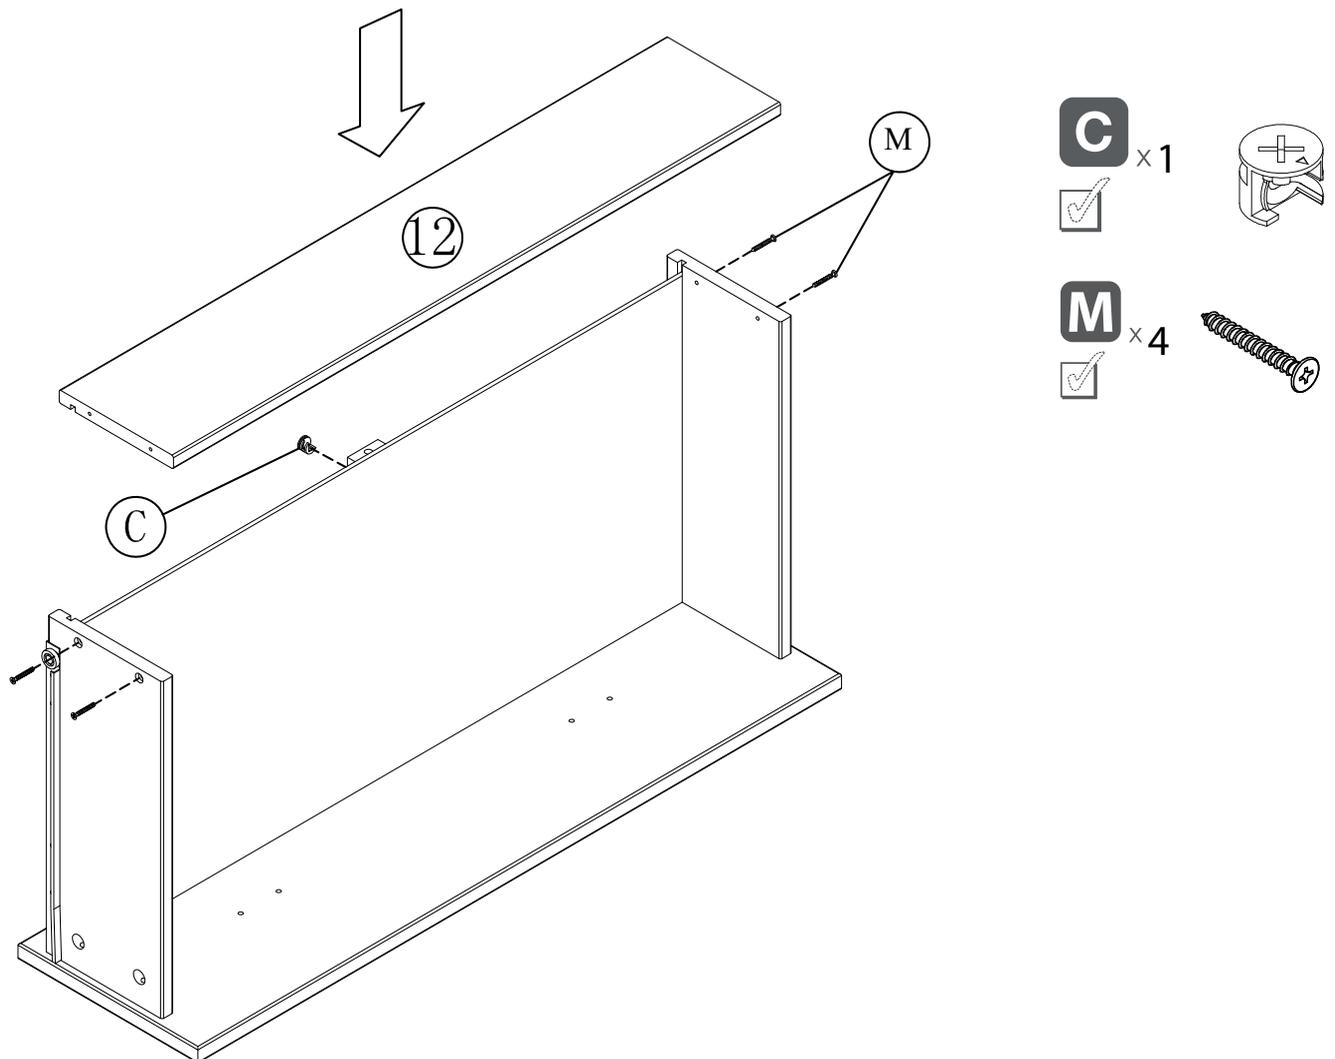

16

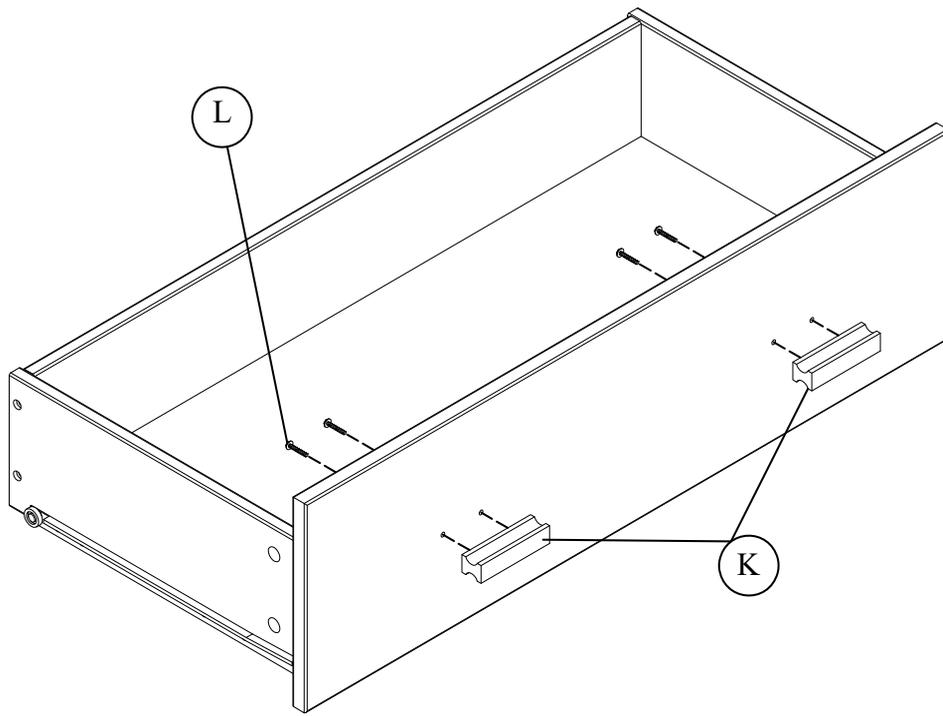


**K** x 2

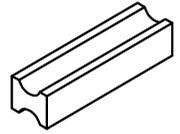

**L** x 4



17

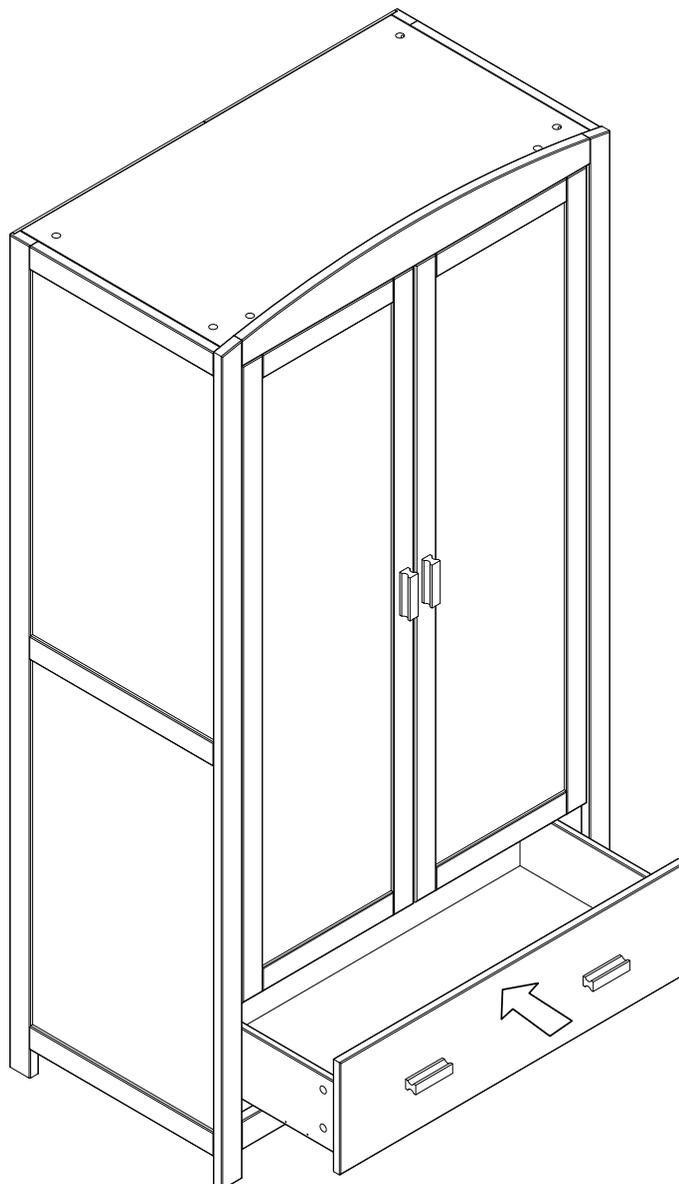


**WARNING! IN ORDER TO PREVENT OVERTURNING THIS PRODUCT MUST BE USED WITH THE WALL ATTACHMENT DEVICE PROVIDED.**

An attachment device is provided with your product, However you will need to source suitable fixings for your wall type. No wall attachment fittings are supplied. This is because the type of fittings required to attach the strap to the chosen wall is determined by the composition of the wall. If in doubt, please consult a qualified tradesperson. Always ensure the wall to be drilled is free from hidden electrical wires, water and gas pipes.

Serious or fatal crushing injuries can occur from furniture tipping over.


To help prevent this item of furniture tipping over:

- Use the wall attachment device provided.
- Do not let children climb or hang on drawers, doors or shelves.
- Place the heaviest items in the lower drawers or shelves.
- Do not place TV's or other heavy objects on top of this product. unless it has been specifically designed to support them.
- Never open more than one drawer at a time.

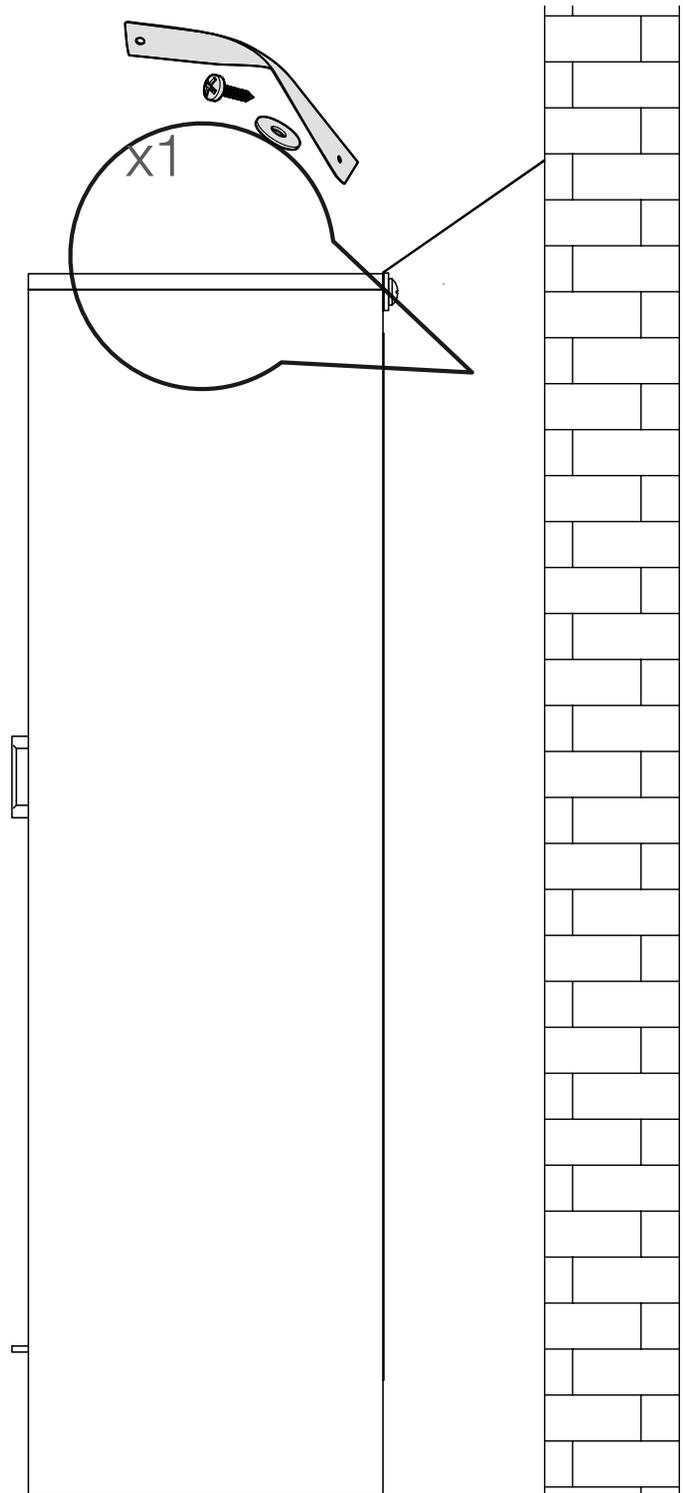


## Adjusting the doors


1

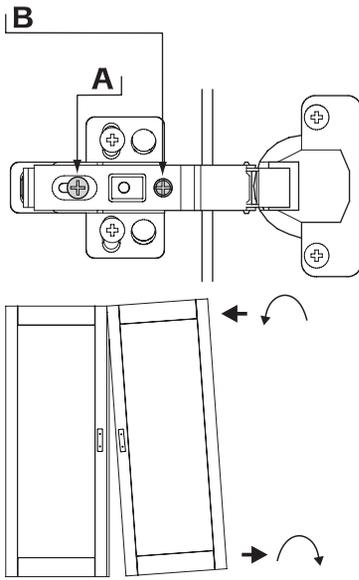


Adjusting the gap between the doors. Loosen screw 'A' slightly. Turn Screw 'B' clockwise to move the door away from the side, turn anti-clockwise to move the door towards the side. When gap is equal tighten screw 'A'.

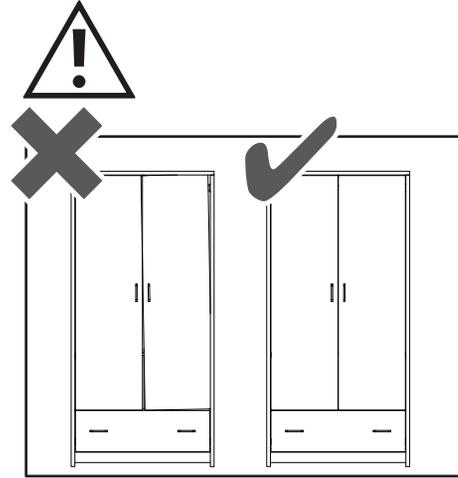


2

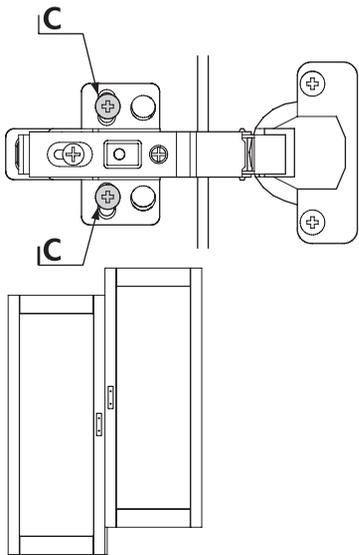


Adjusting the height of the doors. Loosen screws 'C' then slide the hingeplates up or down until the doors are even then tighten the screws.

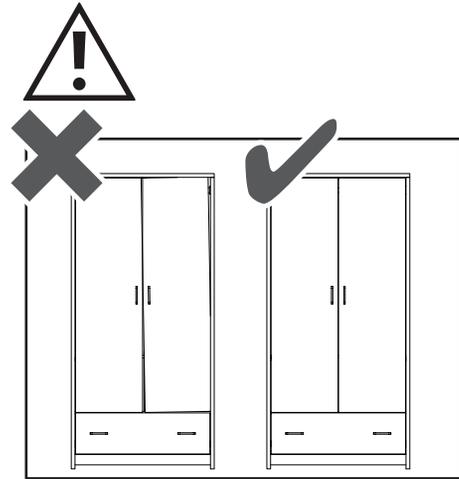

3

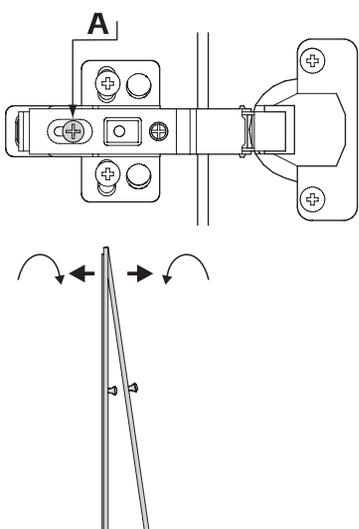

Adjusting the angle of the door. Loosen screw 'A' and slide the hinge arm either forwards or backwards until the door is vertical then tighten screw 'A'.

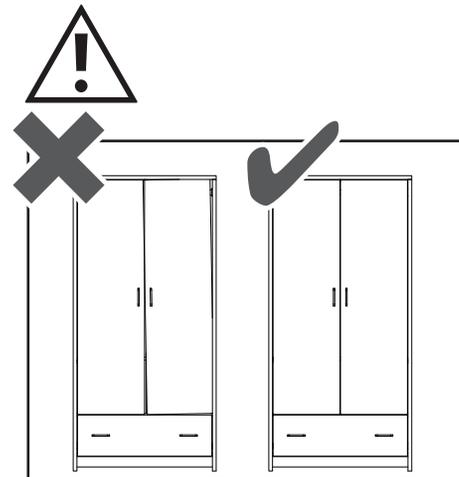

Due to constant update and improvements, some components may occasionally differ slightly from the diagrams show in these instructions.

Any spare components should only be thrown away after you have fully constructed your product. After disassembly, it is important to retain all metal fixings and components should the product be returned to cot or bed mode in future.

We reserve the right to change the specifications of any piece of product without prior notice.

## Care & Maintenance

To preserve the hand crafted quality of furniture, we recommend using a cotton cloth and a non-toxic cleaner. Periodic use of furniture polish will maintain the good looks of your furniture. Scuff marks may be removed with a damp cloth.

## SIX MONTHS LIMITED WARRANTY

We will replace any missing parts at the time of purchase or any defective item within 6 months period from the date of original purchase. Please keep your receipt so that we may process your warranty request. This warranty only covers new units with original packaging and ownership, and is not transferable. It does not cover any used, second hand or demo models.

This Warranty does not cover any damaged or defective parts that result from installation and assembly, normal wear and tear, abuse, negligence, improper use, incidental damages or alteration to the finish, part or fitting of the cot. This in no way affects your statutory rights.

Each Babymore item is a unique piece, made of high quality wood and material. Due to the hand crafted nature of our products and our use of natural material, each piece is unique and may contain irregular qualities, there will occasionally be natural markings, minuscule burrs, or slight discolorations. These characteristics are inherent in the material and are not considered manufacturing defects. Because of this, the merchandise will be considered normal and do not merit replacement.

Thank you for purchasing Babymore If you need assistance, spare parts or you are unhappy with the goods Call : 020 3475 5588 Or email us at [customerservices@babymore.co.uk](mailto:customerservices@babymore.co.uk)

