 


Sofia

Coffee Nest of tables

Assembly & Care Instructions

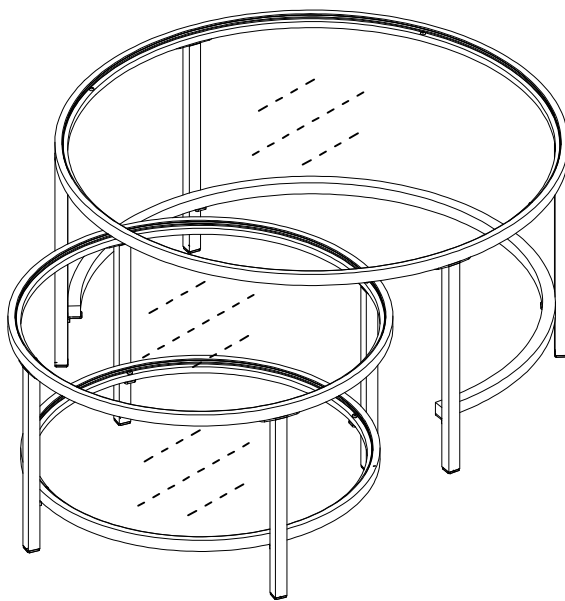





 
 



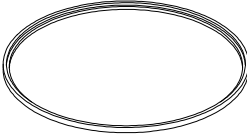 

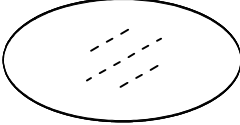 
 
1. Check you have received all parts listed on the component and hardware pages and the correct quantity of each. Beware that sometimes parts are packaged within the product so not immediately visible after opening. Please check the assembly section for more details. If anything is missing, stop assembling the product and contact our customer service team.
2. Check all parts are intact and undamaged. Any issues, stop assembling the product and contact our customer service team.
3. Check you have the right tools for the job. Required tools which are not provided are listed below. If you are unsure of how to use these tools, please contact a professional tradesperson. We recommend Airtasker as an easy way to find trades people in your local area.

Safety advice.

 
Dear Customer


 
- **IMPORTANT** - The first step you need to take is to ensure your safety! Please take the time to read and understand these instructions before assembling the product.
- Please keep these instructions for future reference.
- This item is intended for indoor use only - unless otherwise specified. Avoid exposure to humid conditions.
- Assembly to be carried out by a competent adult only.
- During assembly children should be kept away from the product due to possible risk of injury. The product may contain small parts that could also cause choking if swallowed.
- Products can be dangerous if incorrectly installed or assembled. Assembly should be carried out by a competent person and instructions followed. No liability will be accepted for damage or injury caused by incorrectly installed or assembled products.
- Never use an electric drill to assemble a product, as this can cause damage to parts.
- Regularly check all fastenings to ensure that they are properly tightened.
- Restrain children from climbing or playing on or around the product. Always consider where products are positioned to ensure children cannot get access to long cords or windows.
- Some products will be supplied with anti - tip kits which should always be used to secure the product to the wall and prevent tipping.
- Keep all plastic wrapping materials away from babies and children to avoid danger of suffocation.
- Ensure that all packaging is disposed of carefully and responsibly. Please recycle where possible.
- Once items are part or fully assembled, they are not returnable unless faulty.

Max weight limit	No. of people to assemble	Assembly difficulty	Time to assemble
			
100 KG	2 recommended	Moderate	30 minutes


Ref	Part	Visual	Qty
1	Small table frame ϕ 60cm		1
2	Lower frame of small table ϕ 56cm		1
3	Tempered glass on small table ϕ 57.6cm		1
4	Tempered glass under small table ϕ 53.6cm		1
5	Small table legs 33x7cm		4
6	Big table frame ϕ 80cm		1
7	Under the big table frame ϕ 76cm		1
8	Tempered glass on the big table ϕ 77.6cm		1
9	Big table legs 38x7cm		4

Ref	Hardware & dimension (mm)	Qty
A	M6x12mm	24

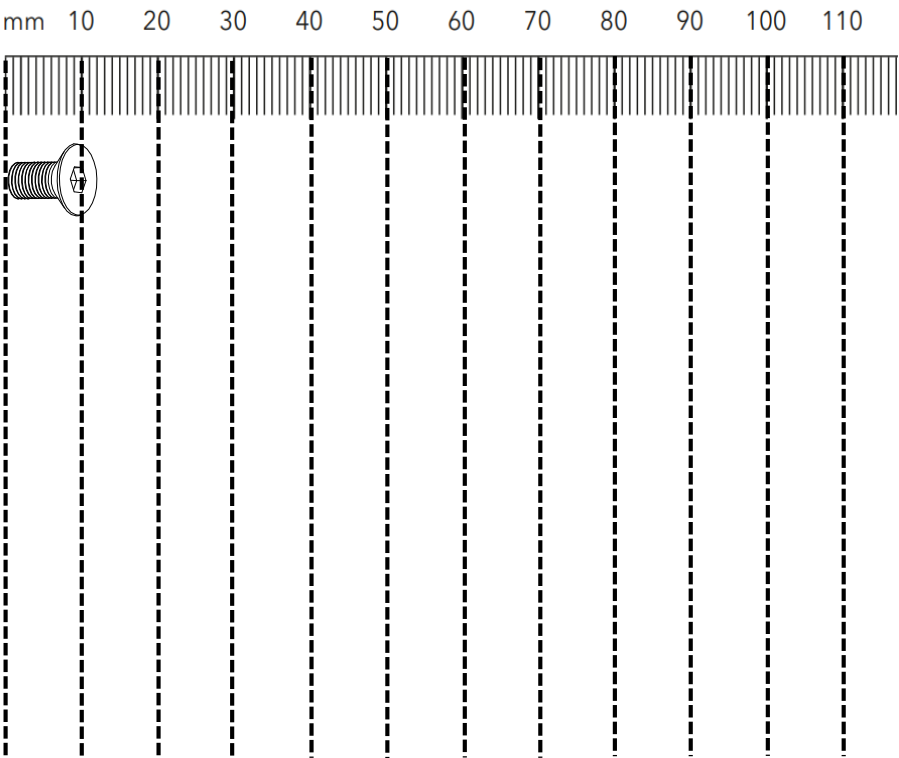


Ref	Visual	Qty
B		12
C		1

 Small coffee table

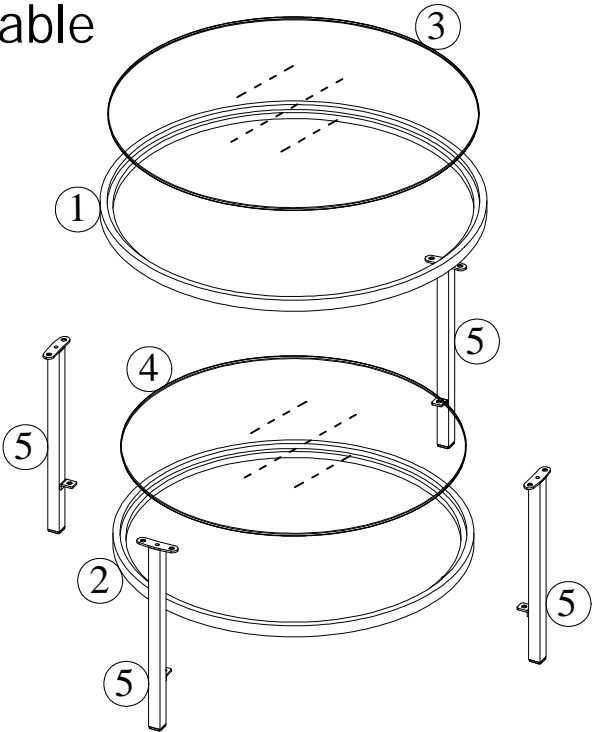


Big coffee table

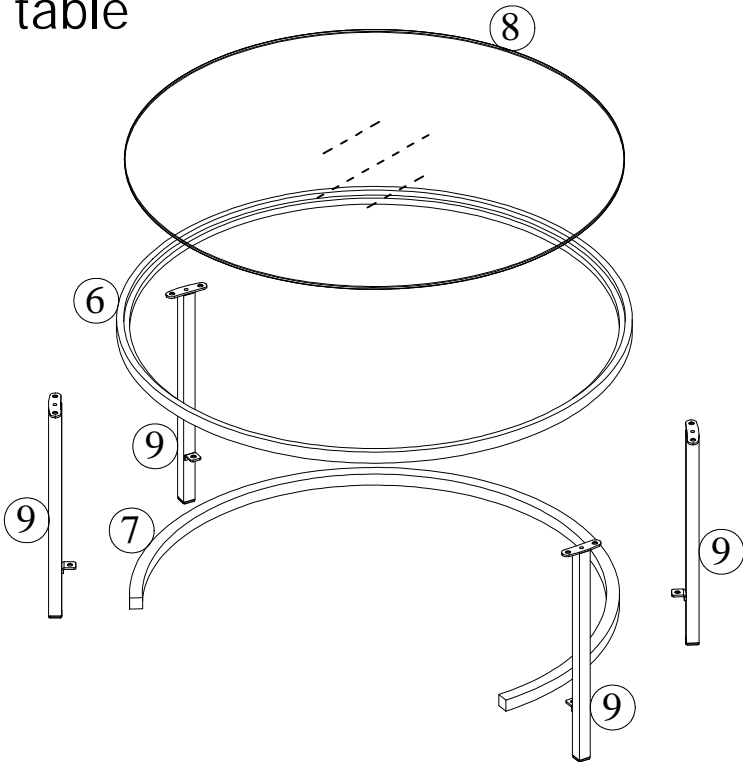 

WARNING! Tipping hazard

 Unanchored products can tip over which can lead to serious or fatal crushing injuries. We therefore recommend anchoring this product to the wall using the enclosed anti-tip kit. **The anti-tip kit has been provided for your safety.**

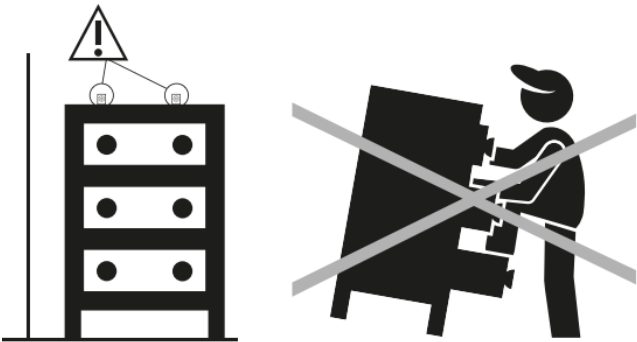


IMPORTANT - Keep these instructions for future reference

- This product is supplied with an anti-tip kit which must be fitted to prevent tipping. This has been provided for your safety.
- Never leave a child unattended around the product.
- Never allow children to climb, hang or pull at the product.
- If in doubt, please consult a qualified tradesperson to properly fit the anti-tip kit.
- Wall fixings are not provided with the anti-tip kit as different wall types require different screws and wall plugs. See wall fixing guide within this document for guidance.
- Make sure the screws and wall plugs used are suitable for your wall type and that they can support the weight of the product. Consult a qualified tradesperson if unsure.
- Before drilling into walls, always check there are no hidden wires or pipes behind.
- We recommend 2 people install heavy products.

Fixing the anti-tip kit


Plastic Cable Tie



 
- Position the product where desired. Looking at the hooks on the back of the product, mark appropriate positions for the plastic wall brackets to be fixed, bearing in mind the length of the cable ties. When happy, screw the plastic bracket to the wall using appropriate wall screws and plugs for your wall type.
- Attach the cable tie through the product hook and wall bracket. Ensure the plastic tie is securely fastened and the product is held in place. Do not continue to use the product if the cable tie does not secure properly.
- The product will now be secured to the wall to prevent tipping.

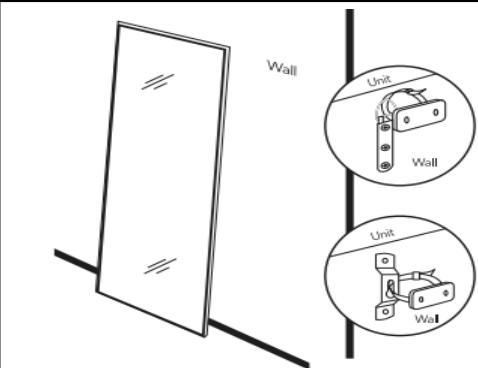

Metal Bracket

    - Using the product screws provided and the appropriate wall screws and plugs for your wall type, secure the L bracket to the wall and the product as illustrated by the diagram.
- The product will now be secured to the wall to prevent tipping.

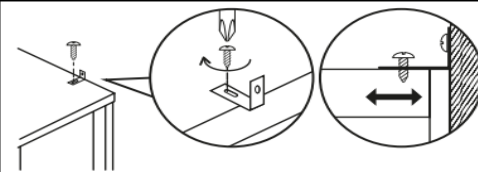


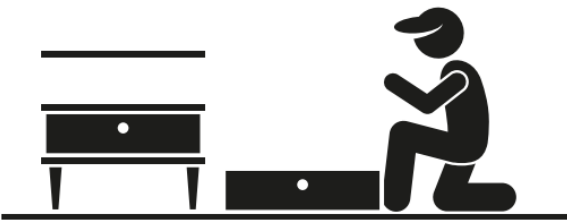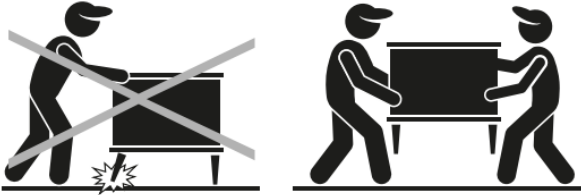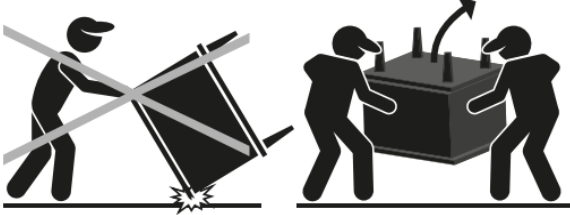	<p>ALWAYS lay each panel down on a clean and level area, ideally in the room of intended use, ensuring there is enough room to maneuver around the item.</p>
	<p>NEVER pull furniture into place as this causes damage to the internal structure and feet fixings. Always lift to move.</p>
	<p>NEVER flip your upholstery allowing corners to hit the floor as structural damage can be caused. Always turn gently.</p>

1

Big coffee table

 Note: All bolts should only be tightened to 80% initially.

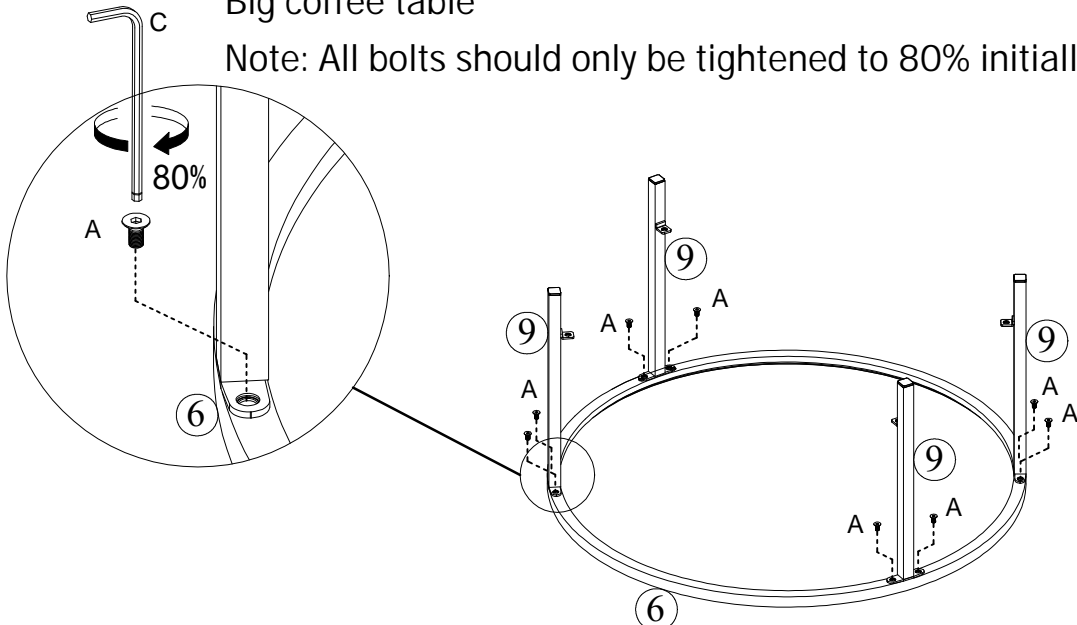


A x 8

C x 1

2

 
Note: All bolts should only be tightened to 80% initially.

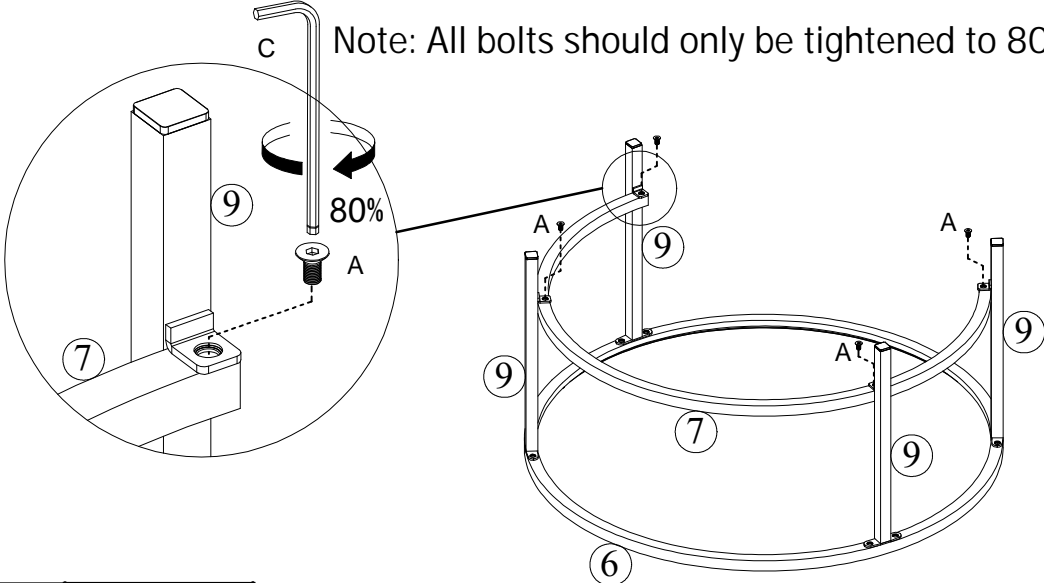


A x 4

C x 1

 3

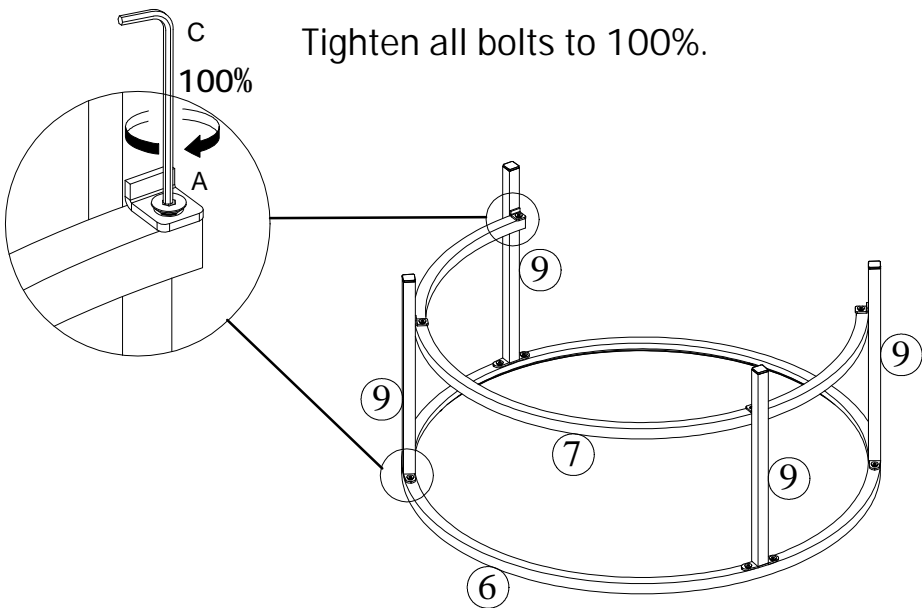


C x 1

 

4

Small coffee table

 
Note: All bolts should only be tightened to 80% initially.

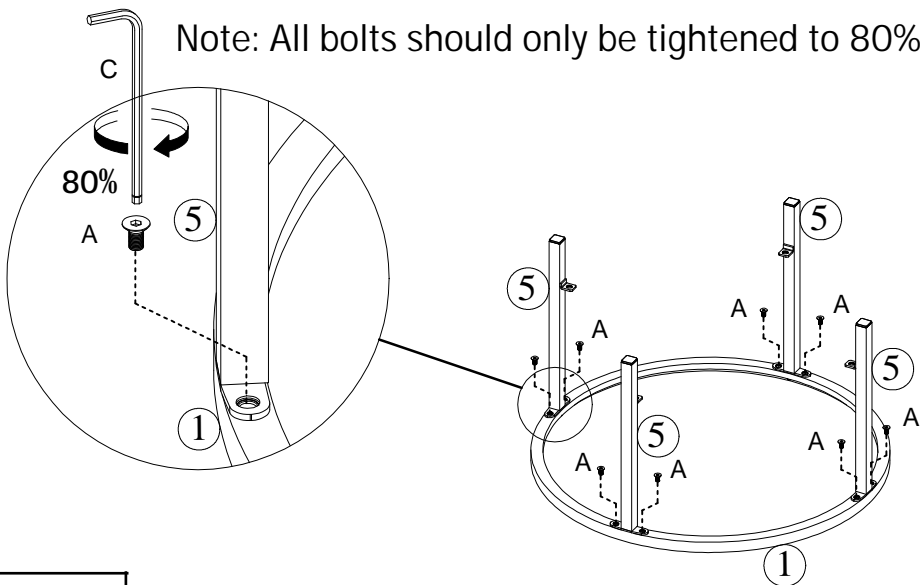


A x 8



 
C x 1



5

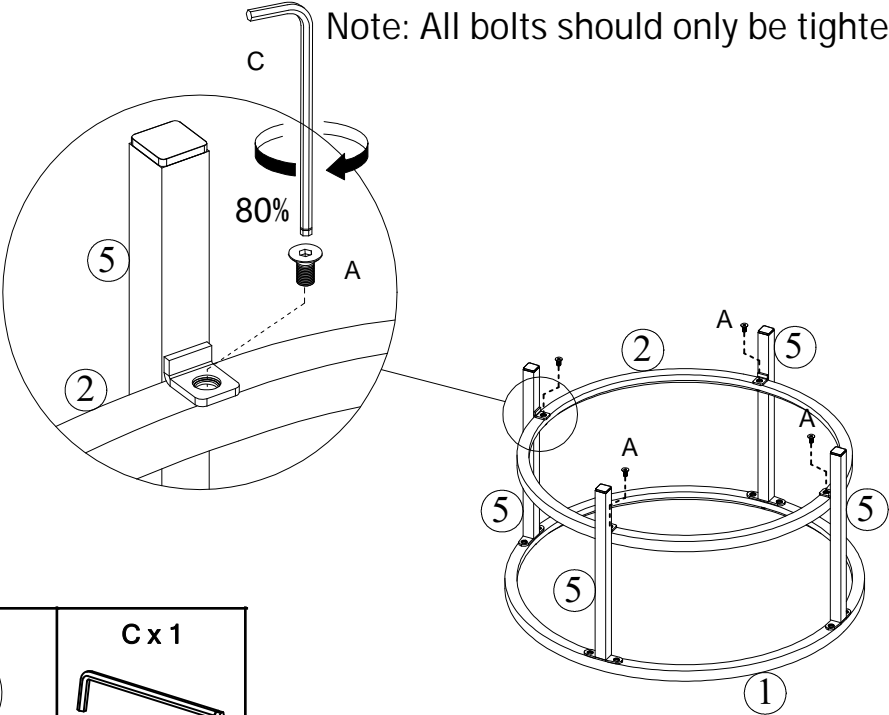 


6

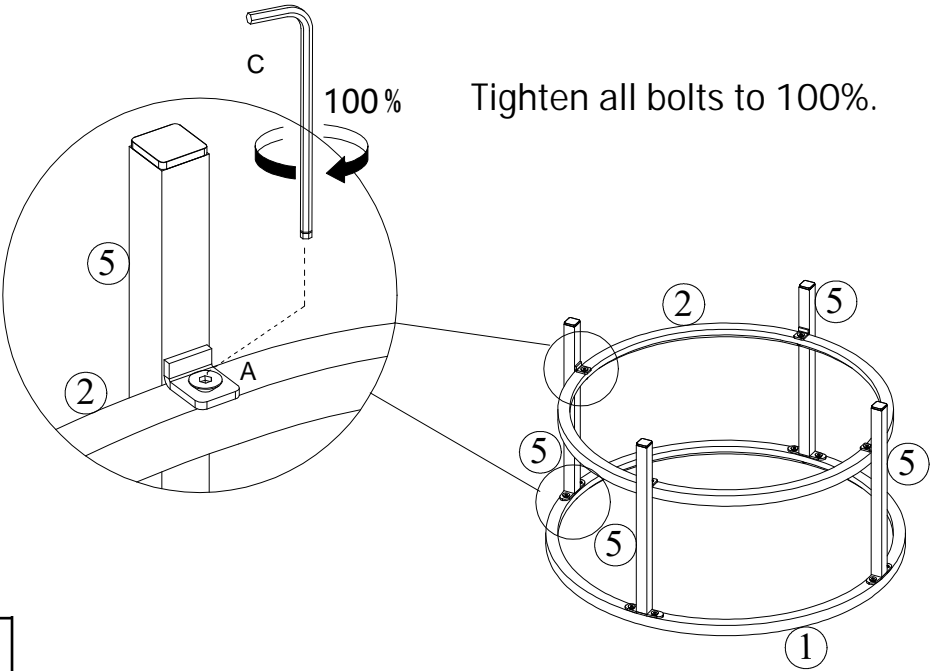 

7

 Stick pads (B) to frames in positions shown.

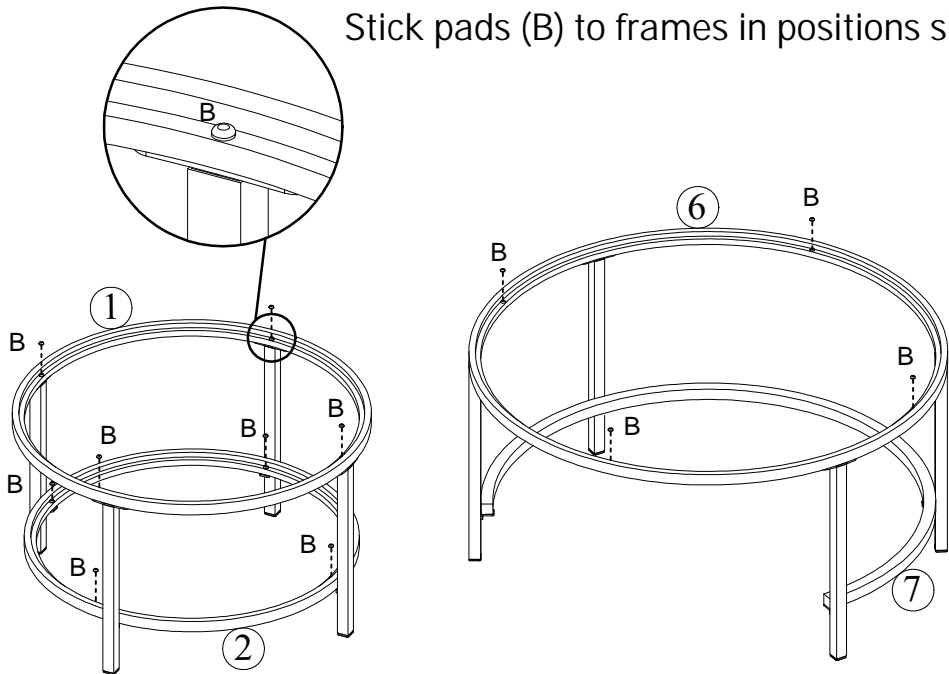


B x 12




8

 Small coffee table
Carefully insert glass (4) into lower shelf.
Then insert glass (3) onto top.

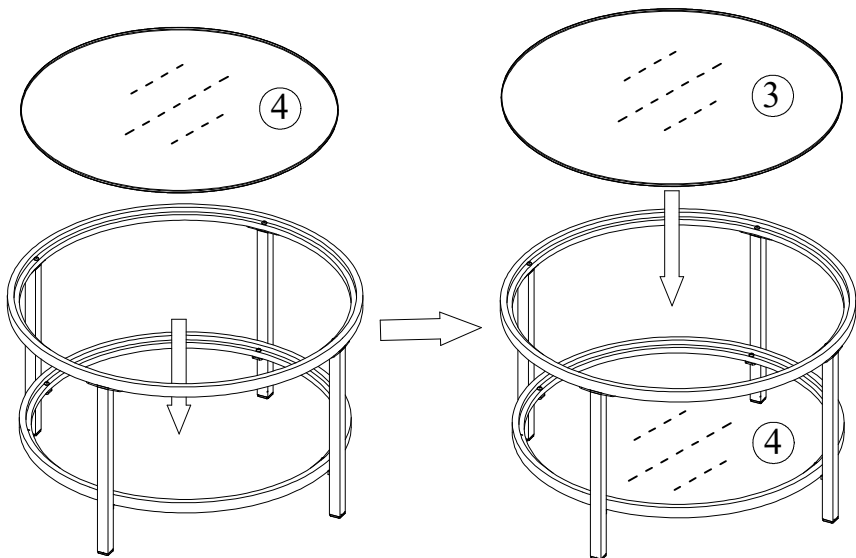


9

 Big coffee table
Carefully insert glass (8) onto top.


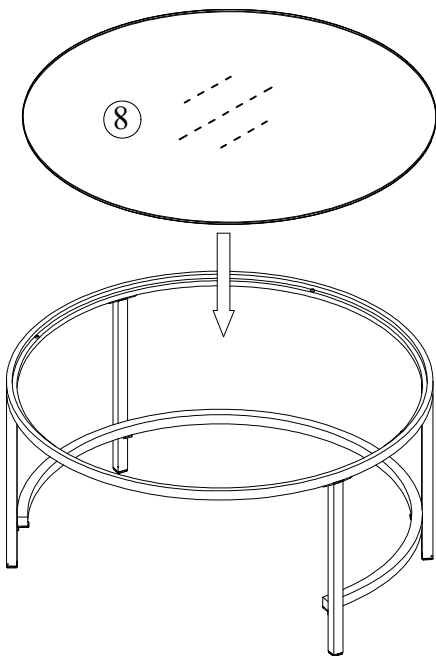


Final product.

 10

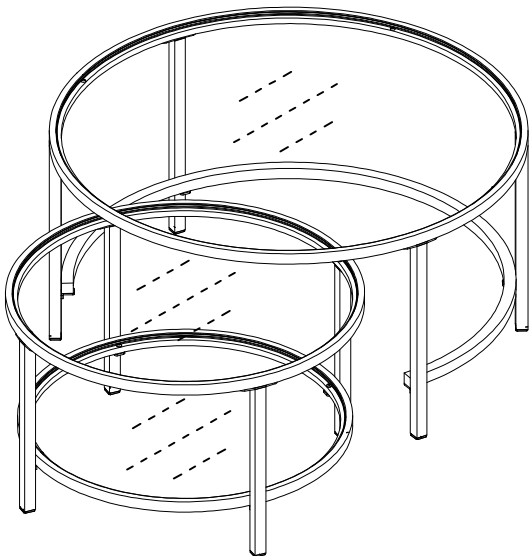

11

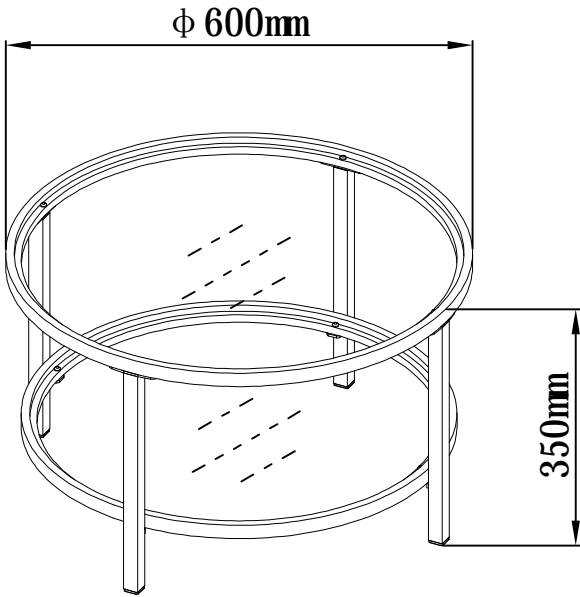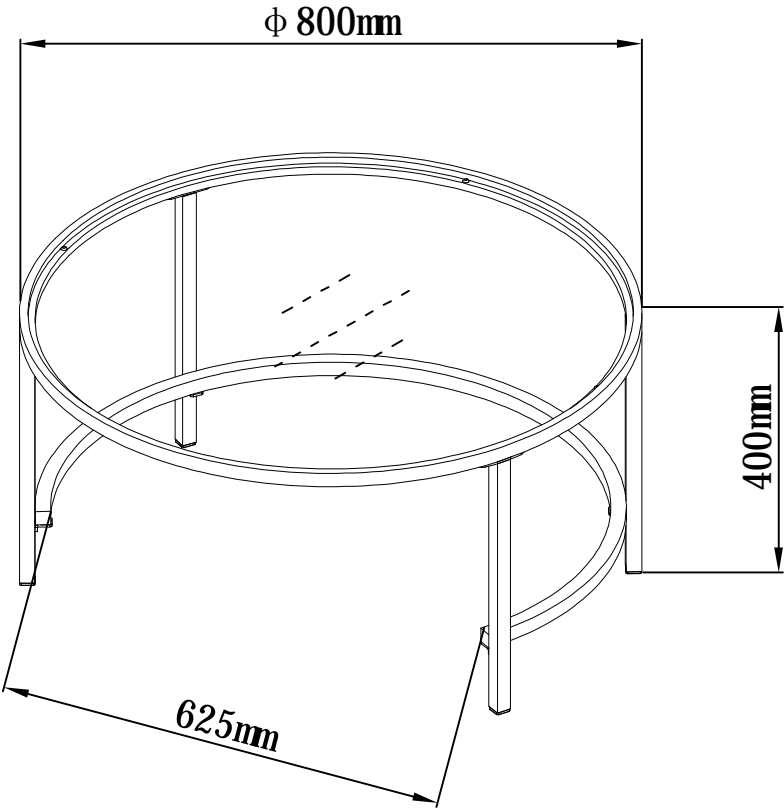  

General furniture care.

- Uneven floors could give the impression that doors are out of alignment or that the furniture is wobbly. Be aware of this and compensate, if necessary, by adjusting the hinges or packing a corner to level the item. Please refer to the assembly instructions and adjust accordingly.
- If your furniture becomes stained, scratched, chipped or suffers other damage, we recommend professional help is sought to restore it. Please contact our customer services line for recommended agents.
- **DO** move items such as ornaments or coasters around periodically to allow the colour to mellow evenly.
- **DO** use mats and coasters to protect the surface from heat, liquids, or items that may cause scratches.
- **DO** ensure plastic or felt feet protectors are securely fitted into place on the feet and legs to avoid scratches.
- **DO** check fittings and fixings from time-to-time and tighten when necessary. Stop using the product if still unstable after all screws and bolts are tightened.
- **DO NOT** drag your furniture when moving it as this can damage joints. Always lift furniture into place.

Glass care.

- **DO** handle with care as glass can easily be chipped or broken. This damage is un-repairable.
- **DO** keep mirrors away from direct sunlight as they are a potential fire hazard.
- **DO** always supervise young children around glass products.
- **DO** clean your item using a soft cloth slightly dampened with water and wipe clean. Then buff with a dry clean cloth. Use washing up liquid if necessary.
- **DO** stop using the product if the glass is chipped or broken.
- **DO NOT** use glass as a chopping board.
- **DO NOT** use very hot or very cold items on the glass unless adequate table mats are used to prevent such items coming into direct contact.
- **DO NOT** strike the glass with hard or pointed items or use the glass as a chopping surface.
- **DO NOT** use abrasives cleaning agents, as these may scratch the glass.
- **DO NOT** position over or next to heat sources such as radiators.

Metal care.

- Ensure that mats are placed to prevent hot items coming into contact with the surface.
- **DO** use a clean, dry cloth to dust the surface.
- **DO** use a clean cloth with soapy water to clean stubborn marks, using dry cloth afterwards to remove any smears.
- **DO NOT** use abrasive cleaners or cloths as these can scratch the surface of the metal.
- **DO NOT** use chemical cleaners or polishes on any metal.

Customer service.

If you have any issues with this product, you can call our Customer Service team on:
0345 165 6565 Monday to Friday 9am to 5:00pm.

Alternatively, you can contact our team by Live Chat on: **Dunelm.com**
Monday to Friday 8am - 8:30pm



Dunelm (Soft Furnishings) Ltd. LE7 1AD
& Dunelm (Soft Furnishings) Holdings
Ltd. Dublin D12 WR25.