


# Xavi Extending Dining Table

**Assembly & Care Instructions** 

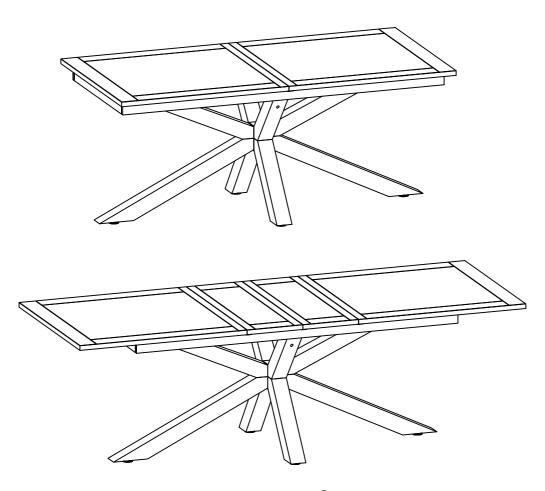



## **Getting Started.**



- Check you have received all parts listed on the component and hardware pages and the correct quantity of each. Beware that sometimes parts are packaged within the product so not immediately visible after opening. Please check the assembly section for more details. If anything is missing, stop assembling the product and contact our customer service team.
- 2. Check all parts are intact and undamaged. Any issues, stop assembling the product and contact our customer service team.
- 3. Check you have the right tools for the job. Required tools which are not provided are listed below. If you are unsure of how to use these tools, please contact a professional tradesperson. We recommend Airtasker as an easy way to find trades people in your local area.

### Safety advice.

#### **Dear Customer**

- **IMPORTANT** The first step you need to take is to ensure your safety! Please take the time to read and understand these instructions before assembling the product.
- · Please keep these instructions for future reference.
- This item is intended for indoor use only unless otherwise specified. Avoid exposure to humid conditions.
- Assembly to be carried out by a competent adult only.
- During assembly children should be kept away from the product due to possible risk of injury. The product may contain small parts that could also cause choking if swallowed.
- Products can be dangerous if incorrectly installed or assembled. Assembly should be carried out by a
  competent person and instructions followed. No liability will be accepted for damage or injury caused by
  incorrectly installed or assembled products.
- Never use an electric drill to assemble a product, as this can cause damage to parts.
- · Regularly check all fastenings to ensure that they are properly tightened.
- Restrain children from climbing or playing on or around the product. Always consider where products are positioned to ensure children cannot get access to long cords or windows.
- Some products will be supplied with anti tip kits which should always be used to secure the product to the wall and prevent tipping.
- Keep all plastic wrapping materials away from babies and children to avoid danger of suffocation.
- Ensure that all packaging is disposed of carefully and responsibly. Please recycle where possible.
- · Once items are part or fully assembled, they are not returnable unless faulty.

Max weight limit	No. of people to assemble	Assembly difficulty	Time to assemble
			$\bigcirc$
100 KG	2 recommended	Moderate	<1 hour




Ref	Part	Visual	Qty
1	Тор		1
2	Add On Panel		2
3	Leg	000	2
4	Leg		2
5	Leg		2
6	Leg	00	2
7	Connector		1
8	Cover		1

## Hardware supplied.




Ref	Hardware & dimension (mm)	Qty
A	Threaded Rod M8 x 40mm	16
В	Flat Washer Ø8mm / Ø16mm	24
E	Bolt M8 x 70mm	4
F	Bolt M8 x 50mm	4

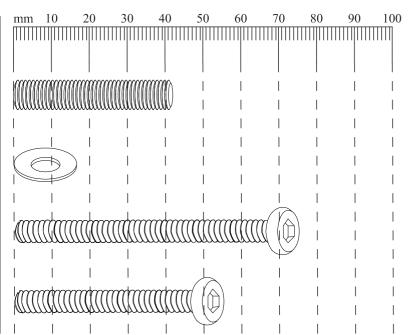


Ref	Visual	Qty
С		24
D		16
Н		1
ı		1



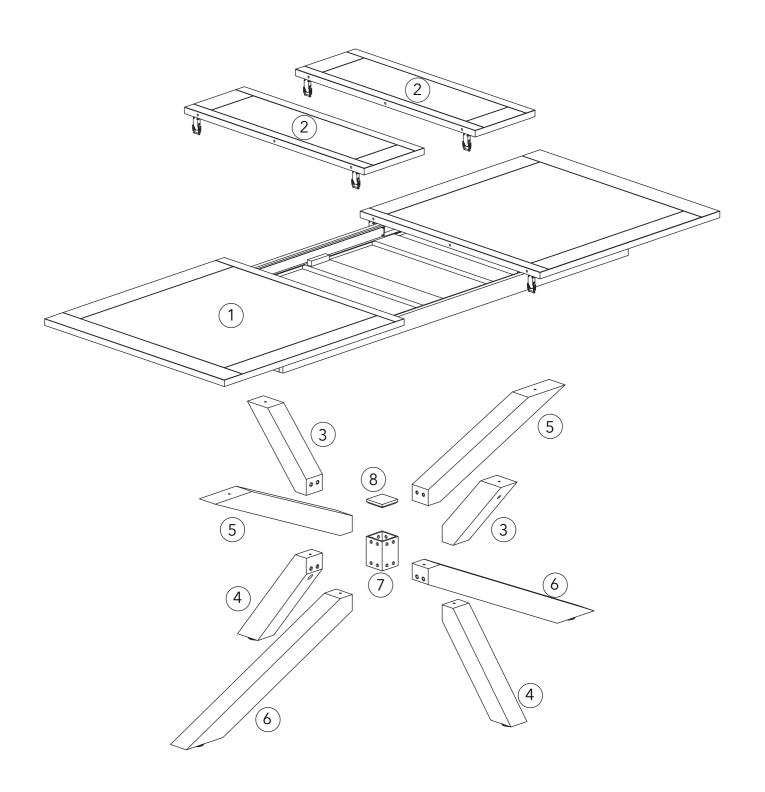



## Assembly instructions.



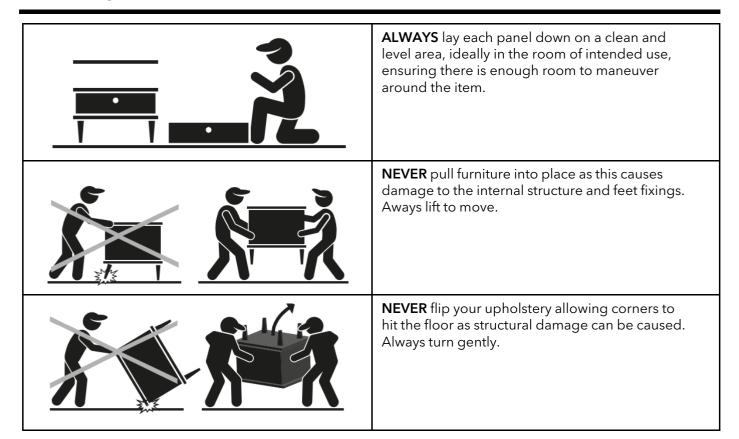





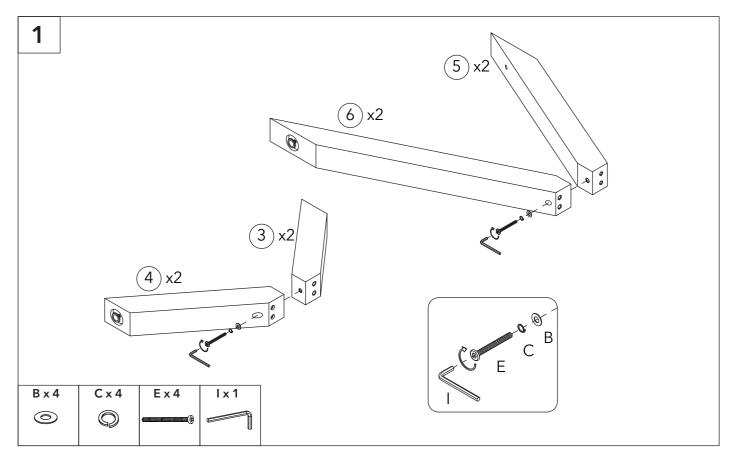

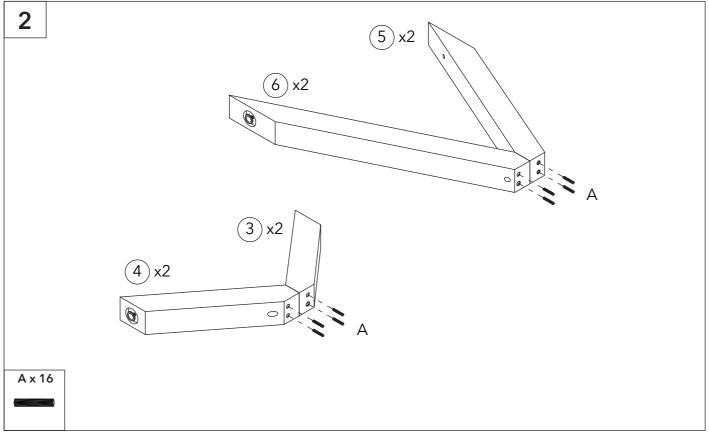





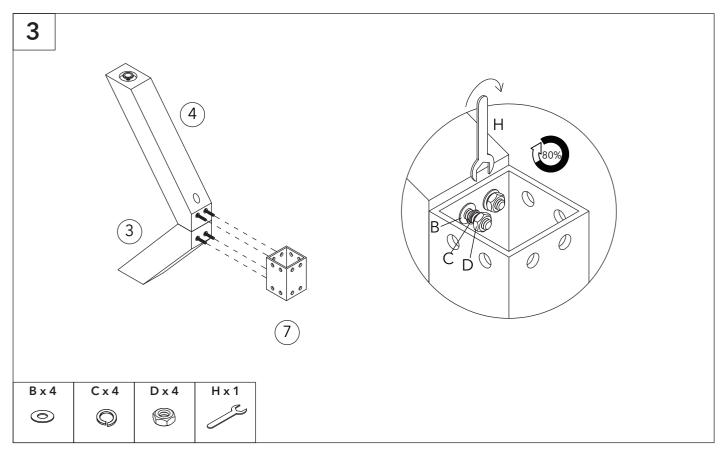

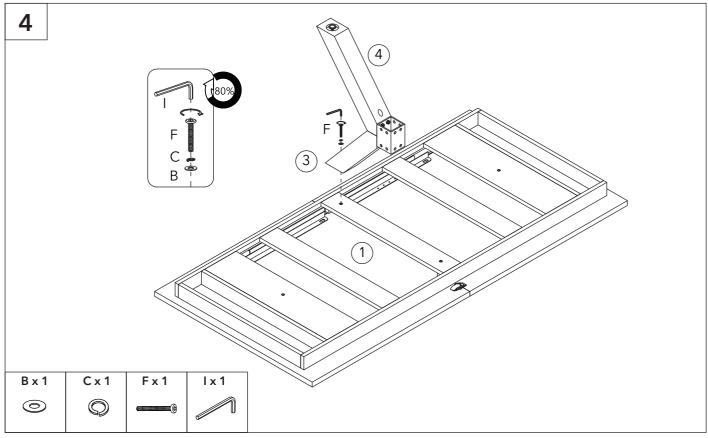





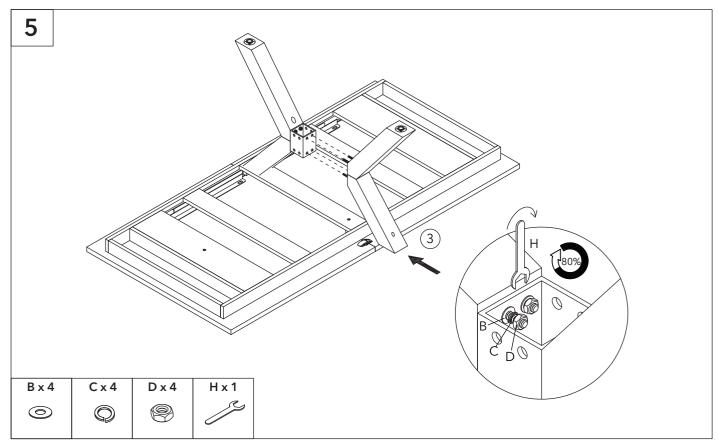

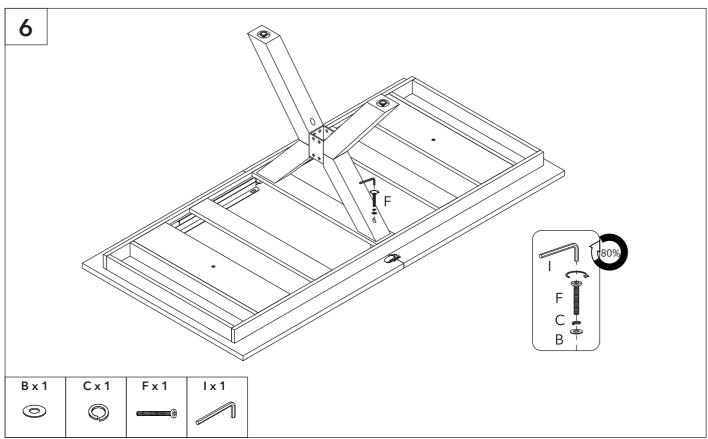





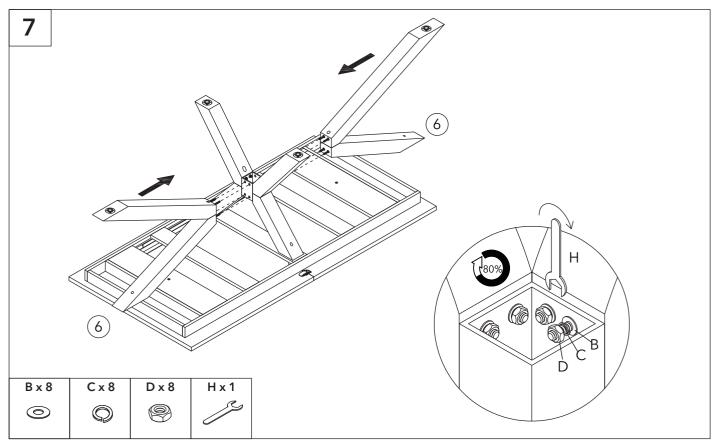

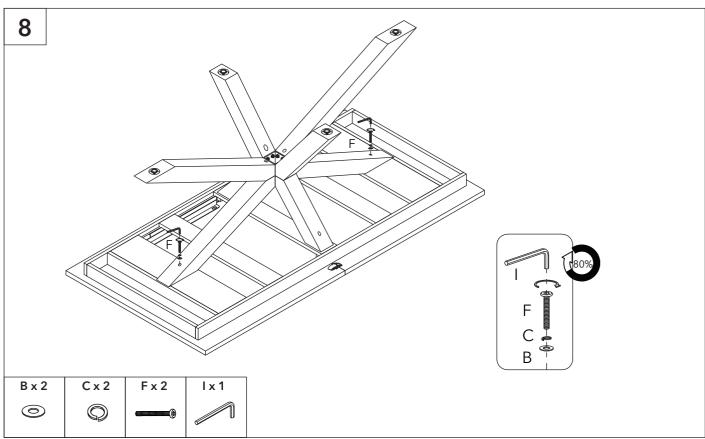




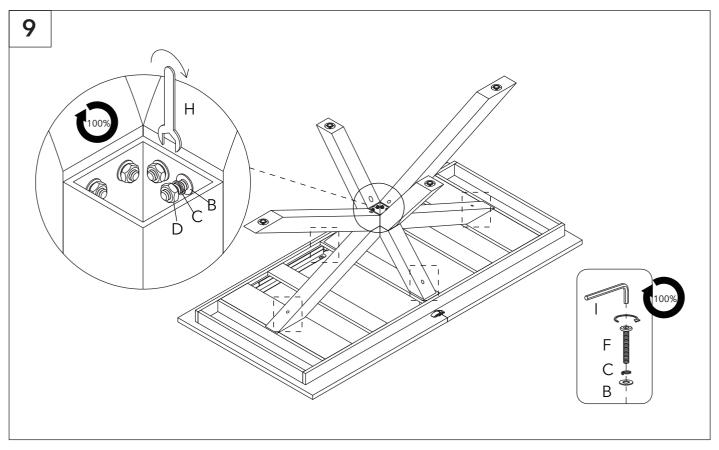


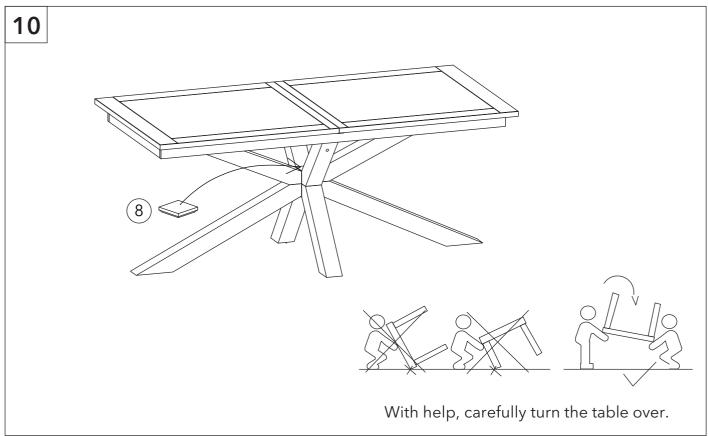






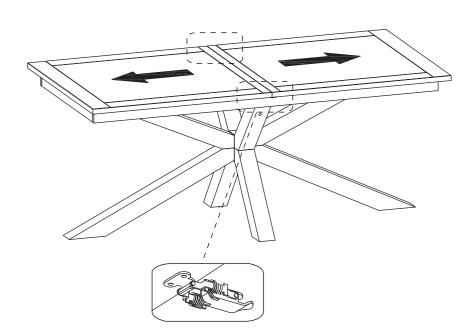

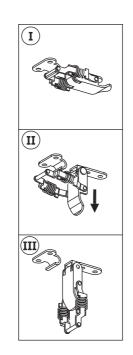

Release the two locks under the table top by pulling down the handle of the lock. Gently slide the top panels apart.


12

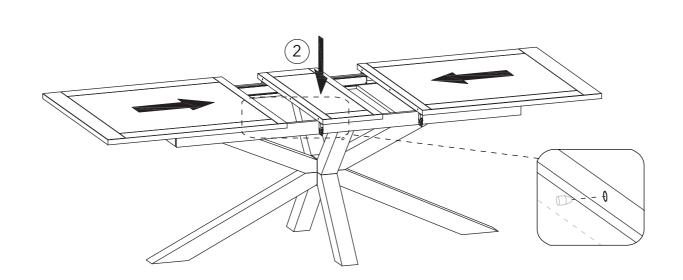

Place an Add-On Panel (2) between the two table top panels and slide the panels back, making sure the pins are inserted into the guide holes of the panels.






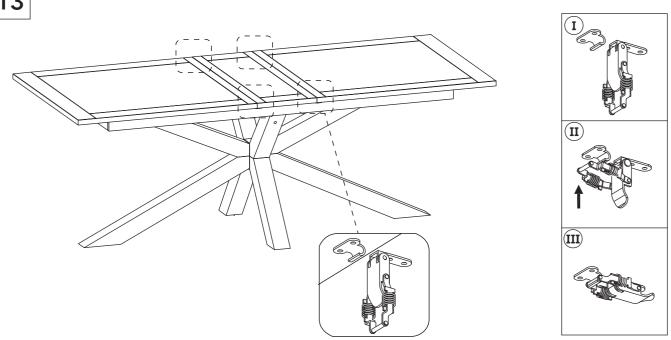

To lock the panels in position, place the latch on each lock back to the hook. Close the handle to lock.


## 14 TO EXTEND THE TABLE TOP FULLY

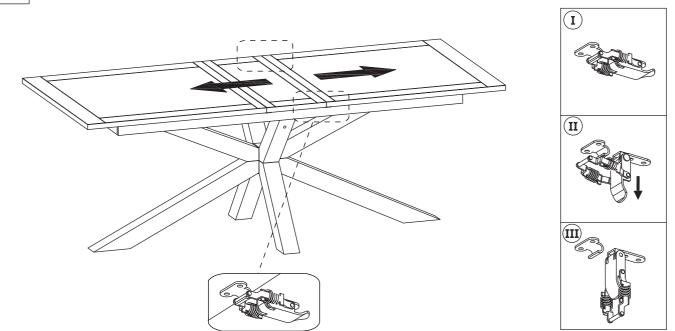

Release the two locks under the table top by pulling down the handle of the lock. Gently slide the top panels apart.




15

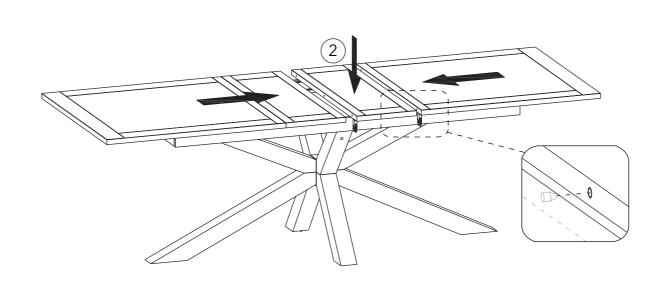


Place the remaining Add-On Panel (2) between the table top panel and the other Add-On Panel. Slide the panels back, making sure the pins are inserted into the guide holes of the panels.

16

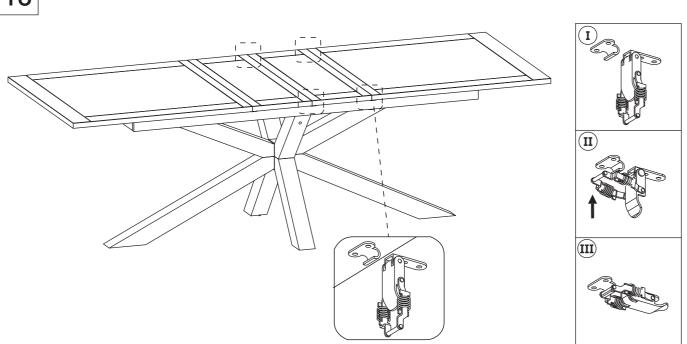


Fasten the four locks under the table top by placing the latch on each lock back to the hook, and closing the handle to lock.



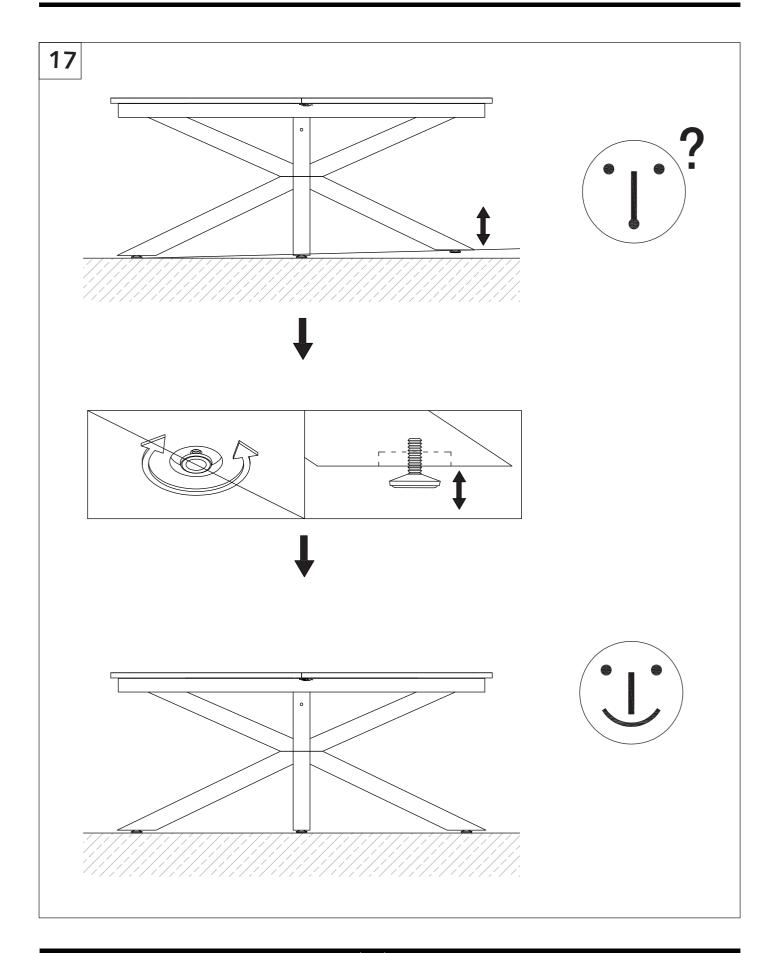



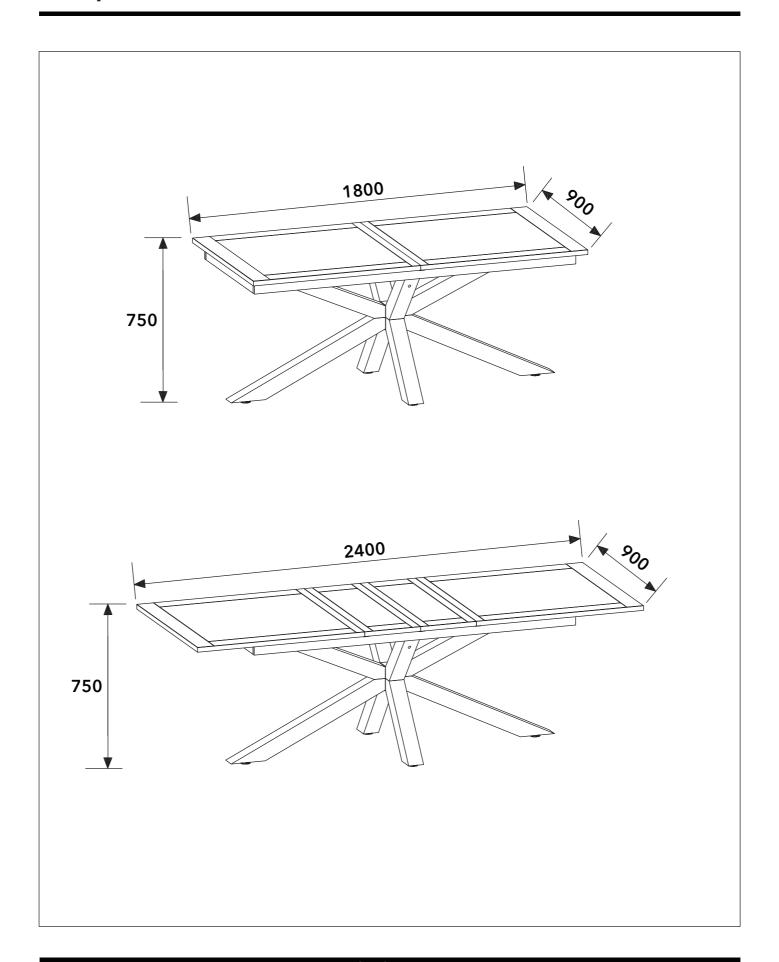

## <u>Dunelm</u>

#### General furniture care.

- Uneven floors could give the impression that doors are out of alignment or that the furniture is wobbly. Be aware of this and compensate, if necessary, by adjusting the hinges or packing a corner to level the item. Please refer to the assembly instructions and adjust accordingly.
- If your furniture becomes stained, scratched, chipped or suffers other damage, we recommend professional help is sought to restore it. Please contact our customer services line for recommended agents.
- **DO** move items such as ornaments or coasters around periodically to allow the colour to mellow evenly.
- **DO** use mats and coasters to protect the surface from heat, liquids, or items that may cause scratches.
- **DO** ensure plastic or felt feet protectors are securely fitted into place on the feet and legs to avoid scratches.
- **DO** check fittings and fixings from time-to-time and tighten when necessary. Stop using the product if still unstable after all screws and bolts are tightened.
- **DO NOT** drag your furniture when moving it as this can damage joints. Always lift furniture into place.

#### **Timber Care**

- Timber is a natural material and each piece is individual.
- Colour may mellow over time and new items can vary in shade from items that you have purchased previously.
- **DO** only clean using a damp cloth and mild detergent. Aim to dust weekly with a soft, lint-free cloth or duster to prevent any build up of dirt.
- **DO** ensure the polish you are using is correct for your product and finish.
- **DO** avoid getting furniture wet when mopping floors. Always move out of the way when possible.
- **DO** patch test polishes or cleaning products on a small discreet area before applying across the whole unit
- **DO** remove any spills immediately to avoid staining.
- **DO NOT** place directly in front of heat sources such as radiators or fires as timber can be affected by temperature and humidity which may cause cracking and warping.
- **DO NOT** place timber product in direct sunlight, as this will cause the colour to change quickly.
- **DO NOT** use bleach or abrasive cleaners.
- **DO NOT** use abrasive polish or silicon-based polishes as these can affect the finish over time.





If you have any issues with this product, you can call our Customer Service team on: **0345 165 6565** Monday to Friday **9am to 5:00pm.** 

Alternatively, you can contact our team by Live Chat on: **Dunelm.com Monday to Friday 8am - 8:30pm Saturdays 8am - 5:30pm Sundays and bank holidays 9am - 4:30pm.** 



Manufactured in China for Dunelm(Soft Furnishing)Ltd,LE7 1AD & Dunelm(Soft Furnishings) Holdings Ltd. Dublin D12WR25