

## Wooden Garden Arch Item code 4520-4526 Instruction Manual

## **Before you start:**

- Please check that all the parts are present before you start the assembly of your Item. Please keep all the packaging for the product until you are satisfied with your purchase, as we cannot accept any returned items without the original packaging.
- For ease and speed of assembly, we recommend that before you commence each step you identify all the parts required for that step.
- Please ensure you have sufficient space and people to assemble your product saftely.
- We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product once assembled.
- For the protection of the item we recommend it is placed on a protective surface during assembley to prevent any damage.
- During assembly please take care not to over tighen any fittings as this may damage the item.
- For easy build two people may be required.


## **Care and Maintence of your Furniture:**


- Please periodically check all the fittings and re-tighten as necessary.
- Do not climb or stand on the item.
- Over time the finish may fade, this can be freshend with a paint or varnish of your choice.

## **Customer notes**

- Should you wish to add items such as hanging baskets to the frame it is suggested that even distribution of weight is used so not to topple the archway and no more than 25 kg is applied.
- The planter bases can hold up to 20kg in weight so for heavier objects it is advised the base is not used and the item is placed through the planter frame and placed on the floor.
- While pilot holes are used as guide to fix them item together care must be used not over tighten the screws and bolts as it may be possible to split the wood.

**Components:** 

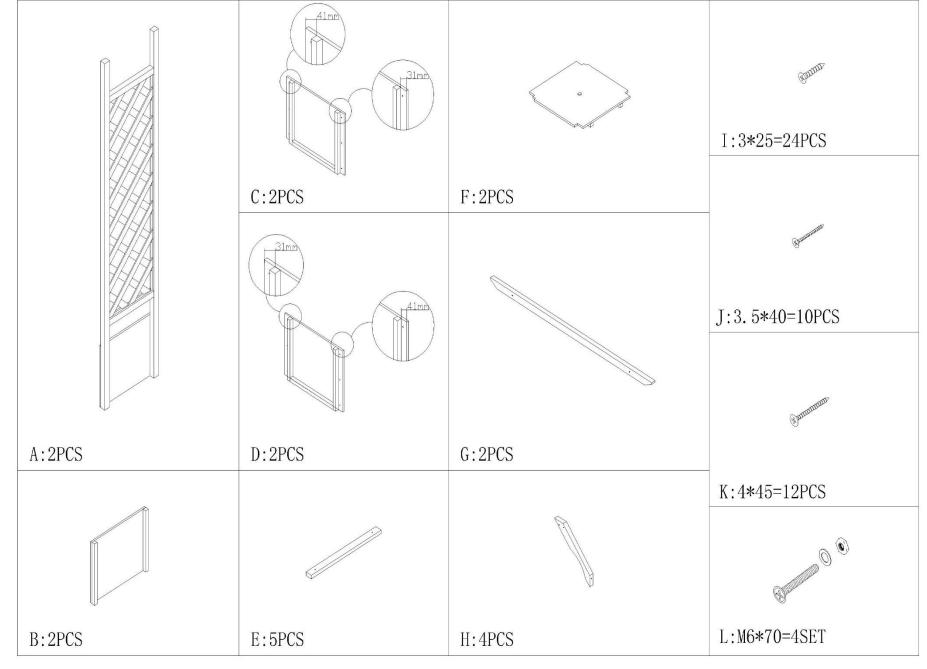

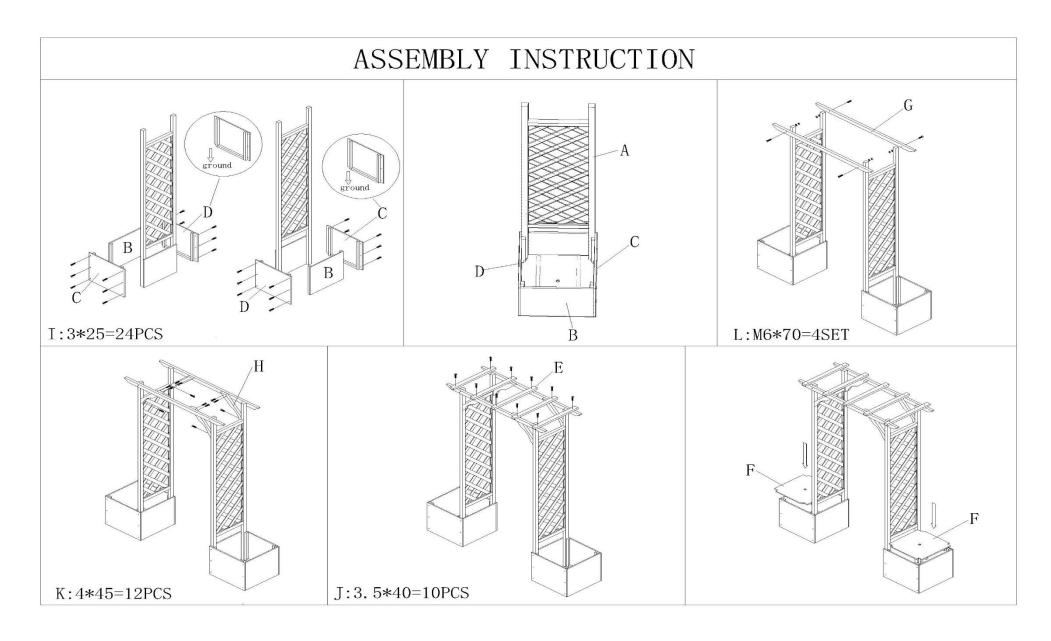

Should you require further details or assistance,

please contact our customer care line on 01562 753040