 


STATUS®

How to install a clear plastic front plate light switch...

The clear plastic light switch fittings, comprise of;

Switch mechanism,
Card template,
Locking ring (1 for each switch),
Clear plastic front cover,
2-prong plastic tool for securing/removing the locking ring.

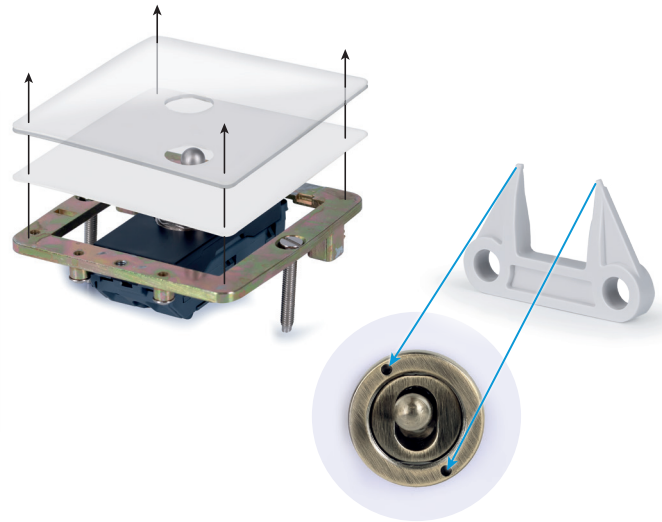

1. After opening the packaging remove the locking rings from the toggle switches (using the 2-prong tool supplied), take off the plastic front plate and the card template.
2. Once the wall is decorated, wire in the switch mechanism (if in doubt consult a qualified electrician) and secure to the pattress box. Ensure that the wallpaper/paint covers to the edges of the pattress box.
3. Using the blank template provided cut out a matching piece of wallpaper and check that the pattern matches the surrounding paper. If the installation is on a painted wall, simply paint the template card the same colour as the wall (and allow to dry). For an alternative finish on a plain wall, use a piece of matching/contrasting wallpaper to create a unique look.
4. Place the clear plastic front plate over the template sized wallpaper piece/or painted template card, ensuring that it is flush to the edges.
5. Place this over the switch mechanism, ensuring that the switch and wallpaper piece are located the correct way up. At this point remove the clear plastic protective film from the plastic front cover.
6. Place the locking ring(s) over the toggle switch(es) and tighten with the 2-prong plastic tool.

Advantages of using clear plastic front plate light switches;


- Unique look can be achieved, as the face plate is not visible, only the toggle switches.
- When changing the décor, it is a simple case of removing the front plastic cover and the “old” wallpaper piece, replacing with a piece of the matching “new” wallpaper or re paint the card template in the new paint colour. Ensuring no expensive changes to the light switches to match the new décor.
- For a totally individual look, use a photograph in place of the painted template or wallpaper piece.
- It is a simple DIY skill to create a unique finish to a room.
- They can be retrospectively fitted to any room (assuming some wallpaper or paint is available).
- It turns an every day item that every room has, into an inconspicuous feature.
- The endless trend of chrome, polished chrome, black nickel, brass, antique brass etc.. becomes irrelevant, reducing yearly trends.
- All screws can be hidden behind the wallpaper, inside the plastic front cover.

WARNING

Switch off and isolate the Mains supply before carrying out Installation of the toggle switch.


Environmental Protection

Waste electrical products should not be disposed of with household waste . Please recycle where facilities exist .Check with your local Authority or retailer for recycling advice.

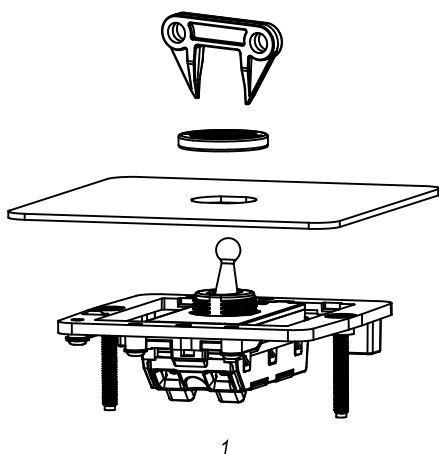

1

 Wiring diagram:

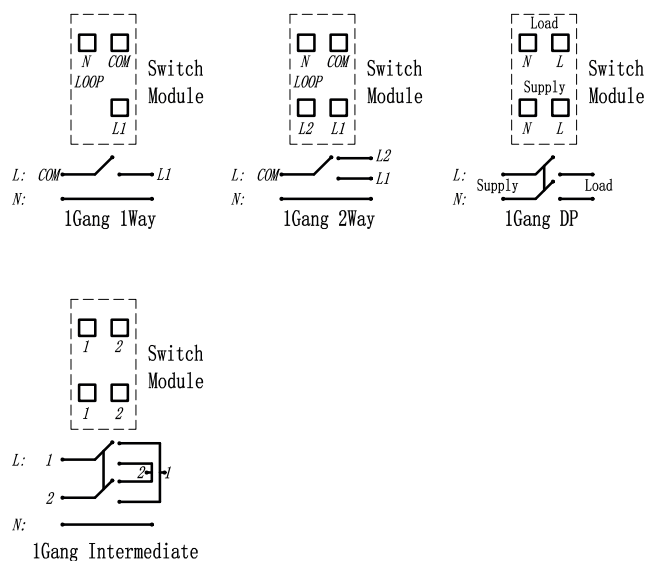

2

Contact Helpline

01274 852200

qa@statusinternationaluk.co.uk

Monday to Friday (9.00am - 5.00pm)

This product is under continuous product development and the design may alter to that on the instruction manual or box without prior notice.

www.statusinternationaluk.co.uk

Status International (UK) Ltd

Unit 1 Whitehall 26 Business Park,
Heathfield Lane, Birkenshaw, Bradford, BD11 2HW.

Status International S.R.L

Str. LAMINORULUI, Nr 6A, Judet Dâmbovita. 130089
Municipal Târgoviste, Romania

**250VAC 50Hz - 10AX MAX
Inductive Load.**

For electrical products sold within the European Community. At the end of the electrical products' useful life, it should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

