

ASSEMBLY INSTRUCTIONS

DESSER TEARDROP CHAIR

ASSEMBLY TIME: Approximately 10 minutes

INCLUDED IN THE BOX:

- 1 x Teardrop Chair Frame
- 4 x Legs (labelled A,B,C,D)
- 4 x Fixing Bolts (all identical)
- 1 x Allen Key



ASSEMBLY STEPS:

1. Identify the Parts

Lay the chair frame upside down on a clean, soft surface to avoid scratches.

Locate the leg positions marked A, B, C, D on the underside of the chair frame.

Match each leg (also labelled A, B, C, D) with the corresponding hole.

2. Attach Chair Legs

Insert each leg into its matching socket.

Ensure the leg is flush with the chair frame.

3. Insert Fixing Bolts

Using the supplied fixing bolts and Allen key, screw each bolt through the pre-drilled hole in the frame into the leg.

All bolts are the same, so it doesn't matter which one goes where.

Tighten until secure – do not overtighten

4. Final Check

Once all legs are attached and bolts are tightened, turn the chair upright to ensure everything is stable.

NEED HELP?

Give us a call on 0161 834 1795 or email info@desser.co.uk.