

# Winslow

## Glazed Display Cabinet

 
Assembly & Care instruction



[www.dunelm.com](http://www.dunelm.com)

## Getting started

 
 

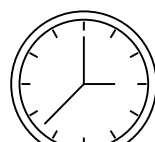 
1. Check you have received all parts listed on component and hardware pages and the correct quantity of each. Beware that sometimes parts are packed within the product so not immediately visible after opening. Please check the assembly section for more details. If anything is missing, stop assembling the product and contact our customer service team.
2. Check all parts are intact and damaged. Any issues, stop assembling the product and contact our customer service team.
3. Check you have the right tools for the job. Required tools which are not provided are listed below. If you are unsure of how to use these tools, please contact a professional tradesperson. We recommend Airtasker as an easy way to find trades people in your local area.

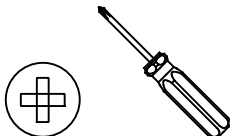



Tools required which are not included
Cross head screwdriver


## Safety advice

 
 
### Dear Customer

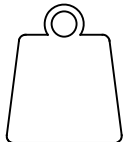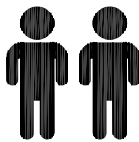
- IMPORTANT - The first step you need to take is to ensure your safety! Please take the time to read and understand these instructions before assembling your furniture.
- Please keep these instructions for future reference.
- This item is intended for indoor use only - unless otherwise specified. Avoid exposure to humid conditions.
- Assembly to be carried out by a competent adult only.
- During assembly children should be kept away from the product due to possible risk of injury. This furniture contains small parts that could cause choking if swallowed.
- Furniture can be dangerous if incorrectly installed. Assembly should be carried out by a competent person. No liability will be accepted for damage or injury caused by incorrectly installed or assembled furniture.
- Never use an electric drill as this can cause damage to parts.
- Regularly check all fastenings to ensure that they are properly tightened.
- Restrain children from climbing or playing on or around furniture. Always consider where the furniture is positioned to ensure children cannot get access to long cords or windows.
- Keep all plastic wrapping materials away from babies and children to avoid danger of suffocation.
- Some products will be supplied with anti - tip kits which should always be used to secure the product to the wall and prevent tipping.
- Ensure that all packaging is disposed of carefully and responsibly. Please recycle where possible.
- Once items are part or fully assembled, they are not returnable unless faulty.

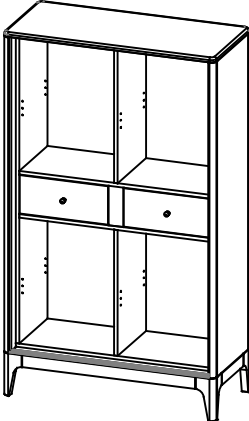Max weight limit	No. of people to assemble	Assembly difficulty	Time to assemble
			
75 KG	No. of people to assemble	Easy	30min

Ref.	Part	Visual	Quantity
1	Carcass		1
2	LH Door		1
3	RH Door		1
4	Shelf		4

## Hardware supplied

 Ref.	Visual	Quantity
A		1
B		16

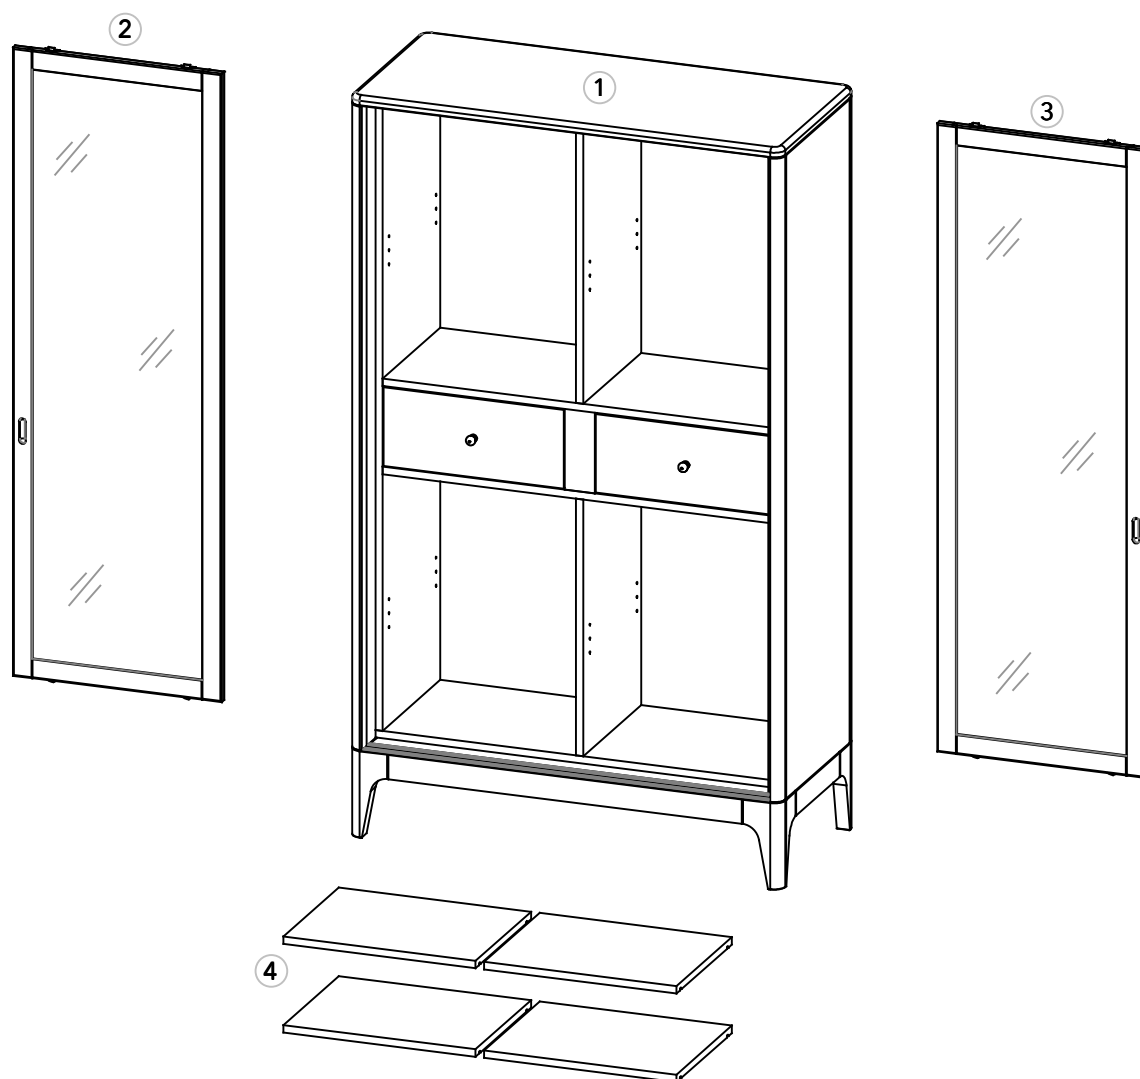







## Wall fixing guide

If you are unsure of the below guidance, consult a qualified tradesperson for advice or help.

- Wall fixings are not provided with this product as different wall types require different screws and wall plugs. See table below as a guide only.
- Always use a wall plug, as screws alone will not secure into walls.
- As a general rule, always use a larger screw and wall plug if you are not sure.
- When drilling into walls always check there are no hidden wires or pipes. Make sure that the screws and wall plugs being used are suitable for supporting your unit.
- Ensure you use the recommended drill bit to match the required hole size for the wall plug. Wall plugs must fit tightly into the drilled hole.
- Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
- Take extra care when drilling high walls.
- Ensure the plug is fitted below the ceramic tile to avoid splitting or cracking.
      
## Care and Maintenance


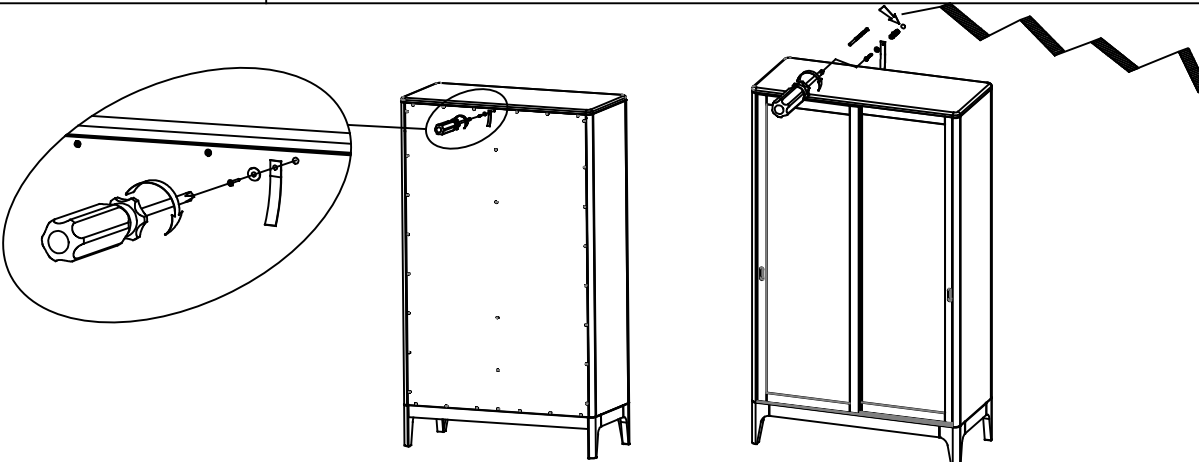 
- Safety - Regularly check the fixings to ensure the wall plug or screws have not become loose.
- Fitting - From time to time check the fitting to ensure the wall plugs or screw do not become loose.

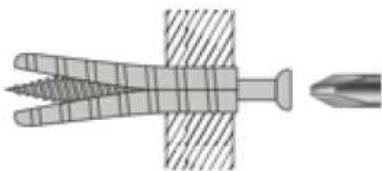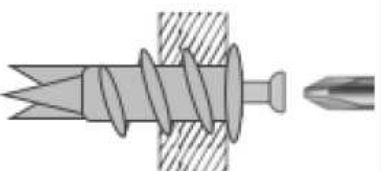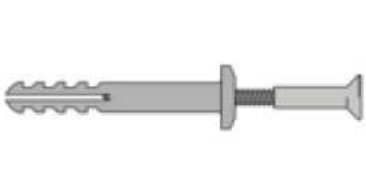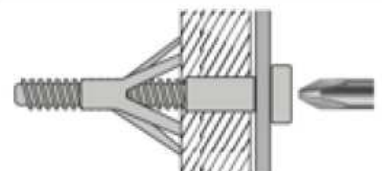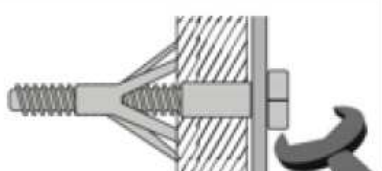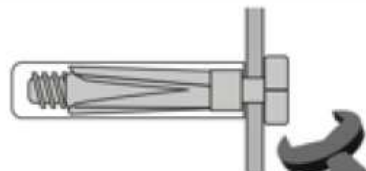


Wall plug types		
You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone, wood or plastic board.		
General Purpose	Plasterboard	Hammer
		
For light loads only. Options available for most wall types.	For light loads only. Attach into plasterboard partitions.	For light loads only. For solid walls covered with plasterboard. Allows the fixing to be attached into wall.
Cavity	Cavity	Shield Anchor
		
Light load cavity wall plug for use into plasterboard partitions or hollow wooden doors.	Heavy load cavity wall plug for use into plasterboard partitions or hollow wooden doors.	For heavier loads into masonry, brickwork or concrete.


WARNING! Tipping hazard	
<p>Unanchored products can tip over which can lead to serious or fatal crushing injuries. We therefore recommend anchoring this product to the wall using the enclosed anti-tip kit.</p> <p><b>The anti-tip kit has been provided for your safety.</b></p>	
	

### IMPORTANT - Keep these instructions for future reference

 - This product is supplied with anti-tip kit which must be fitted to prevent tipping. This has been provided for your safety.
- Never leave a child unattended around the product.
- Never allow children to climb, hang or pull at the product.
- If in doubt, please consult a qualified tradesperson to properly fit the anti-tip kit.
- Wall fixings are not provided with the anti-tip kit as different wall types require different screws and wall plugs. See wall fixing guide within this document for guidance.
- Make sure the screws and wall plugs used are suitable for your wall type and that they can support the weight of the product. Consult a qualified tradesperson if unsure.
- Before drilling into walls, always check there are no hidden wires or pipes behind.
- We recommend 2 people install heavy products.



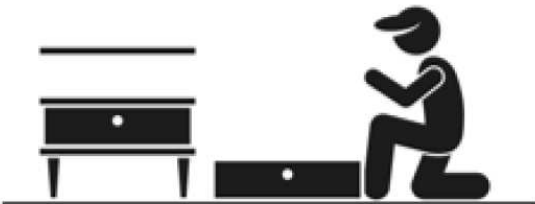
Fixing the anti-tip kit	
 <p>A x 1</p>	<p><b>Wall textile strap</b></p> <ul style="list-style-type: none"> <li>• Using provided screws and washer, fix the provided textile strap to the back of item. Using the appropriate screws and plug for your wall type, attach textile strap to the wall using provided washer.</li> <li>• The product will now be secured to the wall to prevent tipping.</li> </ul>
	

	<p><b>ALWAYS</b> lay each panel down on a clean and level area, ideally in the room of intended use, ensuring there is enough room to maneuver around the item.</p>
	<p><b>NEVER</b> pull furniture into place as this causes damage to the internal structure and feet fixings. Always lift to move.</p>
	<p><b>NEVER</b> flip your upholstery allowing corners to hit the floor as structural damage can be caused. Always turn gently.</p>

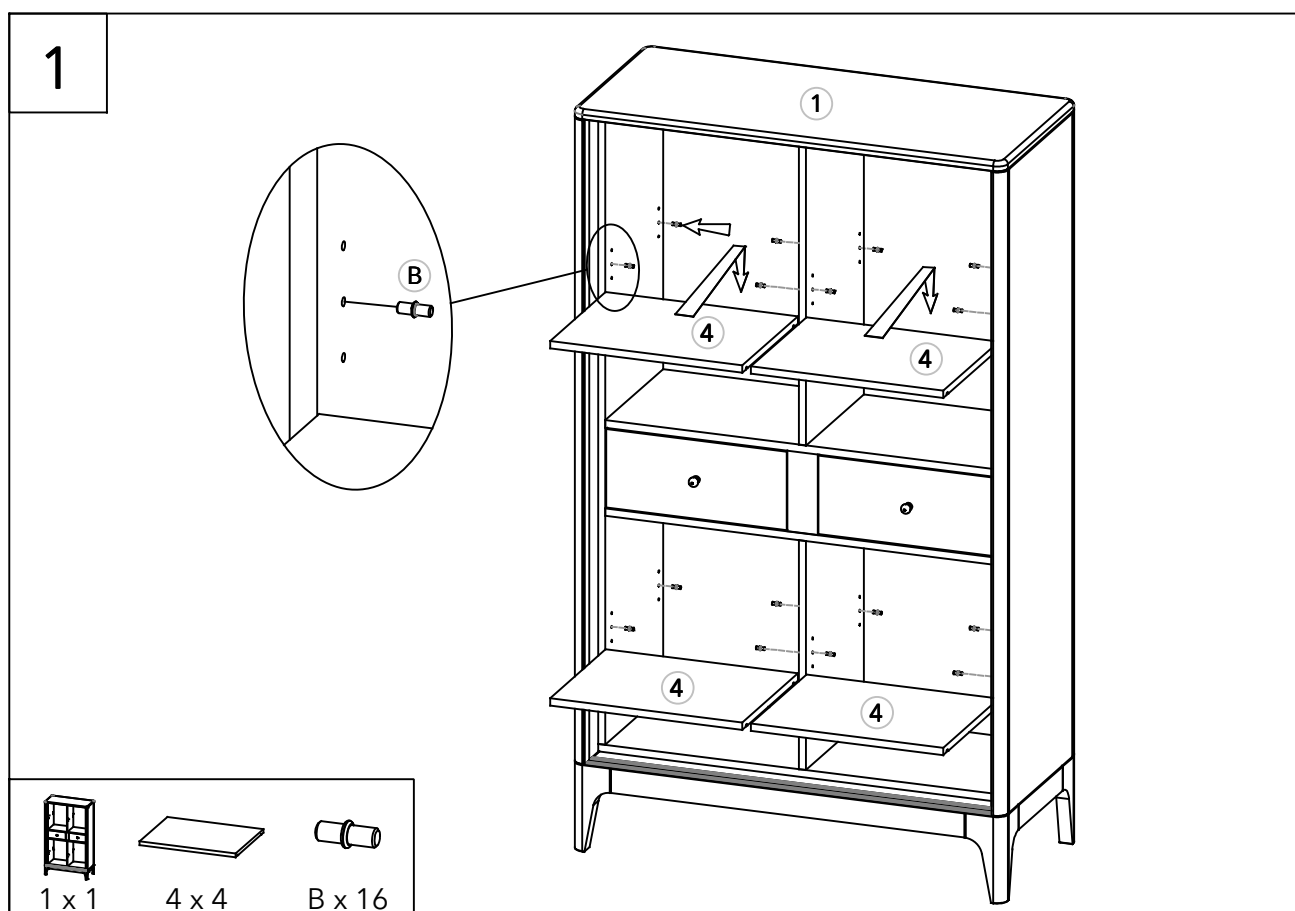 





2

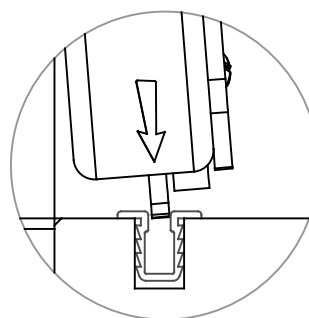 
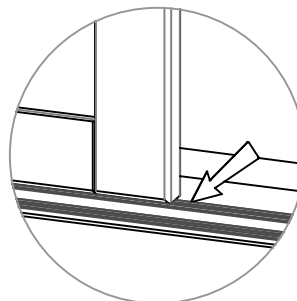 
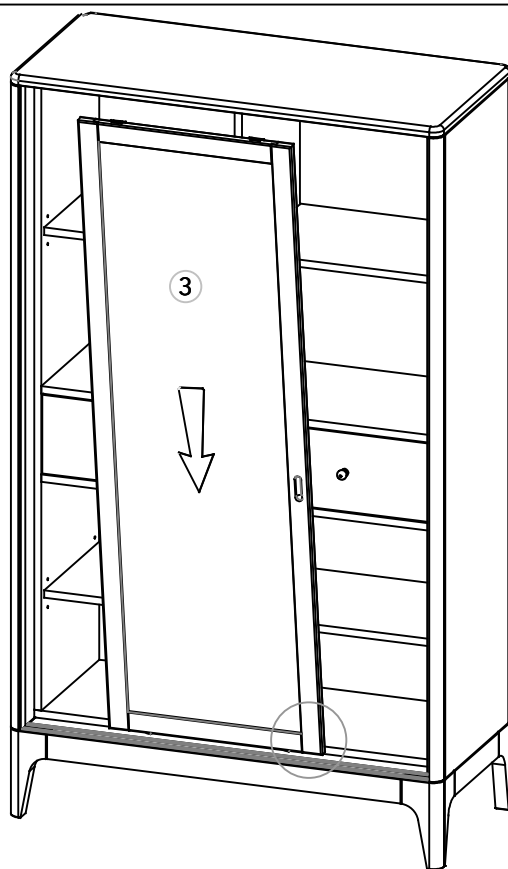 


3 x 1


 
 
3

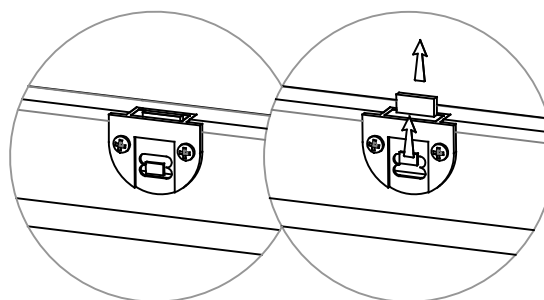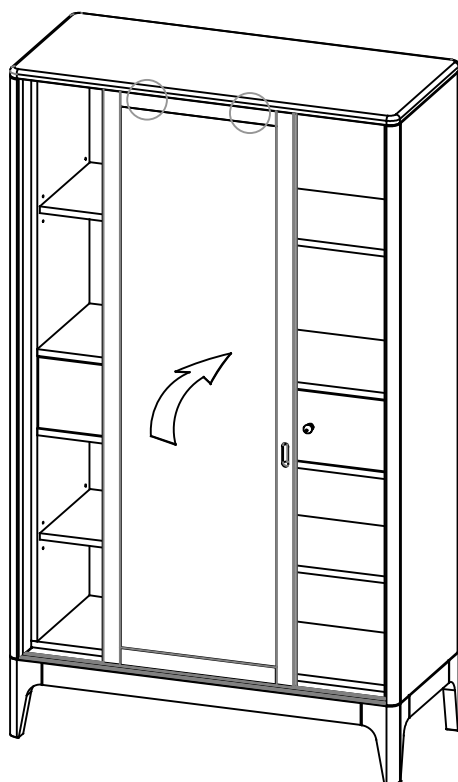



4

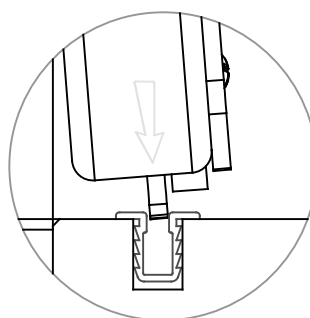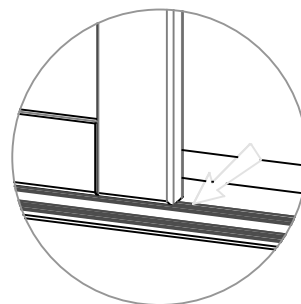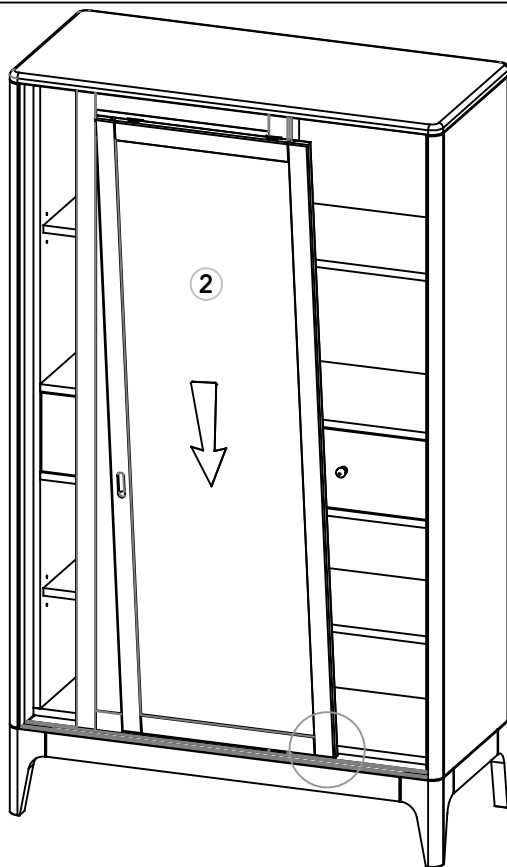   



5

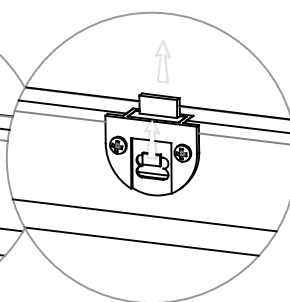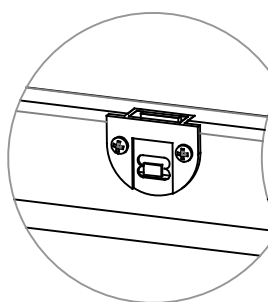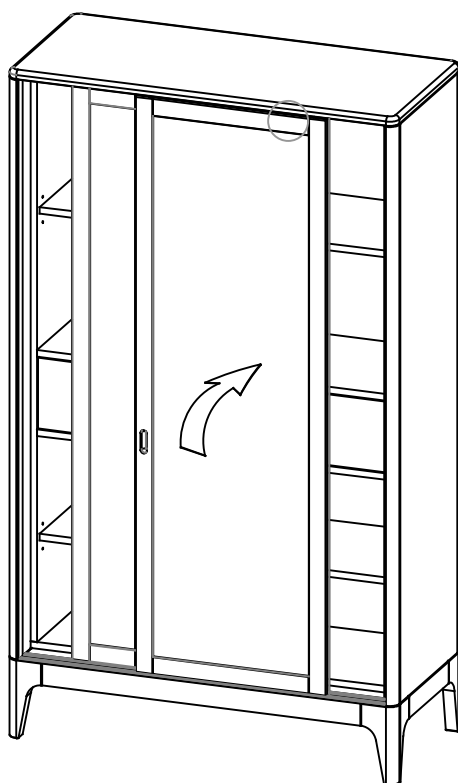   


6

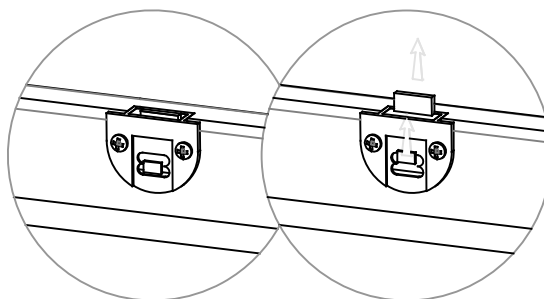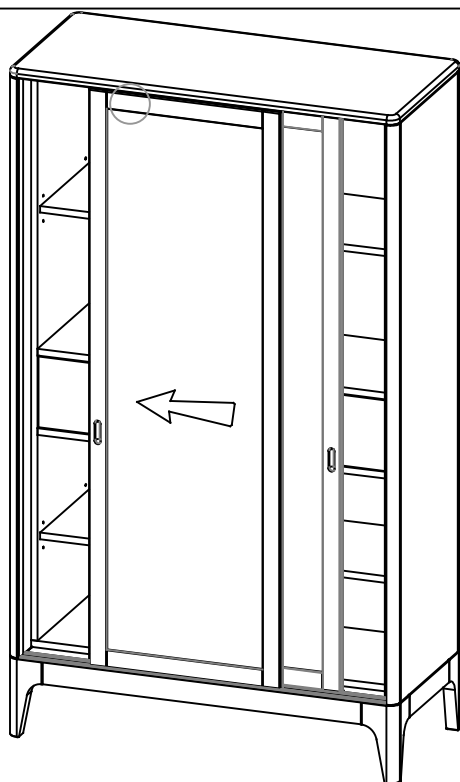  

7

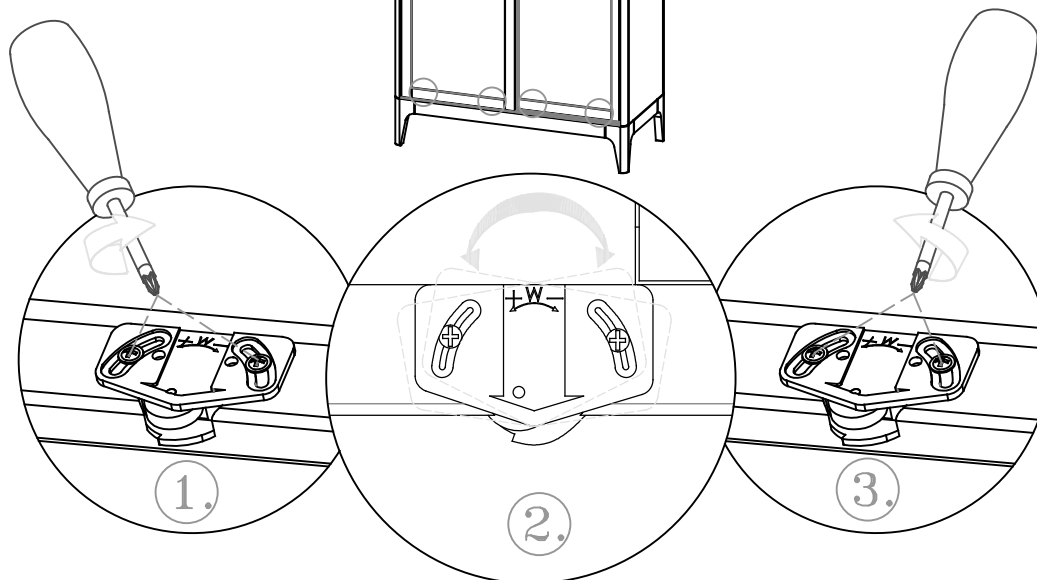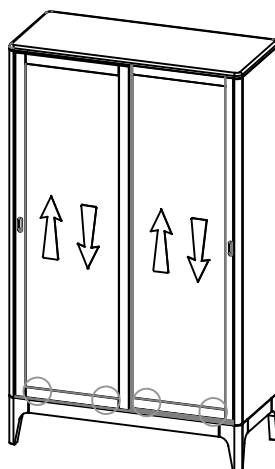  

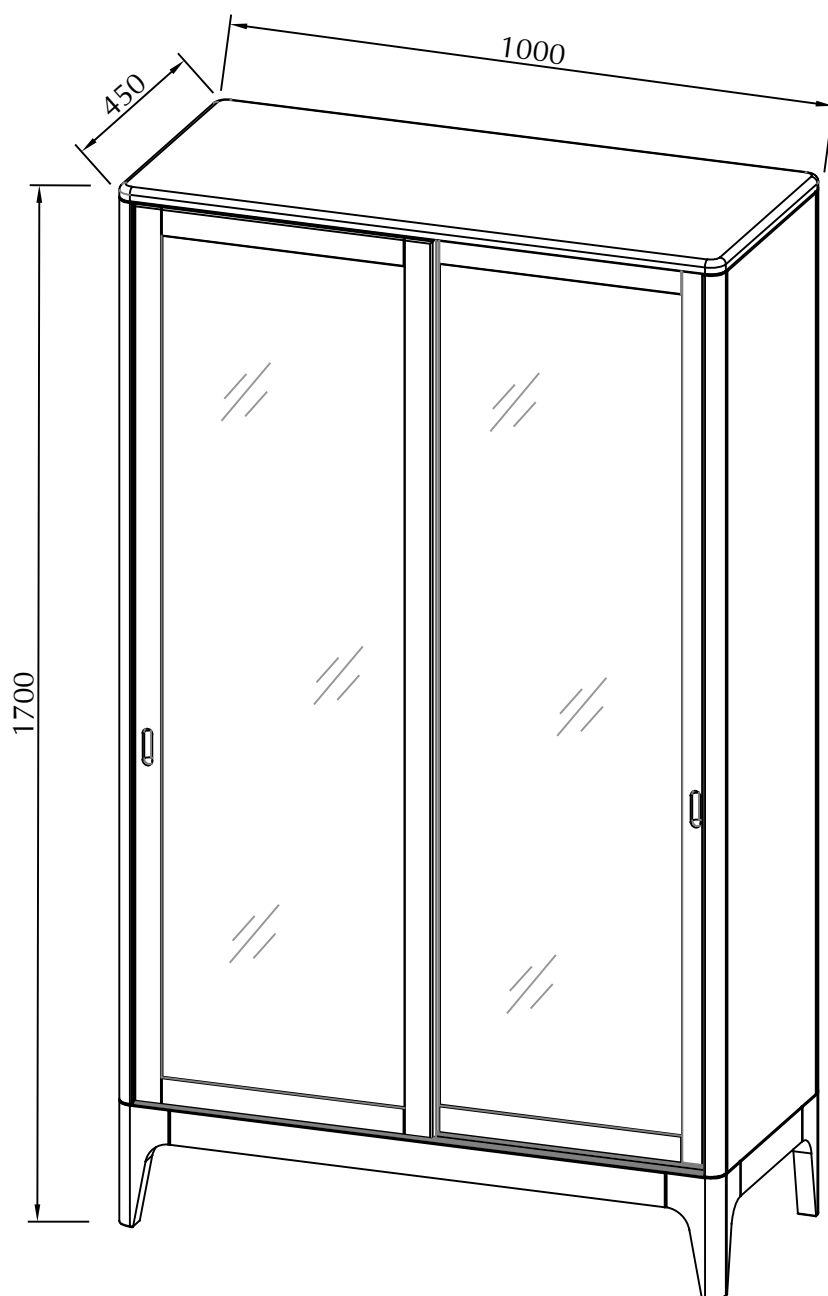 

## General furniture care

---

- Uneven floors could give the impression that doors are out of alignment or that the furniture is wobbly. Be aware of this and compensate, if necessary, by adjusting the hinges (bottom rollers) or packing a corner to level the item. Please refer to the assembly instructions and adjust accordingly.
- If your furniture becomes stained, scratched, chipped or suffers other damage, we recommend professional help is sought to restore it. Please contact our customer services line for recommended agents.
- **DO** move items such as ornaments or coasters around periodically to allow the colour to mellow evenly.
- **DO** use mats and coasters to protect the surface from heat, liquids, or items that may cause scratches.
- **DO** ensure plastic or felt feet protectors are securely fitted into place on the feet and legs to avoid scratches.
- **DO** check fittings and fixings from time-to-time and tighten when necessary. Stop using the product if still unstable after all screws and bolts tightened.
- **DO NOT** drag your furniture when moving it as this can damage joints. Always lift furniture into place.

## Specific material care

---

### Timber care

- Timber is a natural material and each piece is individual.
- Colour may mellow over time and new items can vary in shade from items that you have purchased previously.
- DO only clean using a damp cloth and mild detergent. Aim to dust weekly with a soft, lint-free cloth or duster to prevent any build up of dirt.
- DO ensure the polish you are using is correct for your product and finish.
- DO avoid getting furniture wet when mopping floors. Always move out of the way when possible.
- DO patch test polishes or cleaning products on a small discreet area before applying across the whole unit.
- DO remove any spills immediately to avoid staining.
- DO NOT place directly in front of heat sources such as radiators or fires as timber can be affected by temperature and humidity which may cause cracking and warping.
- DO NOT place timber product in direct sunlight, as this will cause the colour to change quickly.
- DO NOT use bleach or abrasive cleaners.
- DO NOT use abrasive polish or silicon-based polishes as these can affect the finish over time.

## Customer service

---

If you have any issues with this product, you can call our Customer Service team on:

**0345 165 6565** Monday to Friday 9am to 5:00pm.

Alternatively, you can contact our team by Live Chat on: [Dunelm.com](https://www.dunelm.com)

Monday to Friday 8am-8:30pm

Saturdays 8am - 5:30pm

Sundays and bank holidays 9am - 4:30pm.



Dunelm (Soft Furnishings) Ltd. LE7  
1AD& Dunelm (Soft Furnishings)  
Holdings Limited. Dublin D12WR25

Manufactured in Poland
------------------------