 


Olney Corner Storage Ladder

 
 
 
 
 

Assembly & Care Instructions

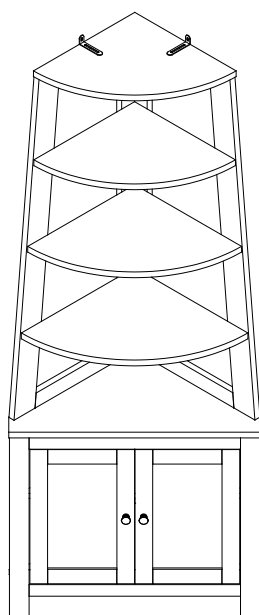

Dunelm

www.dunelm.com





1. Check you have received all parts listed on the component and hardware pages and the correct quantity of each. Beware that sometimes parts are packaged within the product so not immediately visible after opening. Please check the assembly section for more details. If anything is missing, stop assembling the product and contact our customer service team.
2. Check all parts are intact and undamaged. Any issues, stop assembling the product and contact our customer service team.
Tools required which are not in
3. Check you have the right tools for the job. Required tools which are not provided are listed below. If you are unsure of how to use these tools, please contact a professional tradesperson. We recommend Airtasker as an easy way to find trades people in your local area

Tools required which are not included					
Flat head screwdriver	Cross head screwdriver	Spirit level	Tape measure	Pencil	Drill
					

Safety advice




Dear Customer

- **IMPORTANT**-The first step you need to take is to ensure your safety! Please take the time to read and understand these instructions before assembling the product.
- Please keep these instructions for future reference.
- This item is intended for indoor use only - unless otherwise specified. Avoid exposure to humid conditions.
- Assembly to be carried out by a competent adult only.
- During assembly children should be kept away from the product due to possible risk of injury. The product may contain small parts that could also cause choking if swallowed.
- Products can be dangerous if incorrectly installed or assembled. Assembly should be carried out by a competent person and instructions followed. No liability will be accepted for damage or injury caused by incorrectly installed or assembled products.
- Never use an electric drill to assemble a product, as this can cause damage to parts.
- Regularly check all fastenings to ensure that they are properly tightened.
- Restrain children from climbing or playing on or around the product. Always consider where products are positioned to ensure children cannot get access to long cords or windows.
- Some products will be supplied with anti-tip kits which should always be used to secure the product to the wall and prevent tipping.
- Keep all plastic wrapping materials away from babies and children to avoid danger of suffocation.
- Ensure that all packaging is disposed of carefully and responsibly. Please recycle where possible.
- Once items are part or fully assembled, they are not returnable unless faulty.

Max weight limit	No. of people to assemble	Assembly difficulty	Time to assemble
			
75 KG	2 recommended	Moderate	< 1 hour




CAM-LOCK

   Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)







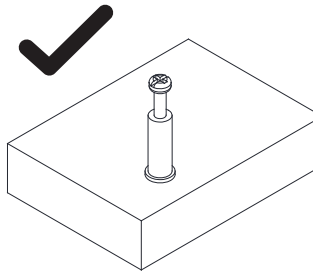
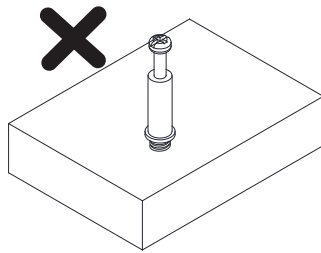
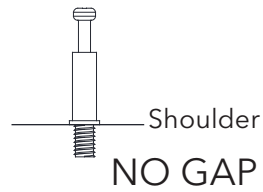










WHEN FITTING CAMS

                    ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING CAM-PILLAR
TURN CLOCKWISE UNTIL SECURE

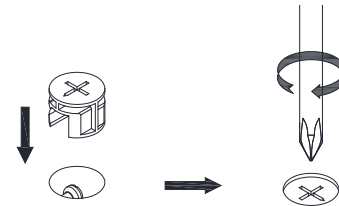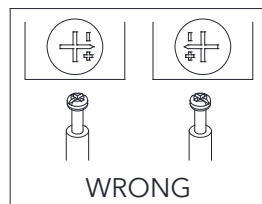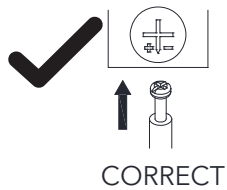

 

 
 

 


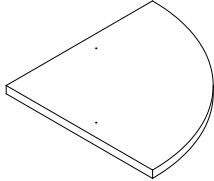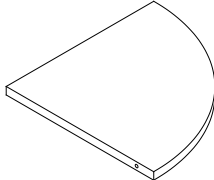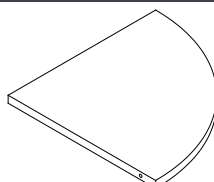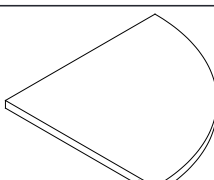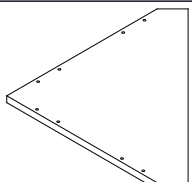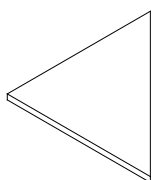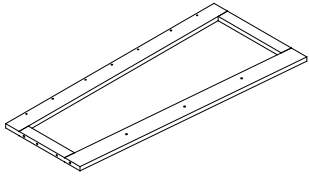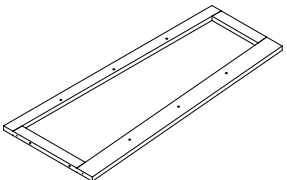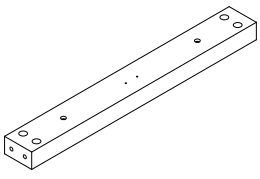

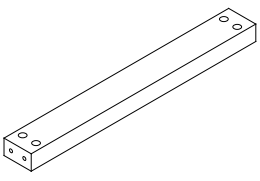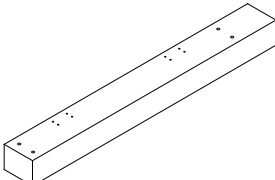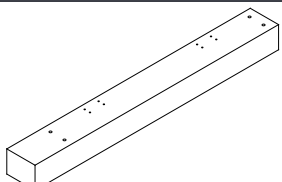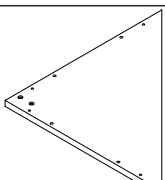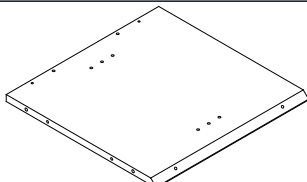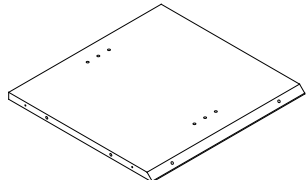

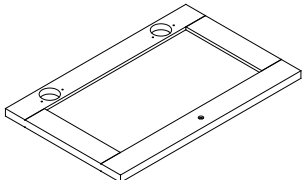


Parts supplied.







Ref	Parts supplied(mm)	Visual	Qty
1	Top Panel 365x365x18		1
2	Upper fixed shelf panel 362x362x18		1
3	Middle fixed shelf panel 384x384x18		1
4	Lower fixed shelf panel 406x406x18		1
5	Middle top panel 640x386x18		1
6	Movable shelf panel 576x288x15		1
7	Upper left side panel 1015x452x18		1
8	Upper right side panel 1015x432x18		1
9	Cross rail under top panel 537x65x36		1


Ref	Parts supplied(mm)	Visual	Qty
10	Bottom front cross rail 537x65x36		1
11	Left leg 559x65x50		1
12	Right leg 559x65x50		1
13	Bottom panel 638x319x15		1
14	Left back panel 457x449x18		1
15	Right back panel 457x430x18		1
16	Bottom support leg 87x50x50		1
17	Doors 415x265x15		2

           

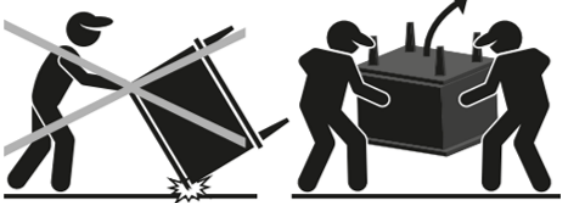 
Hardware supplied.

Ref	Hardware & dimension(mm)	Qty	mm 10 20 30 40 50 60 70 80 90 100
C	Wood dowel M6 x 30	21	
D	Screw M3 x 14	2	
E	Screw M4 x 14	24	
F	Bolt M4 x 18	2	
G	Screw M4 x 35	14	
H	Screw M5 x 45	8	
I	Bolt M6 x 45	9	
U	Screw M4 x 12	2	


Ref	Visual	Qty
A		18
B		18
J		2
K		4
L		4
M		2
N		1

Ref	Visual	Qty
O		9
P		2
Q		1
R		1
S		9
T		29

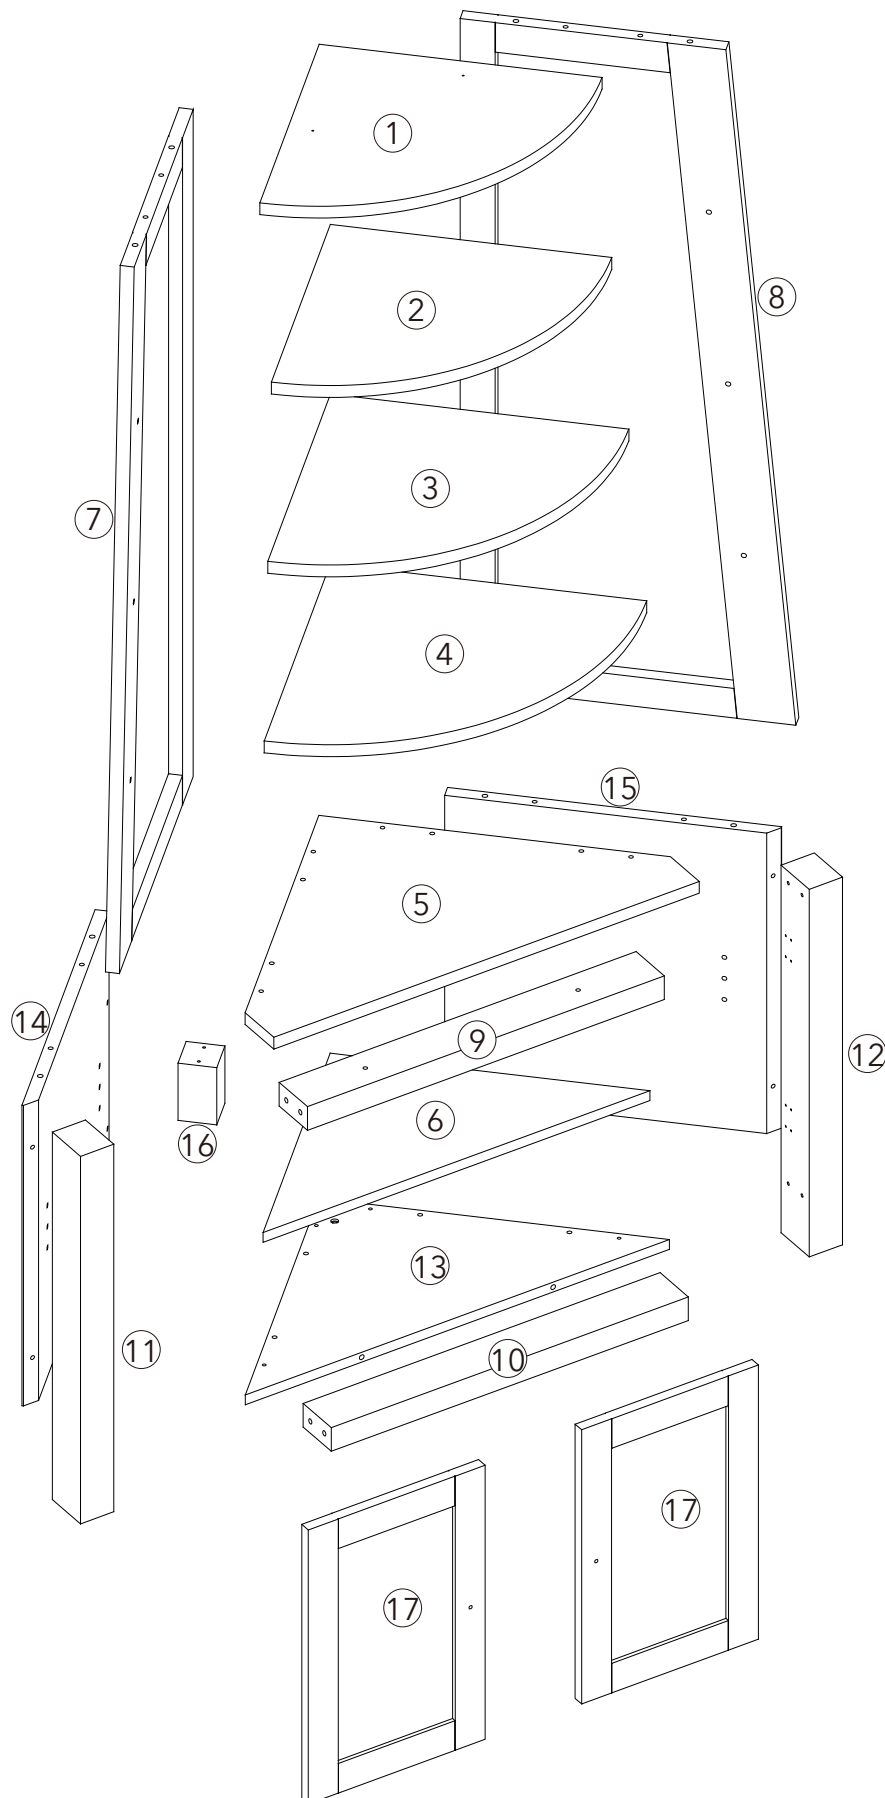

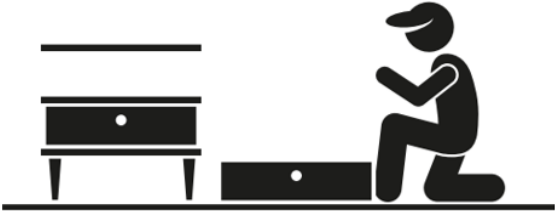	<p>ALWAYS lay each panel down on a clean and level area, ideally in the room of intended use, ensuring there is enough room to maneuver around the item.</p>
	<p>NEVER pull furniture into place as this causes damage to the internal structure and feet fixings. Always lift to move.</p>
	<p>NEVER flip your upholstery allowing corners to hit the floor as structural damage can be caused. Always turn gently.</p>

 1

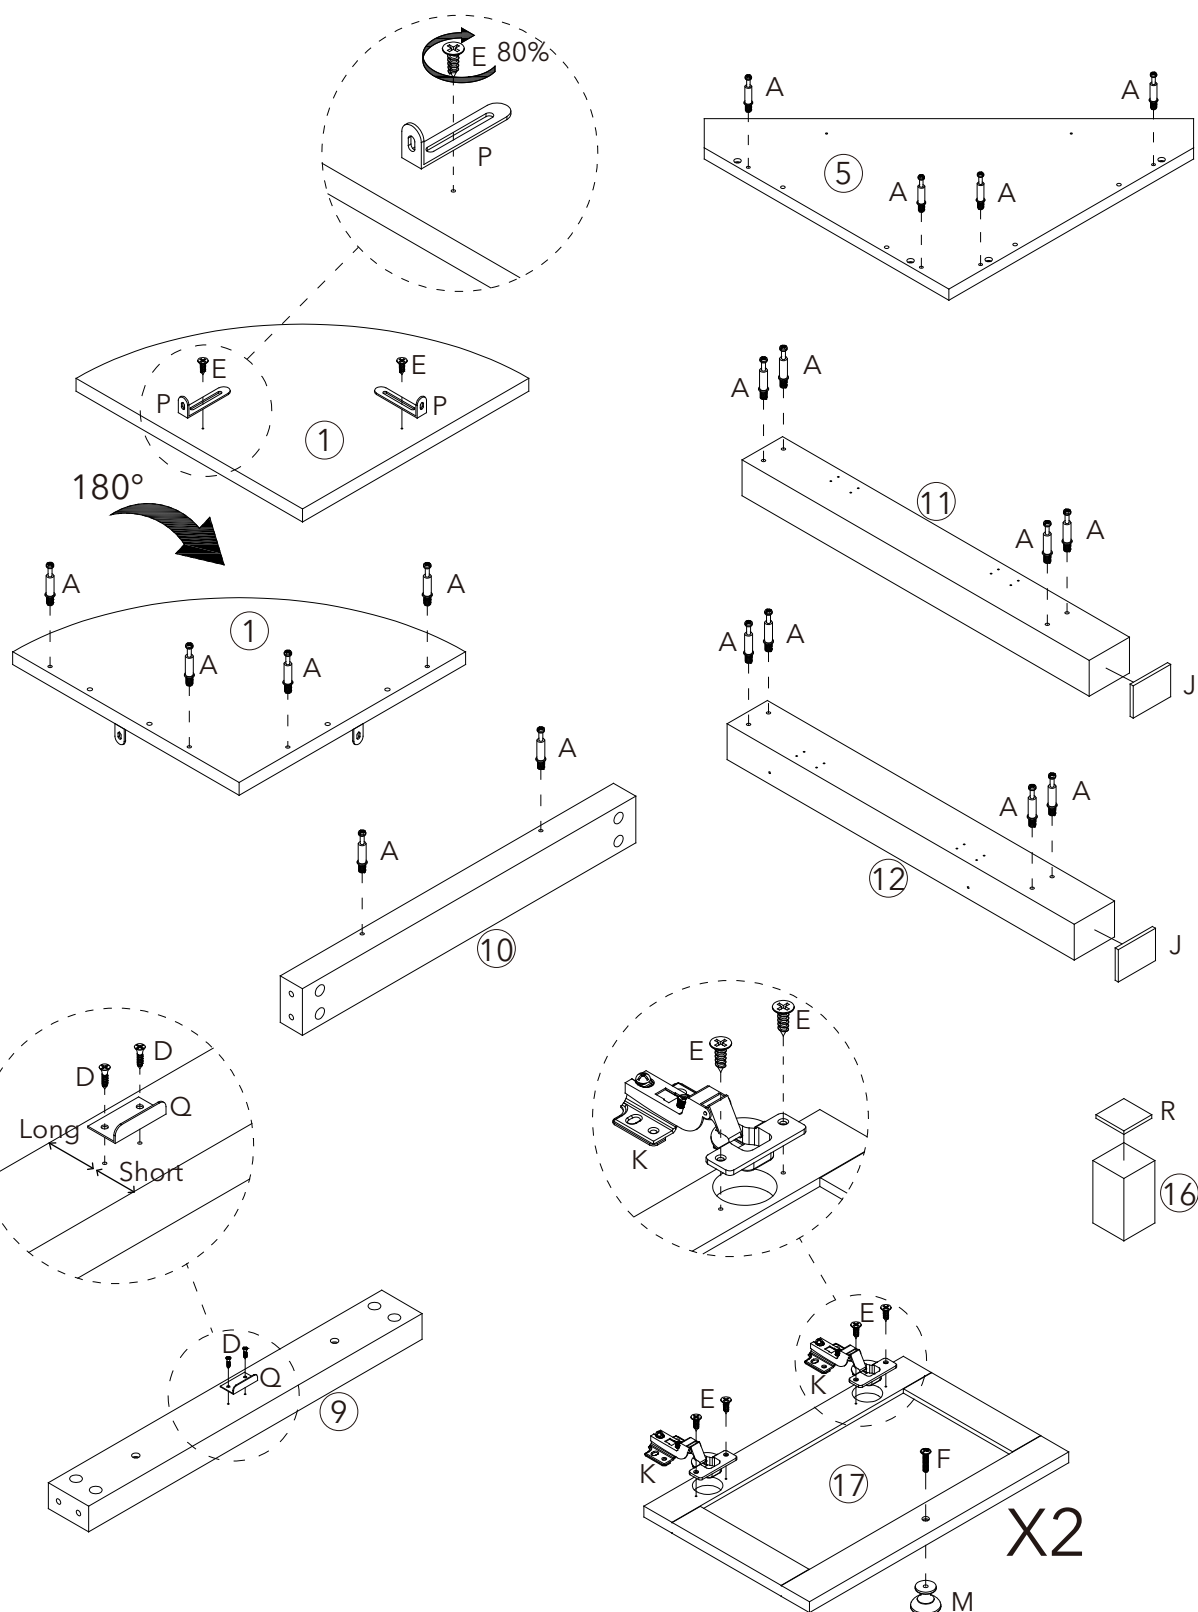

A x 18



D x 2



 
E x 10



F x 2



J x 2



K x 4



M x 2



P x 2



 
 
Q x 1



R x 1



2

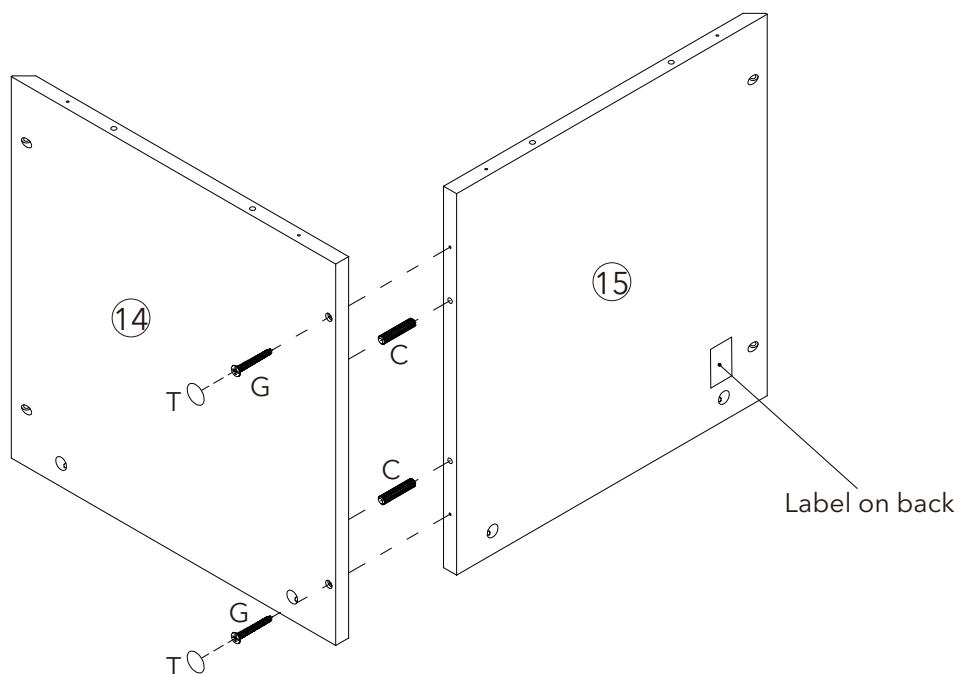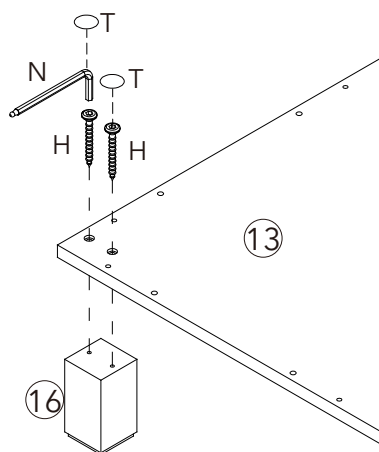

C x 2

G x 2

 
H x 2

N x 1

T x 4



3

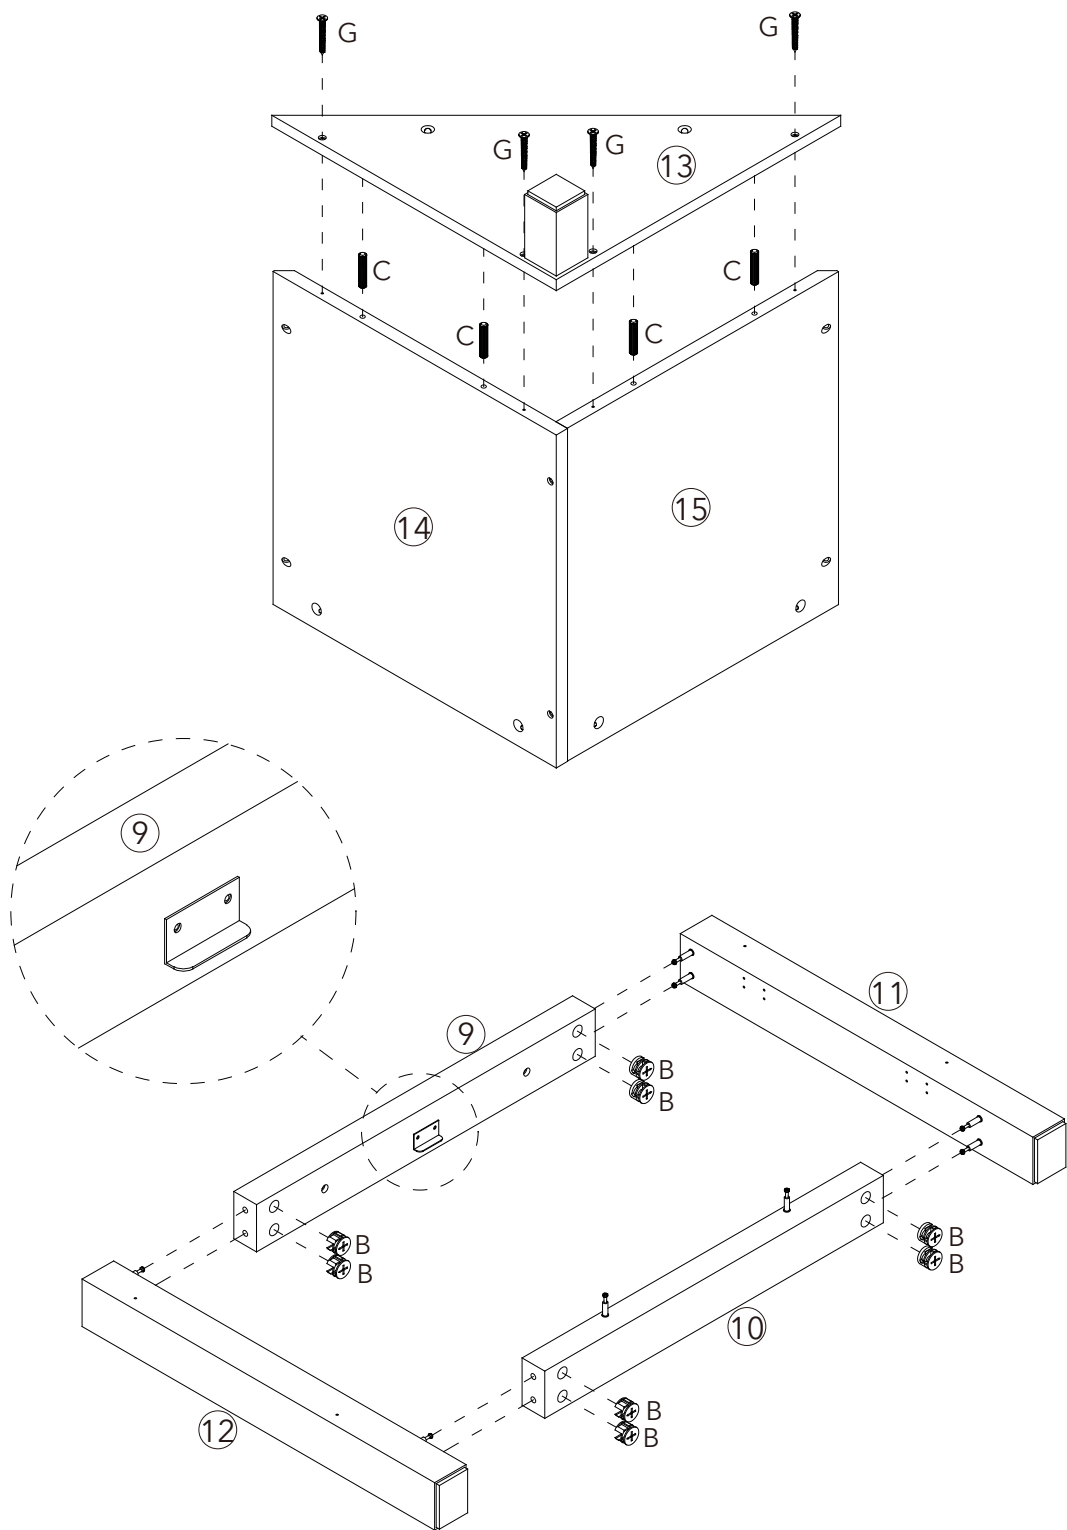



B x 8

C x 4

G x 4



  4

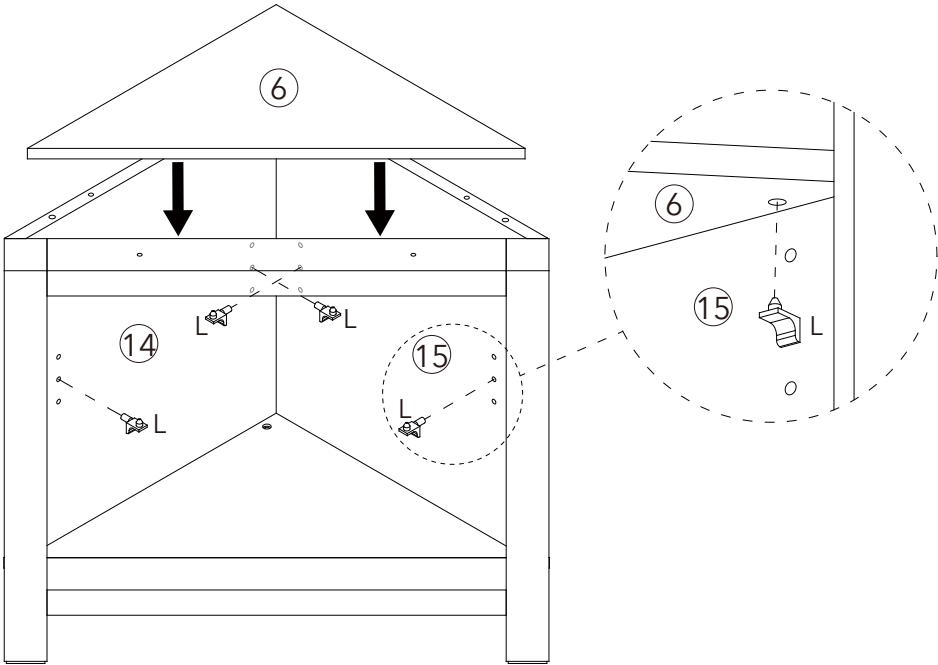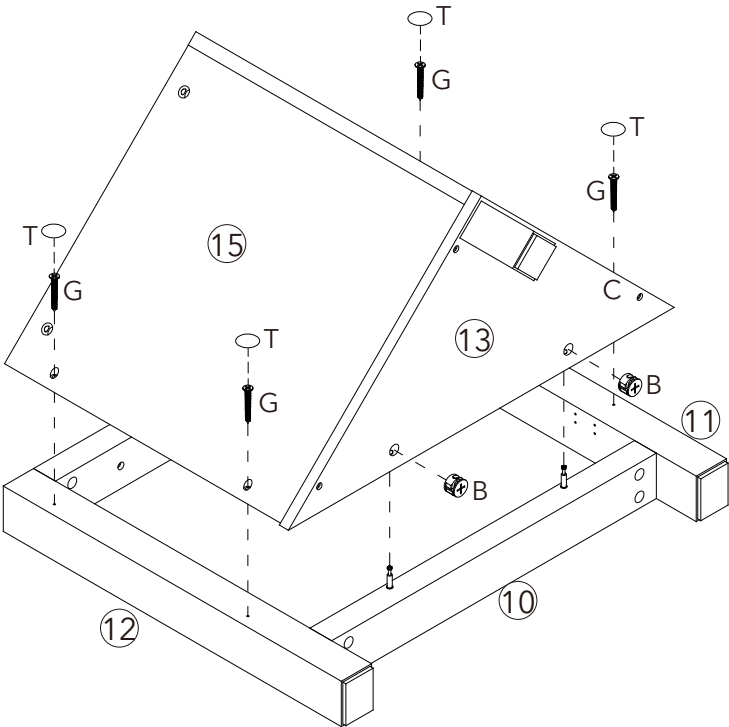


B x 2	G x 4	L x 4	T x 4	

5

Assembly diagram for step 5, showing the installation of curved panels (2, 3, 4) and the base unit (7) onto a frame (8). The diagram includes callouts for various hardware: screws (S), washers (O), cam bolts (C), and cam nuts (G). Two circular insets provide detailed views of the corner connections. The bottom inset shows the base unit (7) being attached to the frame (8) using cam bolts (C) and cam nuts (G).


C x 3	G x 4	I x 9	O x 9	T x 13	S x 9	
-------	-------	-------	-------	--------	-------	--

 6

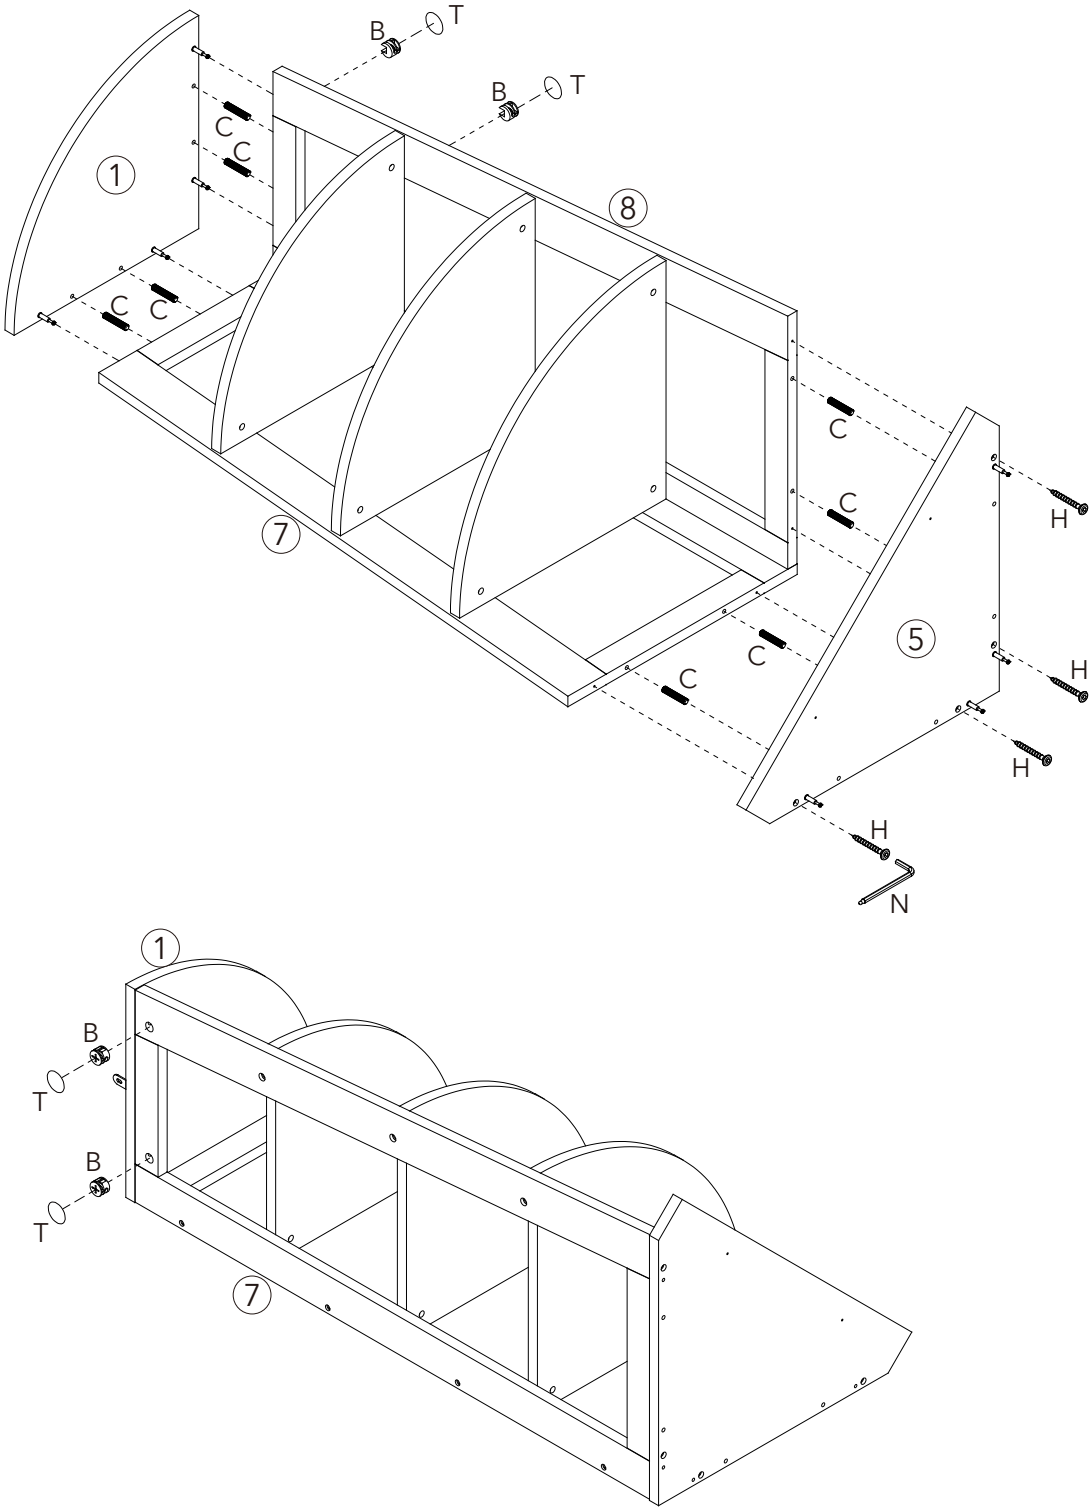

B x 4	C x 8	H x 4	T x 4	
				

 7

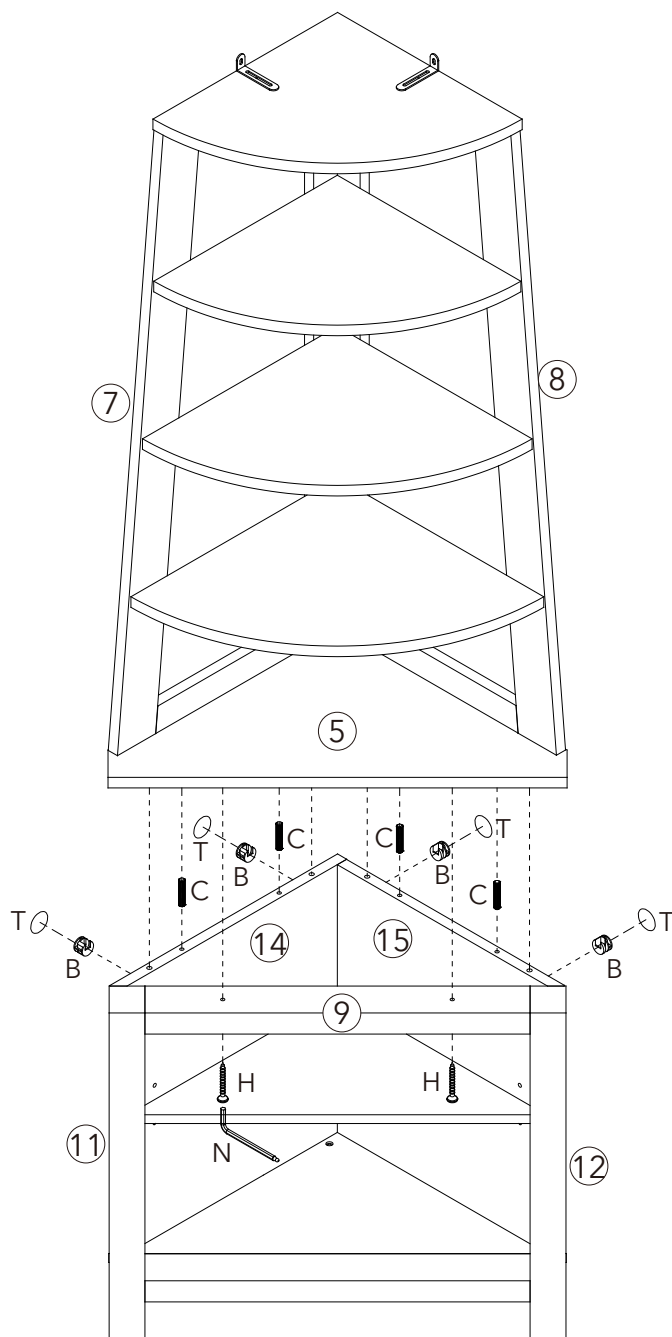


B x 4



C x 4







 
H x 2



T x 4



     8

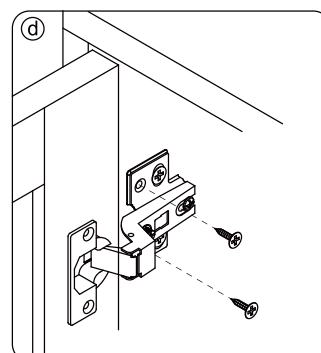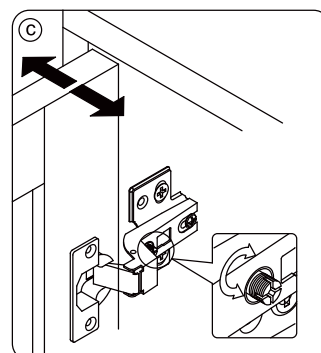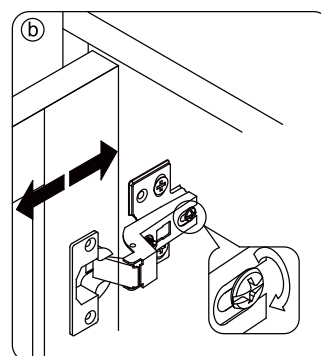
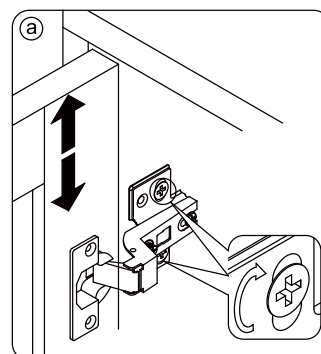
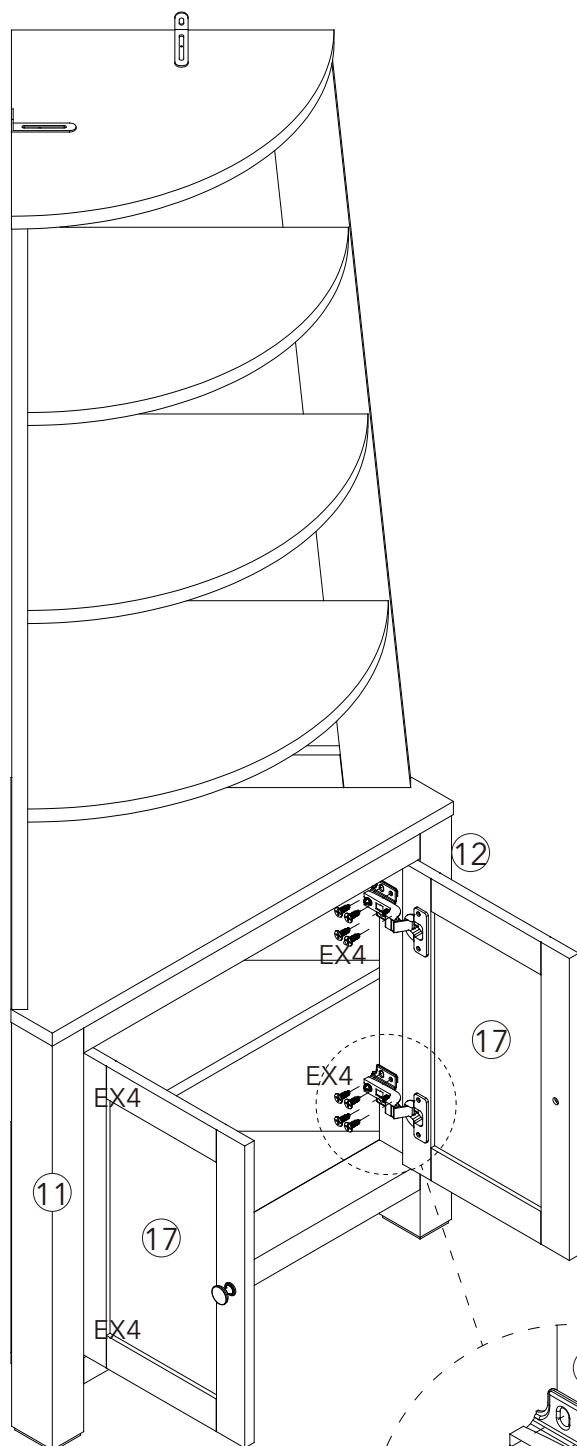



E x 16



9

    Wall Fittings are
NOT provided

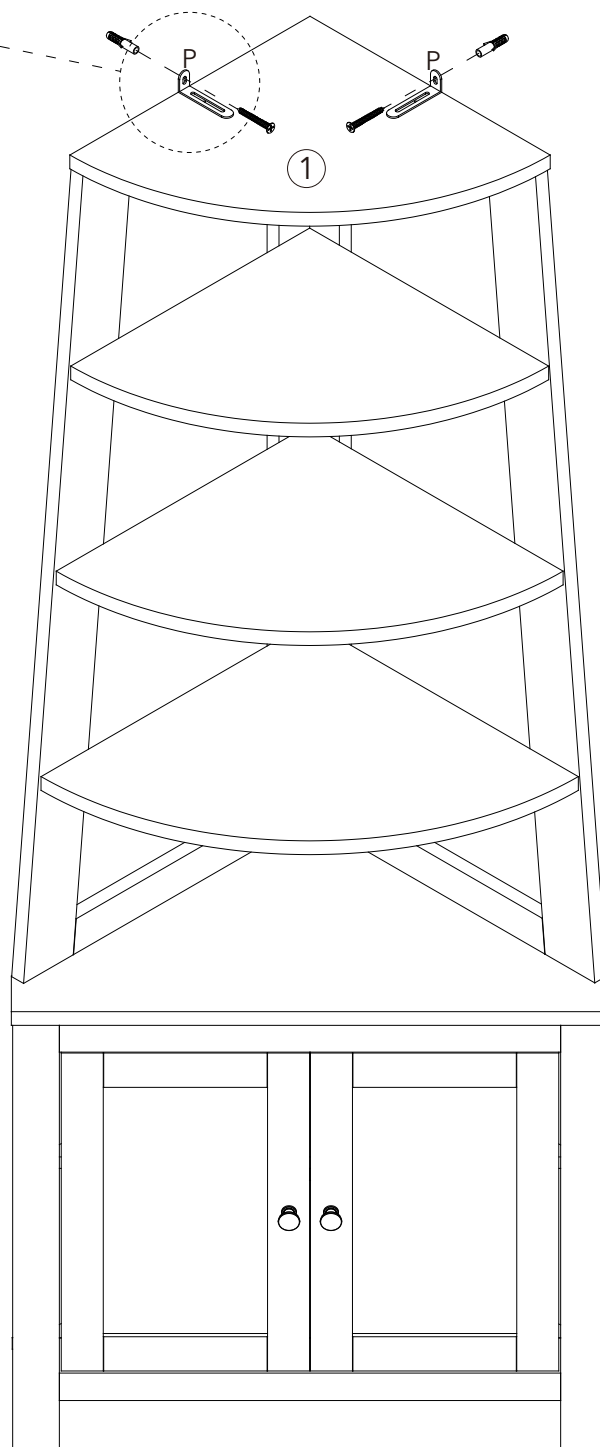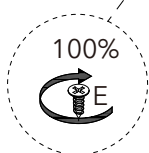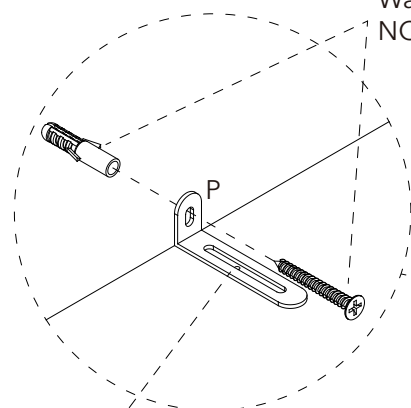

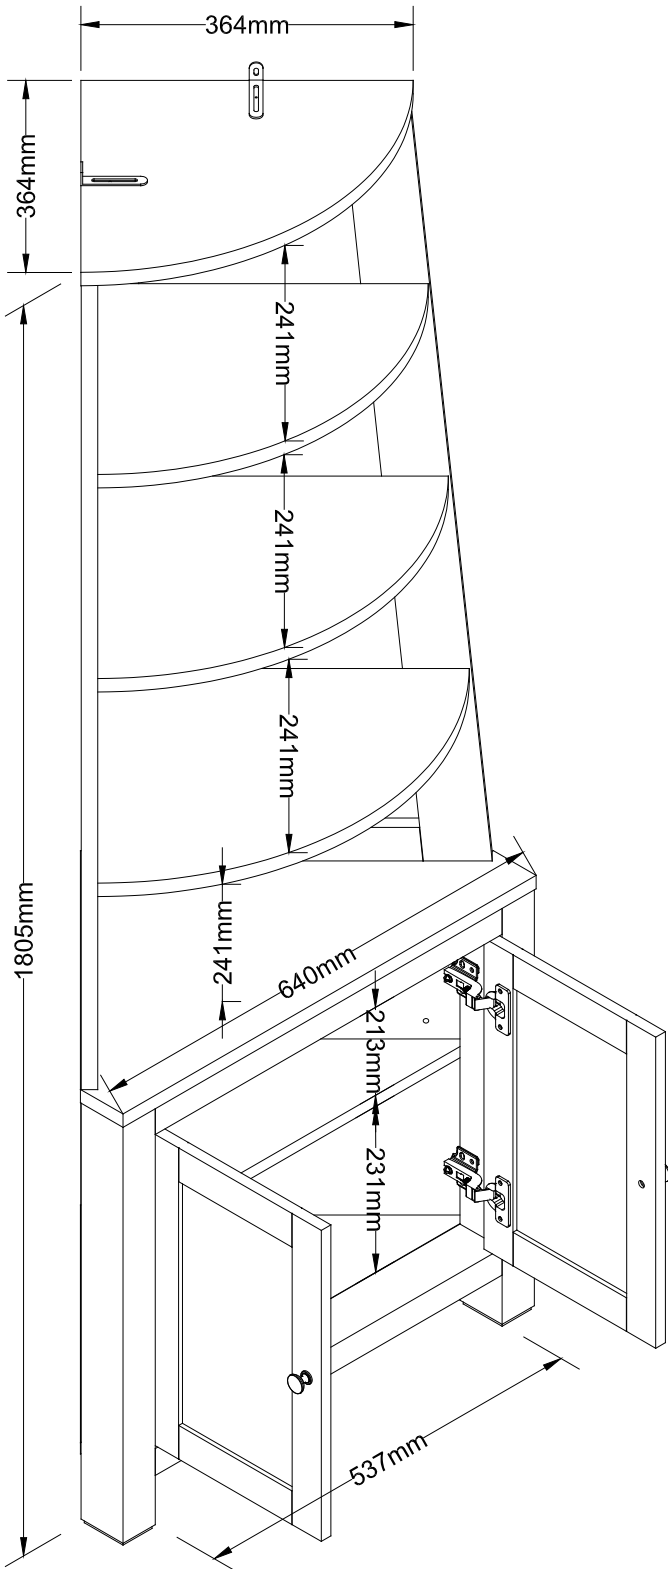

Specific material care.

- **Foil care**
- **DO** avoid water or other liquids contacting scratches or chips as this can cause the surface to bubble and lift.
- **DO** only clean using a damp cloth and mild detergent. Aim to dust weekly with a soft, lint-free cloth or duster to prevent any build up of dirt.
- **DO** remove any spills immediately to avoid staining.
- **DO NOT** place directly in front of heat sources such as radiators or fires as timber can be affected by temperature and humidity which may cause cracking and warping.
- **DO NOT** in direct sunlight, as this will cause the colour to change quickly.
- **DO NOT** use bleach or abrasive cleaners.
- **DO NOT** use too much water when cleaning, the cloth should just be slightly damp.
- **DO NOT** use abrasive polish or silicon-based polishes as these can affect the finish over time.

- Uneven floors could give the impression that doors are out of alignment or that the furniture is wobbly. Be aware of this and compensate, if necessary, by adjusting the hinges or packing a corner to level the item. Please refer to the assembly instructions and adjust accordingly.
- If your furniture becomes stained, scratched, chipped or suffers other damage, we recommend professional help is sought to restore it. Please contact our customer services line for recommended agents.
- **DO** move items such as ornaments or coasters around periodically to allow the colour to mellow evenly.
- **DO** use mats and coasters to protect the surface from heat, liquids, or items that may cause scratches.
- **DO** ensure plastic or felt feet protectors are securely fitted into place on the feet and legs to avoid scratches.
- **DO** check fittings and fixings from time-to-time and tighten when necessary. Stop using the product if still unstable after all screws and bolts are tightened.
- **DO NOT** drag your furniture when moving it as this can damage joints. Always lift furniture into place.

Customer service.



If you have any issues with this product, you can call our Customer Service team on:
0345 165 6565 Monday to Friday **9am to 5:00pm.**

Alternatively, you can contact our team by Live Chat on: **Dunelm.com**
Monday to Friday 8am - 8:30pm
Saturdays 8am - 5:30pm
Sundays and bank holidays 9am - 4:30pm.



Dunelm(Soft Furnishings)Ltd.LE7
1AD & Dunelm(Soft Furnishings)
Holdings Ltd.Dublin D12 WR25.