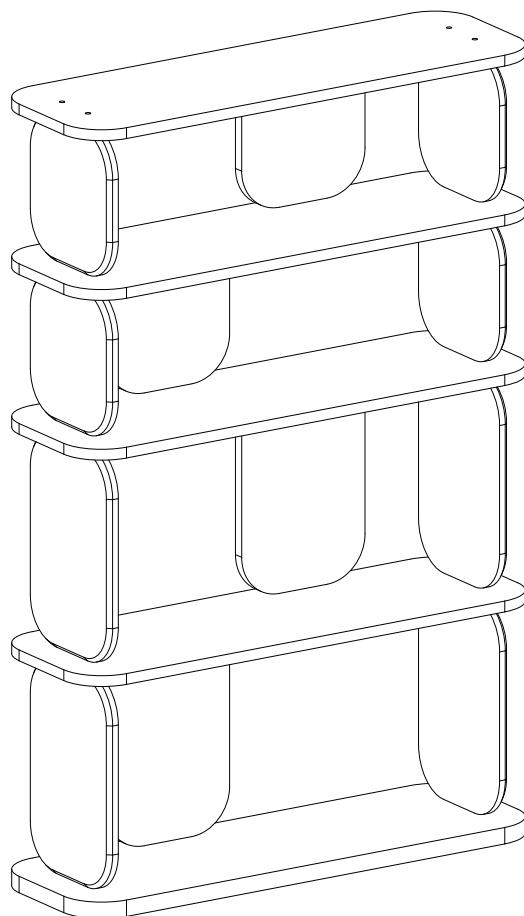


Paddle Bookcase

Assembly & Care instructions



1. Check you have received all parts listed on the component and hardware pages and the correct quantity of each. Beware that sometimes parts are packaged within the product so not immediately visible after opening. Please check the assembly section for more details. If anything is missing, stop assembling the product and contact our customer service team.
2. Check all parts are intact and undamaged. Any issues, stop assembling the product and contact our customer service team.
3. Check you have the right tools for the job. Required tools which are not provided are listed below. If you are unsure of how to use these tools, please contact a professional tradesperson. We recommend Airtasker as an easy way to find trades people in your local area.

| Tools required which are not included | | | | | |
|---------------------------------------|------------------------|--------------|--------------|--------|-------|
| Flat head screwdriver | Cross head screwdriver | Spirit level | Tape measure | Pencil | Drill |
| | | | | | |

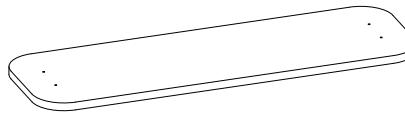
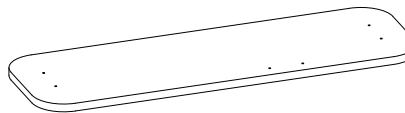
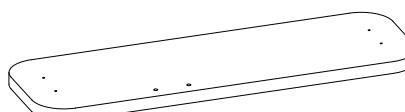
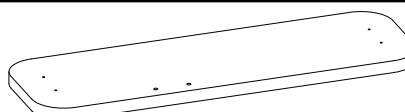
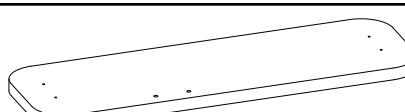
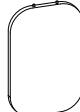
Safety advice.

Dear Customer

- **IMPORTANT** – The first step you need to take is to ensure your safety! Please take the time to read and understand these instructions before assembling the product.
- Please keep these instructions for future reference.
- This item is intended for indoor use only – unless otherwise specified. Avoid exposure to humid conditions.
- Assembly to be carried out by a competent adult only.
- During assembly children should be kept away from the product due to possible risk of injury. The product may contain small parts that could also cause choking if swallowed.
- Products can be dangerous if incorrectly installed or assembled. Assembly should be carried out by a competent person and instructions followed. No liability will be accepted for damage or injury caused by incorrectly installed or assembled products.
- Never use an electric drill to assemble a product, as this can cause damage to parts.
- Regularly check all fastenings to ensure that they are properly tightened.
- Restrict children from climbing or playing on or around the product. Always consider where products are positioned to ensure children cannot get access to long cords or windows.
- Some products will be supplied with anti – tip kits which should always be used to secure the product to the wall and prevent tipping.
- Keep all plastic wrapping materials away from babies and children to avoid danger of suffocation.
- Ensure that all packaging is disposed of carefully and responsibly. Please recycle where possible.
- Once items are part or fully assembled, they are not returnable unless faulty.

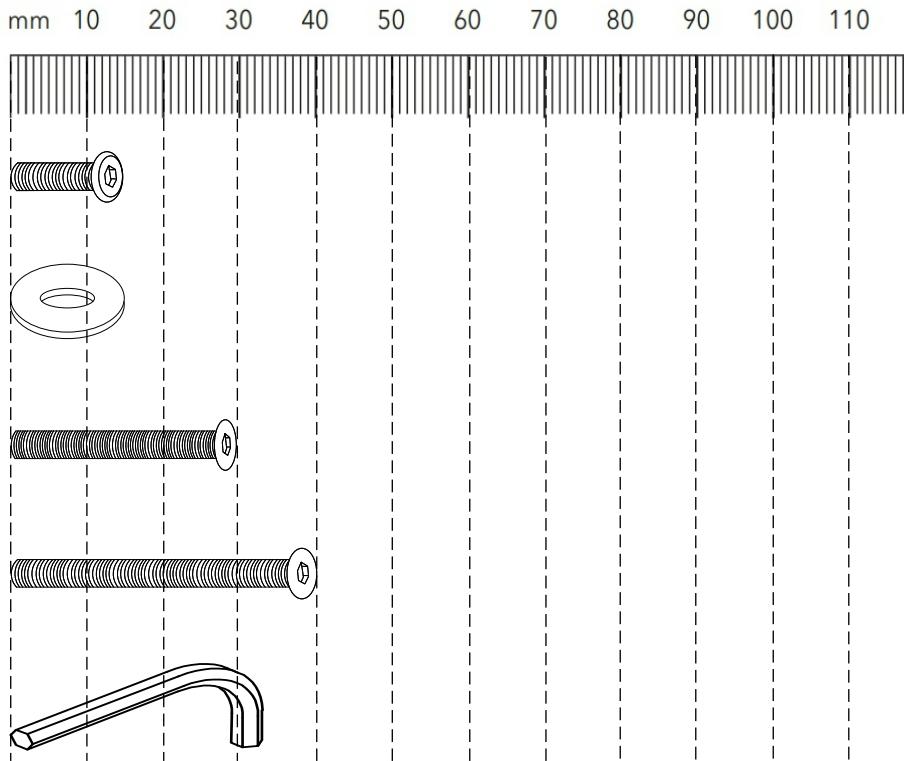
| Max weight limit | No. of people to assemble | Assembly difficulty | Time to assemble |
|------------------|---------------------------|---------------------|------------------|
| | | | |
| 62.80 KG | 2 recommended | Moderate | <30 minutes |

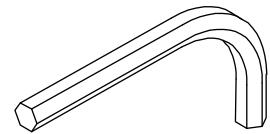
Parts supplied.

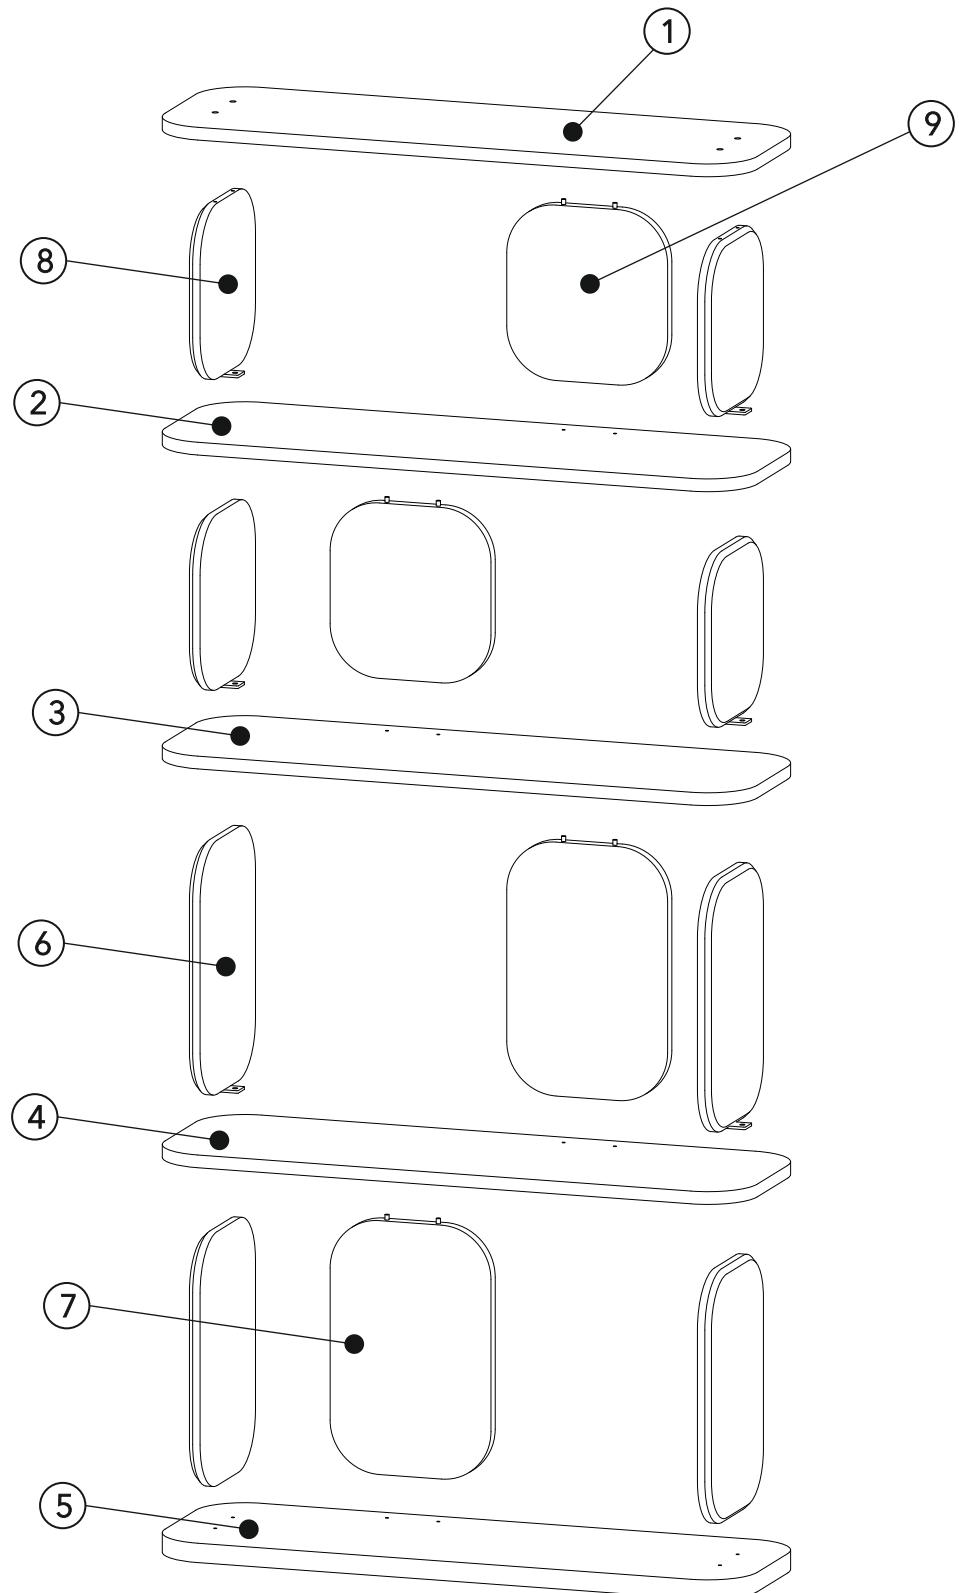
| Ref | Part | Visual | Qty |
|----------|-------------------|--|----------|
| 1 | Top Shelf-1 |  | 1 |
| 2 | Shelf-2 |  | 1 |
| 3 | Shelf-3 |  | 1 |
| 4 | Shelf-4 |  | 1 |
| 5 | Bottom Shelf-5 |  | 1 |
| 6 | Bottom side panel |  | 4 |
| 7 | Bottom back panel |  | 2 |
| 8 | Top side panel |  | 4 |
| 9 | Top back panel |  | 2 |

Hardware supplied.

| Ref | Hardware & dimension (mm) | Qty |
|----------|---------------------------|-----------|
| A | JCB Allen bolt 16x6mm | 12 |
| B | Washer 16x8mm | 12 |
| C | CSK Allen bolt 30x6mm | 22 |
| D | CSK Allen bolt 40x6mm | 6 |
| E | Allen Key 65x24mm | 1 |



| Ref | Visual | Qty |
|----------|---|-----------|
| A |  | 12 |
| B |  | 12 |
| C |  | 22 |
| D |  | 6 |
| E |  | 1 |

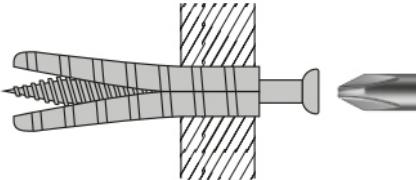
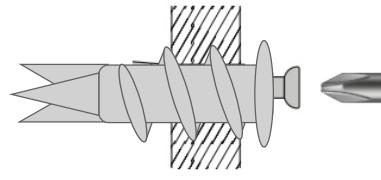
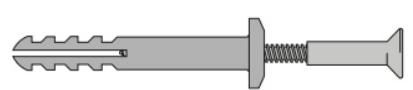
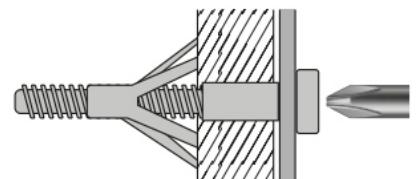
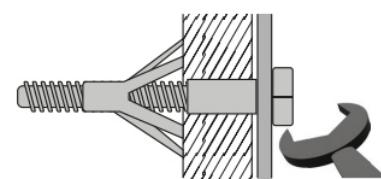
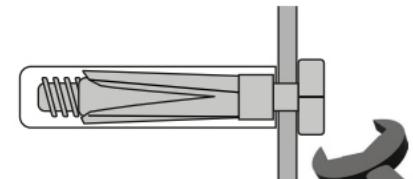
Exploded diagram.

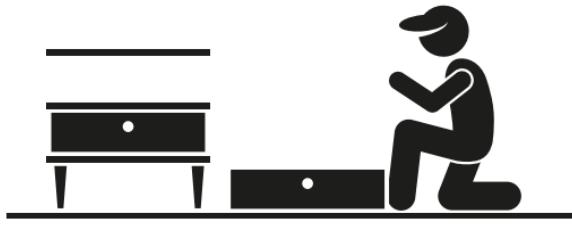
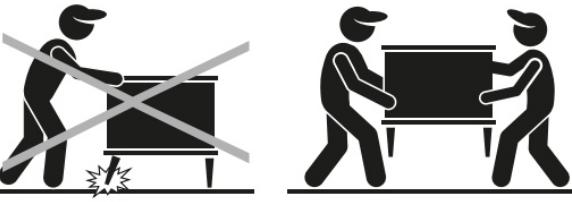
If you are unsure of the below guidance, consult a qualified tradesperson for advice or help.

- Wall fixings are not provided with this product as different wall types require different screws and wall plugs. See table below as a guide only.
- Always use a wall plug, as screws alone will not be secure into walls.
- As a general rule, always use a larger screw and wall plug if you are not sure.
- When drilling into walls always check there are no hidden wires or pipes.
- Make sure that the screws and wall plugs are suitable for supporting the weight of the product.
- Ensure you use the recommended drill bit to match the required hole size for the wall plug. Wall plugs must fit tightly into the drilled hole.
- Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
- Take extra care when drilling high walls.
- Ensure the plug is fitted below the ceramic tile to avoid splitting or cracking

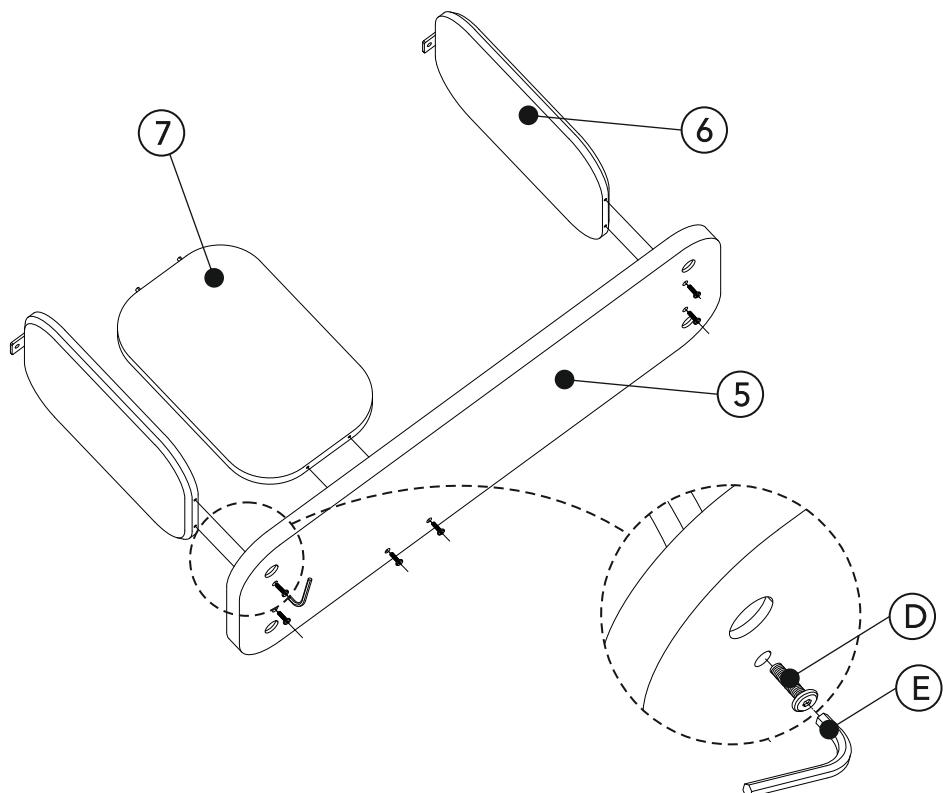
Care and Maintenance.

- Regularly check the fixings to ensure the wall plug or screws have not become loose. Tighten or stop using the product if they have.

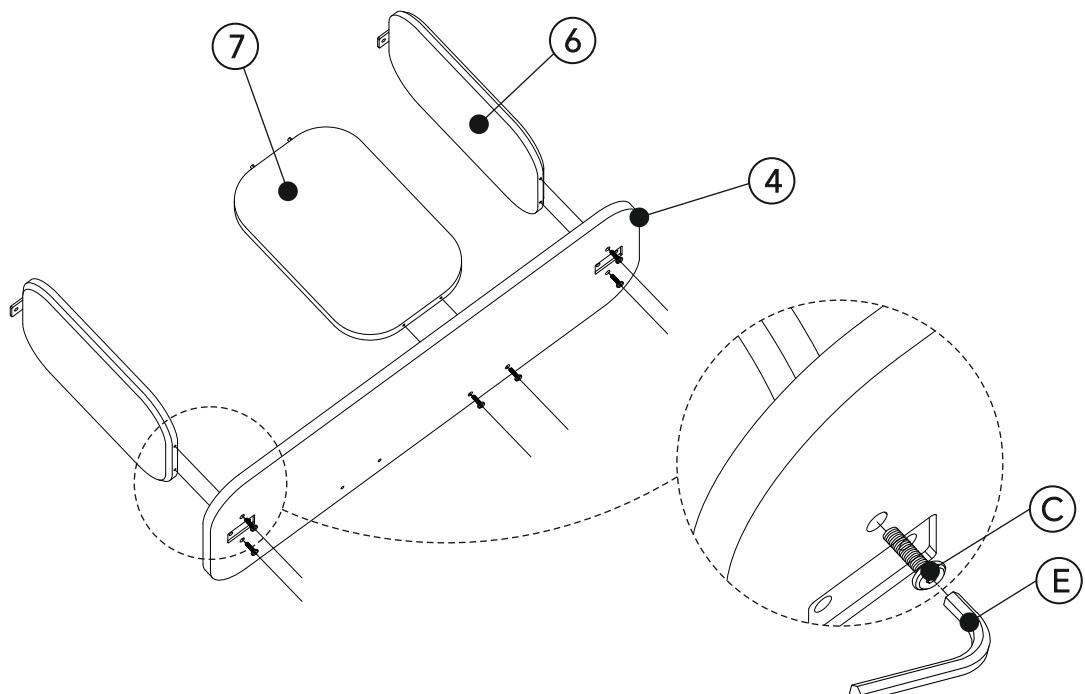
| Wall plug types | | |
|--|---|---|
| You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone, wood or plastic board. | | |
| General Purpose | Plasterboard | Hammer |
|  |  |  |
| For light loads only. Options available for most wall types. | | |
| Cavity – Light load | Cavity – Heavy load | Shield Anchor |
|  |  |  |
| Light load cavity wall plug for use into plasterboard or hollow wooden doors. | Heavy load cavity wall plug for use into plasterboard or hollow wooden doors. | For heavier loads into masonry, brickwork or concrete. |

| | |
|---|---|
|  | <p>ALWAYS lay each panel down on a clean and level area, ideally in the room of intended use, ensuring there is enough room to maneuver around the item.</p> |
|  | <p>NEVER pull furniture into place as this causes damage to the internal structure and feet fixings. Always lift to move.</p> |
|  | <p>NEVER flip your upholstery allowing corners to hit the floor as structural damage can be caused. Always turn gently.</p> |

1



2

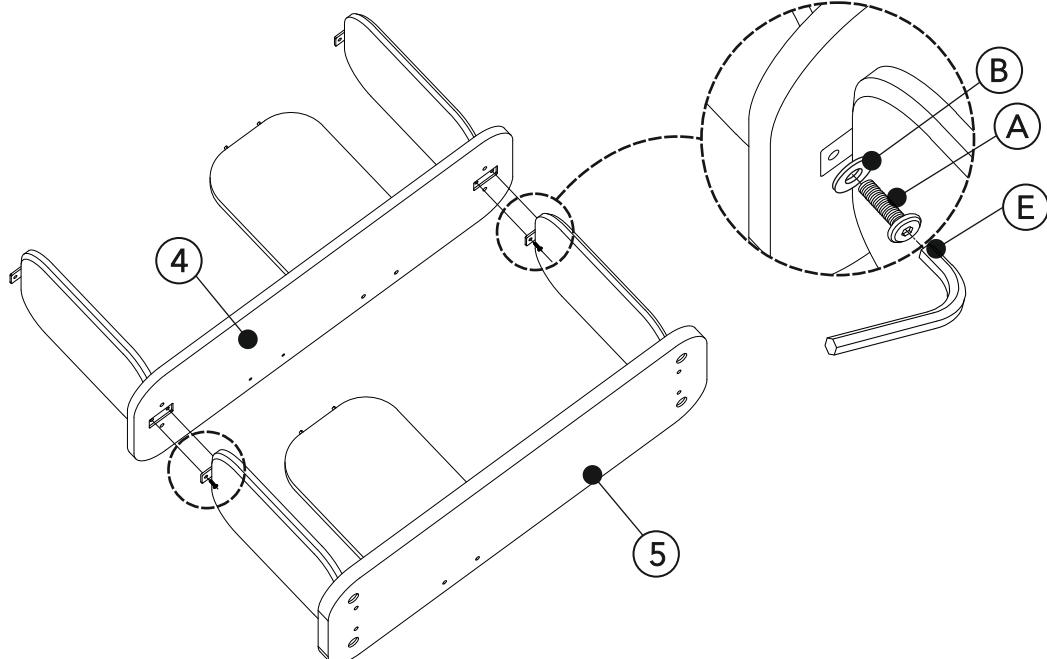


Cx6

Ex1

Assembly instructions.

3



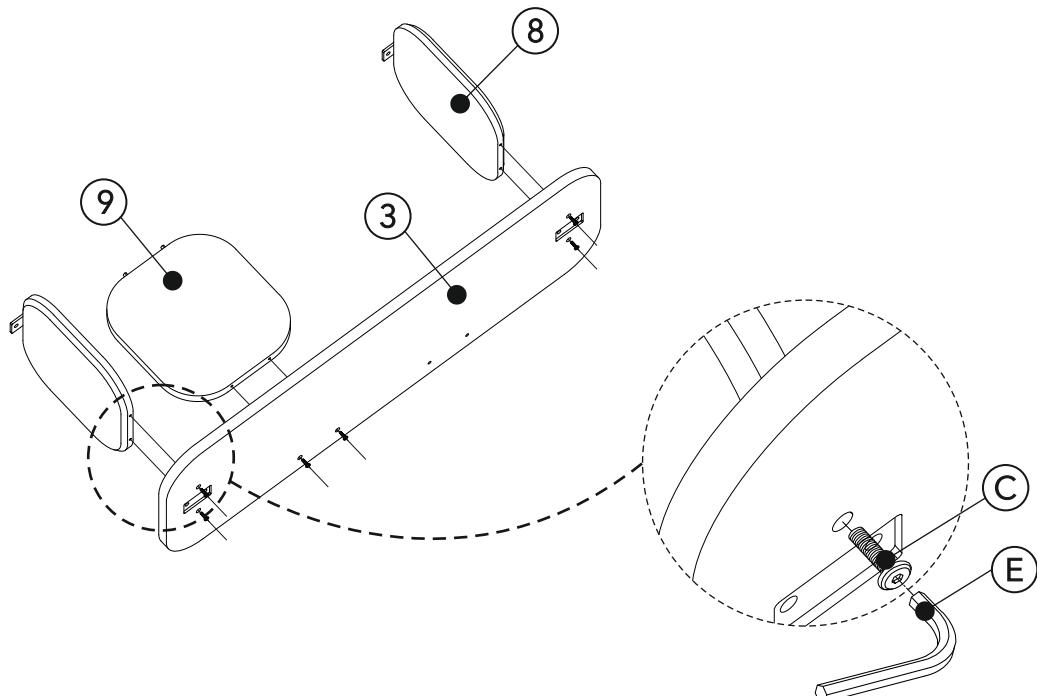
Dx6



Ex1



4



Cx6

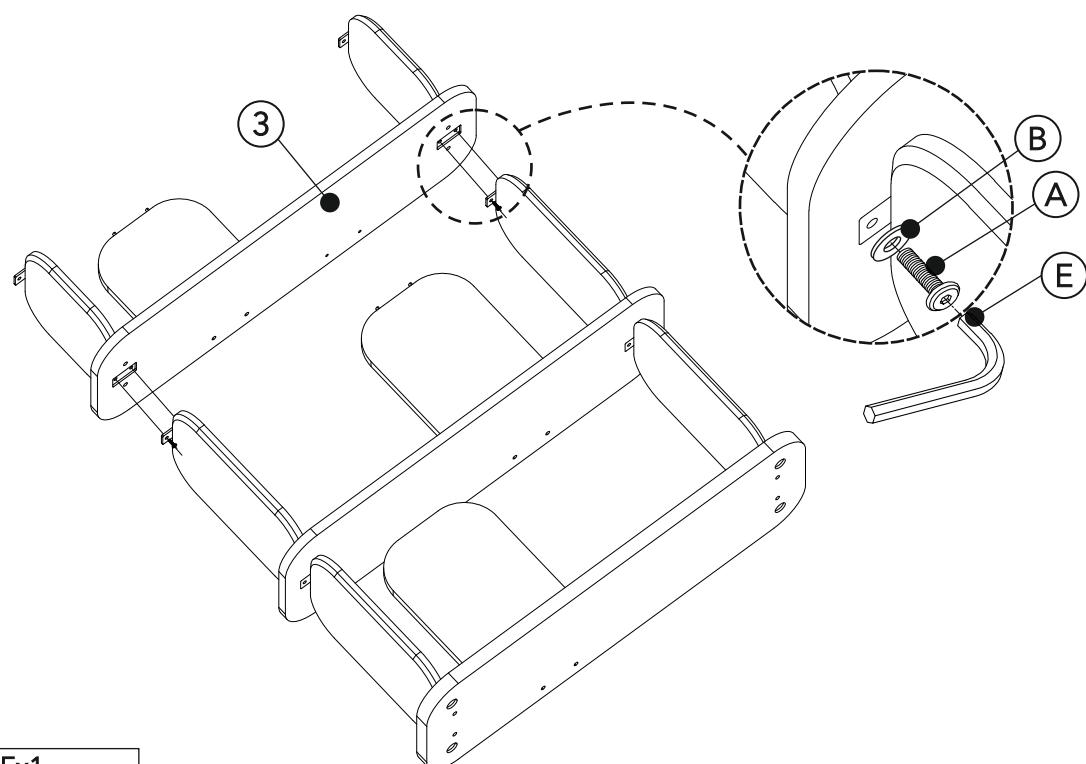


Ex1



Assembly instructions.

5



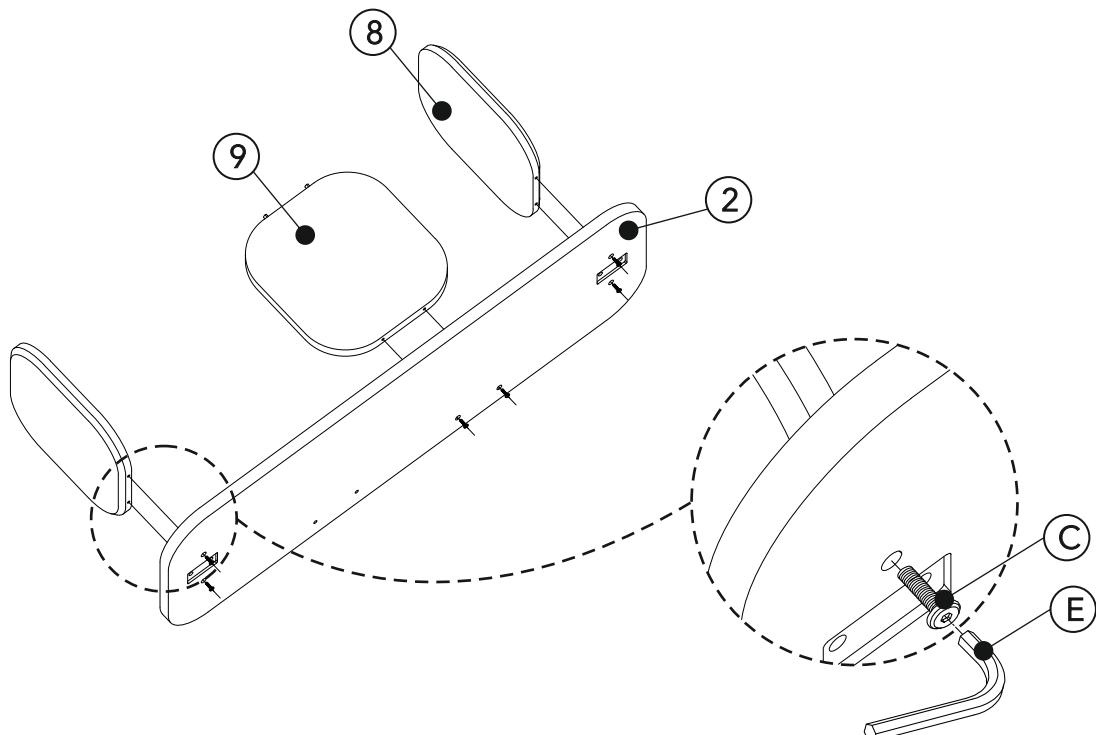
Ax4



Ex1



6

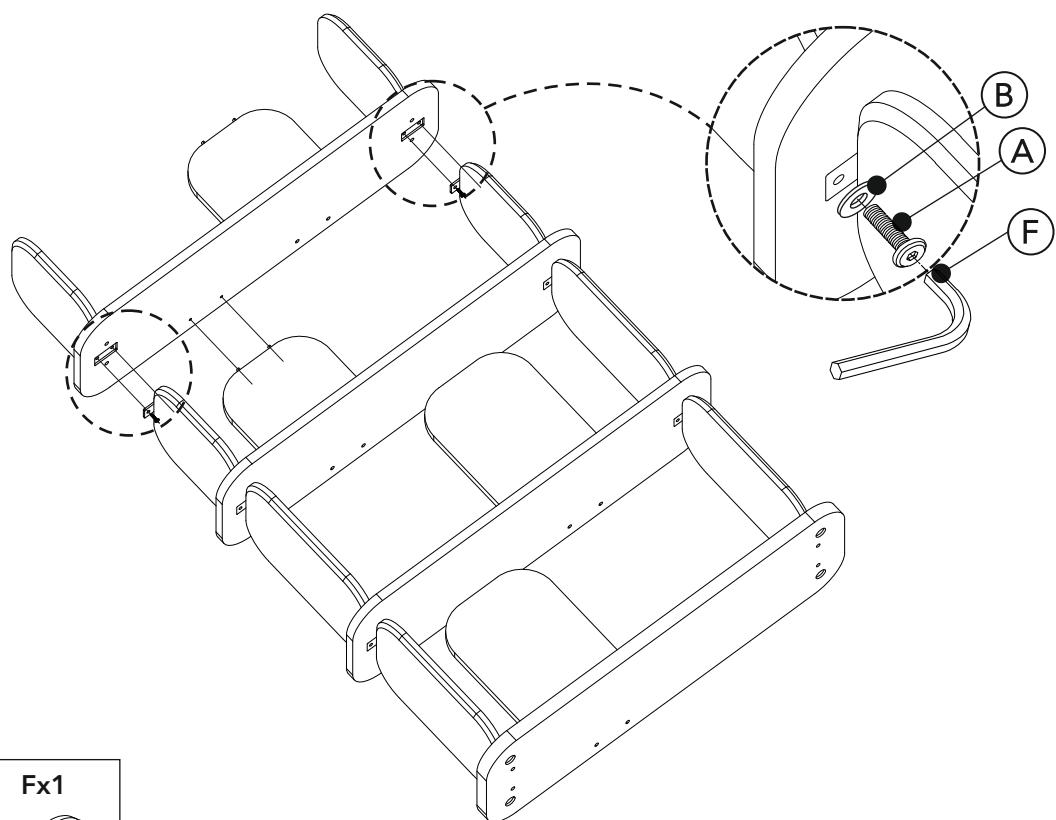


Cx6



Ex1

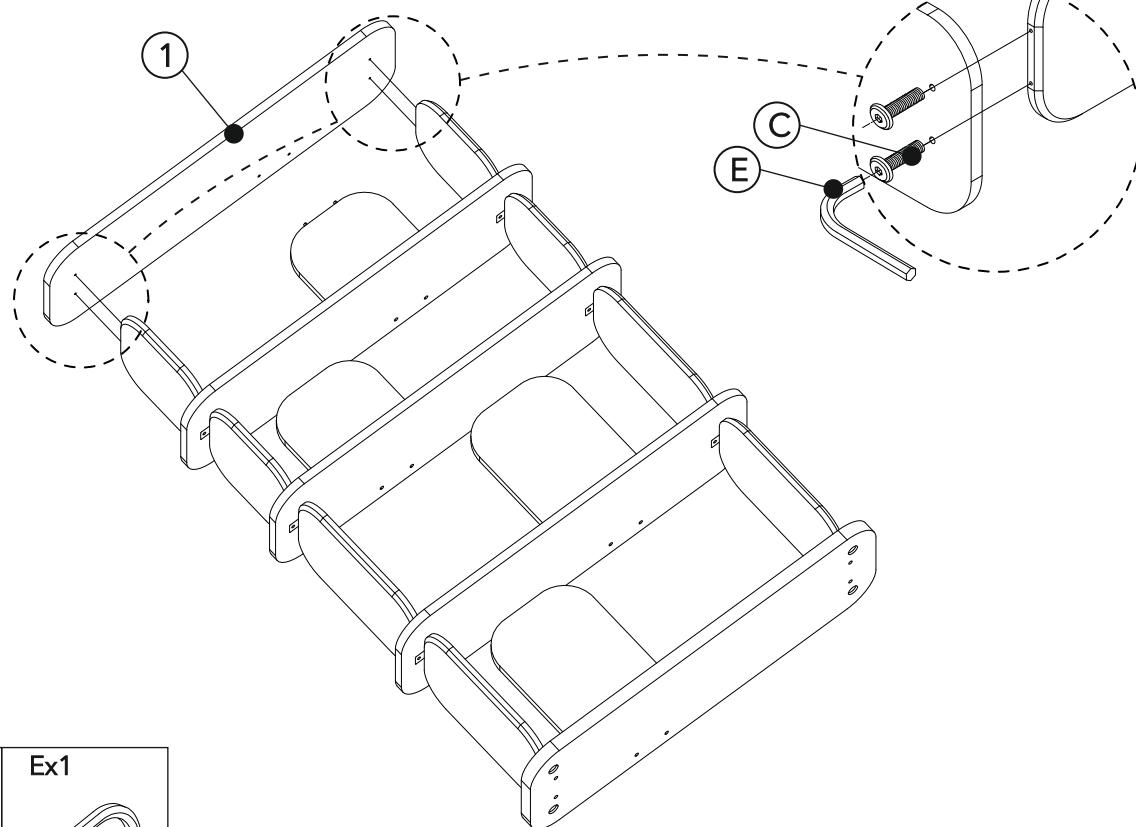


Assembly instructions.**7**

Ax4



Fx1

**8**

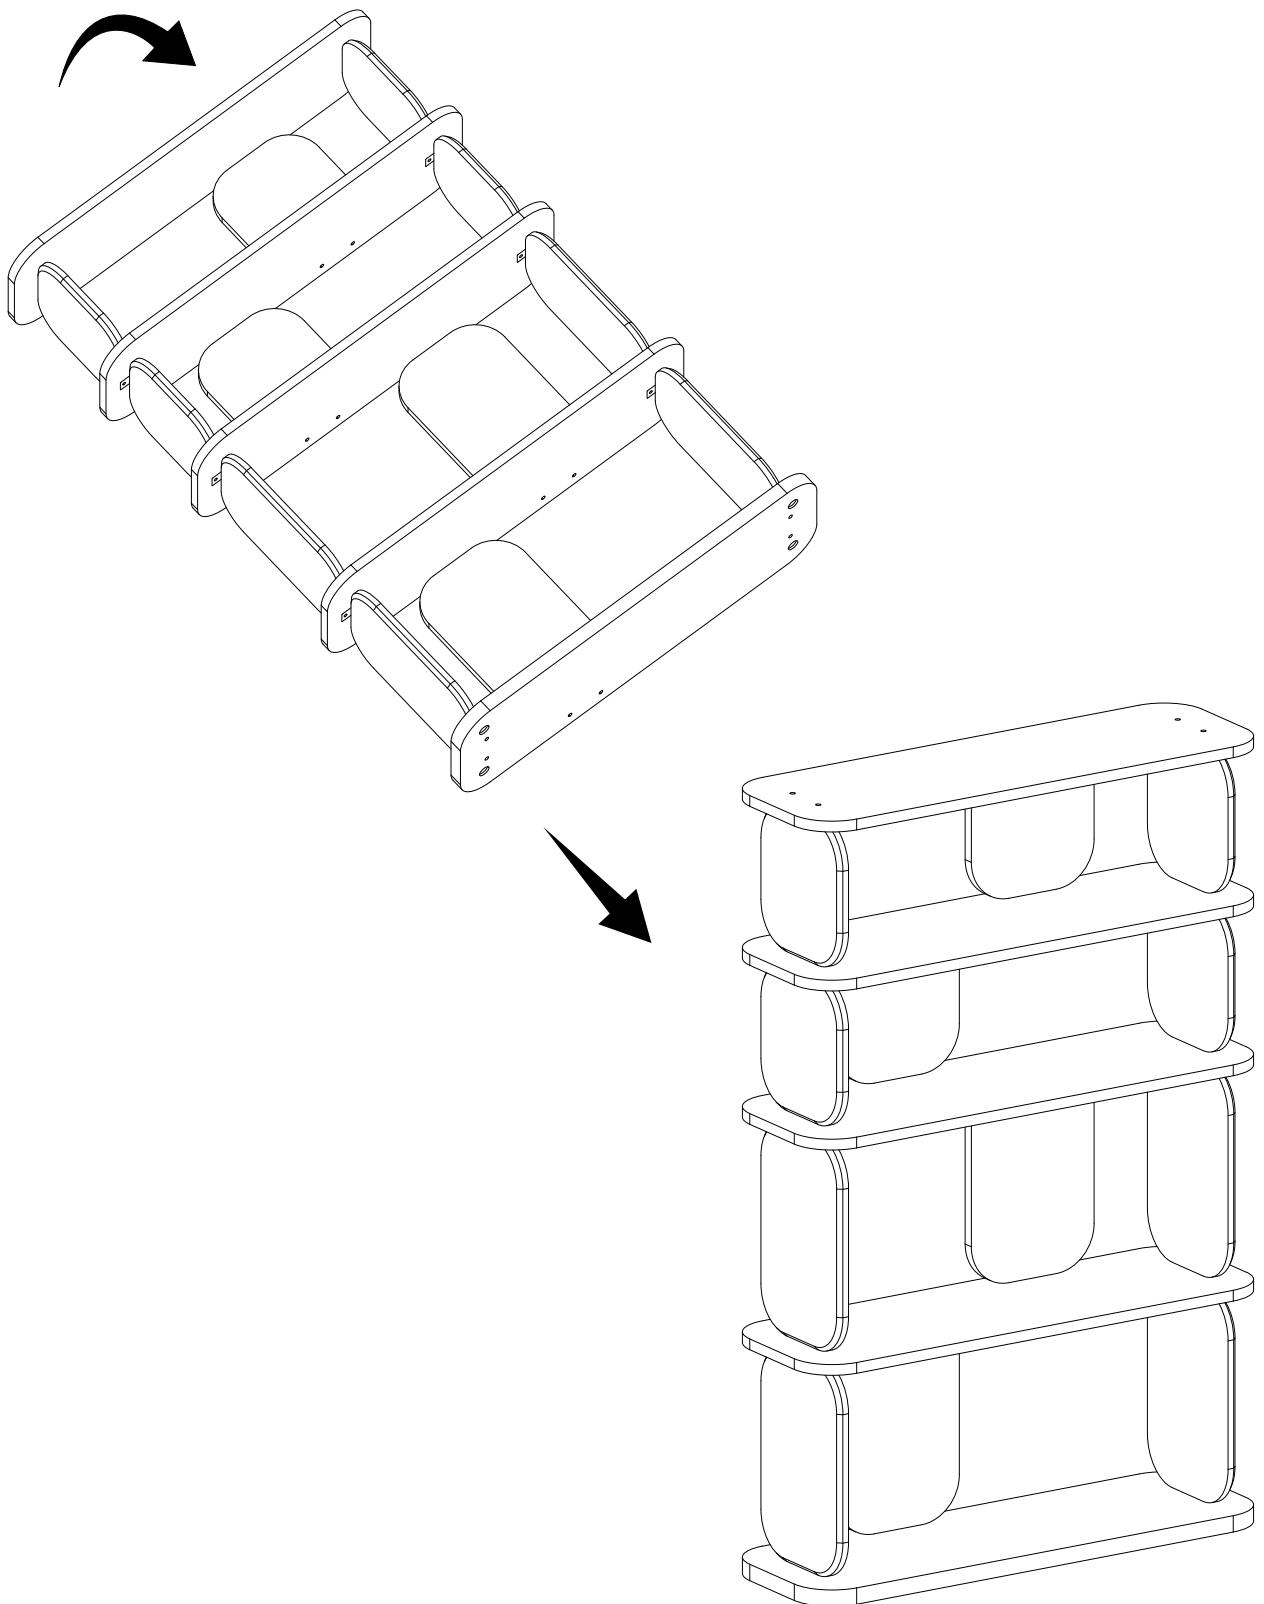
Cx4



Ex1

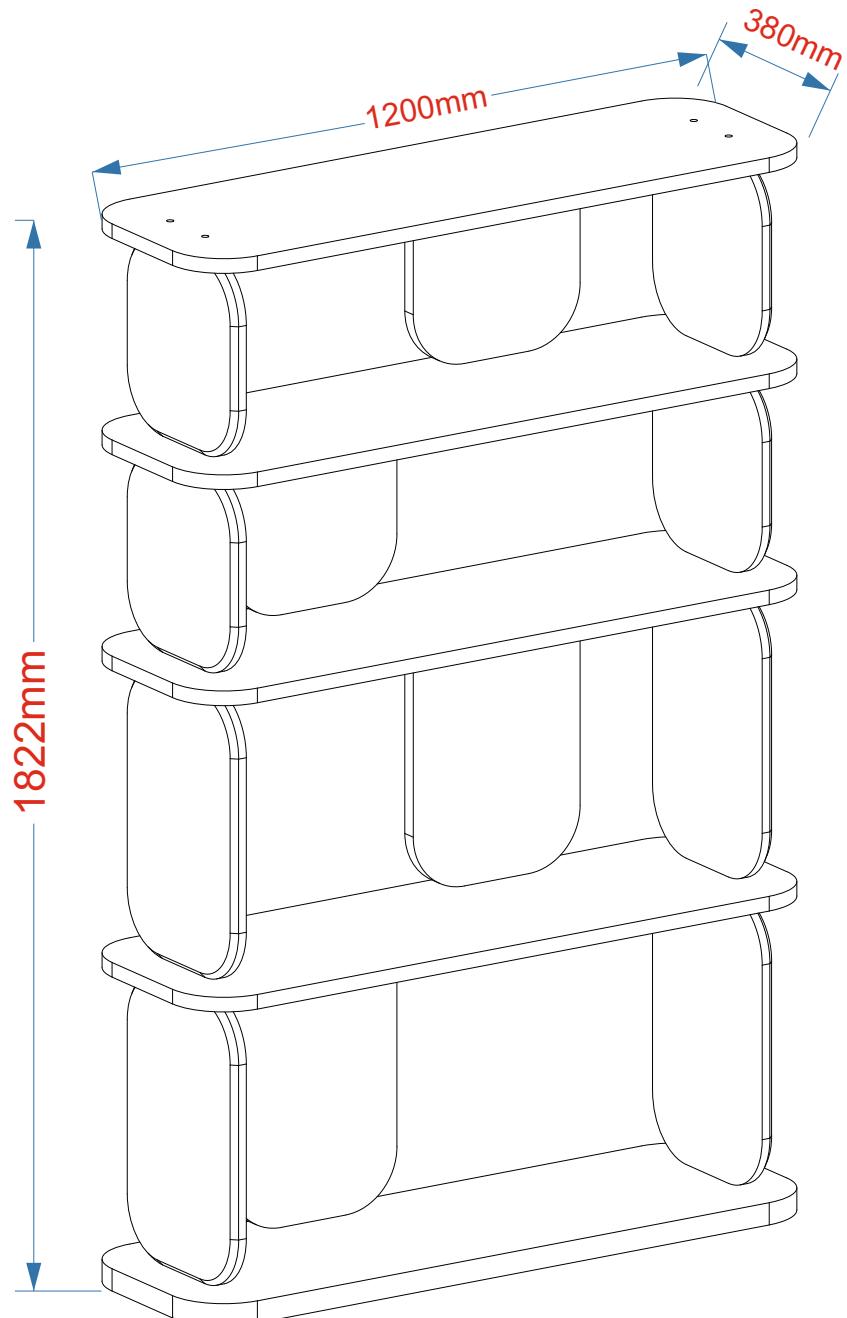


9



Final product.

Dunelm



Customer service.



If you have any issues with this product, you can call our Customer Service team on:
0345 165 6565 Monday to Friday **9am to 5:00pm**.

Alternatively, you can contact our team by Live Chat on: **Dunelm.com**
Monday to Friday 8am –8:30pm
Saturdays 8am –5:30pm
Sundays and bank holidays 9am –4:30pm.



Dunelm (Soft Furnishings) Ltd. LE7
1AD & Dunelm (Soft Furnishings)
Holdings Ltd. Dublin D12 WR25 .

Manufactured in INDIAN