





ASSEMBLY INSTRUCTION

MARSH CABINET


Please read before you continue further.

PLEASE KEEP THE ORIGINAL PACKAGING UNTIL THE ITEM IS FULLY ASSEMBLED AND IN PLACE. IN TIME UNLIKELY EVENT THAT YOU NEED TO RETURN YOUR PRODUCT. IT MUST BE RETURNED IN ITS ORIGINAL PACKAGING TO AVOID FURTHER DAMAGE. FAILURE TO FOLLOW THESE PROCEDURES, NO RETURNS WILL BE ACCEPTED.

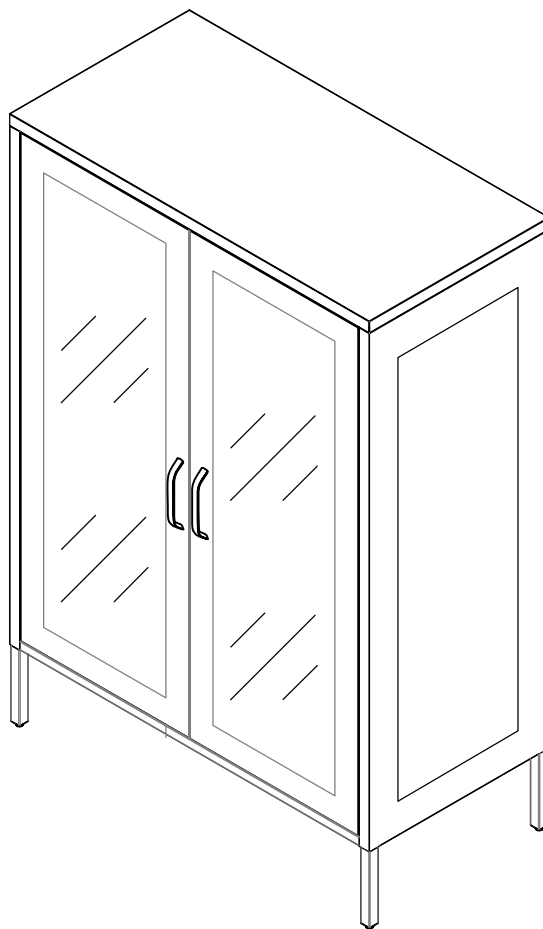

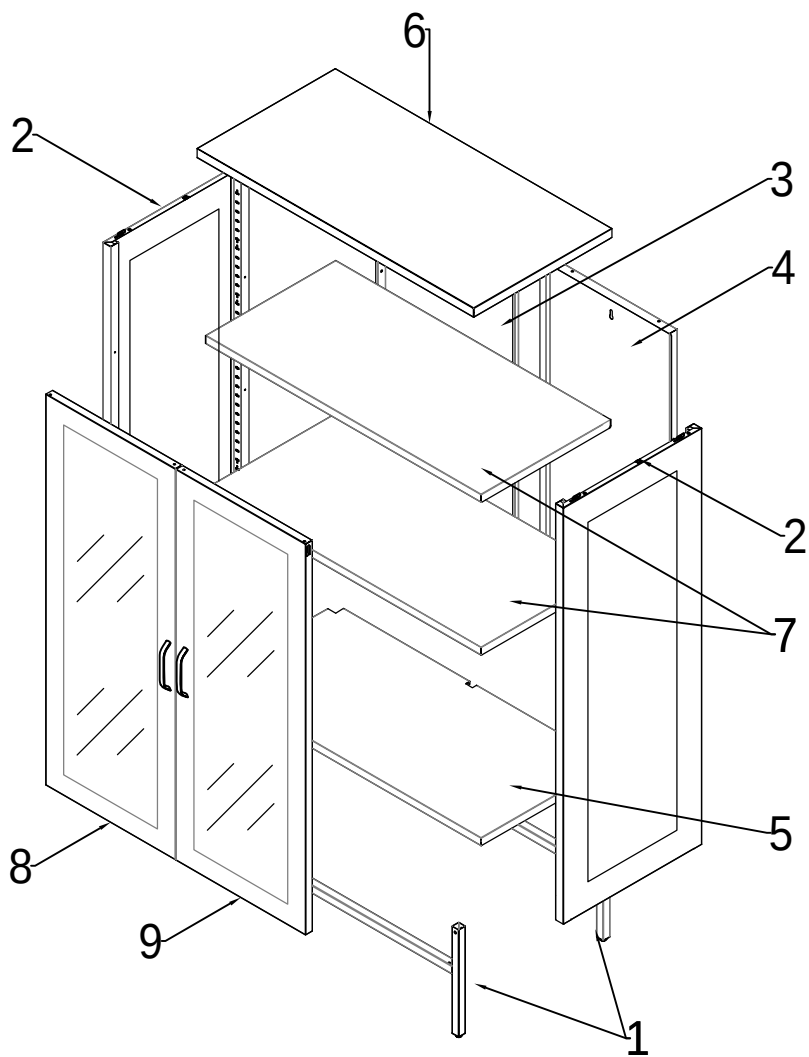


ITEM	PACKING LIST
1	LEG-2PCS
2	SIDE PANEL-2PCS
3	LEFT BACK PANEL-1PCS
4	RIGHT BACK PANEL-1PCS
5	BOTTOM PANEL-1PCS
6	TOP PANEL-1PCS
7	SHELF-2 PCS
8	LEFT DOOR-1PCS
9	RIGHT DOOR-1PCS

 a M5×10  Screw For Cabinet	b  Screw cap	c  Bracket	d M4×22  Screw For Handle	e  Plastic Washer
×10+2 (Extra)	×2	×8	×4	×6
f  Handle	g  Post	h  Magnet	i  Anchor	j M4×10 
×2	×2	×4	×2	×4


1

Make sure the
holes are nearest
to front

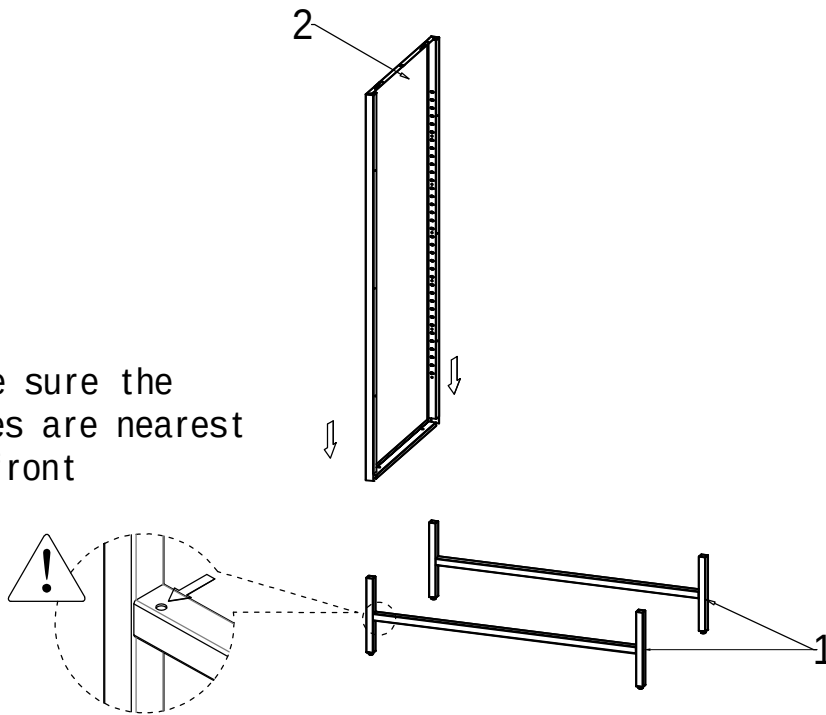


1. Slide left panel onto the legs

2

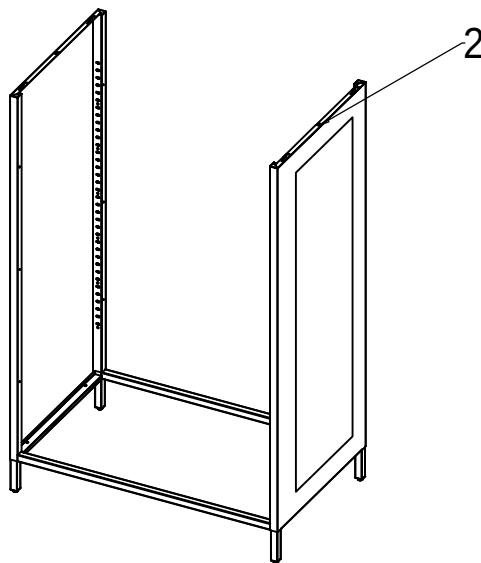

2. Add right panel, repeating the same process as left panel


3

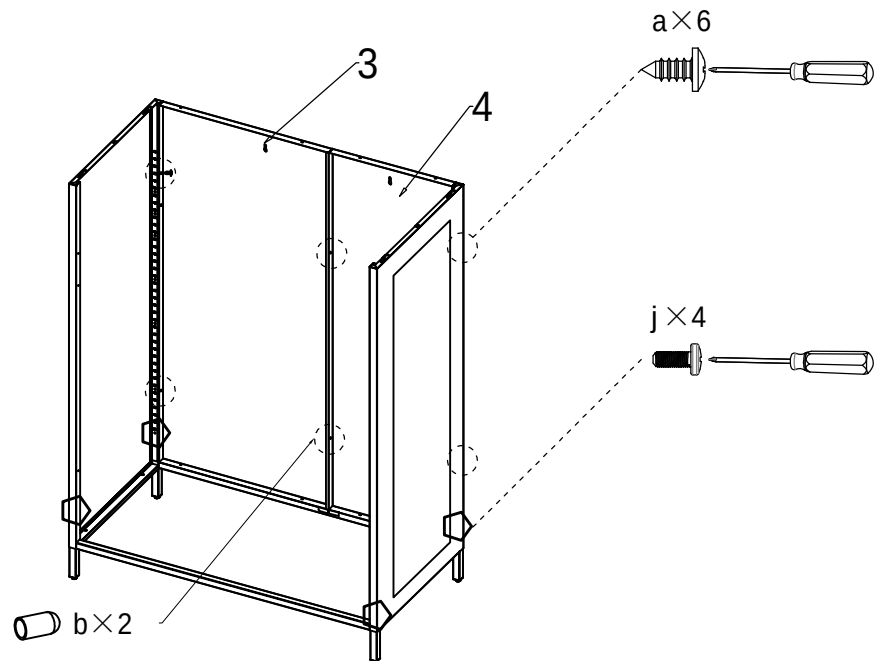

3. Push the back panel into place and fix it with screw a and screw j


4

Make sure the arrow towards the front

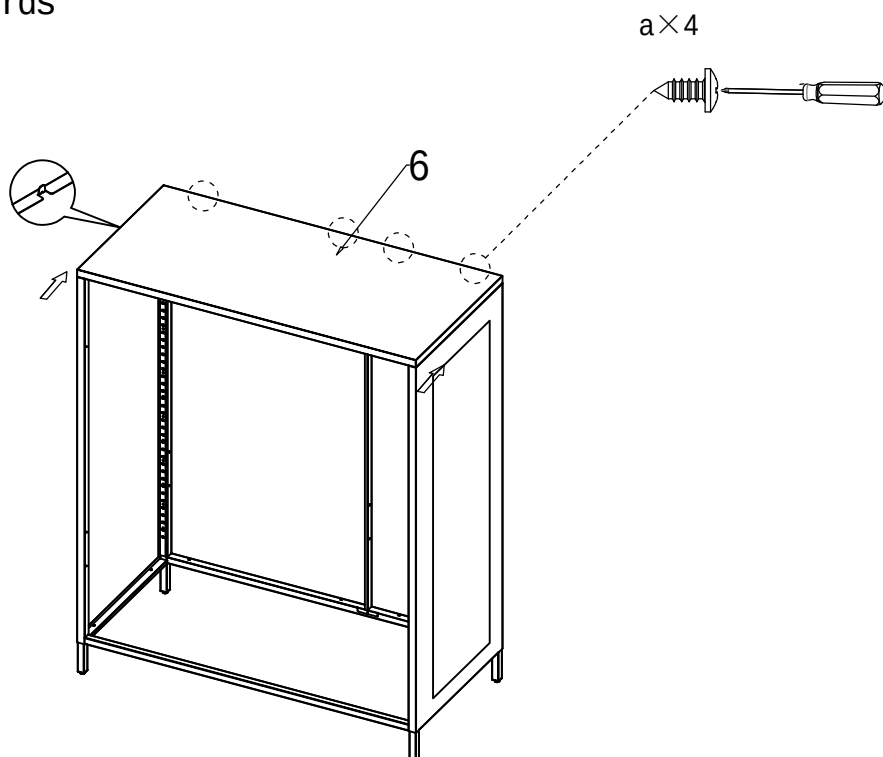


4. Push the top panel from front to back, fold the tabs for fixing

5

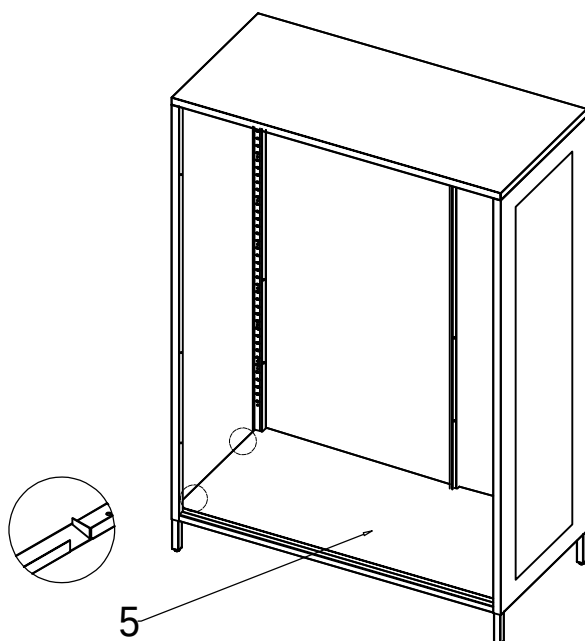


5.Push down into the bottom panel fold the tabs for fixing

6

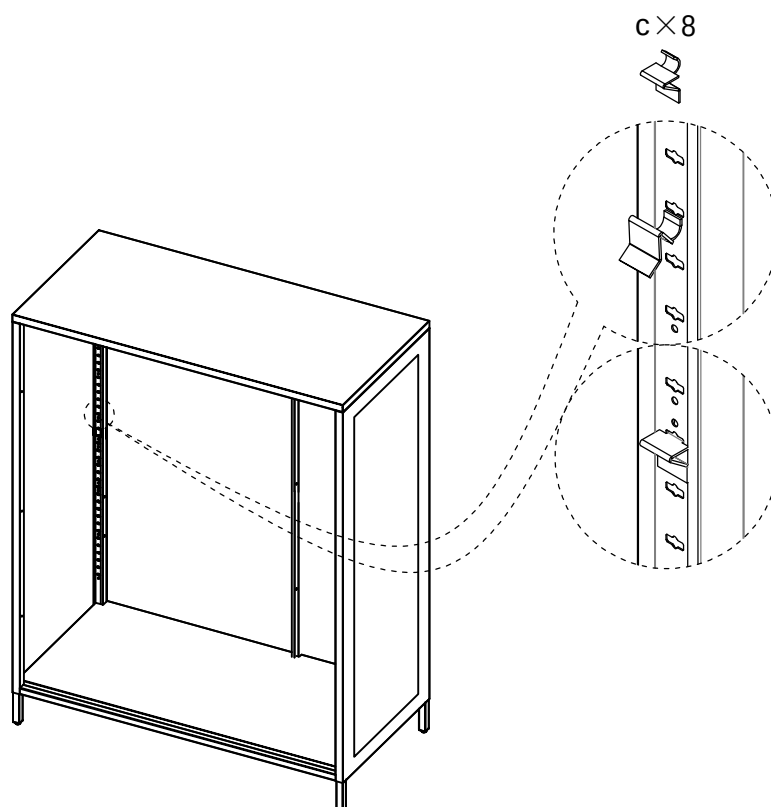


6.Slot in the brackets, use the round holes to help you measure the height

7

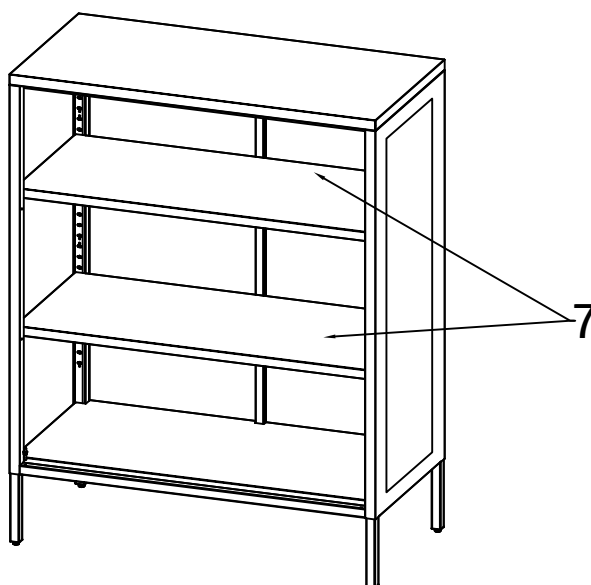


7. Place the shelf on top of the brackets

8

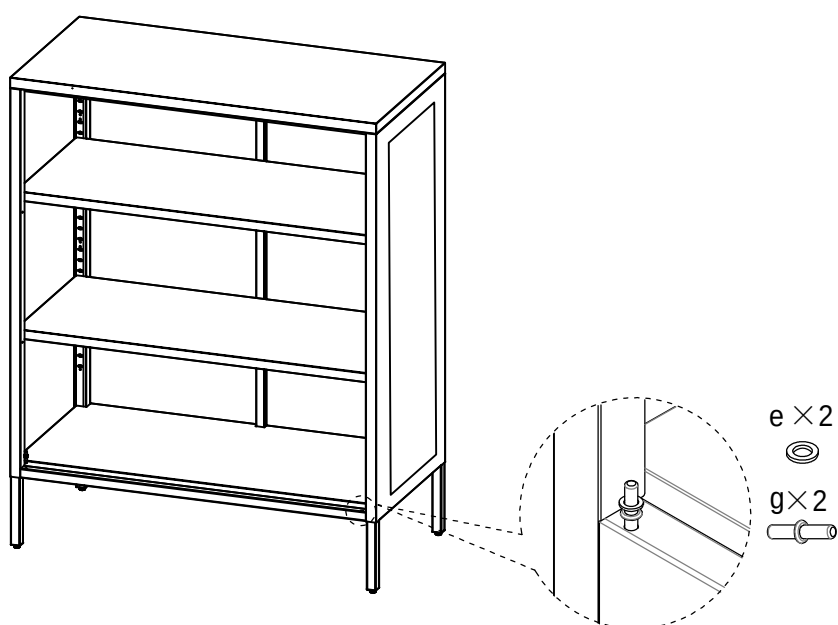


8. Begin attaching the door by inserting the post and plastic washer in the hole at the base of the door frame

9

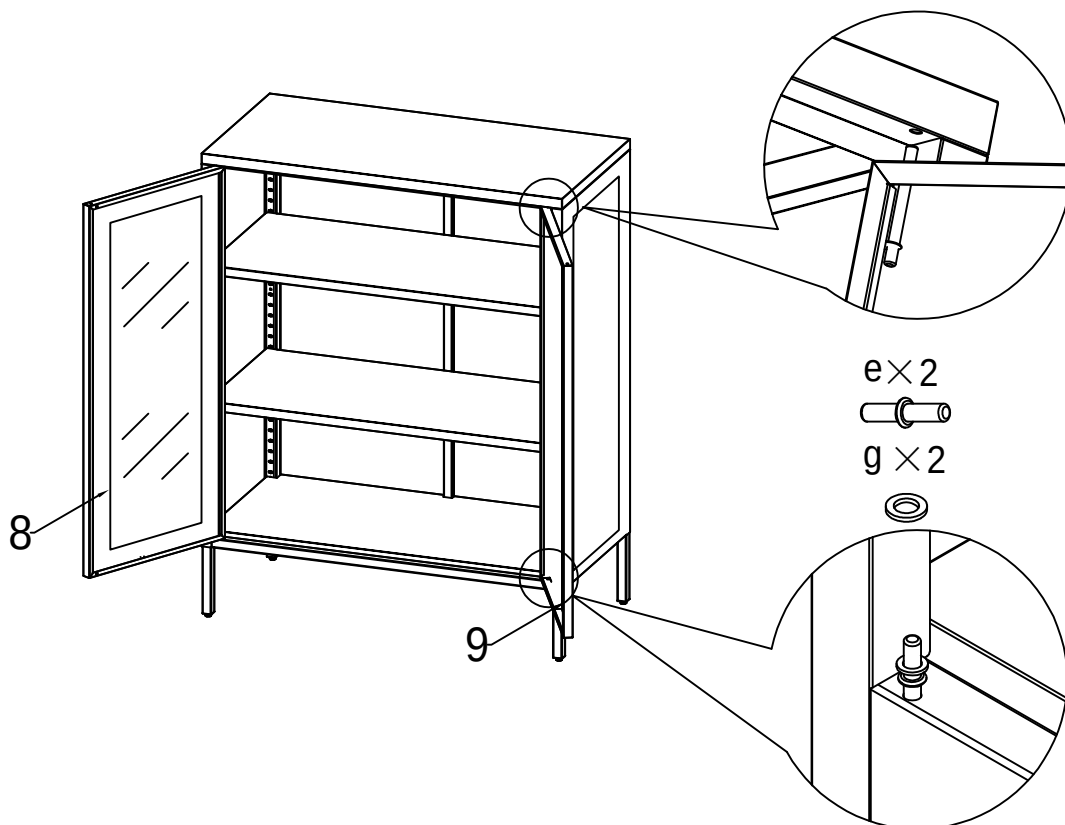


9. Insert the post into position at the top of the door frame

10

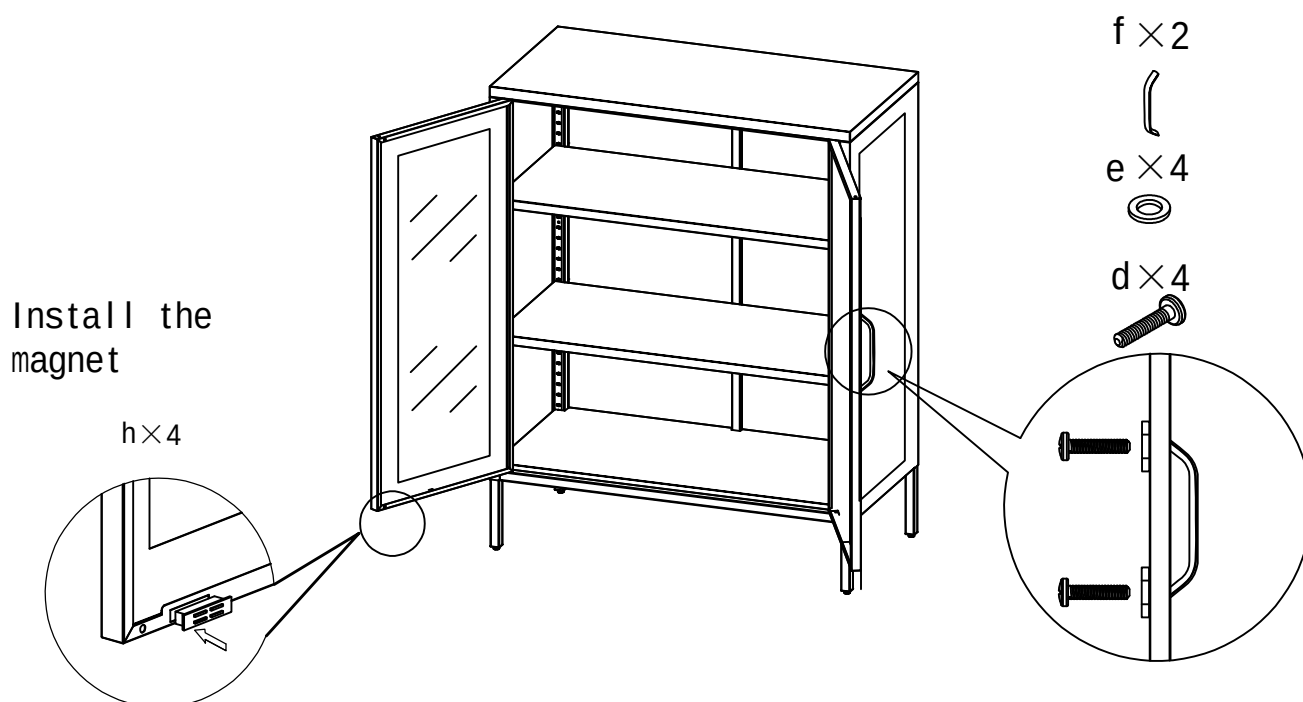


10. Fix the handle f with screw d

11

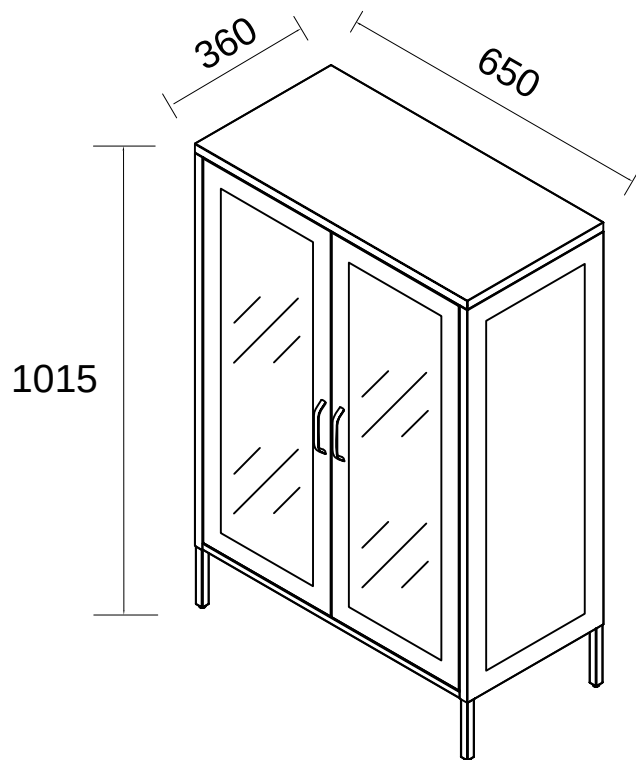

11. Congratulations! You did it


12

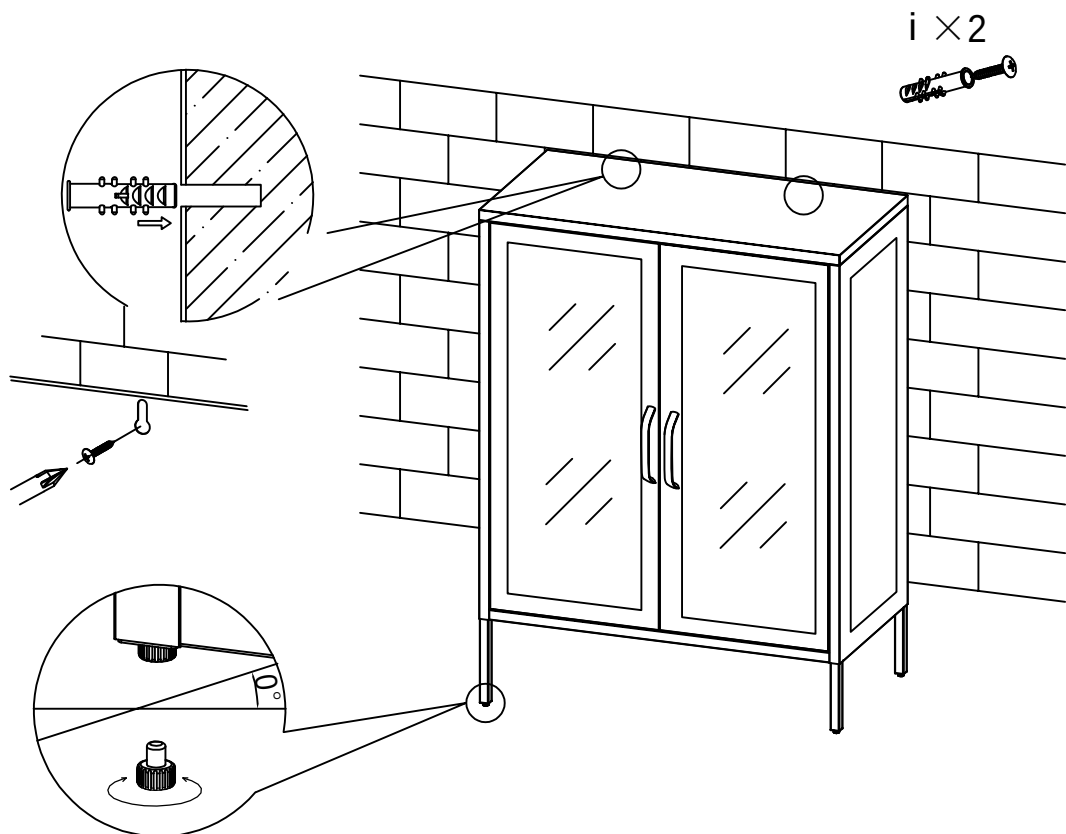

12. Fixed to prevent toppling

MAINTENANCE AND CARE GUIDE

MARSH CABINET

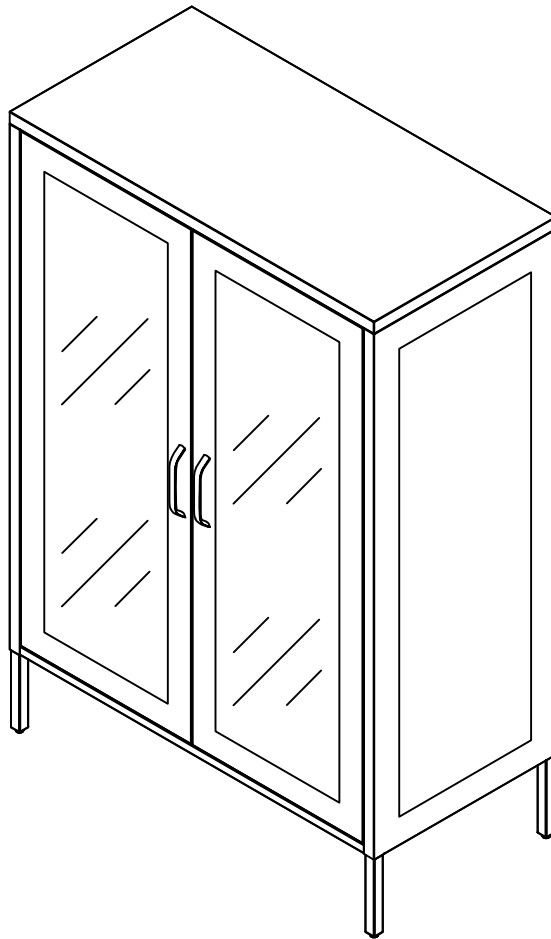

Maintenance:

- ☐ To clean and care for your furniture.
- ☐ Use a soft, clean cloth that will not scratch the surface when dusting.
- ☐ Use of furniture polishes is not necessary. Should you choose to use polishes, test first in an inconspicuous area.
- ☐ Using solvents of any kind on your furniture may damage the finish.
- ☐ Never use water to clean your furniture as it may cause damage to the finish.
- ☐ Always use coasters under beverage glasses and flowerpots.
- ☐ Liquid spills should be removed immediately. Using a soft clean cloth, blot the spill gently. Avoid rubbing.
- ☐ Always use protective pads under hot dishes and plates. Heat can cause chemical changes that may create spotting within the furniture finish.
- ☐ Stains or marks from crayons or ink markers will be difficult to remove.
- ☐ In the event that your furniture is stained or otherwise damaged during use, we recommend that you call a professional to repair your furniture.
- ☐ Check bolts/screws periodically and tighten them if necessary.

Care and cleaning:

- ☐ It is best to keep your furniture in a climate-controlled environment. Extreme temperature and humidity changes can cause fading, warping, shrinking and splitting of wood. It is advised to keep furniture away from direct sunlight as sun may damage the finish.
- ☐ Proper care and cleaning at home will extend the life of your purchase. Following these important and helpful tips will enhance your furniture as it ages.