

The Storyteller Chair

**IMPORTANT! RETAIN FOR FUTURE
REFERENCE. READ CAREFULLY**

bebe
& Beyond

bebeandbeyond.co.uk



To ensure that your rocking chair and stool is used in accordance with these instructions, please read them fully. Your child's safety may be affected if you do not follow these instructions. Assembly should be carried out by a competent adult only.

WARNING:

Care should be taken as the underside mechanism of this glider could present a hazard to other people when in use.

WARNING:

The footstool is intended to be used for supporting the feet and legs only, not for sitting on.


WARNING:

Do not sit on the edge of the seat, armrests or on the backrest as this could cause the chair to tip over.

WARNING:

Do not leave children unattended on or beside the chair or footstool.

- Be aware of the risk of open fire and other sources of heat, such as electric bar fires, gas fires, etc. in the near vicinity of the glider chair and stool.
- Do not use the glider chair and stool if any part is broken or missing. Use only spare parts approved by the manufacturer.
- All assembly fittings should be tightened properly and care should be taken to ensure that no screws are loose, as a child could trap parts of the body, or clothing (e.g. ribbons, drawstrings, necklaces) this could lead to strangulation.
- Wood is a natural material, the colour will darken with age.
- During assembly children should be kept away from the product due to possible risk of injury.

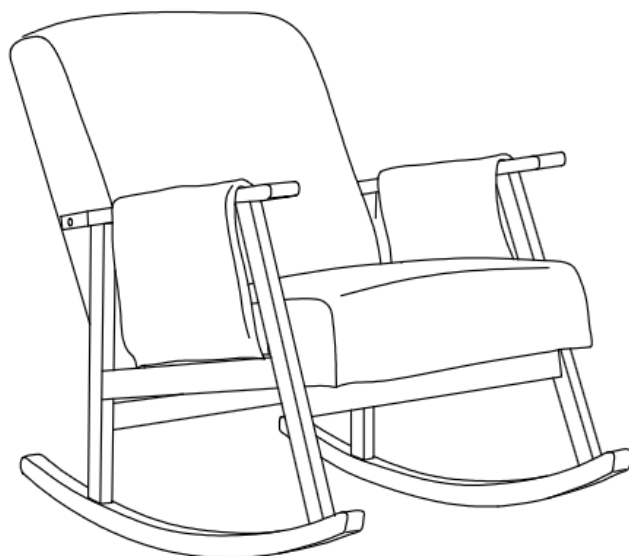

WARNING CAUTION

- 1.This product contains bolts and other small parts that may present a chocking hazard for children 3 years or under.This unit must be assembled by an adult.
- 2.periodically check the safety of your product by making certain all bolts and nuts are tightened securely.


CHAIR COMPONENT PARTS

A	1PCS	B	1PCS	C	2PCS	D	2PCS	E	2PCS
Back Cushion		Seat Cushion		Chair Feet		Pole		Arm Cushion	
									


PARTES LIST

SCREWS AND WASHERS (M6*60mm)		F	6PCS	SCREWS AND WASHERS (M6*35mm)		G	8PCS
NUT (M6mm)		H	4PCS	LITTLE BATTEN		I	4PCS
M6 FLAT RING		J	8PCS	ALLEN		K	1PCS



STEP 1

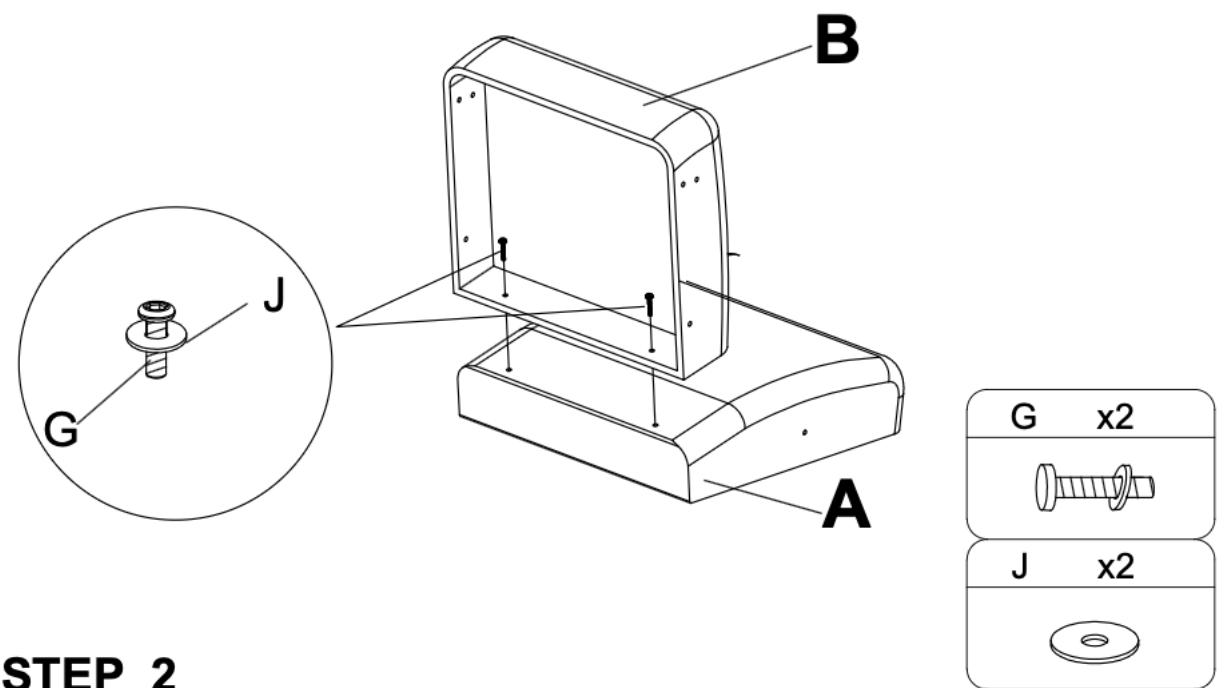


STEP 2

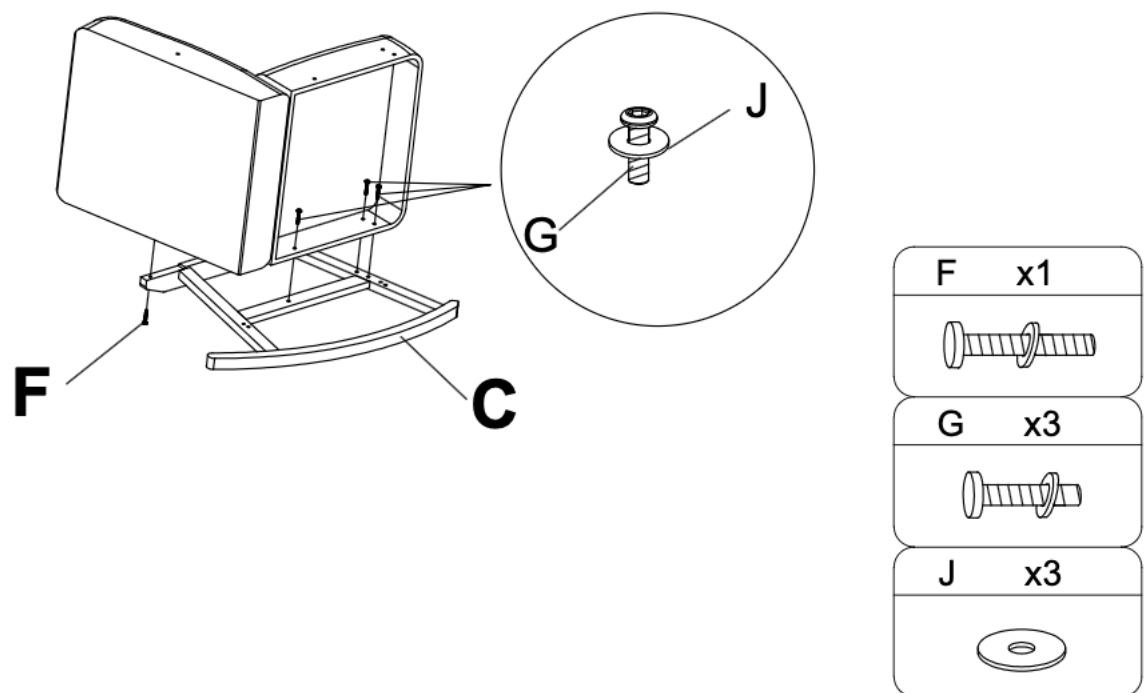


STEP 3

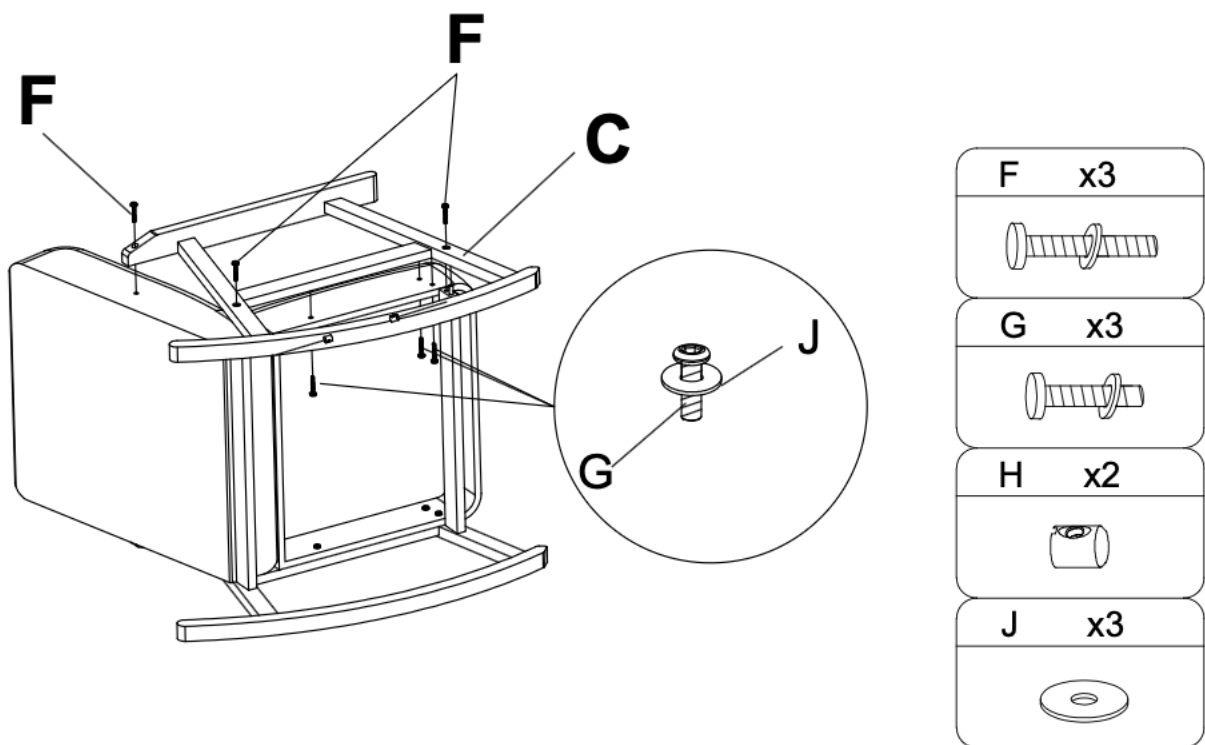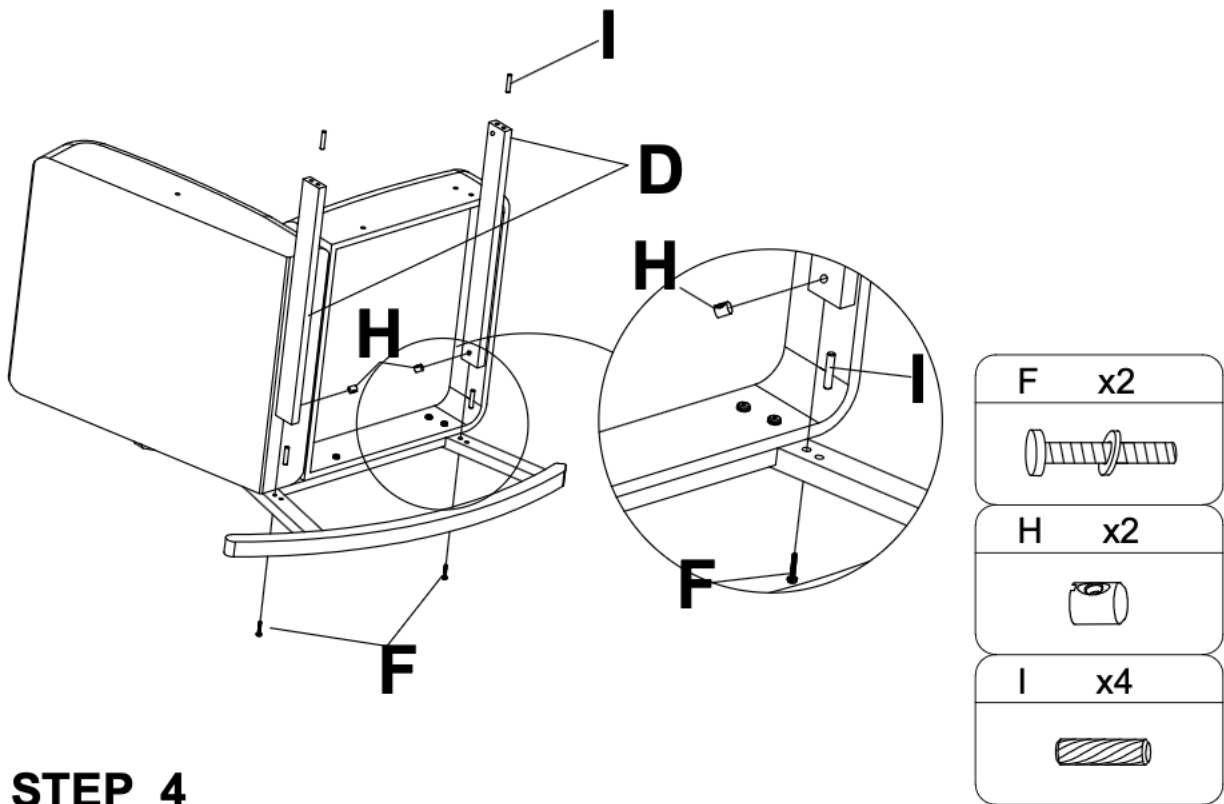

STEP 5

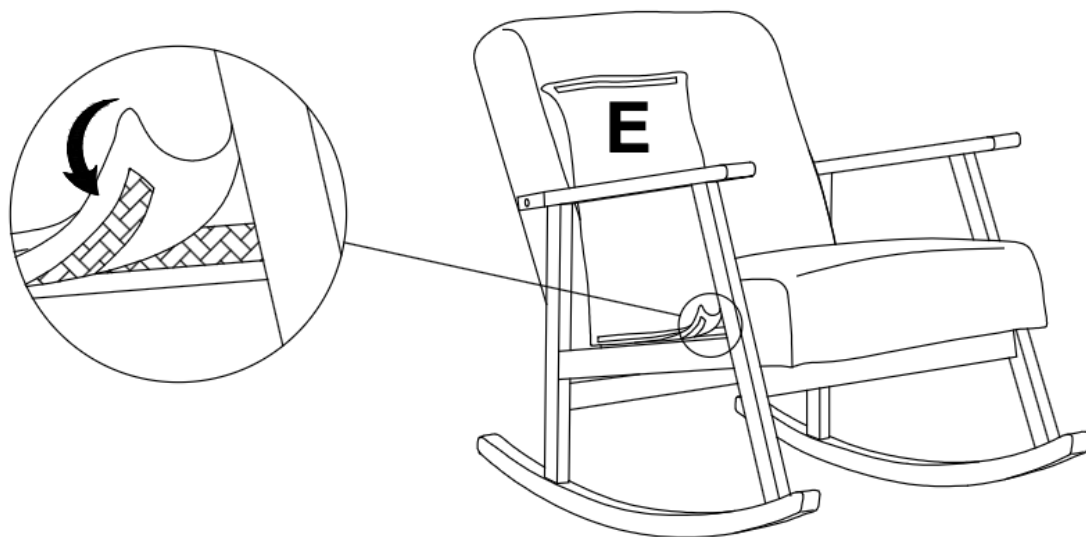

STEP 6

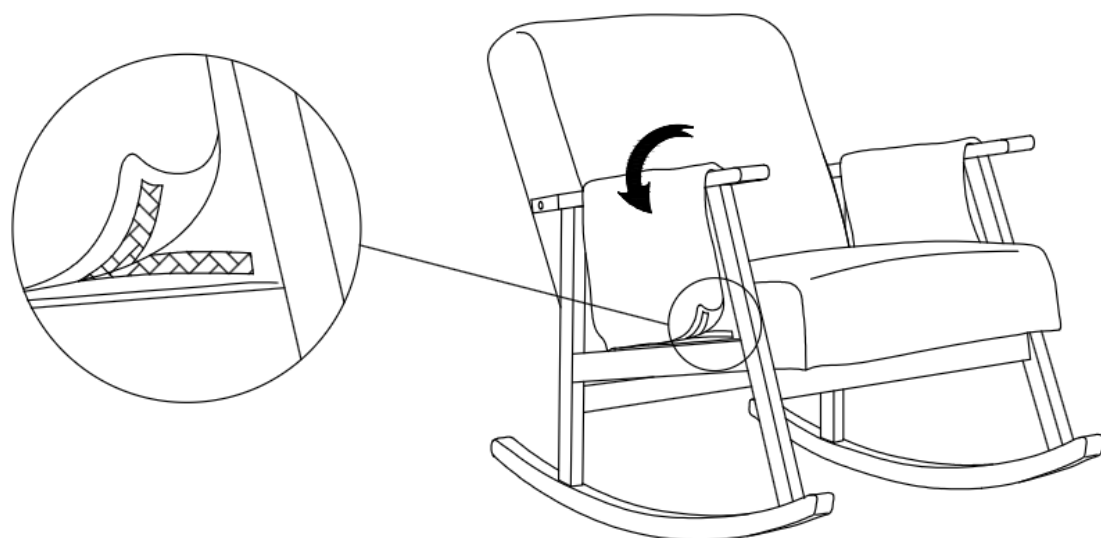

ROUTINE CARE & MAINTENANCE

Regularly check that all fittings and components are fully tightened and in working order.

- Wipe away spills immediately to prevent staining.
- Use a cloth dampened with water and/ or mild soap or a professional product to clean the fabric – always test an inconspicuous area first.
- Allow upholstery to dry and brush lightly.
- Cushions are to be dry cleaned only – do not machine wash the cushions.
- For cleaning the chair/stool frame, use only a mild detergent and warm water.
- DO NOT USE BLEACH.
- DO NOT USE any abrasive substances.
- From time to time, check your glider chair and stool for loose screws, and worn parts. Replace or adjust the parts as needed.

Due to constant updating and improvements, some components may occasionally differ slightly from the images shown in these instructions. We reserve the rights to change the specifications of any products without prior notice. If you need any assistance please contact your Bebe & Beyond retailer from whom you purchased your product, who will take appropriate action.

CONTACT US

Email: customerservice@bebeandbeyond.co.uk

bebe & Beyond

LPD Home, Midland House, Midland Road, Hunslet, Leeds, LS10 2RJ

Authorised Rep Compliance Ltd, Ground Floor, 71 Lower Baggot
Street, Dublin, D02 P593, Ireland.

www.bebeandbeyond.co.uk

The Storyteller Stool

**IMPORTANT! RETAIN FOR FUTURE
REFERENCE. READ CAREFULLY**

bebe
& Beyond

bebeandbeyond.co.uk



To ensure that your rocking chair and stool is used in accordance with these instructions, please read them fully. Your child's safety may be affected if you do not follow these instructions. Assembly should be carried out by a competent adult only.

WARNING:

Care should be taken as the underside mechanism of this glider could present a hazard to other people when in use.

WARNING:

The footstool is intended to be used for supporting the feet and legs only, not for sitting on.


WARNING:

Do not sit on the edge of the seat, armrests or on the backrest as this could cause the chair to tip over.

WARNING:

Do not leave children unattended on or beside the chair or footstool.

- Be aware of the risk of open fire and other sources of heat, such as electric bar fires, gas fires, etc. in the near vicinity of the glider chair and stool.
- Do not use the glider chair and stool if any part is broken or missing. Use only spare parts approved by the manufacturer.
- All assembly fittings should be tightened properly and care should be taken to ensure that no screws are loose, as a child could trap parts of the body, or clothing (e.g. ribbons, drawstrings, necklaces) this could lead to strangulation.
- Wood is a natural material, the colour will darken with age.
- During assembly children should be kept away from the product due to possible risk of injury.

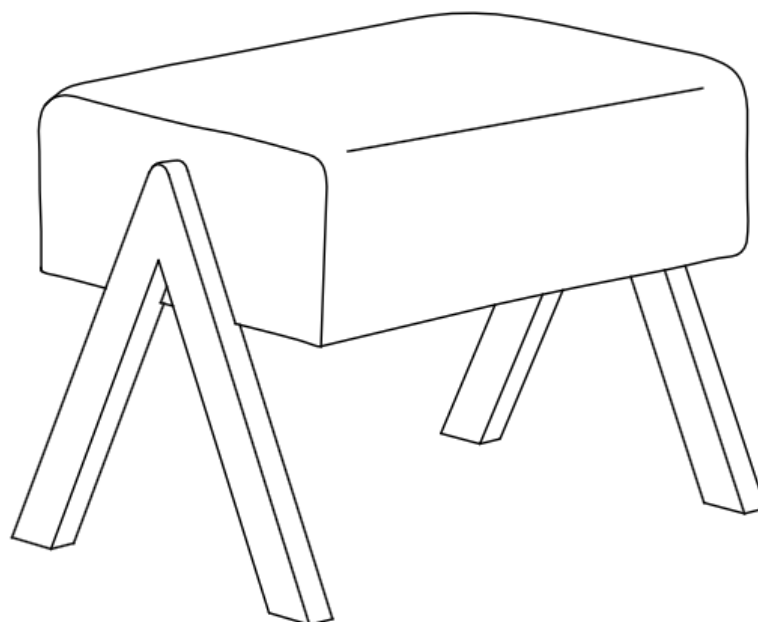


WARNING **CAUTION**

- 1.This product contains bolts and other small parts that may present a choking hazard for children 3 years or under.This unit must be assembled by an adult.
- 2.periodically check the safety of your product by making certain all bolts and nuts are tightened securely.


OTTOMAN COMPONENT PARTS


A	1PCS	B	2PCS
Ottoman Cushion		Ottoman Feet	
			

 PARTES LIST

C	8PCS	D	8PCS	E	1PCS
Screws		Flat ring		Allen	
 30mm		 6X16			

 STEP 1

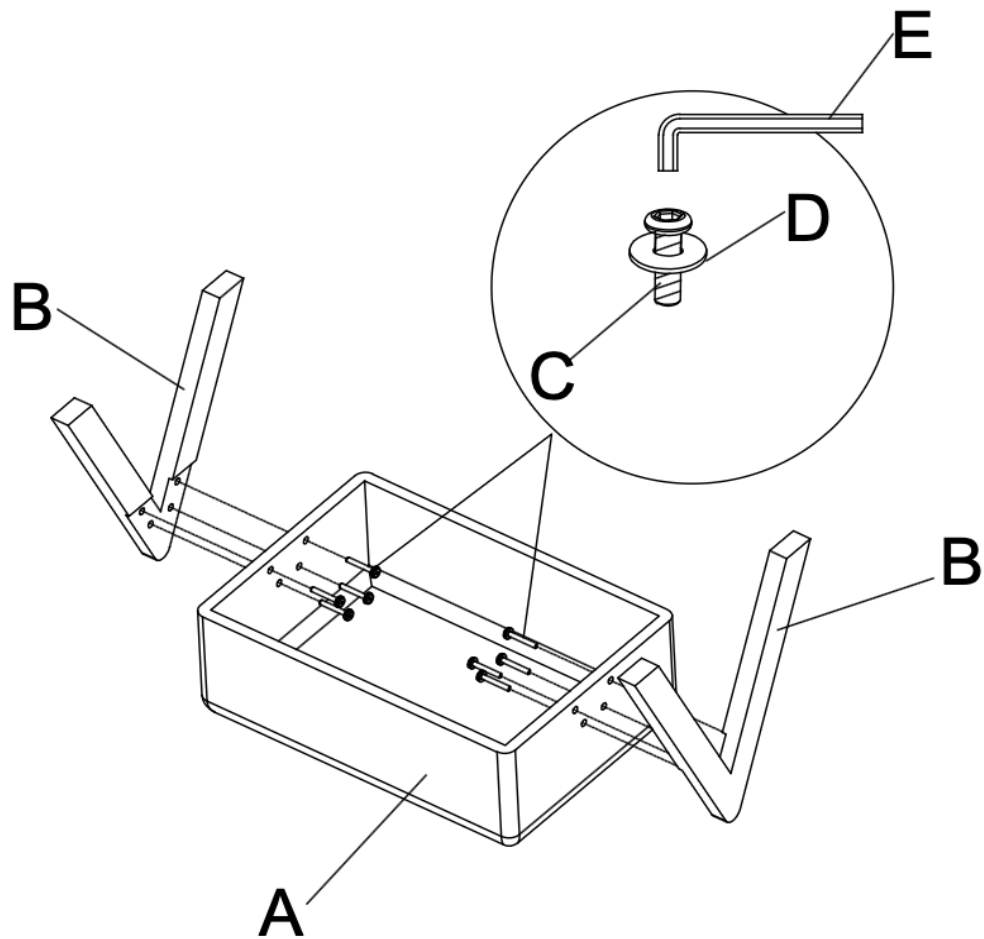

C x8

30mm
D x8

6X16
E x1


ROUTINE CARE & MAINTENANCE

Regularly check that all fittings and components are fully tightened and in working order.

- Wipe away spills immediately to prevent staining.
- Use a cloth dampened with water and/ or mild soap or a professional product to clean the fabric – always test an inconspicuous area first.
- Allow upholstery to dry and brush lightly.
- Cushions are to be dry cleaned only – do not machine wash the cushions.
- For cleaning the chair/stool frame, use only a mild detergent and warm water.
- DO NOT USE BLEACH.
- DO NOT USE any abrasive substances.
- From time to time, check your glider chair and stool for loose screws, and worn parts. Replace or adjust the parts as needed.

Due to constant updating and improvements, some components may occasionally differ slightly from the images shown in these instructions. We reserve the rights to change the specifications of any products without prior notice. If you need any assistance please contact your Bebe & Beyond retailer from whom you purchased your product, who will take appropriate action.

CONTACT US

Email: customerservice@bebeandbeyond.co.uk

bebe & Beyond

LPD Home, Midland House, Midland Road, Hunslet, Leeds, LS10 2RJ

Authorised Rep Compliance Ltd, Ground Floor, 71 Lower Baggot
Street, Dublin, D02 P593, Ireland.

www.bebeandbeyond.co.uk