

DEAR CUSTOMER



Thank you for purchasing your new Electric Throw from Dunelm.

We put a lot of effort in to sourcing and supplying great products so they are:


- Easy to assemble and install
- Produced using durable, quality materials

If for any reason you are unhappy with this product, please don't hesitate to contact us on 0345 1 65 65 65 where our customer services team will be happy to help.

We hope you enjoy your new Electric Throw for years to come...Good Luck!

The Dunelm Team

P.S. Please retain these instructions for future reference.

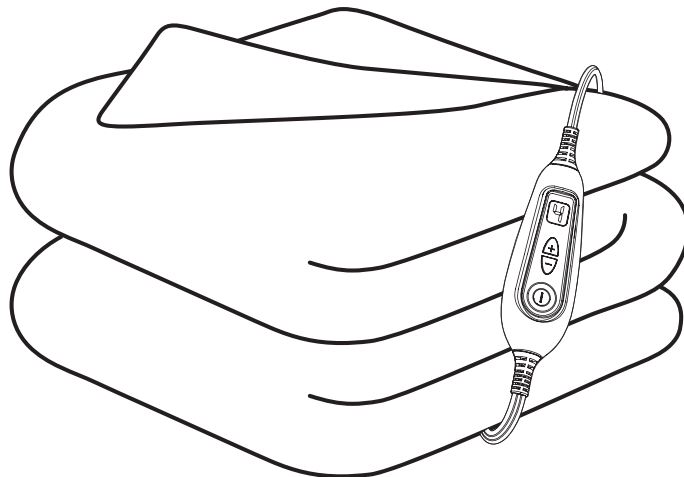

1.Safety Essentials & Warnings

IMPORTANT SAFETY INSTRUCTIONS RETAIN FOR FUTURE USE

WARNING: TO REDUCE THE RISK OF BURNS, FIRE OR ELECTRICAL SHOCK AND / OR INJURY TO PERSONS, READ AND FOLLOW BELOW INSTRUCTIONS CAREFULLY BEFORE USING THIS ELECTRIC THROW.



DO NOT insert needles or pins into this electric throw.
DO NOT use if folded,rucked,bunched up or creased.
Not to be used by very young children (0 - 3 years).

DO NOT use this electric throw if you are:


- Incapacitated or immobile person.
- Diabetic or insensitive to heat.
- A paraplegic, quadriplegic or amputee person.
- Having poor blood circulation.
- Over cuts,skin lesions, sores or areas of damaged skin.
- Anyone who can not clearly understand the instructions and/or operate the controls.

1. DO NOT tuck in, pinch, flex or expose the wired heating area, fold or bunch this electric throw when in actual use, excessive heating may result.
2. DO NOT route power cords between the mattress and box spring.
3. DO NOT allow the cords to be pinched, trapped or crossed. It can cause damage to the power cord.
4. DO NOT use with damaged cords - They may result in an electrical short that leads to a fire.
5. DO NOT use pins or other metallic means, they may damage the electric wiring.

6. DO NOT use if wet. If a spill occurs, turn electric throw off, unplug, and dry before re-using.
7. BE SURE this electric throw is ONLY used on an AC supply circuit of the proper voltage.
8. Keep the control away from drafty areas that may become damp or wet such as an open window.
9. DO NOT cover the controller. Wrapping of cord around the controller may damage the cord. All portions of this electric throw should be visible at all times.
10. Loop loosely when storing and store in a cool, dark, dry place.
11. Turn off or unplug this electric throw when not in use.
12. Excessive heating may result from folding or bunching this electric throw while in use.
13. This electric throw is for indoor use only.
14. Examine this electric throw, cord and controller before each use for signs of wear or damage. Unplug and stop using it immediately if improper operation, wear or damage is observed.
15. DO NOT use this electric throw on a waterbed, bunk bed, pull-out or fold - up bed, mechanically adjustable bed or a child's crib / bed.
16. DO NOT use with rocking chair, recliners, chairs with casters or wheels, or other furniture subject to movement. This may cause the wire to be pinched and create electrical fault.
17. DO NOT dry clean this electric throw. Cleaning solvents may have deteriorating effects on the insulation of the heating element. Improper laundry may cause problems with the heating wire, which can lead to fire. Please consult the instruction section on how to clean this electric throw.
18. DO NOT use in conjunction with another electrically electric throw.
19. If provided with a detachable controller, use this electric throw ONLY with the type of controller HP008 marked on the rating label.
20. Use as electric throw.
21. Never open up the controller case. Doing so could prove potentially hazardous and will VOID YOUR WARRANTY! If the supply cord of this appliance is damaged, it must only be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
22. Keep all animals away from this electric throw. They could damage the wiring, leading to a potentially harmful situation.

23. DO NOT use this electric throw with analgesic creams, liniments, salve or ointment preparations, Skin burns could result.
24. If improper operation of this electric throw is observed, discontinue its use immediately and consult the manufacturer or the dealer regarding its repair.
25. DO NOT tuck the electric throw or supply cord in a sofa or other furniture.
26. This electric throw is not intended for medical use in hospital.
27. The electric throw can be used by children older than 3 years and younger than 8 years under supervision and with the controller always set to minimum temperature value.
28. Recommend the 1 settings of controllers for continuous use of the electric heated throw.
29. This electric throw must not be used by persons insensitive to heat and other very vulnerable persons who are unable to react to overheating.
30. Children under the age of three should not use this electric heated throw due to their inability to react to overheating.
31. The cable and control unit of the electric throw can give rise to risks of entanglement, strangulation, tripping or treading if not correctly arranged. The user shall make sure that excess ties and electric cords shall be arranged in a safe way.
32. This electric throw can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the electric throw in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
33. The appliance is not to be used by young children over the age of three unless the controls have been pre - set by a parent or guardian or and unless the child has been adequately instructed on how to operate the controls safely.

2. Operating Instructions

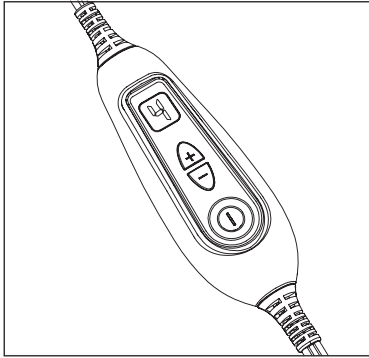

Controller Model: HP008
Style: Hand-held digital control – LED screen
Used For: Electrical Heated Throw
Auto-Off: 4 Hours
Heat Level Setting: 6 levels
Time Setting: No
Heat Zone Control: Single
Over-temperature protection: Yes

Auto-off

This electrical heated throw will automatically turn off by the controller after continuous use for 4 hours.

Note: The Auto-off is not intended to replace the manual turning OFF of this electrical heated throw. Please turn OFF and unplug this electrical heated throw while it is not in use.

Heat Level Setting

To adjust the digital controller heat level settings, while the controller is ON, press +/- button to increase or decrease the heat settings.


Note: Recommend the lowest setting of controller for continuous use of the appliance.

| | |
|------------------|-----------------------------|
| Controller model | HP008 |
| Size | 130cm x 160cm 120cm x 160cm |
| Rating Input | 220-240V AC 50Hz |
| Rating Power | 100W |

3. Cleaning & Maintenance

WARNING! FAILURE TO FOLLOW THESE CARE INSTRUCTIONS MAY DAMAGE THE ELECTRICAL HEATED THROW AND MAKE IT UNSAFE.

Cleaning

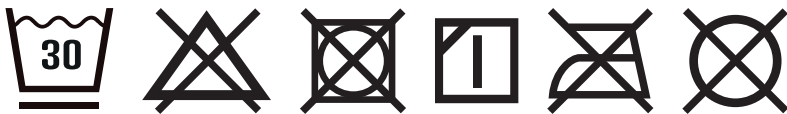

Cold gentle machine wash separately before use.

Remove controller before washing.

Do not bleach.

Do not tumble dry.

Line dry in shade.

Do not iron.

Do not dryclean.

Do not immerse the controller in water.

Clean the surface of the cord with neutral detergent if the cord is dirty and wipe it with dry cloth.

Do not use industrial solvents such as benzene, kerosene or similar solvents to clean it.

Do not wring.

Do not connect it to the mains supply to dry.

Do not use an appliance such as a hair dryer to dry it.

Do not use the electrical heated throw if it is damp or wet.

Do not try to repair the electric heating throw if faulty, have it checked by a qualified person.

Examine the electric heated throw frequently to check that there are no signs of wear or damage. If any damage / wear is spotted, do not use and seek specialist advice.

Maintenance

When not in use, allow it to cool down before folding, then gently fold the electrical heated throw and pack into proper container.

Make sure the electric heated throw is dry before folding and packing it away.

Do not crease the appliance by placing items on top of it during storage.

4. Troubleshooting

Q Who should NOT use this electrical heated throw?

A The following people should NOT use this electrical heated throw:

- incapacitated or immobile person.
- Diabetic or insensitive to heat.
- A paraplegic, quadriplegic or amputee person.
- Having poor blood circulation.
- Over cuts, skin lesions, sores or areas of damaged skin.
- Anyone who can not clearly understand the instructions and / or operate the controller.

Q What I need to do when my electric heated throw does not seem to turn on?

A Check and ensure the power cord is properly plugged in and press the ON/OFF button. If the level setting is still not illuminated, unplug the power and contact Customer Support.

Q My electric heated throw doesn't heat properly.

A Try the following test to see if it is operating properly:

- Fold the electric heated throw with at least 4 folds.
- Connect the controller to your electric heated throw.
- Plug the controller into a working mains supply.
- Set the controller to the highest heat setting and wait for 5 minutes.
- Put your hand inside the folds. If you do feel the warmth, it is working properly.
- Turn the controller off and lay out your electric heated throw flat.
- Resume normal operation after 20 minutes.

CAUTION: Do not continue the test for more than 7 minutes. Do not attempt to make any internal adjustment to this appliance. If you have tried the above solutions and still doesn't work, stop using it immediately, disconnect the power cord and contact Customer Support.

NOTE: This electric heated throw is not a heating pad. It will not feel hot to the touch when laid out flat in a normal manner.

Q Can I use my electric heated throw in my RV?

A No, this electric heated throw is intended for use ONLY with the standard 220-240V AC 50Hz wall outlet at home.

Q What do I do if my pet chews the cord, I lose my controller or the controller does not operate properly?

A Please stop using the electrical heated throw immediately. Contact Customer Service.

Q My controller feels warm to the touch. Is this a problem?

A No. The controller will feel warm to the touch when functioning properly.

Q What does "E" or "F" mean on my controller?

A The controller is programmed to notify you in the event that a problem has been discovered by indicating "E" or "F" on the display.

Reset Instructions:

1. Turn off the controller power first, and unplug the controller power cord off the mains supply.
2. Check your electric heated throw for visual damage.
3. Make sure the control is well connected to the module and securely fasten in locked position.
4. Plug the power cord back into the 220-240V AC. mains supply.
5. Set the controller to "ON".
6. If the controller still indicates "E" or "F" on the display after trying 2 or 3 times to reset, disconnect the power cord and contact Customer Service.

Finally, we hope you enjoy your new Electric Throw
for many years to come and thanks again for your purchase.

Customer services helpline 03451 65 65 65
Dunelm Soft Furnishings Ltd. LE7 1AD

Manufactured in China for
Dunelm (Soft Furnishings) Ltd. LE7 1AD
& Dunelm (Soft Furnishings)
Londonderry Ltd. BT48 8QN
Dunelm.com

