
 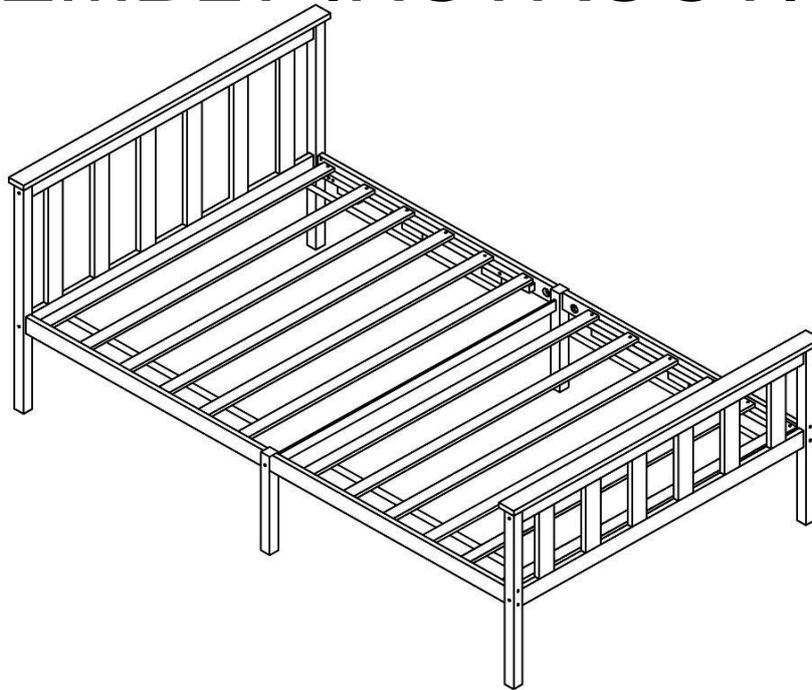
 
 
 



PM-ATL-NAT FRA-30 ATL-WHL-FRA-30 ASSEMBLY INSTRUCTIONS



HARDWARE


A	 φ6×30mm	48
B		8
C	 φ8×30mm	22
D	  15mm φ6×70mm	10
J	 M6×120mm	2
L		4

E	  15mm M6×••mm	14
G	  8mm φ4×25mm	24
H		1
I	 Screw driver(not provided)	1
K	 NUT M6	4
M	 Spanner	2

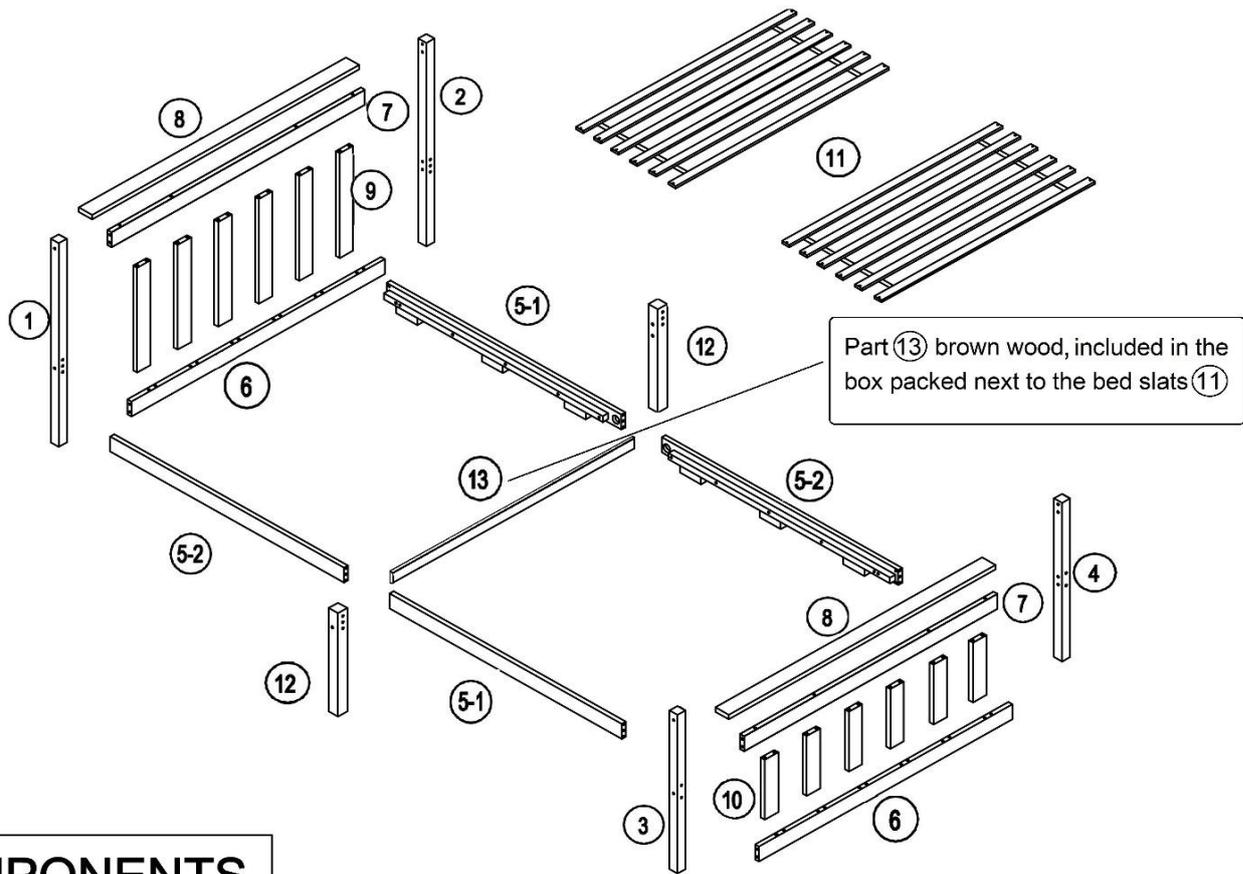


COMPONENTS


01

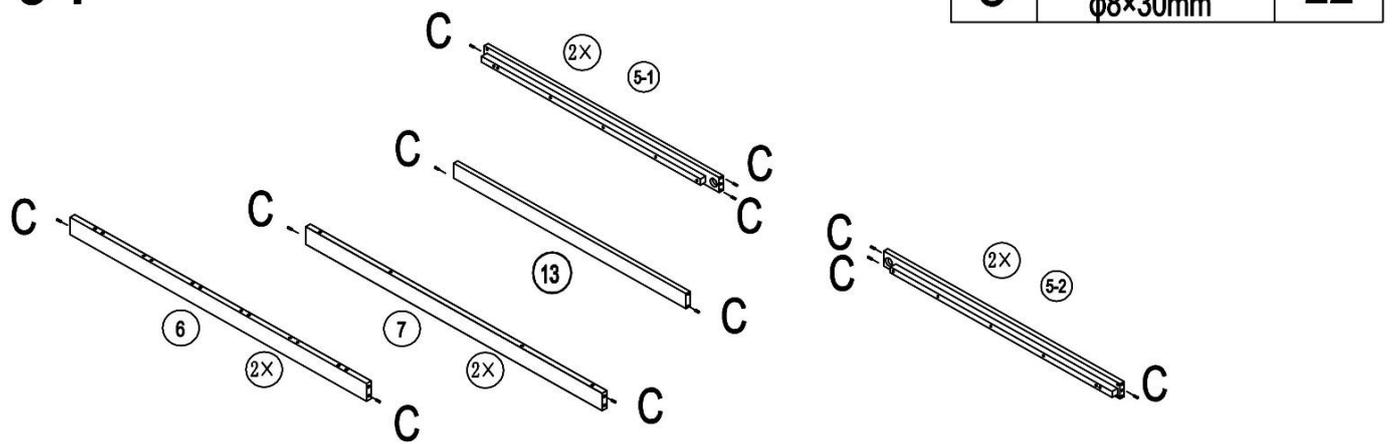


02

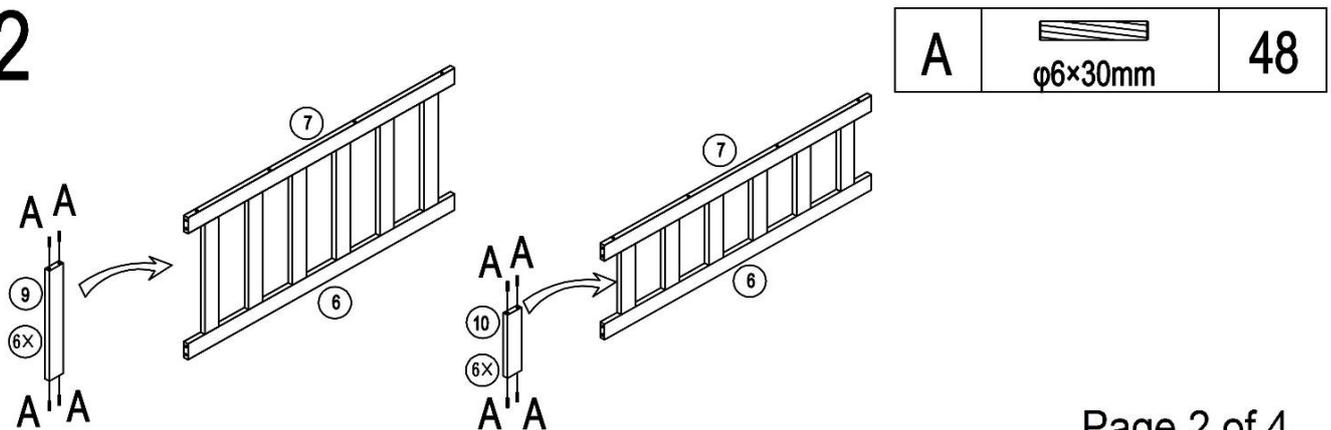



03

 D			8
	15mm	φ6×70mm	

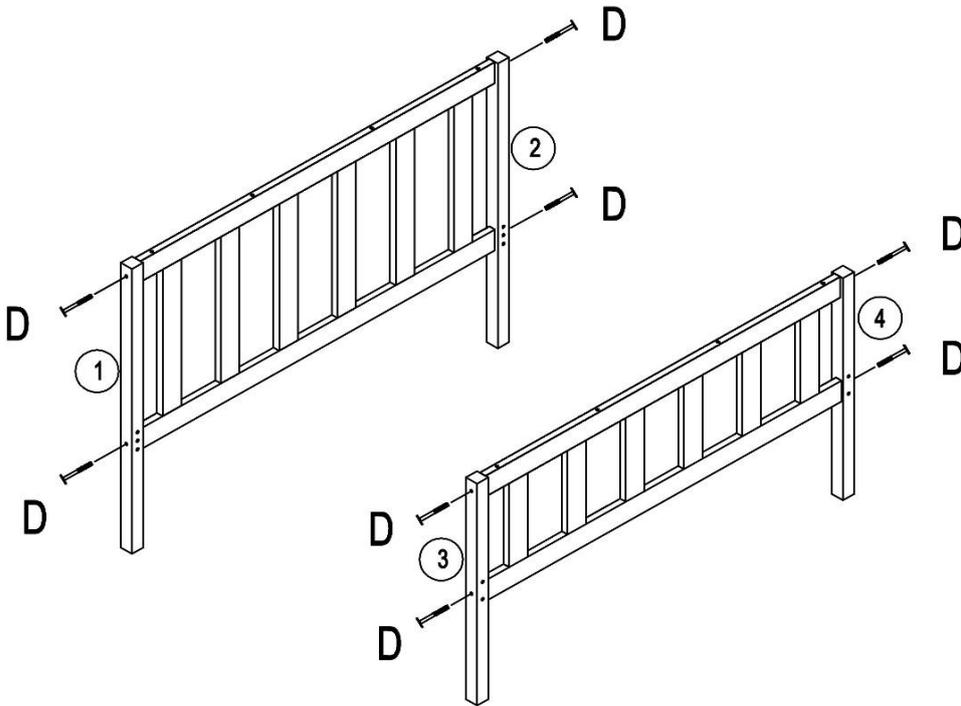



04

 E			6
	15mm	M6×65mm	

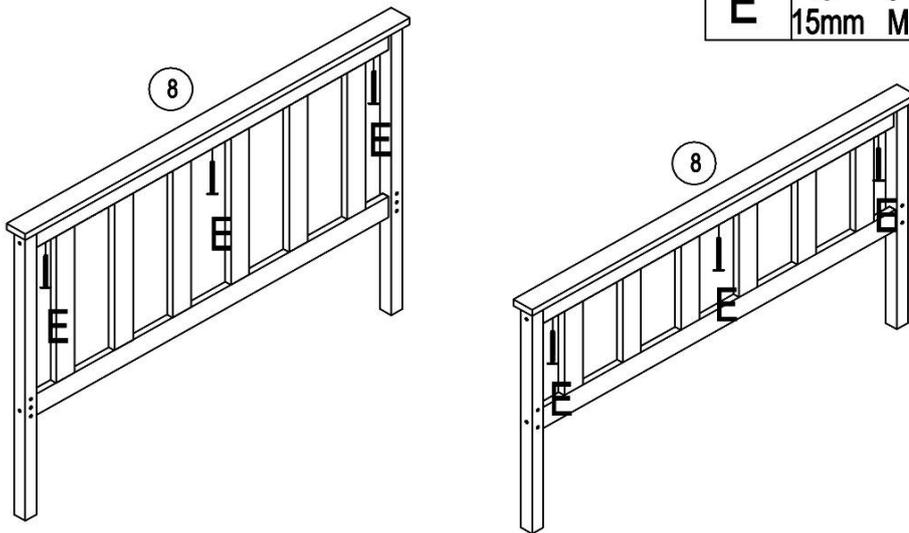



05

 D			2
	15mm	φ6×80mm	

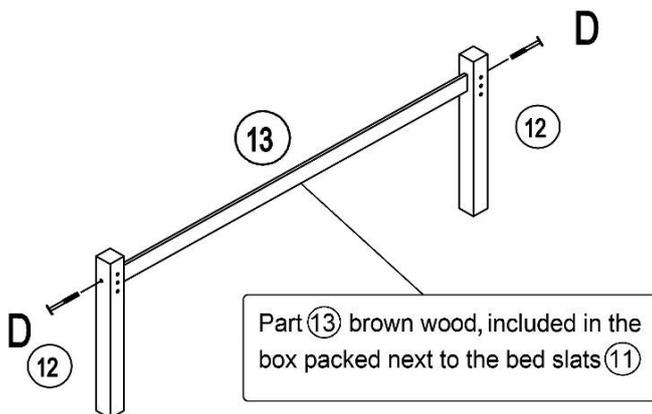

06

 M	 Spanner	2	E	 15mm	 M6×65mm	8
J	 M6×120mm	2	B			8
K			K	 NUT M6		4
L			L			4

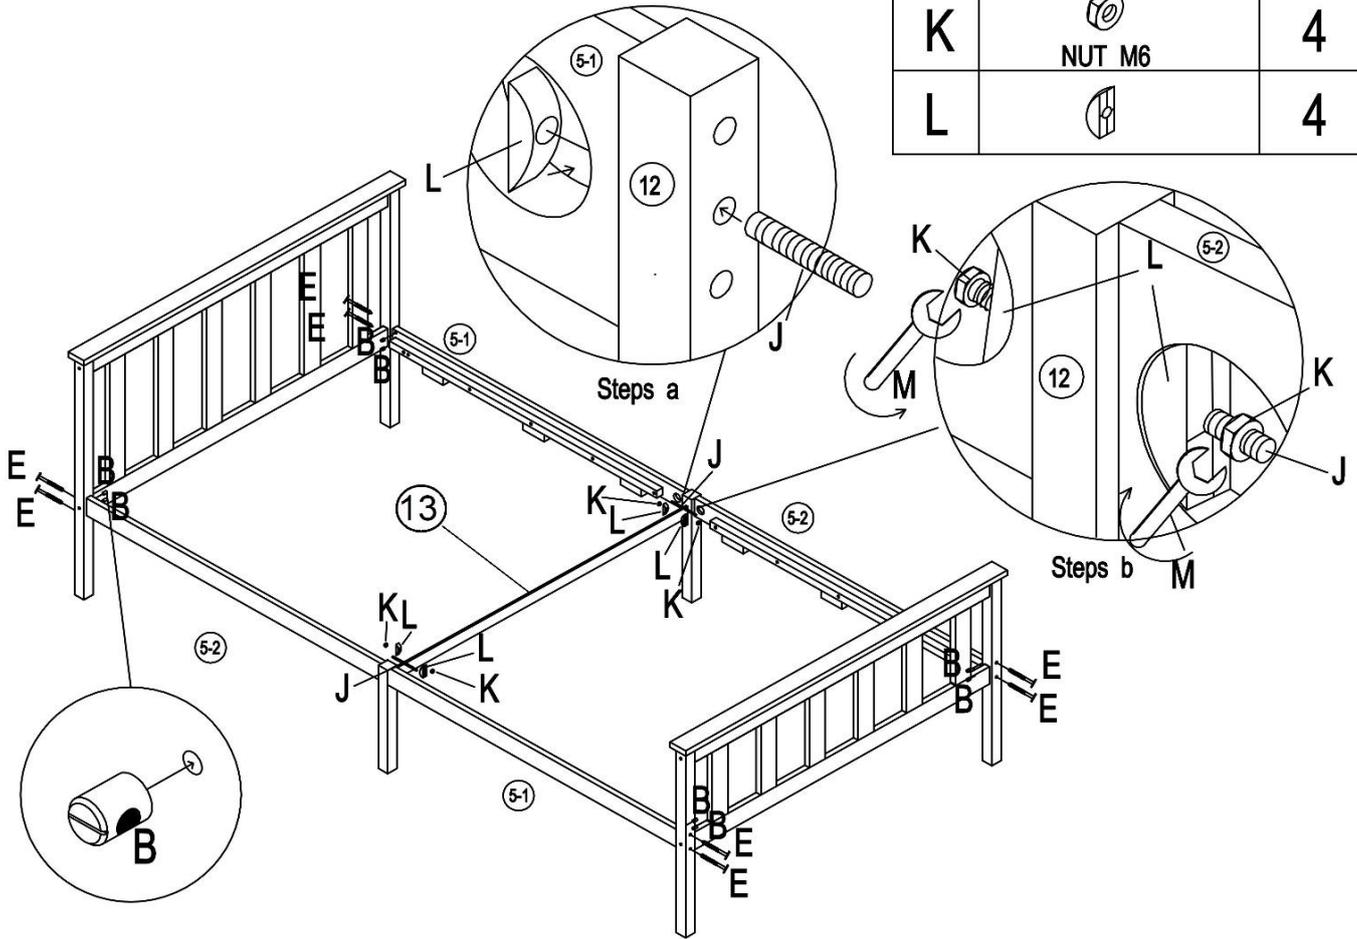

07

G	 8mm	 φ4×25mm	24
---	---	---	----

