



ASSEMBLY

<p>A B C D E*4pcs F G</p>	
<p>Expand Part A-body and Part B-sleeve. Put Part A into Part B, attach the sticky tape on both sides to help keep its shape and structure.</p> <p>! Ensure all slates are pushed out against the inner sleeve cover.</p>	<p>Insert the Insert board-Part C into the body-Part A.</p> <p>! To avoid collapse, ensure the insert board is fully inserted and securely in place.</p>
<p>Fold the top rim of the outer sleeve inwards to give strength and structure. Attach the sticky tape on both sides.</p>	<p>Put Part G into the body.</p>
<p>Use Part F to secure Part G with screws. Pushing the sides towards the bars to help with aligning the screws.</p>	<p>Cover the lid-Part D.</p> <p>! Ensure the lid is fully covering the body. Use only as intended. Do not stand on the lid or use it as a step stool.</p>

Care & Use

Wipe clean with soft cloth

Dimensions: 110 x 45 x 47.5cm

Max weight limit: 125 kgs

Safety advice

Uneven floors could give the impression that doors are out of alignment or that the furniture is wobbly. Be aware of this and compensate, if necessary, by adjusting the hinges or packing a corner to level the item.

Please refer to the assembly instructions and adjust accordingly.

If your furniture becomes stained, scratched, chipped or suffers other damage, we recommend professional help is sought to restore it. Please contact our customer services line for recommended agents.

DO move items such as ornaments or coasters around periodically to allow the colour to mellow evenly.

DO use mats and coasters to protect the surface from heat, liquids, or items that may cause scratches.

DO ensure plastic or felt feet protectors are securely fitted into place on the feet and legs to avoid scratches.

DO check fittings and fixings from time-to-time and tighten when necessary. Stop using the product if still unstable after all screws and bolts are tightened.

DO NOT drag your furniture when moving it as this can damage joints. Always lift furniture into place.