



Liberty House Toys Kids Play Tent Item Code: LHTARCTENT, LHTDINOTENT, LHTJUNGTENT, LHTPRINCTENT, LHTSPACETENT, LHTUNITENT

Recommended for children aged from 18 months+


IMPORTANT! RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCES. ASSEMBLY TO BE CARRIED OUT BY A COMPETENT ADULT ONLY.

Our range of Kids Play Tents are a super play item for your young child. Will encourage creativity and imagination, whilst encouraging children to engage in co-operative play with a friend or sibling.

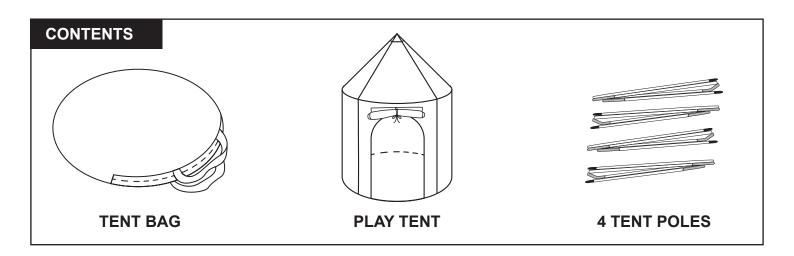

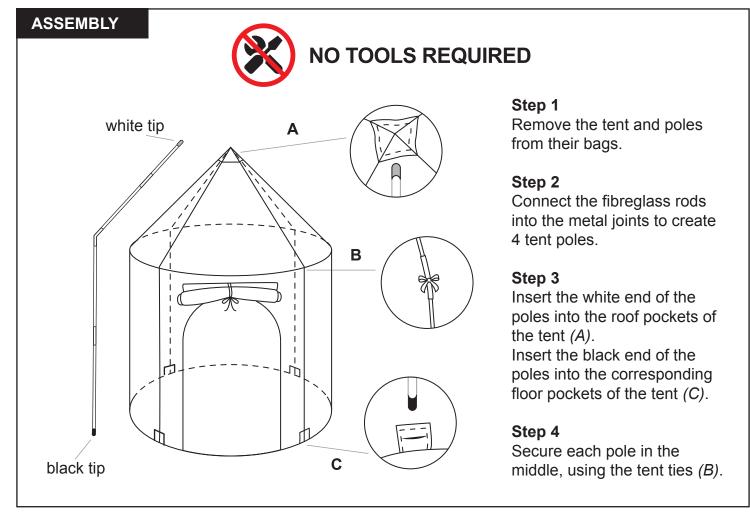

PACK AWAY FOR ANOTHER DAY

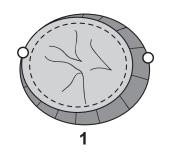



Step 2

Step 1

Fold the tent in half.

the tent into 1 flat circle.

Step 3, 4

Twist the part that has white "circle" on the image towards the direction of the "star" to make 2 small circles at both ends.

Remove the poles and collapse

Step 5

Fold these 2 circles on top of each other, so that its a neat size which will fit into the carry bag.

Step 6

Place the folded tent into the carry bag and zip up. Fold the tent poles and place them into their bag.









6

MATERIALS

Fabric: 100% Polyester.

Rod: Fibreglass with

polypropylene plastic cover.

WARNINGS

- Recommended for children aged from 18 months+.
- This product bears the UKCA/CE marks.
- Tent must be assembled by an adult. Never let children unfold or fold this product.
- · To be used under direct supervision of an adult.
- Keep play tent away from fire and other strong heat sources.
- · Please dispose of all packaging carefully.

CARE/CLEANING

Wash by hand, max 40°C

DO NOT bleach

DO NOT Tumble Dry

DO NOT Iron

DO NOT Dry Clean

SAFETY TESTED

The product conforms to:

ISO 14184-1:2011.

EN71-1:2014+A1:2018 / EN71-2:2020 / EN71-3:2019+A1:2021.



Liberty House Toys 20-24 Gibraltar Row King Edward Industrial Estate Liverpool L3 7HJ United Kingdom

