










**RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.
 ASSEMBLY TO BE CARRIED OUT BY A COMPETENT ADULT ONLY.**

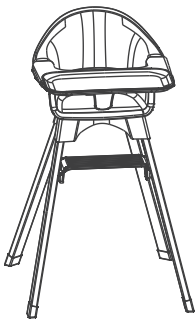IMPORTANT


- Please read and following the instructions carefully.
- Check whether all parts exist and accurately assemble according to the instructions.
- When assembling, keep children away.
- Do not stand the product on soft, uneven surfaces.
- Please use this product under adult supervision.




**NO TOOLS
 REQUIRED**

PART LIST	PRODUCT	QTY	PRODUCT	QTY	PRODUCT	QTY	PRODUCT	QTY
	 Seat & Harness	1	 Main tray	1	 Top tray	1	 Front foot	2
	 Chair base	1	 Foot Pedal	1	 Back foot	2	 Non-slip Pad	4

FOOT PEDAL

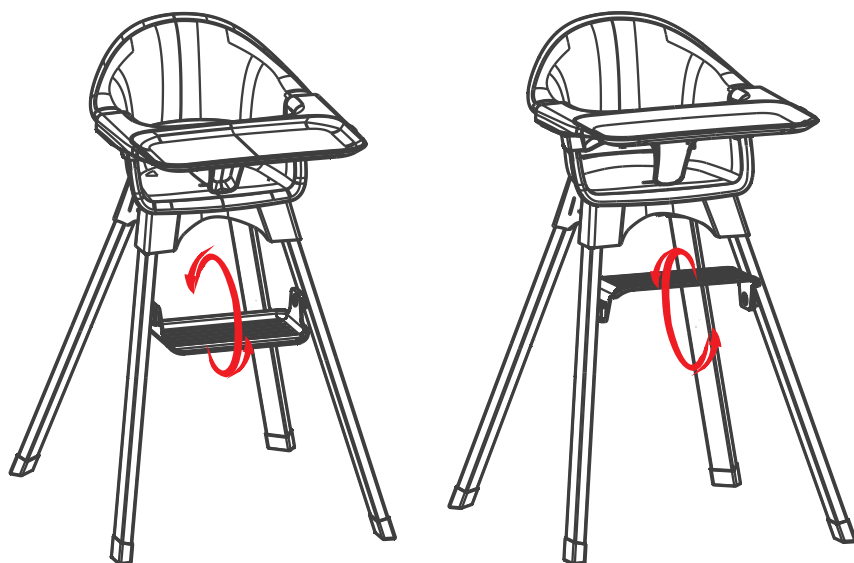

The foot pedal has adjustable high and low positions for your child as they grow

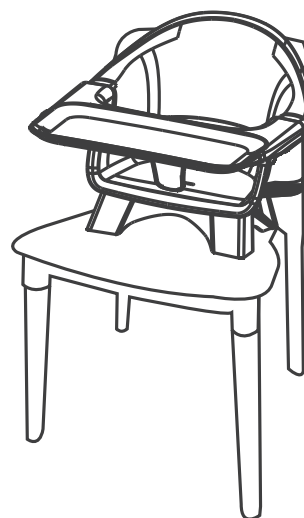

Can be used separately on an adult chair using fastenings supplied


ASSEMBLY

STEP 1


Put the chair seat upside down. Insert the front and back legs in to the corresponding seat ports as shown. The button will click in to place when secure.

TIP

The buckle is installed toward the inside of the chair seat. Please distinguish between the front and back feet of the chair.

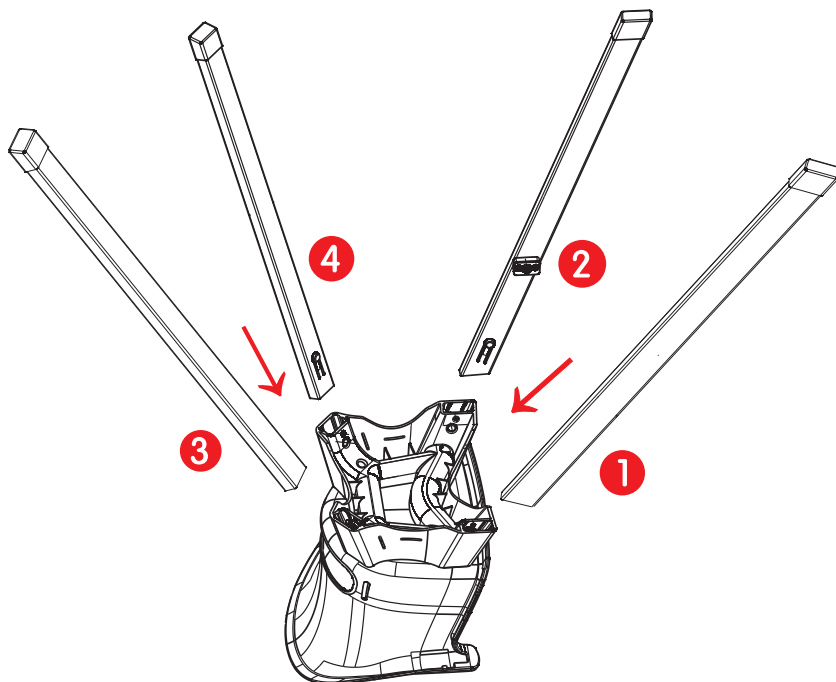


STEP 2

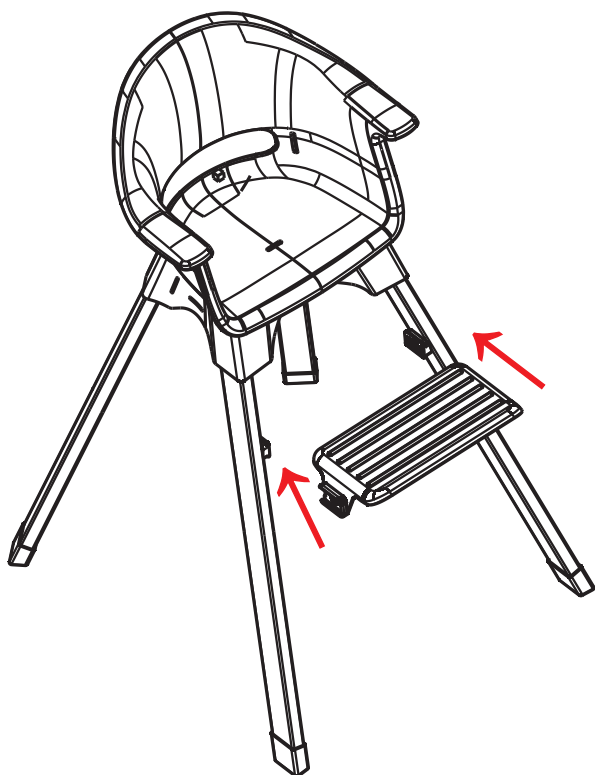





Slide the foot pedal in to the white slot on the leg. The button will click in to place when secure.

STEP 3



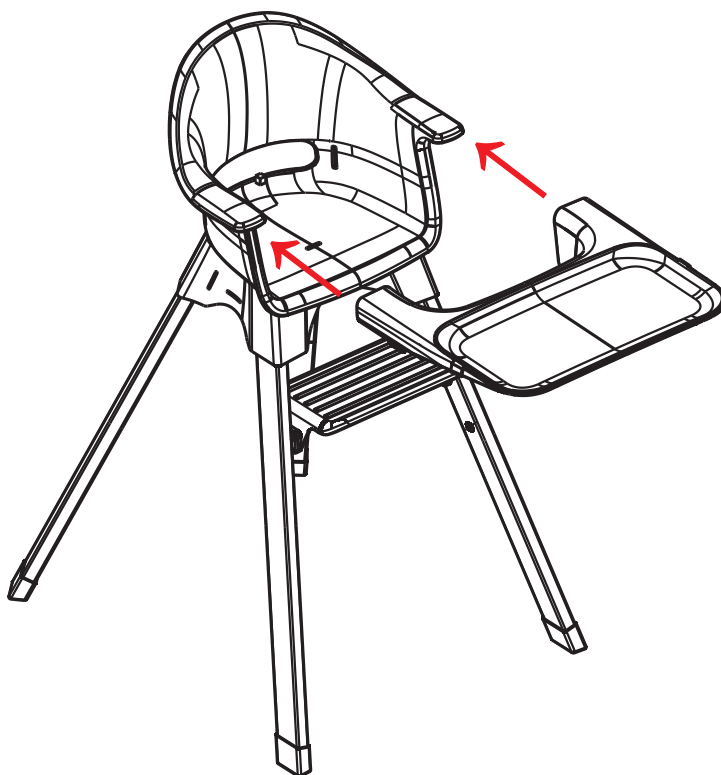


Slide the double tray on to the arm rests of the seat and make sure it is secure.


HOW TO USE THE 3 POINT SAFETY HARNESS

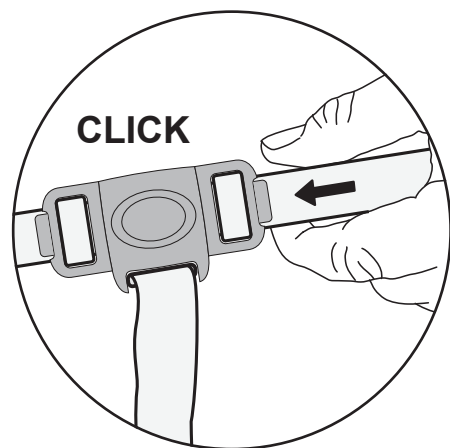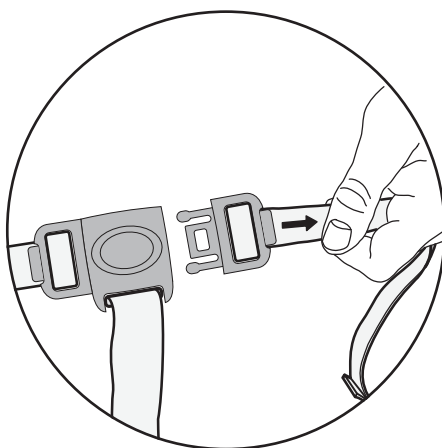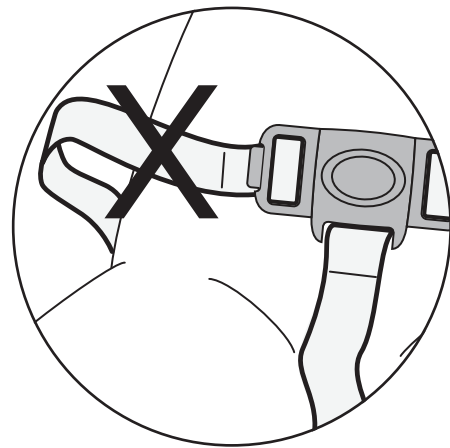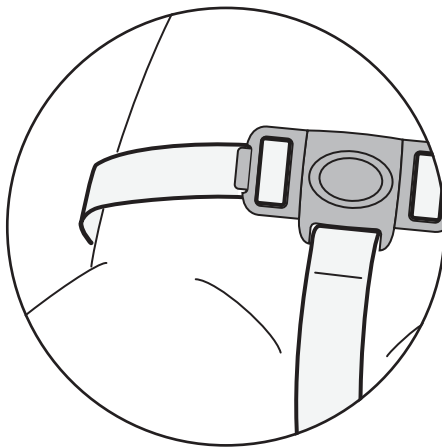


HOW ADJUST/TIGHTEN THE 3 POINT SAFETY HARNESS

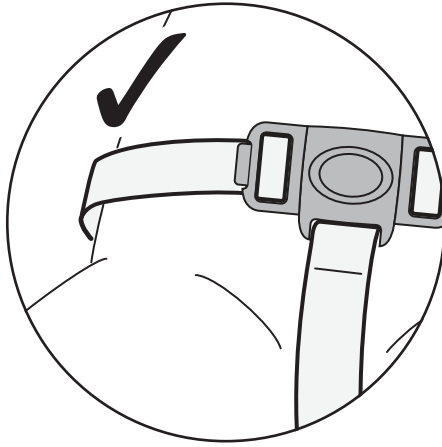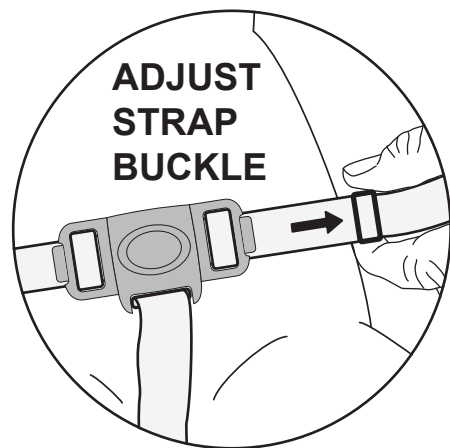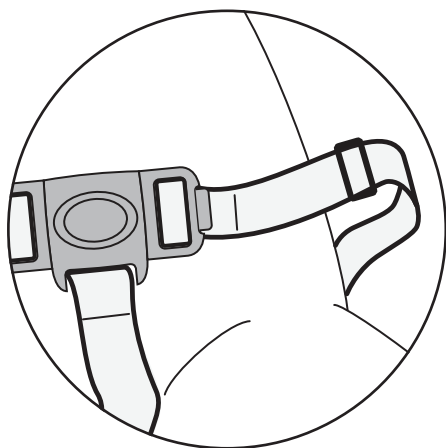

HOW TO SAFELY MOVE THE HIGH CHAIR

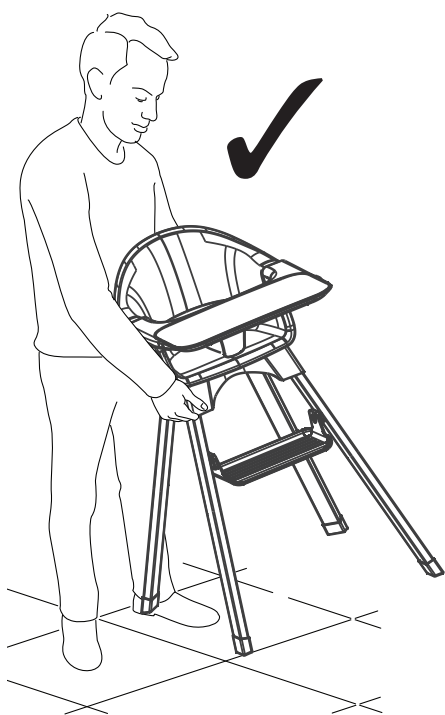

Never use the tray to lift the high chair when the child is seated in it.

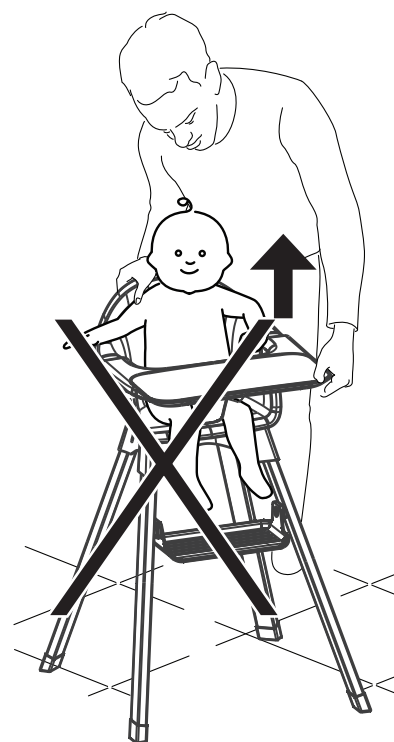

Never lift the high chair with the child seated in it, as the child can fall out.

CARE AND MAINTENANCE INSTRUCTIONS

- Wipe clean with a mild soapy solution.
- Wipe dry with a clean cloth.
- Suitable for indoor and outdoor use but should not be left outside.
- Safety belt included.
- Removable, wipeable seat pad.
- This high chair is intended for children able to sit up unaided.
- This high chair is recommended for children aged 6 months up to 3 years or a maximum weight of 15kg.
- Dispose of all packaging carefully and responsibly.

STORAGE

- Wipe the product with a damp cloth first, ensure the product is completely dry and clean before storage, and store the product in a dry and ventilated place to prevent mildew.

SAFETY TESTED

The product conforms to the required safety, durability and stability standards set for EN14988:2017+A2:2024

WARNINGS

1. Do not use before the product is fully assembled.
2. Do not use if any parts are lost or damaged. Please contact your supplier and spare parts can be supplied – please use only parts approved by the manufacturer.
3. We advise you to keep these instructions in a safe place in case required for future use.
4. Assembly to be carried out by a competent adult only.
5. Never leave the child unattended.
6. Falling hazard: Prevent your child from climbing on the product.
7. Be aware of the risk of tilting when your child can push its feet against a table or any other structure.
8. Keep away from open flames and other strong heat sources.
9. Never use the tray to lift the high chair when the child is seated in it.
10. Never lift the high chair with the child seated in it, as the child can fall out.
11. To ensure the child does not lean or fall, secure safely using the 3 point safety harness.