The Seeker Cot Bed

IMPORTANT! RETAIN FOR FUTURE REFERENCE. READ CAREFULLY


bebe & Beyond


bebeandbeyond.co.uk





Thank you for choosing Bebe and Beyond. This
cot bed conforms to BS EN 716 :2017 and BS 8509 :2008 + A1:2011.
To ensure that your cot bed is used in accordance with these instructions, please read them fully.
Your child's safety may be affected if you do not follow these instructions.
Assembly should be carried out by a competent adult only.

WARNING Do not use more than one mattress in the cot bed.
WARNING Do not use the cot/child's bed near heat sources, windows and other furniture.
WARNING Be aware of the risk of open fire and other sources of heat, such as electric bar fires, gas fires, etc. in the near vicinity of the cot bed.
WARNING Do not use the cot/child's bed if any part is broken, torn or missing. Use only spare parts approved by the manufacturer.
WARNING Do not leave anything in the cot bed or place the cot bed close to another product, which could provide a foothold or present a danger of suffocation or strangulation, e.g. strings, blind/curtain cords etc.
• Please be aware that the lowest base position is the safest and the base should always be used in that position as soon as the baby is old enough to sit unaided.
• The thickness of the mattress chosen should be such that the internal height (surface of the mattress to the upper edge of the cot frame) is at least 500mm when the base is set in the lowest position and a minimum of 200mm when the cot base is set in the highest position.
• We recommend you use mattress Size 140 x 70 cm for this cot bed.
The mattress should be no more then 30mm shorter or narrower than the internal length or width of the cot bed.
• To prevent injury from falls, as soon as the child is able to climb out of the cot then it should be changed into the bed mode for use up until 4 years of age.
• The cot bed is designed to be dismantled for storage or transportation.
• Children are likely to play, bounce, jump and climb on beds, therefore the child's bed should not be placed to other furniture or windows,
and should be placed either tight to the wall or have a gap of 300mm between the wall and the side of the bed.
• All assembly fittings should be tightened properly and care should be taken to ensure that no screws are loose, as a child could trap parts of the body, or clothing (e.g. ribbons, drawstrings, necklaces) this could lead to strangulation.
• During assembly children should be kept away from the product due to possible risk of injury.
• Wood is a natural material, the colour will darken with age.

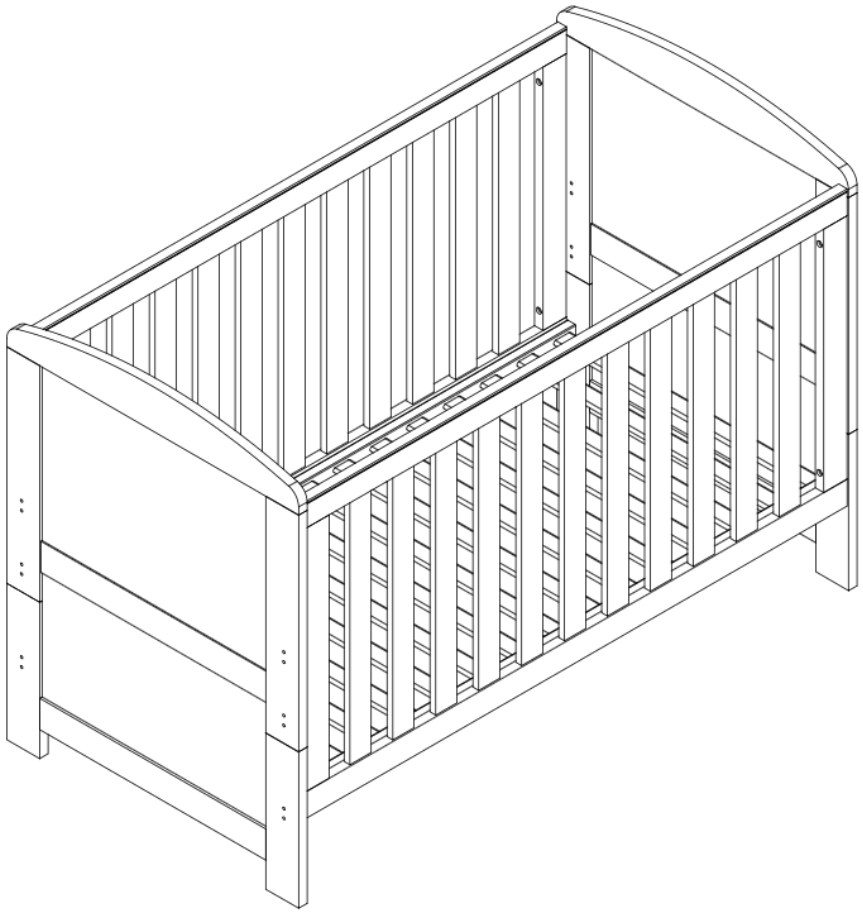

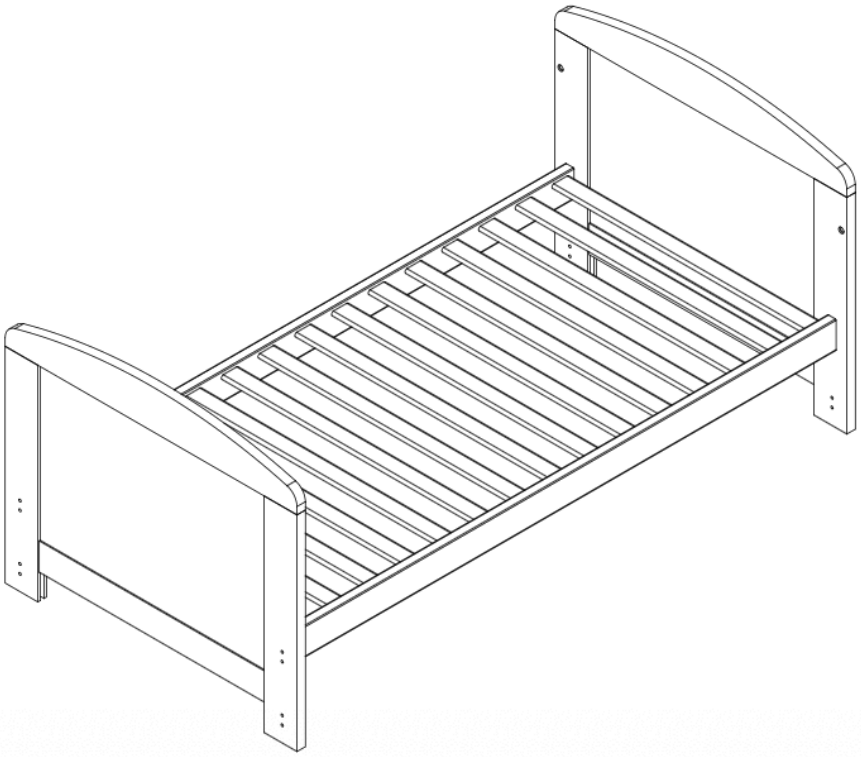


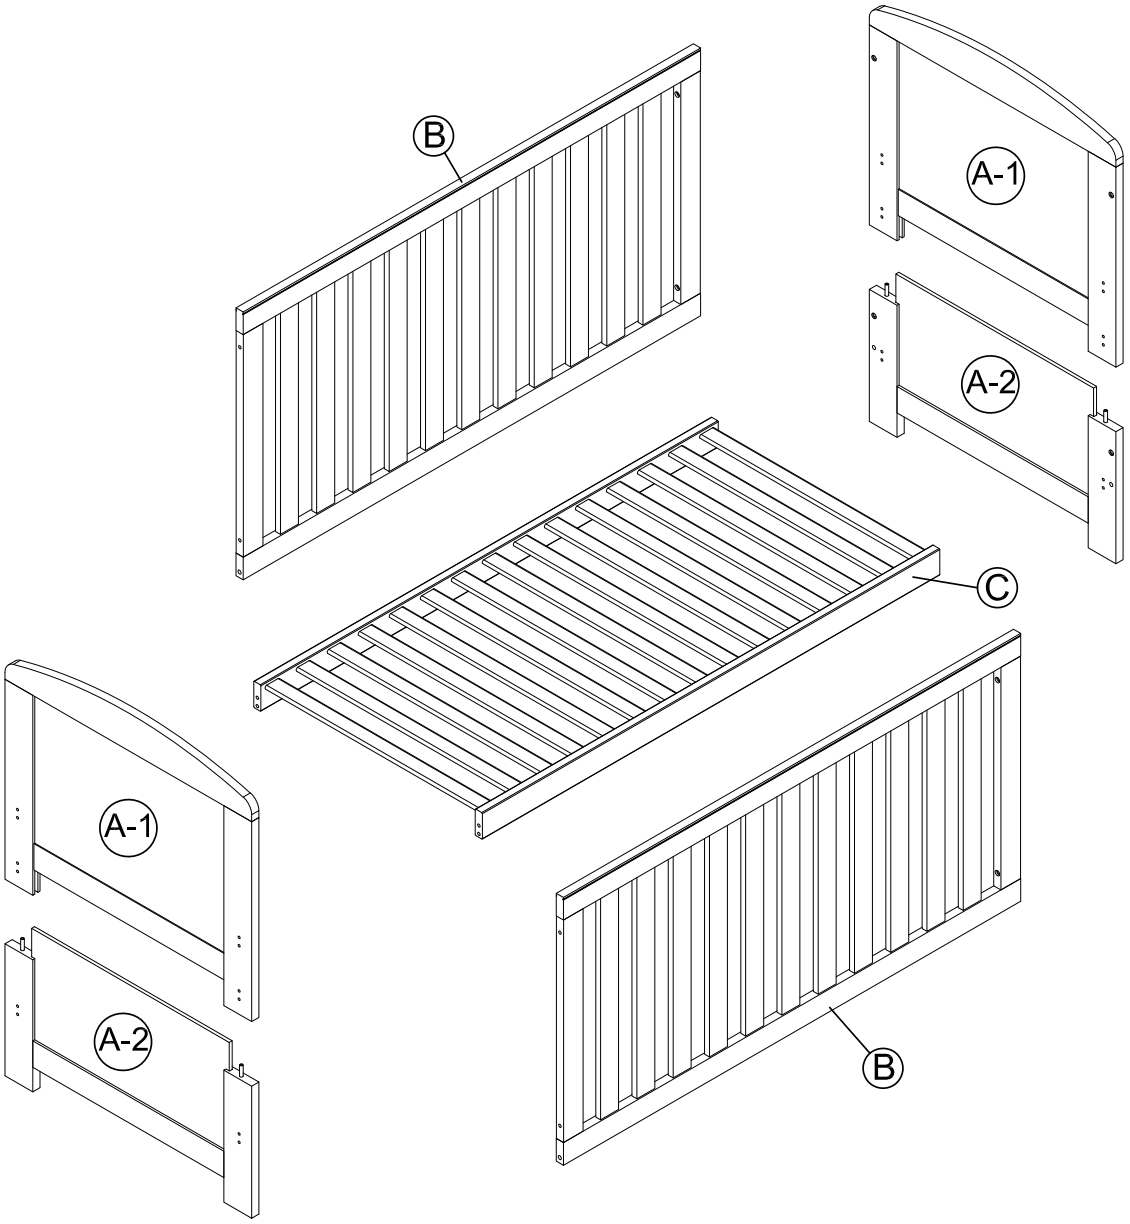

P1	φ13*M6*70	8	
P2	φ13*M6*55	8	
P3	φ10*M6*36	4	
P4	φ10*30	4	
P5	M4*106	1	


Stage 1

P4: ϕ10*30=2

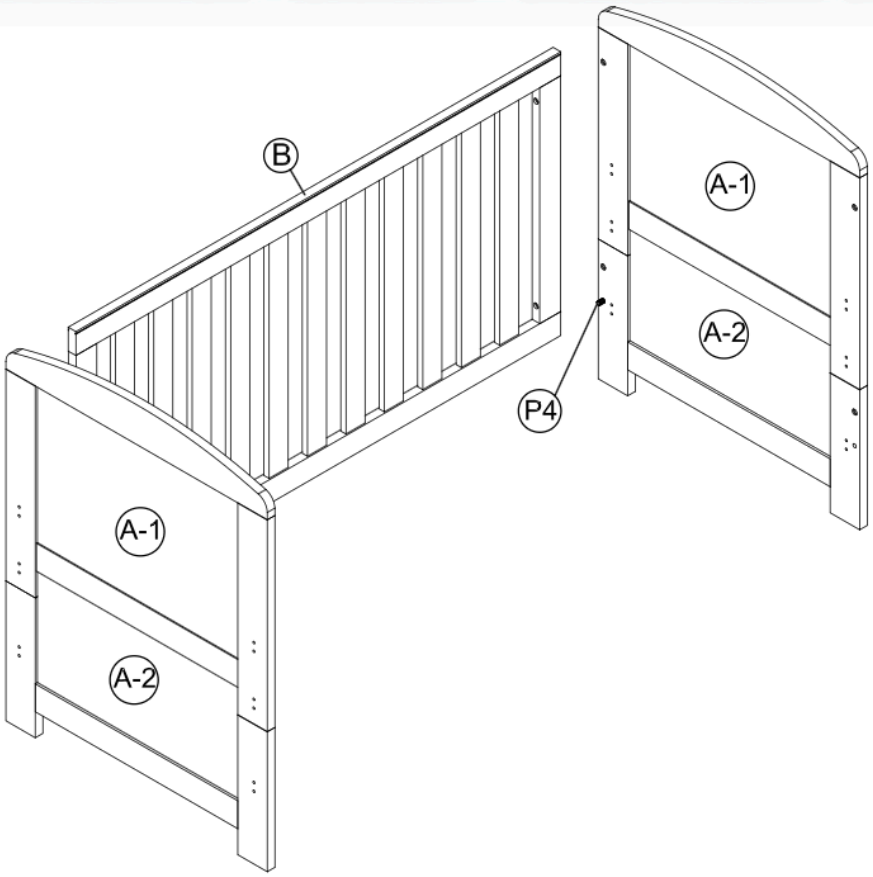

Stage 2

P1: ϕ13*M6*70=4

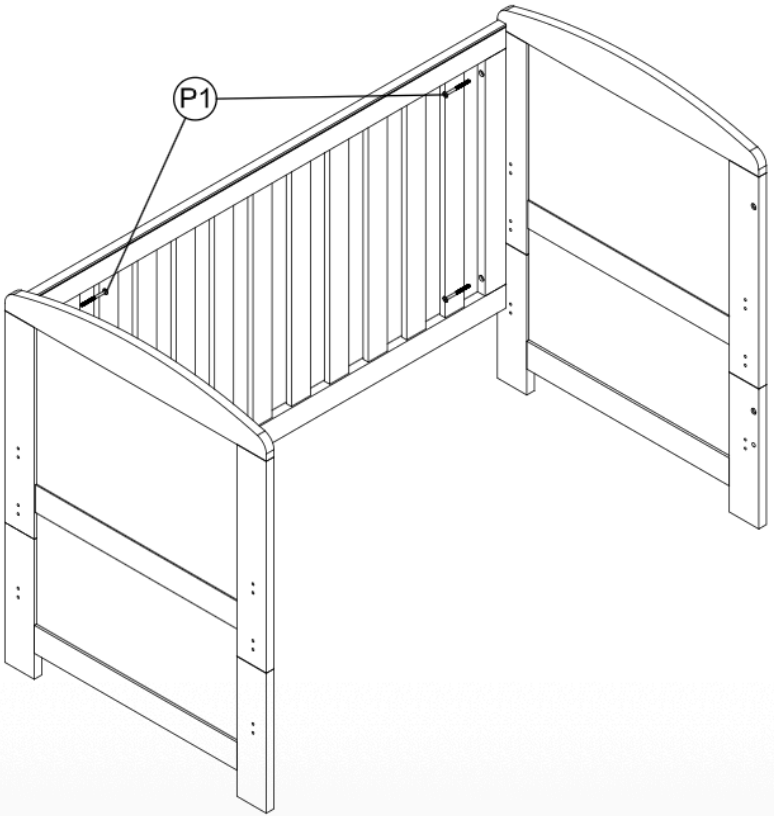


Stage 3

P2: ϕ13*M6*55=8


P3: ϕ10*M6*36=4

P4: ϕ10*30=2

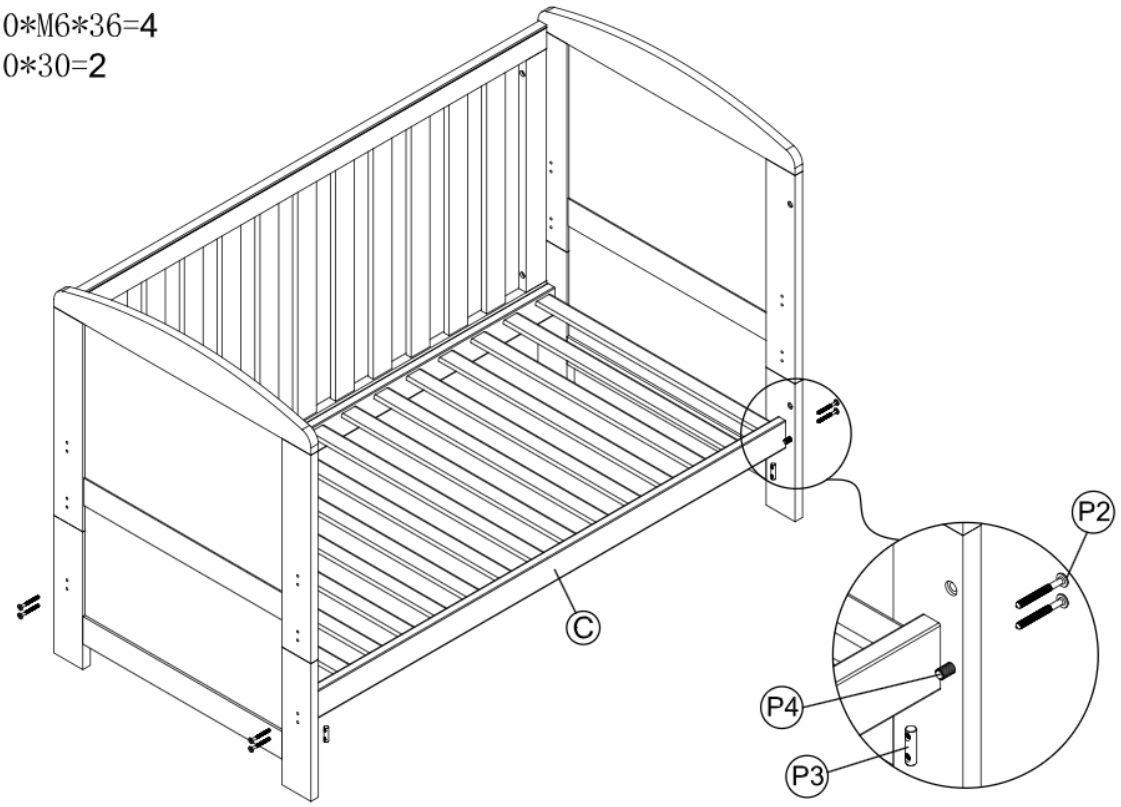


Stage 4

P1: ϕ13*M6*70=4

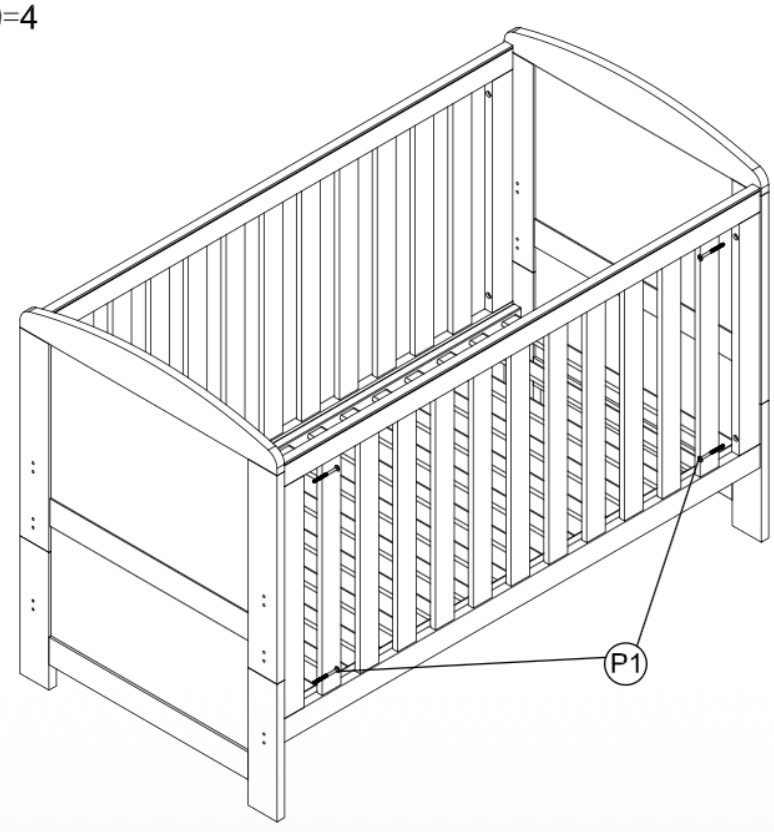


Stage 1

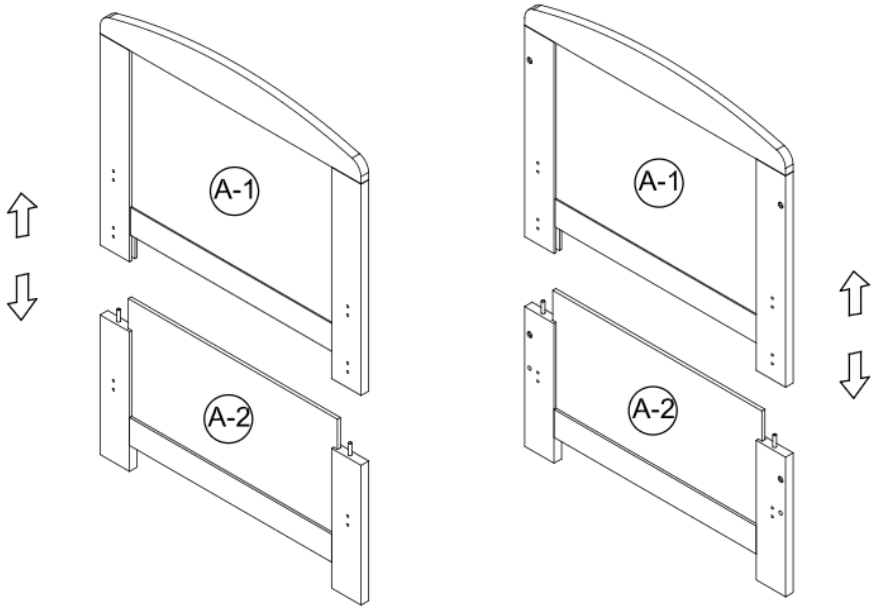

Stage 2

P2: ϕ13*M6*55=8

P3: ϕ10*M6*36=4

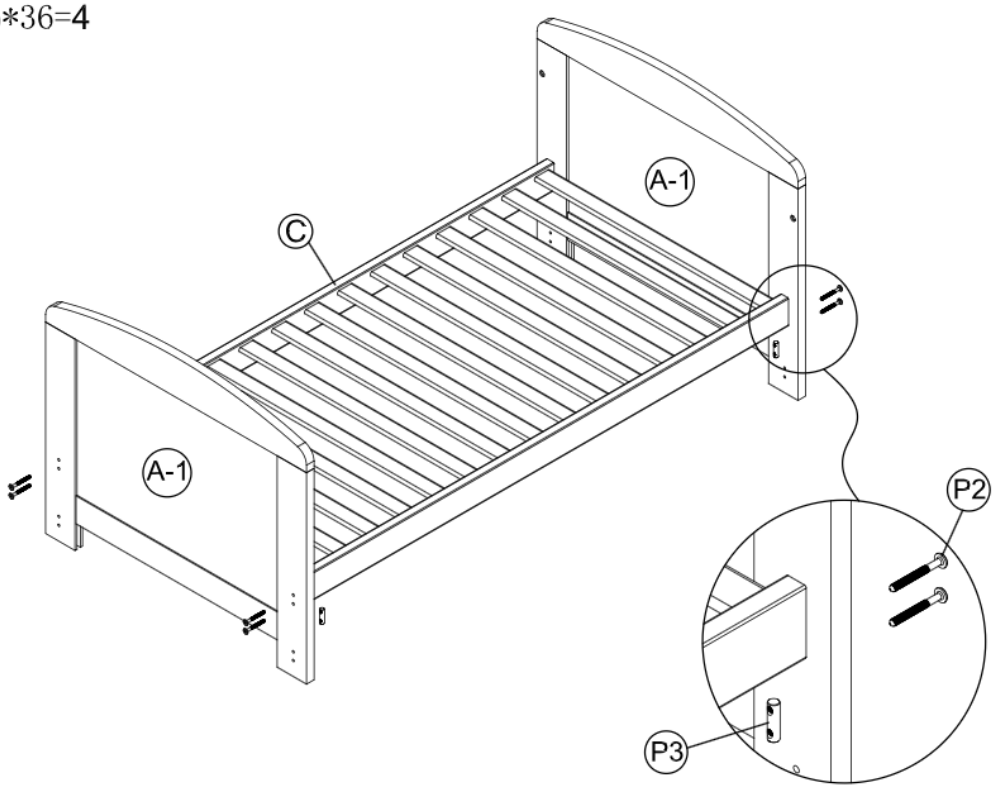

ROUTINE CARE & MAINTENANCE

Regularly check that all fittings and components are fully tightened and in working order.

- For cleaning use only a mild detergent and warm water.
- DO NOT USE BLEACH.
- DO NOT USE any abrasive substances.
- Take care when handling or moving furniture, careless handling can damage wooden furniture.

Due to constant updating and improvements, some components may occasionally differ slightly from the images shown in these instructions. We reserve the rights to change the specifications of any products without prior notice. If you need any assistance please contact your Bebe & Beyond retailer from whom you purchased your product, who will take appropriate action.

CONTACT US
Email: customerservice@bebeandbeyond.co.uk

bebe
& Beyond

LPD Home, Midland House, Midland Road, Hunslet, Leeds, LS10 2RJ

Authorised Rep Compliance Ltd, Ground Floor, 71 Lower Baggot Street, Dublin, D02 P593, Ireland.

www.bebeandbeyond.co.uk

The Seeker Changing Unit

IMPORTANT! RETAIN FOR FUTURE REFERENCE. READ CAREFULLY

bebe & Beyond

bebeandbeyond.co.uk



This changing unit conforms to BS EN 12221 :2008+A 1 :2013 & BS EN 14749:2016. To ensure that your changing unit is used in accordance with these instructions, please read them fully. Your child's safety may be affected if you do not follow these instructions. Assembly should be carried out by a competent adult only.

WARNING Installation shall be carried out exactly according to the manufacturers instructions – otherwise a safety risk can occur if incorrectly installed.


WARNING Do not leave the child unattended.


WARNING In order to prevent tipping this product must be used with the wall attachment devices provided. Serious or fatal crushing injuries can occur from furniture tipping over.


- Use the wall attachment devices provided
- Never allow children to climb or hang on drawers, doors or shelves
- Place heaviest items in the lower drawers or shelves
- Do not set TVs or other heavy objects on top of this product
- Never open more than one drawer at a time

Attachment devices are provided with your product, however you will need to source suitable fixings for your wall type. If in doubt, please consult a qualified tradesperson. Always ensure the wall to be drilled is free from hidden electrical wires, water and gas pipes.

- The changing unit must be used on a level and stable surface.
- Never move the changing unit with the child on it.
- Be aware of the risk of open fire and other sources of heat, such as electric bar fires, gas fires, etc. in the near vicinity of the changing unit.
- Do not use the changing unit if any part is broken or missing. Use only spare parts approved by the manufacturer.
- We recommend you use a changing mat with maximum dimension of 81cm x 46cm, placing the mat evenly inside the changing unit.
- The changing surface is designed for use from birth until 12 months, max weight 11 kg.
- All assembly fittings should be tightened properly and care should be taken to ensure that no screws are loose, as a child could trap parts of the body, or clothing (e.g. ribbons, drawstrings, necklaces) this could lead to strangulation.
- Regularly check that all fittings and components of the changing unit are fully tightened and in working order.
- Wood is a natural material, the colour will darken with age.
- During assembly children should be kept away from the product due to possible risk of injury.

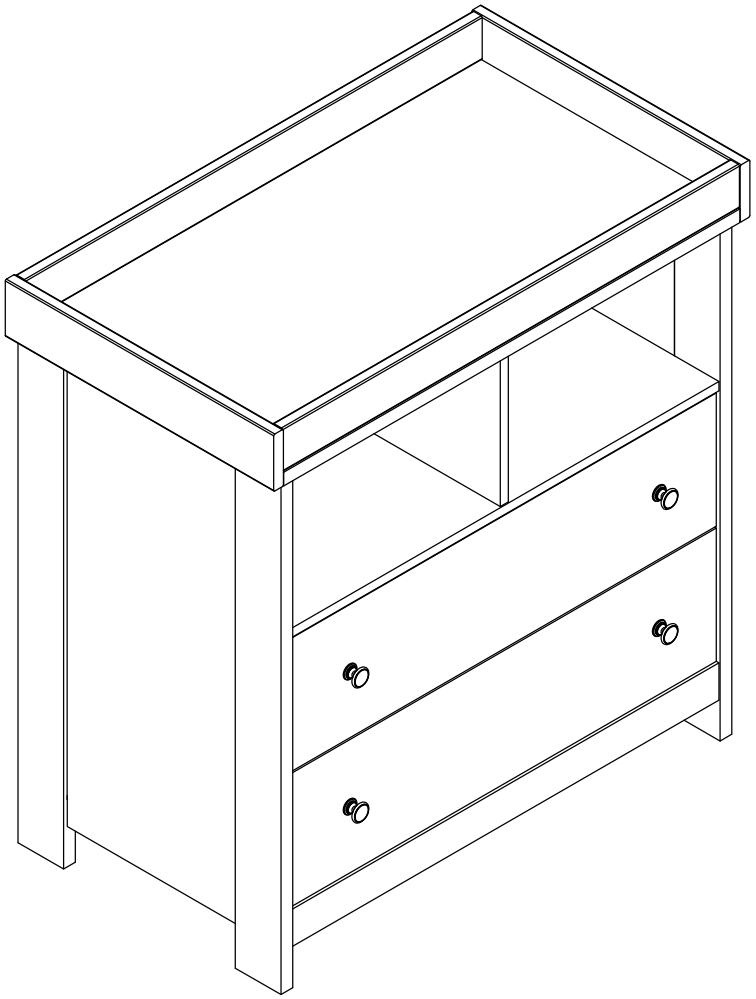


P1	ø8*30	30	
P2	M6*24mm	36	
P3	Ø15*12mm	36	
P4	ø9.5*3.5*15	22	
P5	ø8*4*45	10	
P6	ø9*9	10	
P7	ø3*ø5*20*13	2	
P8	ø30*24	4	
P9	M4*22	4	
P10	210*25mm	2	
P11	ø12*4*20	2	

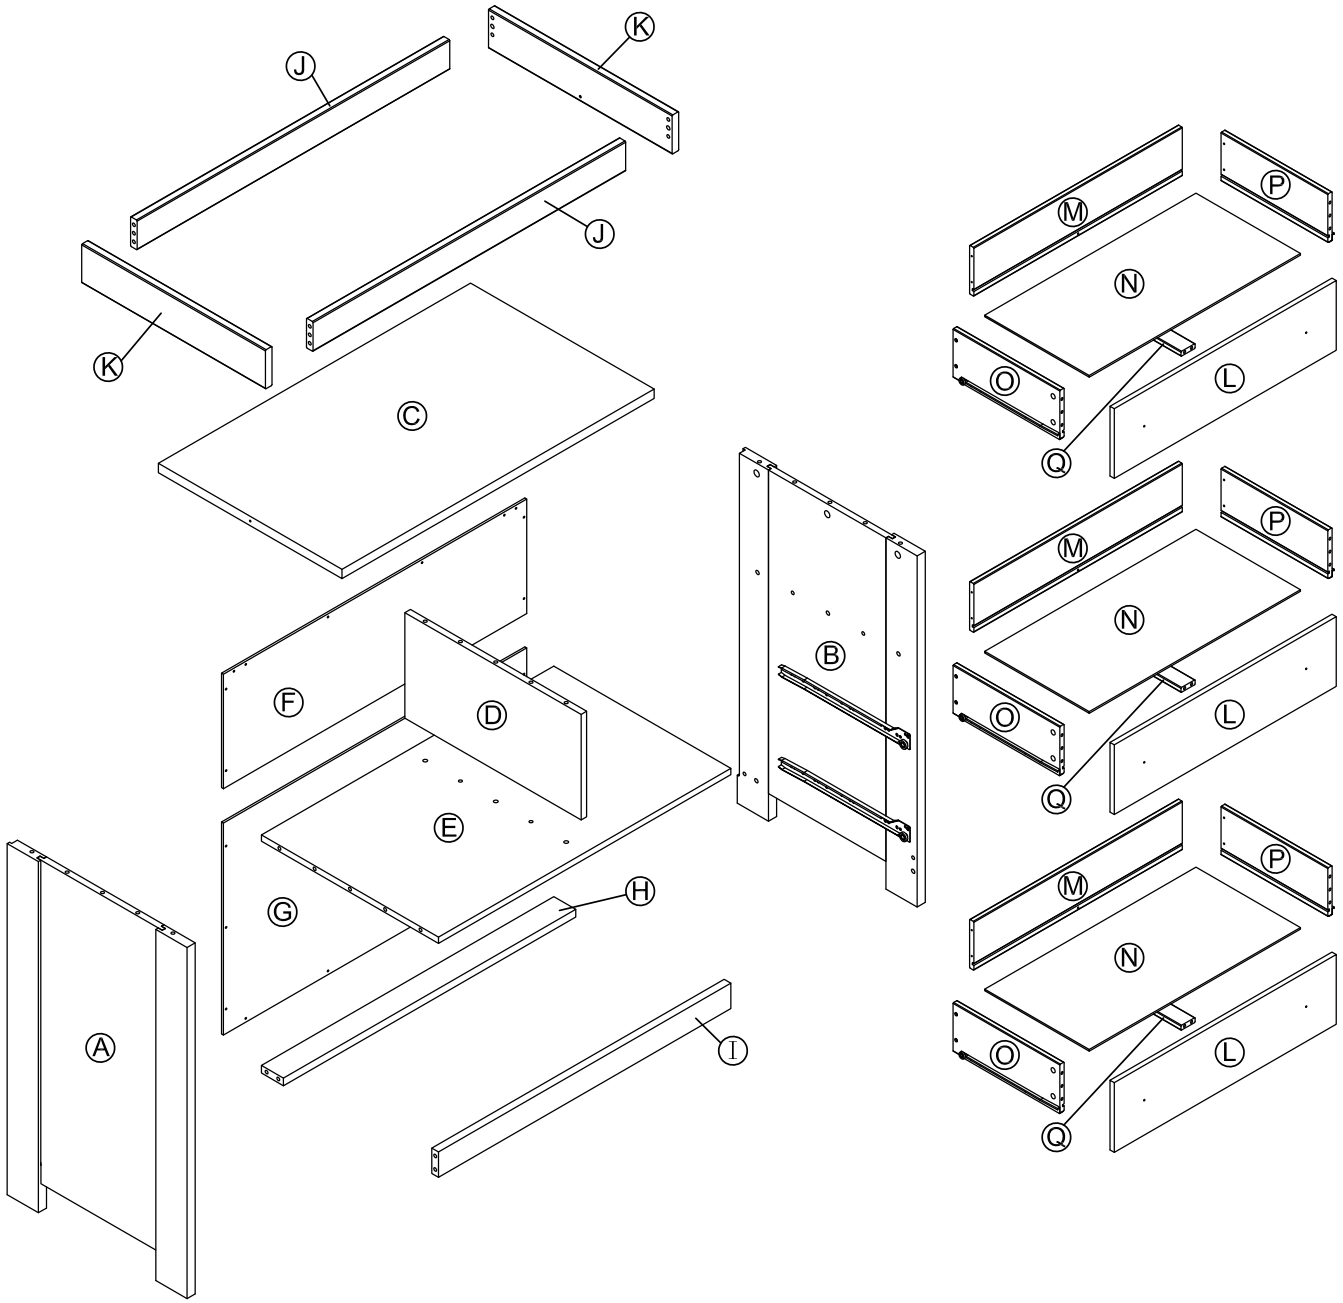
K
J
J
K
C
M
P
N
O
L
Q
M
P
N
O
L
Q
M
P
N
O
L
Q
B
F
D
E
G
H
A
I


Stage 1

P1: ϕ8*30=4

P2: M6*24=13

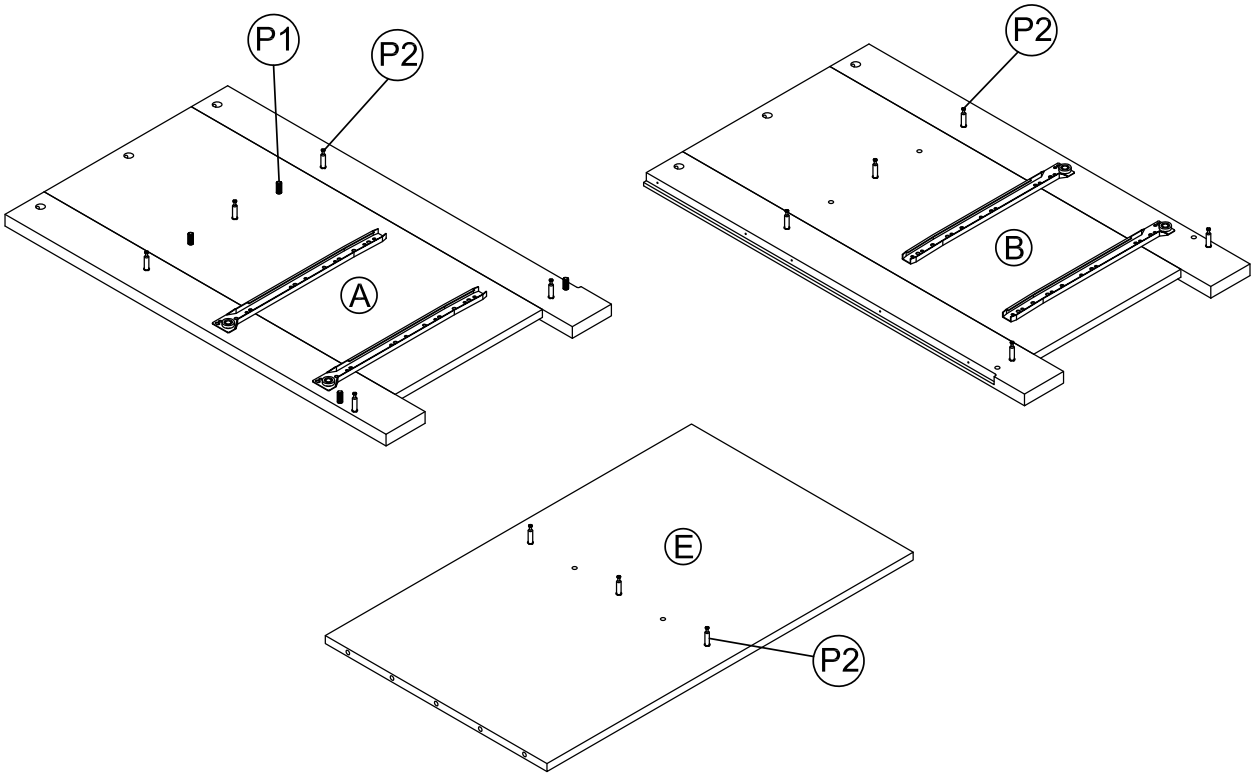


Stage 2

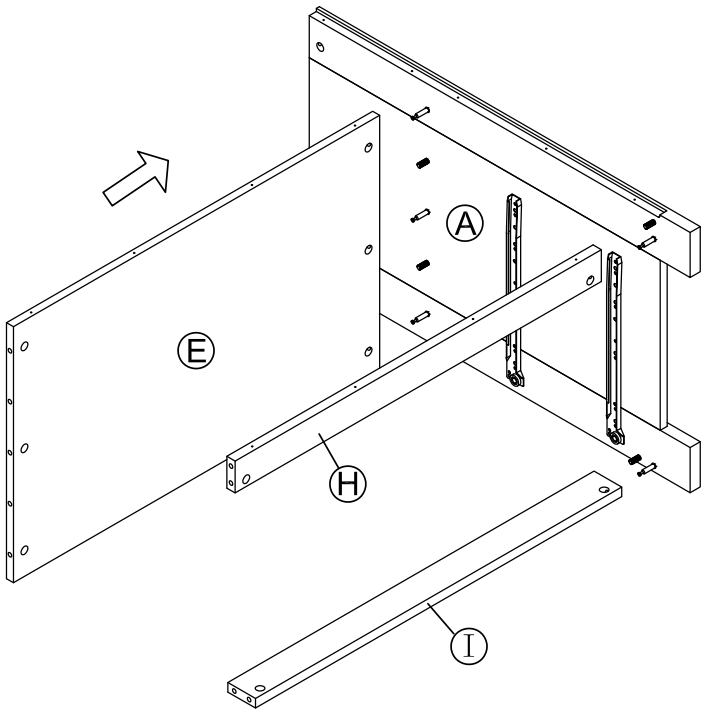


Stage 3

P3: Ø15*12mm=5

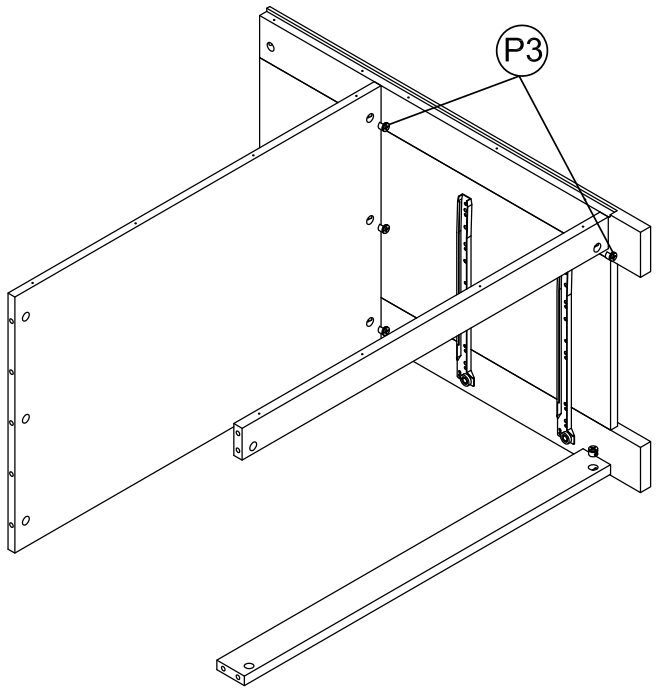


Stage 4

P1: ø8*30=4

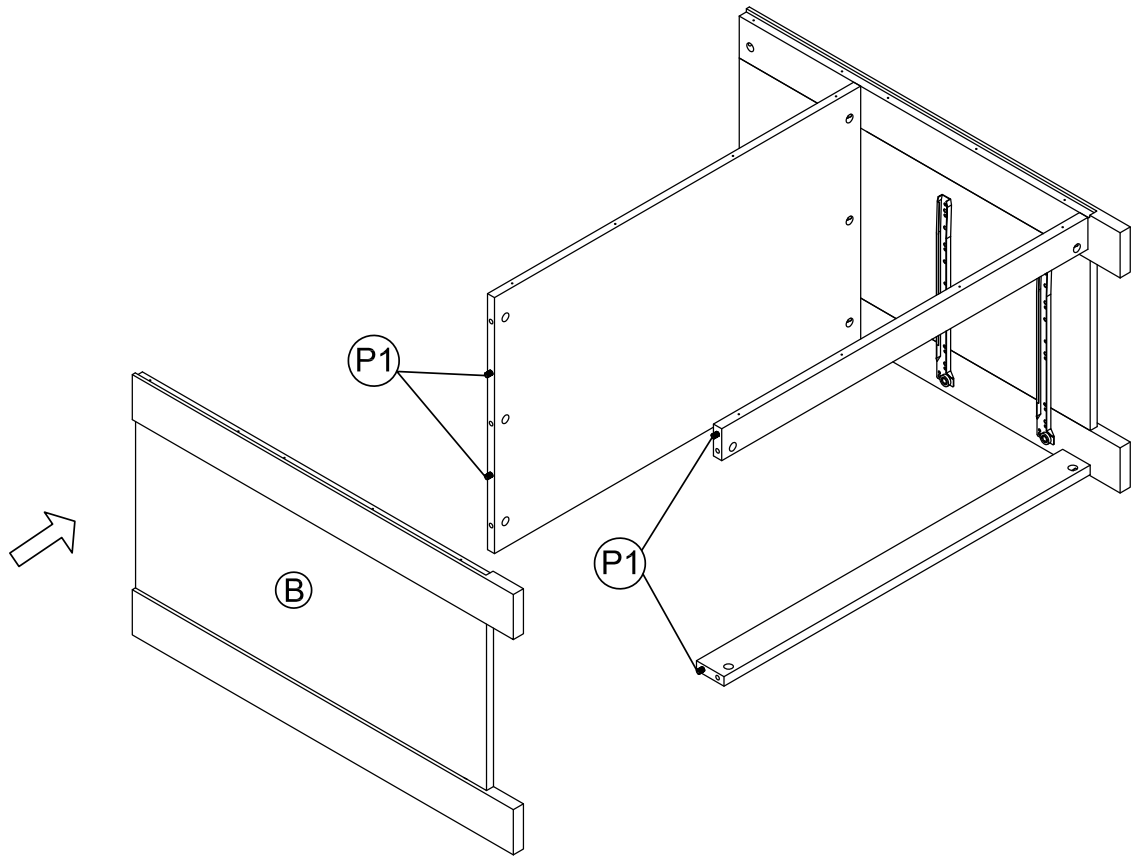


Stage 5

P3: Ø15*12mm=5

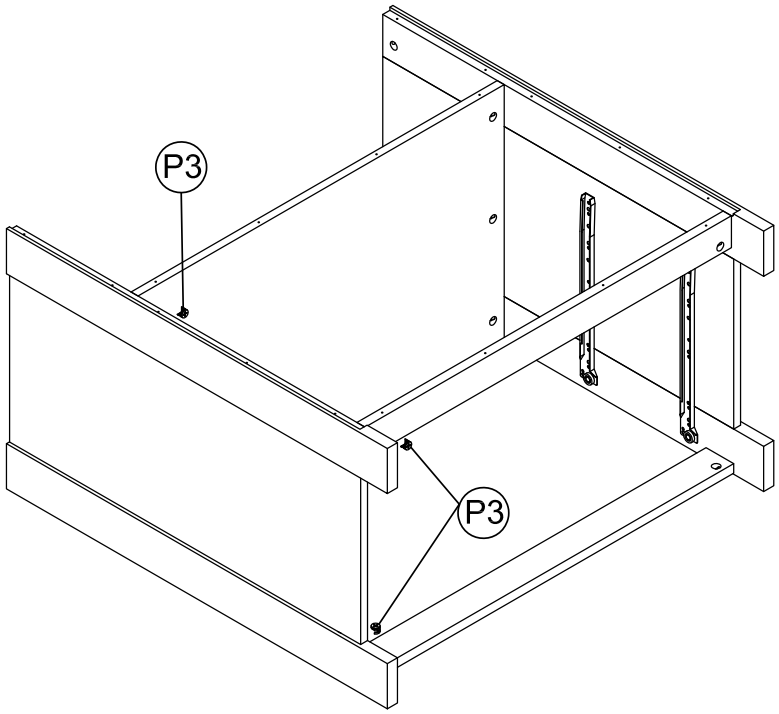

Stage 6


P1: ø8*30=2

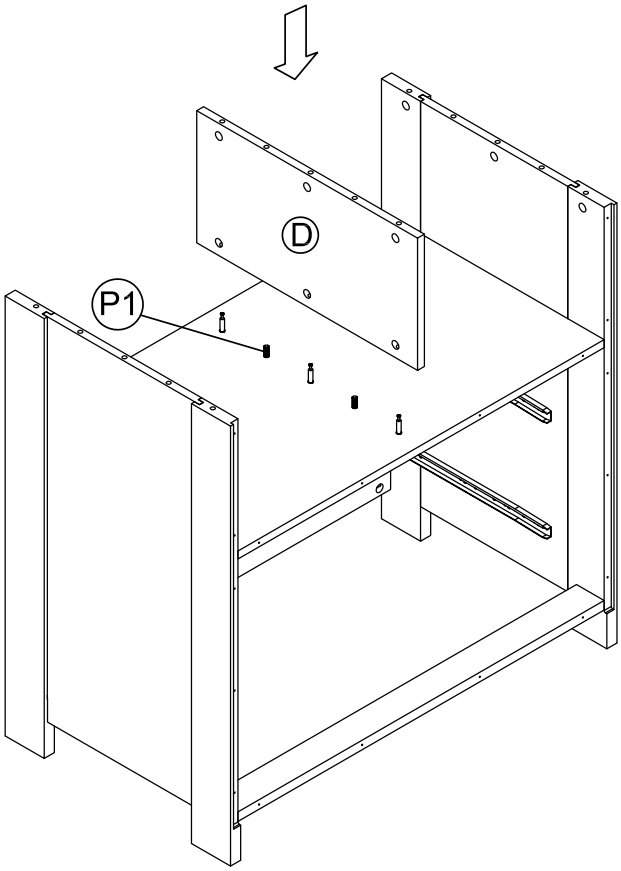

Stage 7


P1: ø8*30=6

P3: Ø15*12mm=3

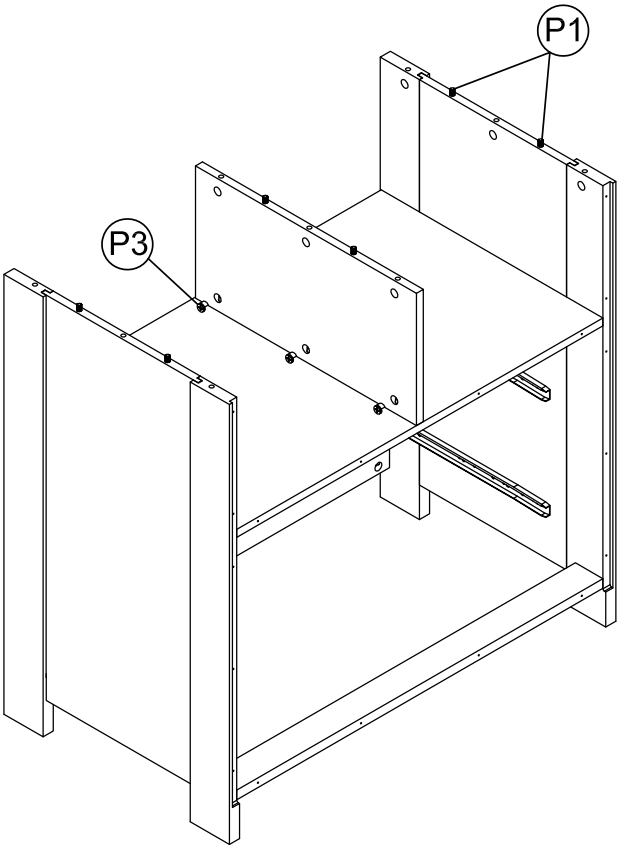


Stage 8

P2: M6*24=9

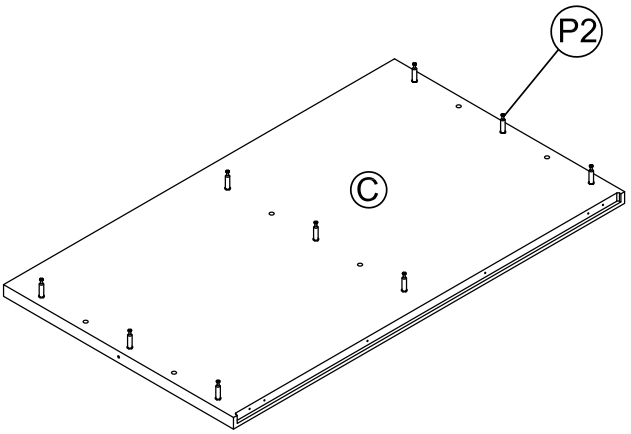


Stage 9

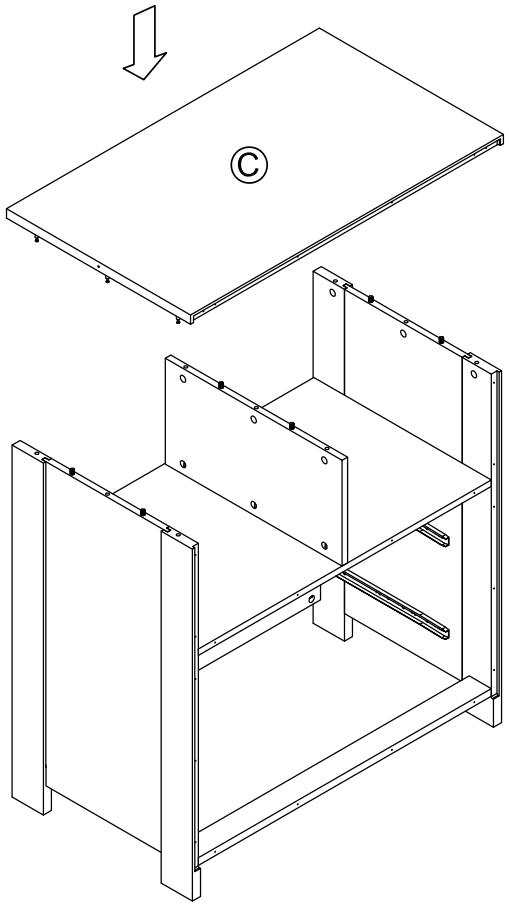


Stage 10

P3: Ø15*12mm=9

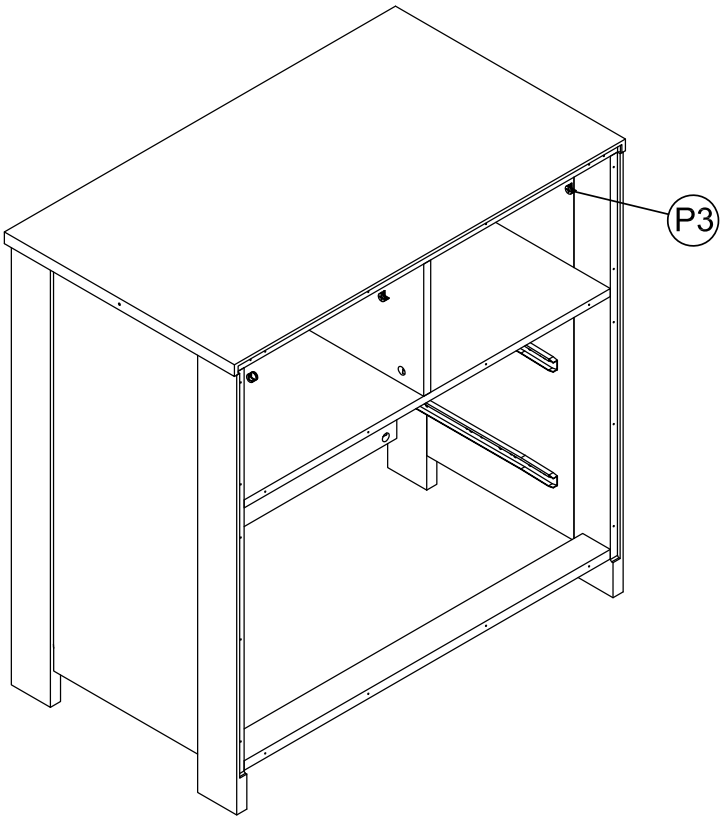

Stage 11


P4: ϕ9.5*3.5*15=22

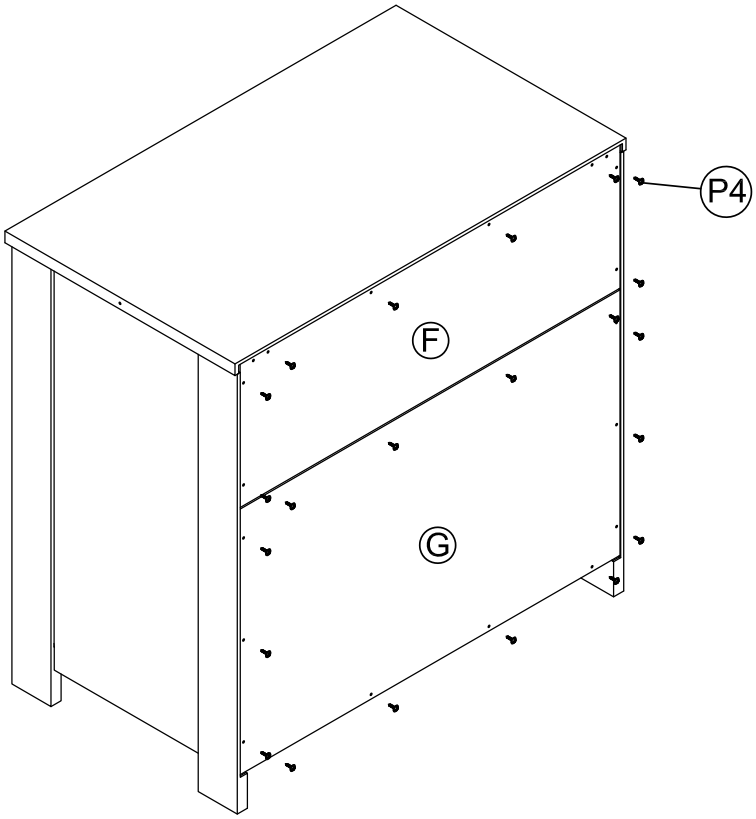

Stage 12

P10: 210*25=2

P11: ϕ12*4*20=2

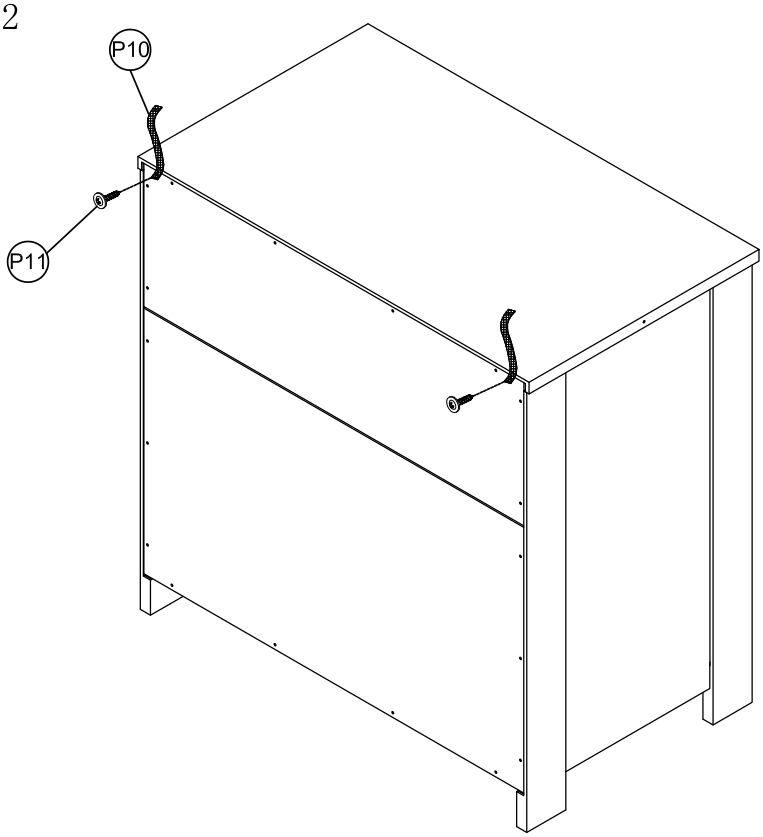


Stage 13


P1:ø8*30=8

P2: M6*24=4

P7:ø3*ø5*20*13=2

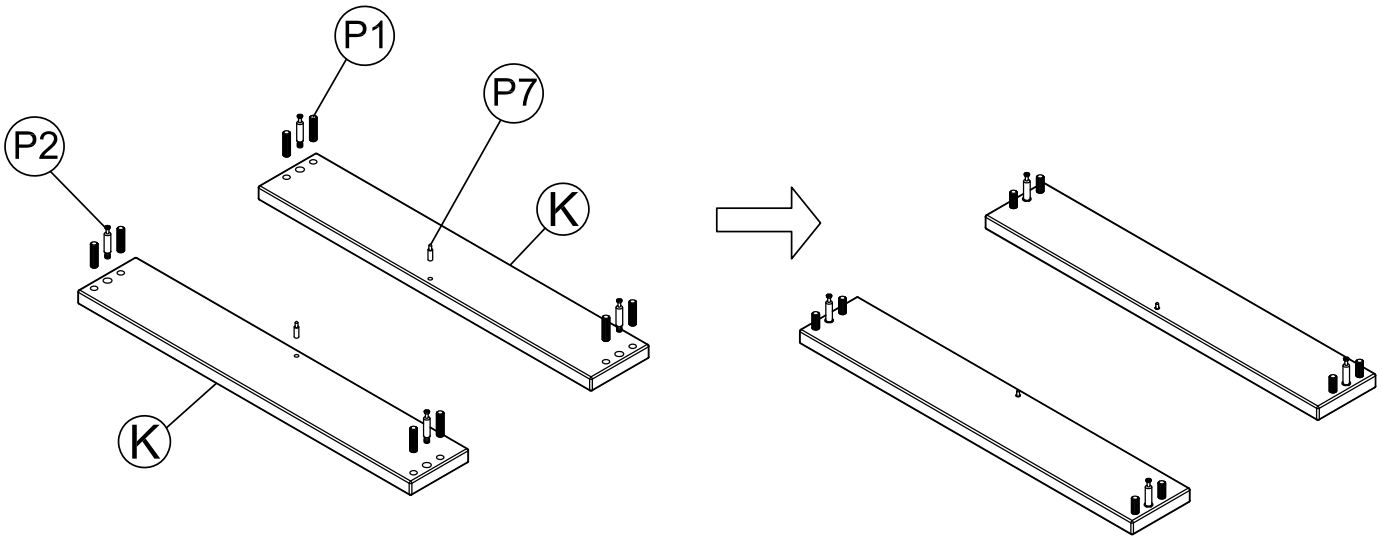


Stage 14

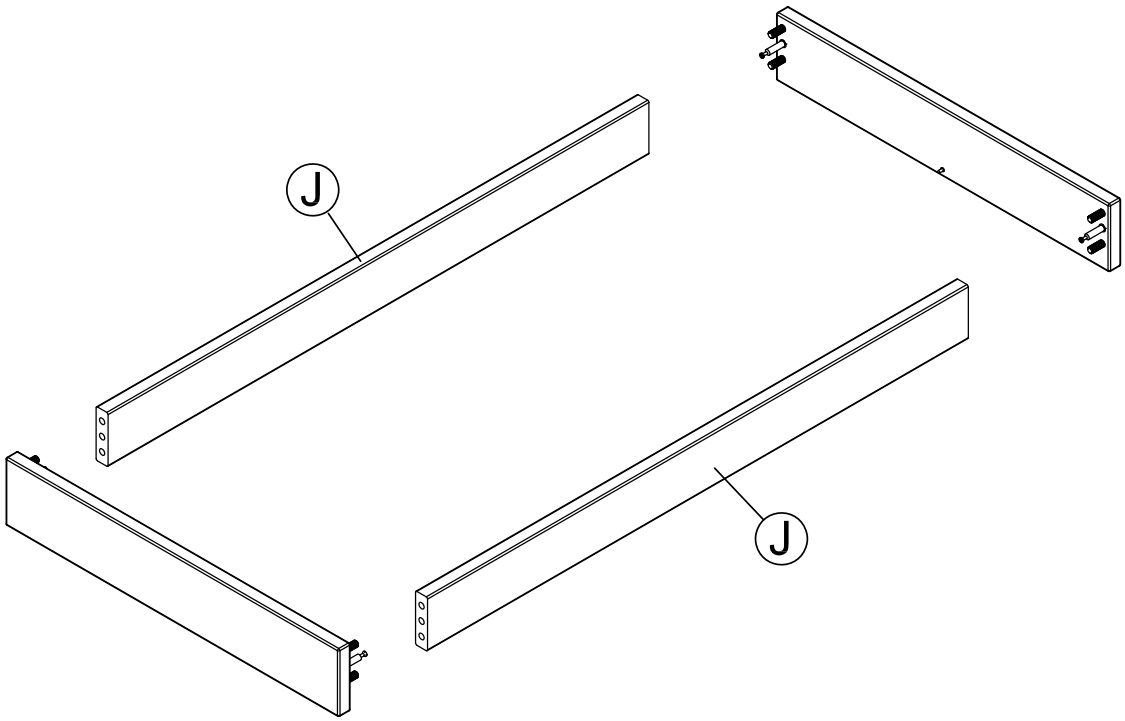



Stage 15

P3: Ø15*12mm=4

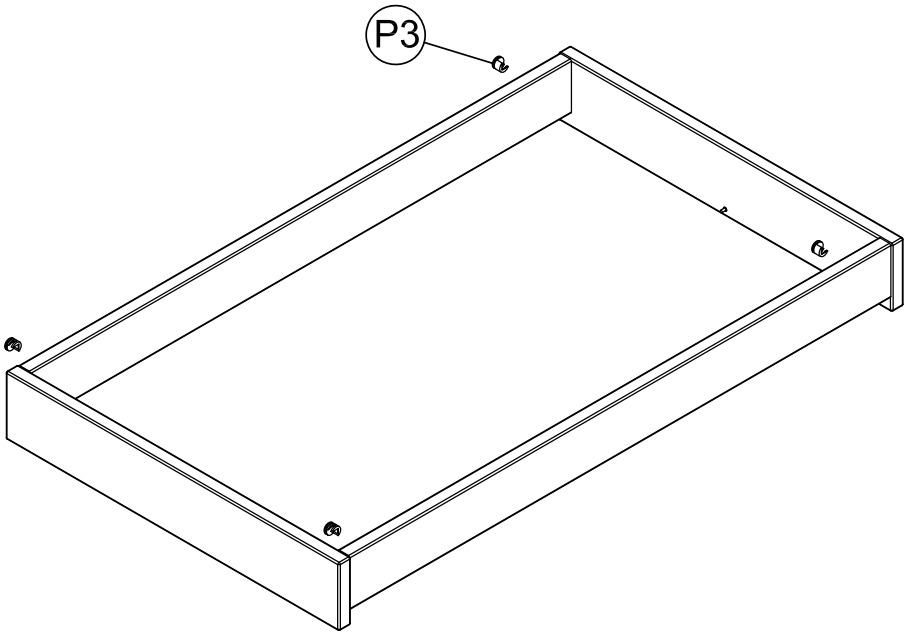

Stage 16

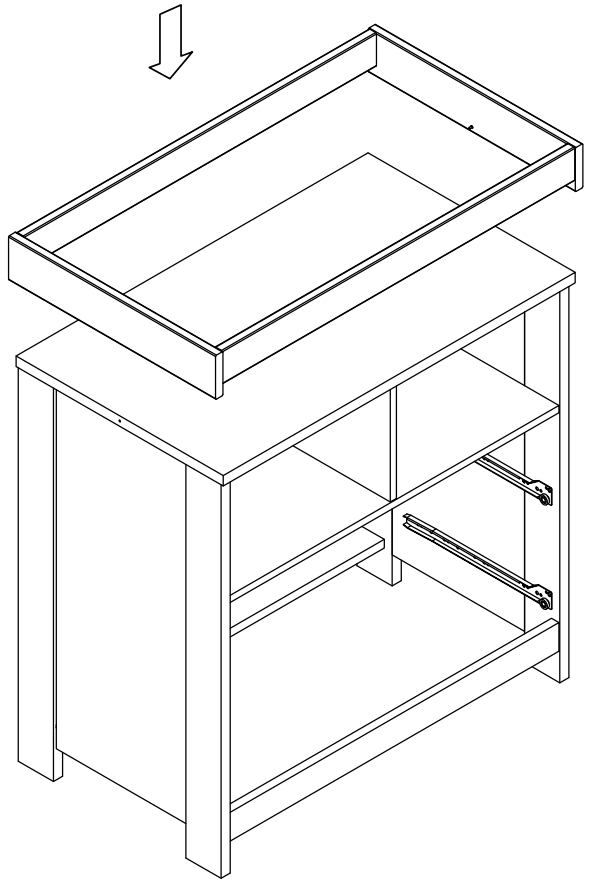


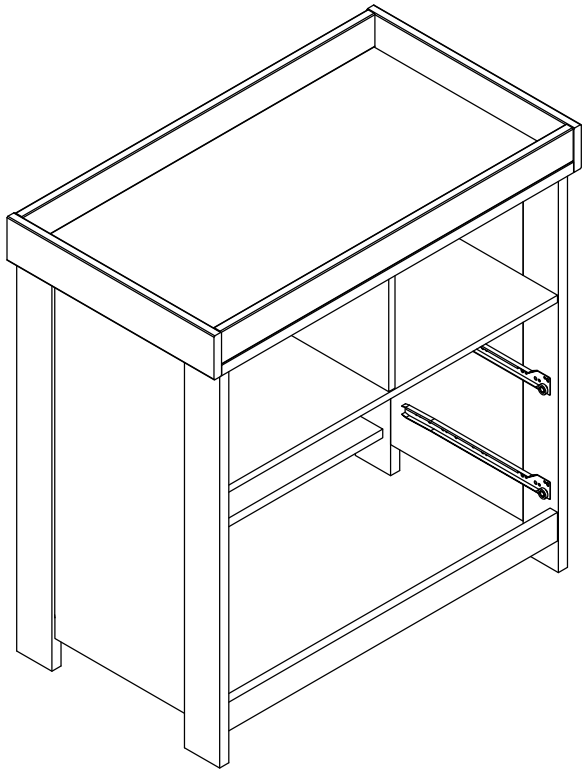

Stage 17


P1:ø8*30=3x2=6

P2: M6*24=5x2=10

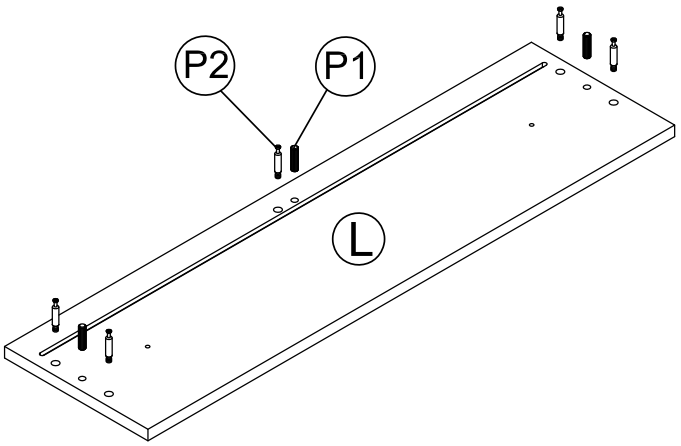

pcs x 2


Stage 18

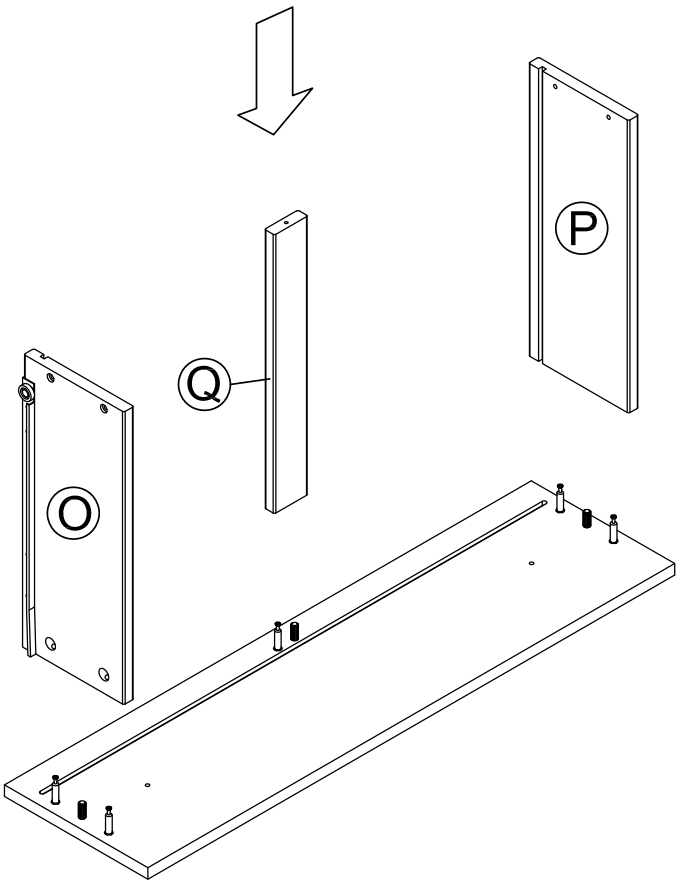

pcs x 2

Stage 19

P3: Ø15*12mm=5x2=10

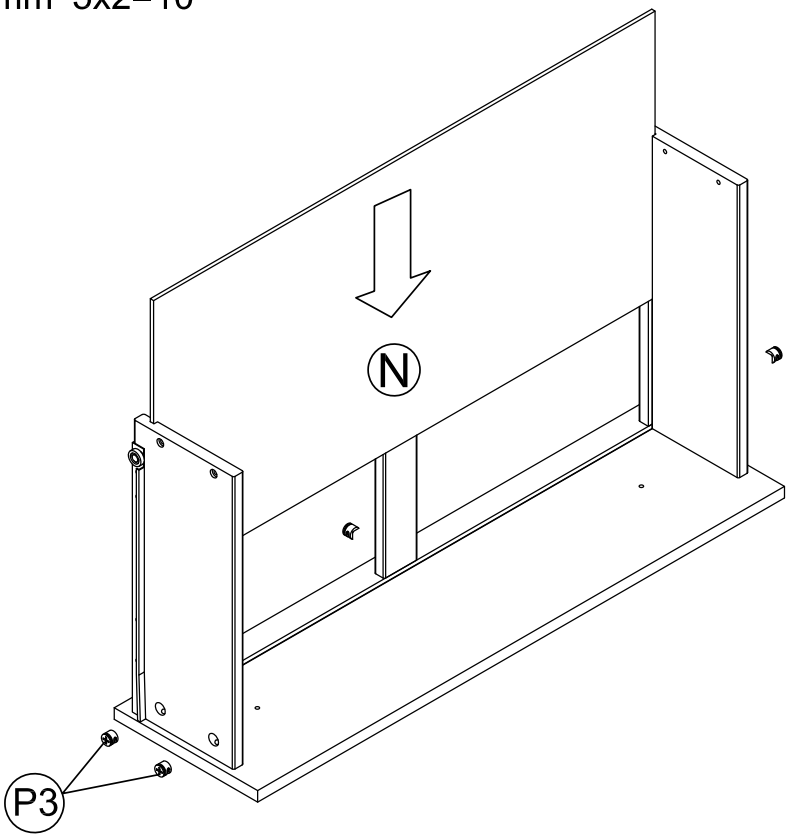


pcs x 2

Stage 20

P5: Ø8*4*45=5x2=10

P6: Ø9*9=5x2=10

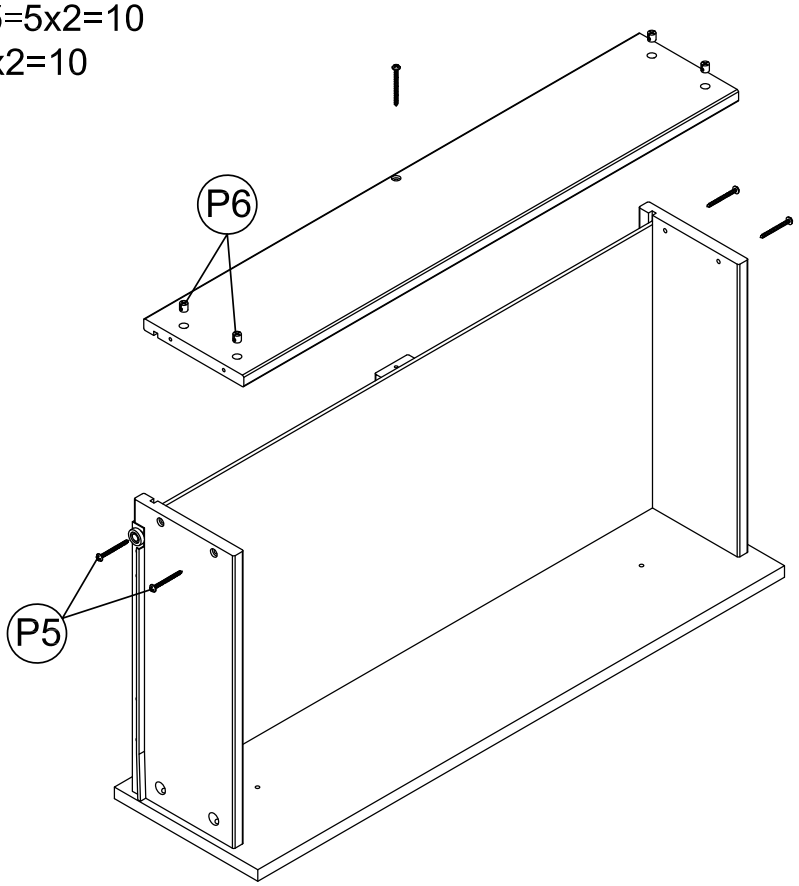


pcs x 2

Stage 21


P8: φ30*24=2x2=4

P9: M4*22=2x2=4

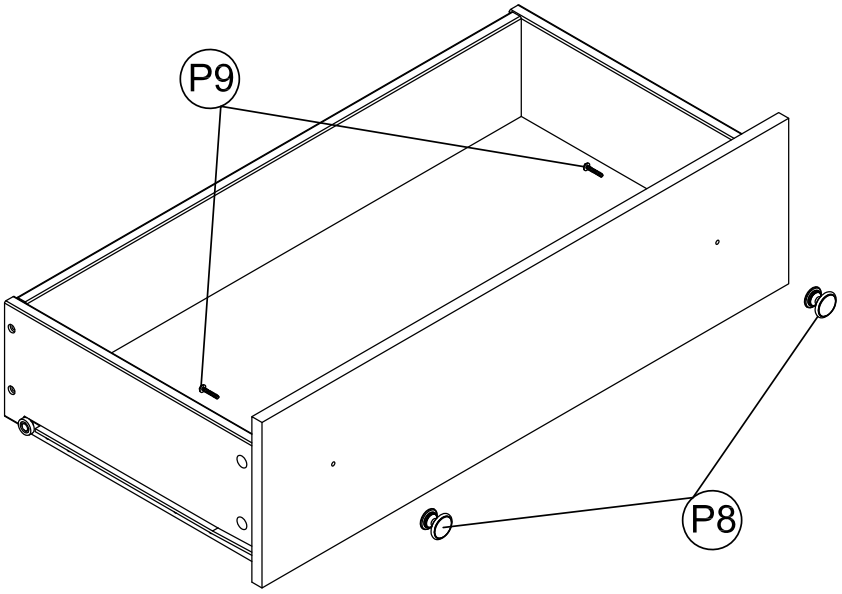

pcs x 2

Stage 22

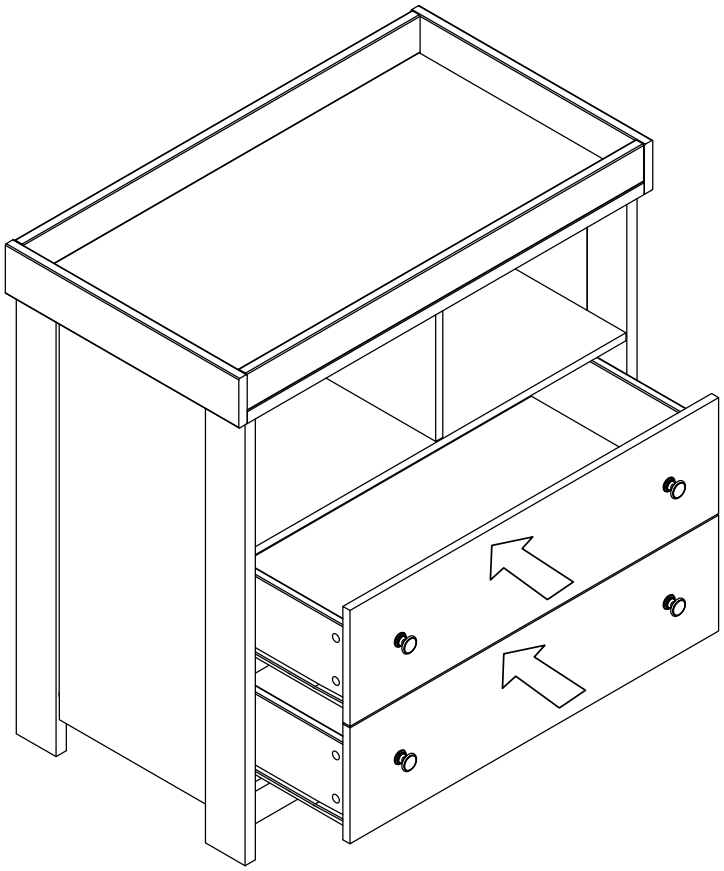

WALL STRAP INFORMATION

Never modify or change the wall strap in anyway. Never use any other fittings other than those supplied to attach the wall strap to the dresser.

The wall strap provided is to be used with this product only.

Never use the screws provided to attach the strap to the wall. All walls are of different composition and it is important that the correct wall fittings are used. Consult a professional before attempting to attach the strap to the wall. No wall fittings are supplied with this product.

The wall strap must not be used to replace any other fittings supplied with this piece of furniture.

We recommend the wall strap is used in all cases. To improve the stability of the furniture an even wood or tiled floor is best. A carpeted or warped floor can enable the furniture to rock, increasing the potential of the furniture to fall over.

ROUTINE CARE & MAINTENANCE

Regularly check that all fittings and components are fully tightened and in working order.

- For cleaning use only a mild detergent and warm water.
- DO NOT USE BLEACH.
- DO NOT USE any abrasive substances.
- Take care when handling or moving furniture, careless handling can damage wooden furniture.

Due to constant updating and improvements, some components may occasionally differ slightly from the images shown in these instructions. We reserve the rights to change the specifications of any products without prior notice. If you need any assistance please contact your Bebe & Beyond retailer from whom you purchased your product, who will take appropriate action.

CONTACT US
Email: customerservice@bebeandbeyond.co.uk

bebe
& Beyond

LPD Home, Midland House, Midland Road, Hunslet, Leeds, LS10 2RJ

Authorised Rep Compliance Ltd, Ground Floor, 71 Lower Baggot Street, Dublin, D02 P593, Ireland.

www.bebeandbeyond.co.uk

The Seeker Wardrobe

IMPORTANT! RETAIN FOR FUTURE REFERENCE. READ CAREFULLY

bebe & Beyond


bebeandbeyond.co.uk




This wardrobe conforms to BS EN 14749:2016.
To ensure that your wardrobe is used in accordance with these instructions, please read them fully. Your child's safety may be affected if you do not follow these instructions. Assembly should be carried out by a competent adult only.
WARNING Installation shall be carried out exactly according to the manufacturers instructions – otherwise a safety risk can occur if incorrectly installed.
WARNING In order to prevent tipping this product must be used with the wall attachment devices provided. Serious or fatal crushing injuries can occur from furniture tipping over.
• Be aware of the risk of open fire and other sources of heat, such as electric bar fires, gas fires, etc. in the near vicinity of the wardrobe.
• Do not use the wardrobe if any part is broken or missing. Use only spare parts approved by the manufacturer.
• All assembly fittings should be tightened properly and care should be taken to ensure that no screws are loose, as a child could trap parts of the body, or clothing (e.g. ribbons, drawstrings, necklaces) this could lead to strangulation.
• Regularly check that all fittings and components of the changing unit are fully tightened and in working order.
• Wood is a natural material, the colour will darken with age.
• During assembly children should be kept away from the product due to possible risk of injury.

WARNING IN ORDER TO PREVENT TIPPING THIS PRODUCT MUST BE USED WITH THE WALL ATTACHMENT DEVICES PROVIDED.

Serious or fatal crushing injuries can occur from furniture tipping over. To help prevent
tipping:
• Use the wall attachment devices provided
• Never allow children to climb or hang on drawers, doors or shelves
• Place heaviest items in the lower drawers or shelves
• Do not set TVs or other heavy objects on top of this product
• Never open more than one drawer at a time.
Attachment devices are provided with your product, however you will need to source suitable fixings for your wall type. If in doubt, please consult a qualified tradesperson. Always ensure the wall to be drilled is free from hidden electrical wires, water and gas pipes.

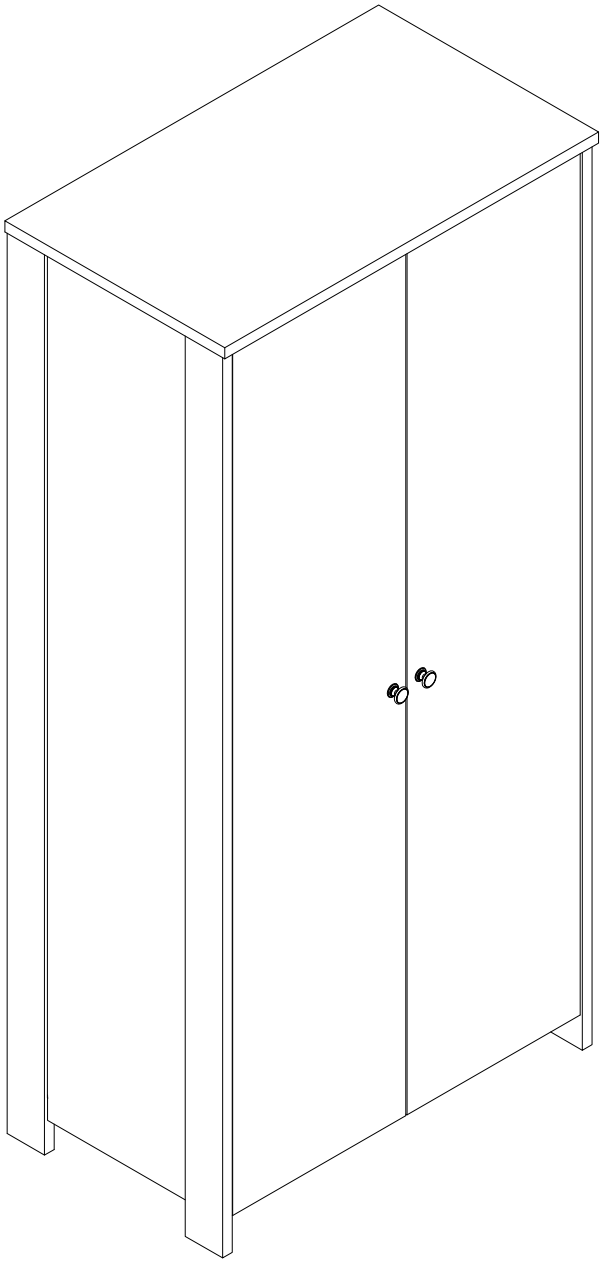


P1	ϕ8*30	20	
P2	M6*24mm	28	
P3	Ø15*12mm	28	
P4	ϕ9.5*3.5*15	34	
P5	46.5*19.4*12	4	
P6	ϕ7*3.5*14	8	
P7	35杯	6	
P8	ϕ7*3.5*16	36	
P9	ϕ30*24	2	
P10	M4*25	2	
P11	210*25mm	2	
P12	ϕ12*4*20	2	

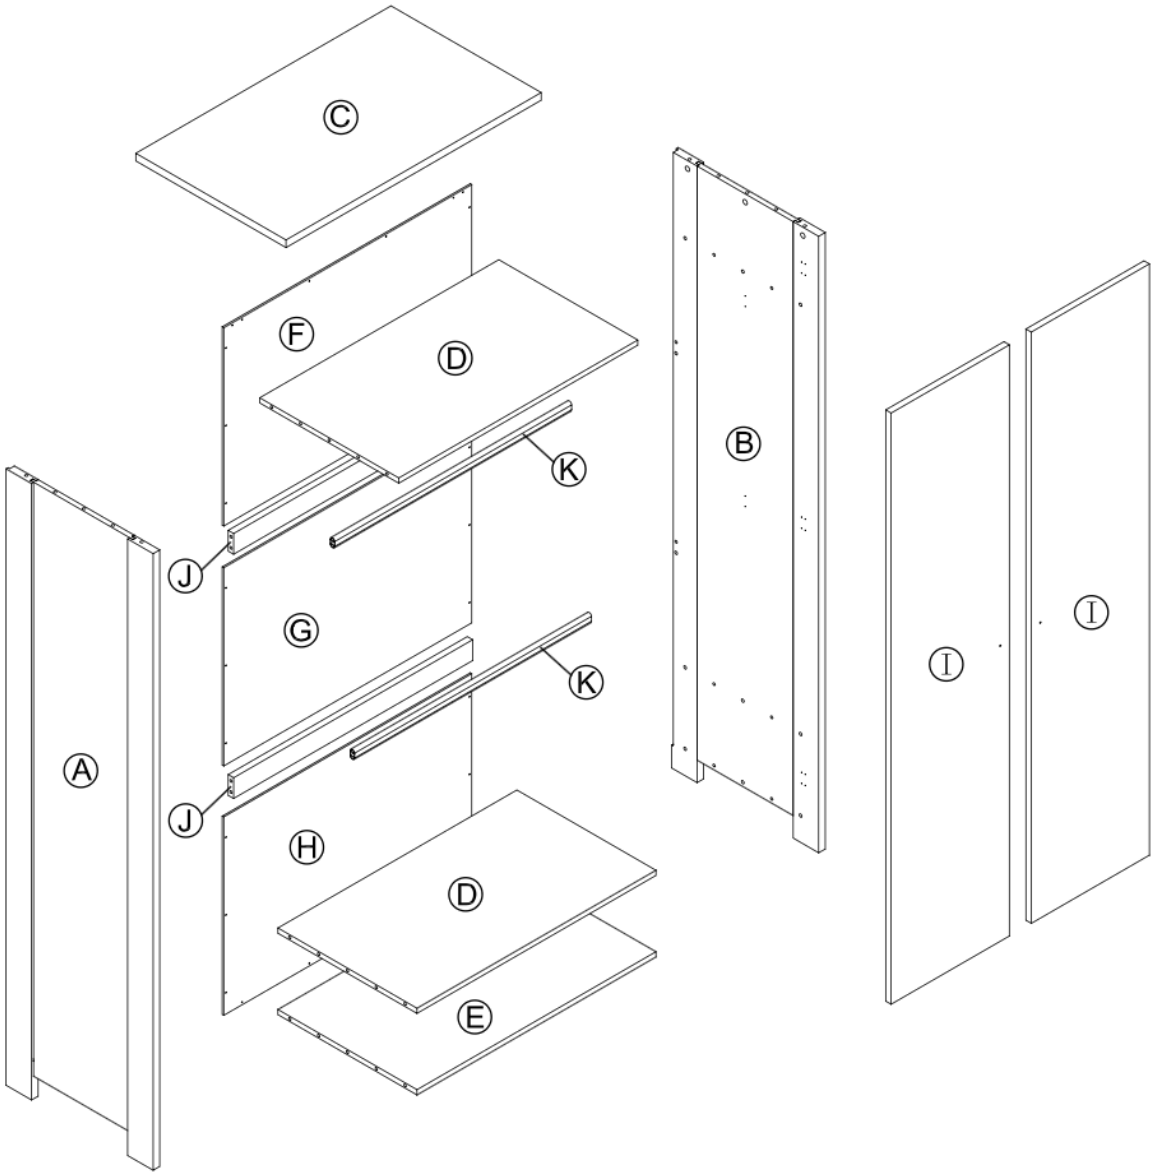

C
F
D
K
J
G
K
J
H
D
E
A
B
I
I

Stage 1

P1: ø8*30=8
P2: M6*24=22
P5: 挂衣杆底座=4
P6: Ø7*3.5*14=8

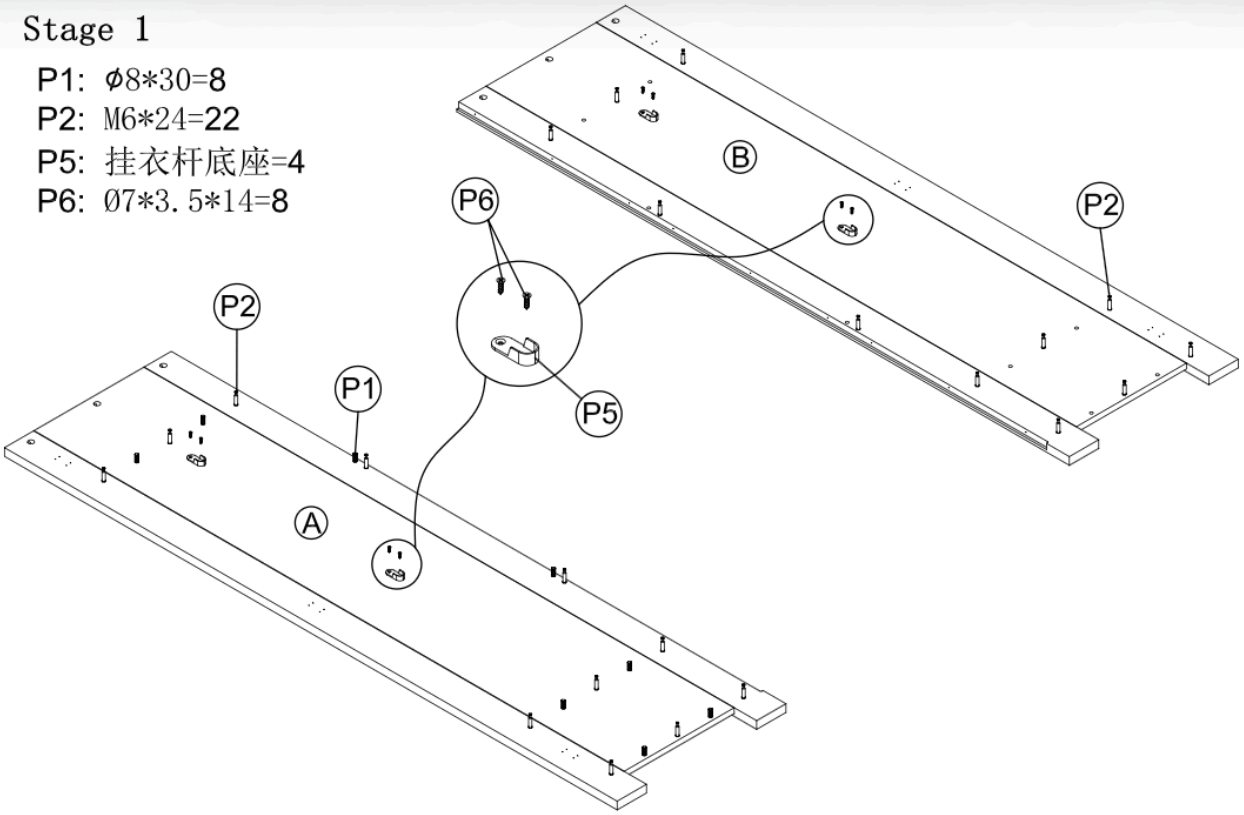


Stage 2

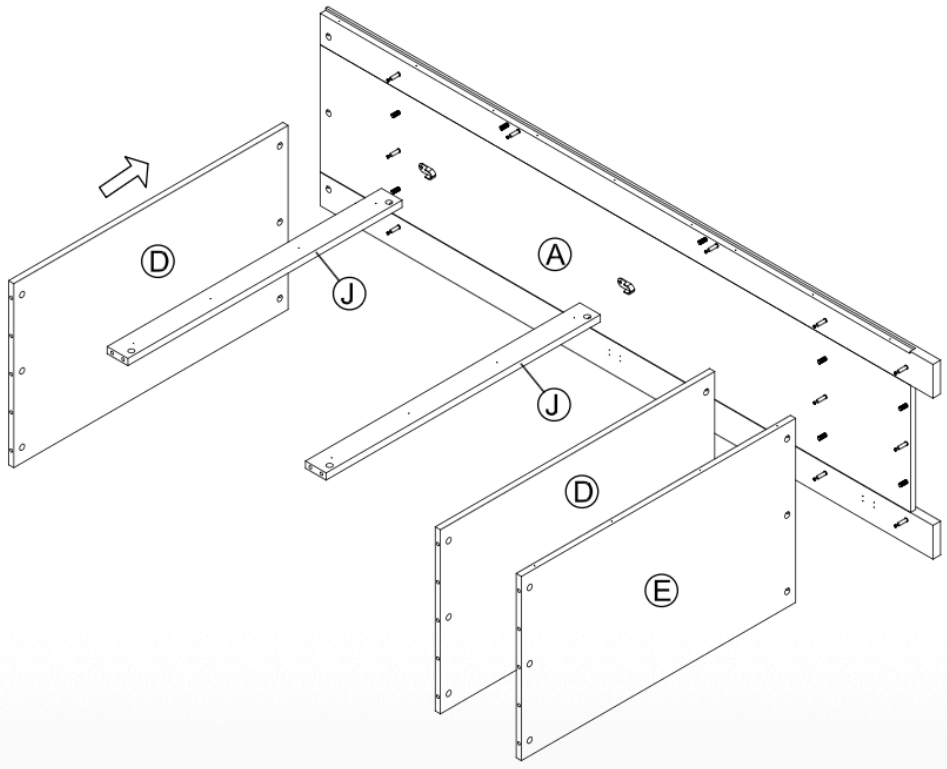


Stage 3

P1: ϕ8*30=8

P3: Ø15*12mm=11

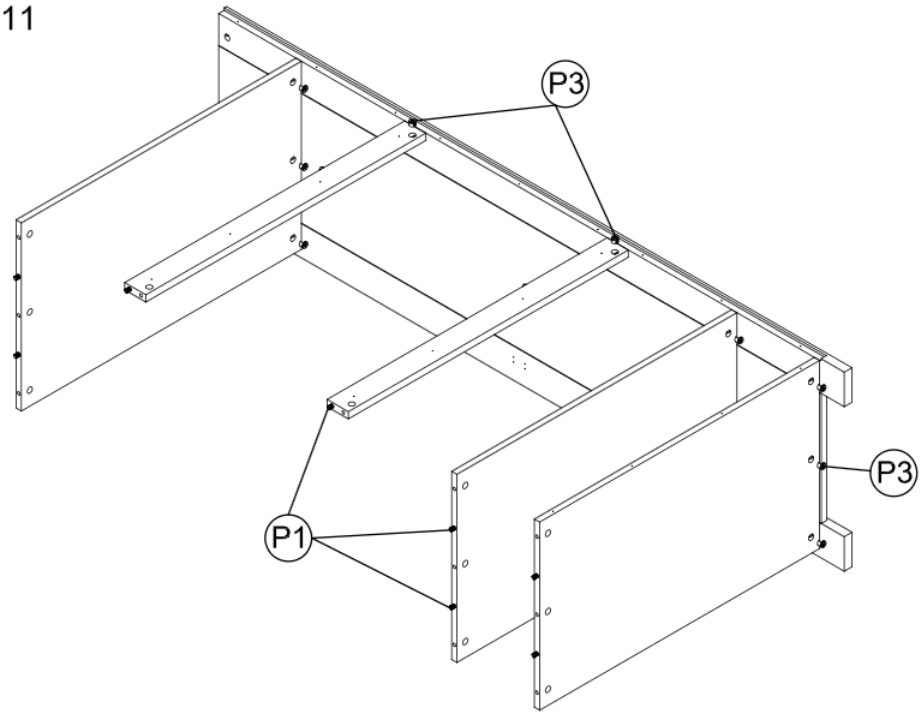


Stage 4

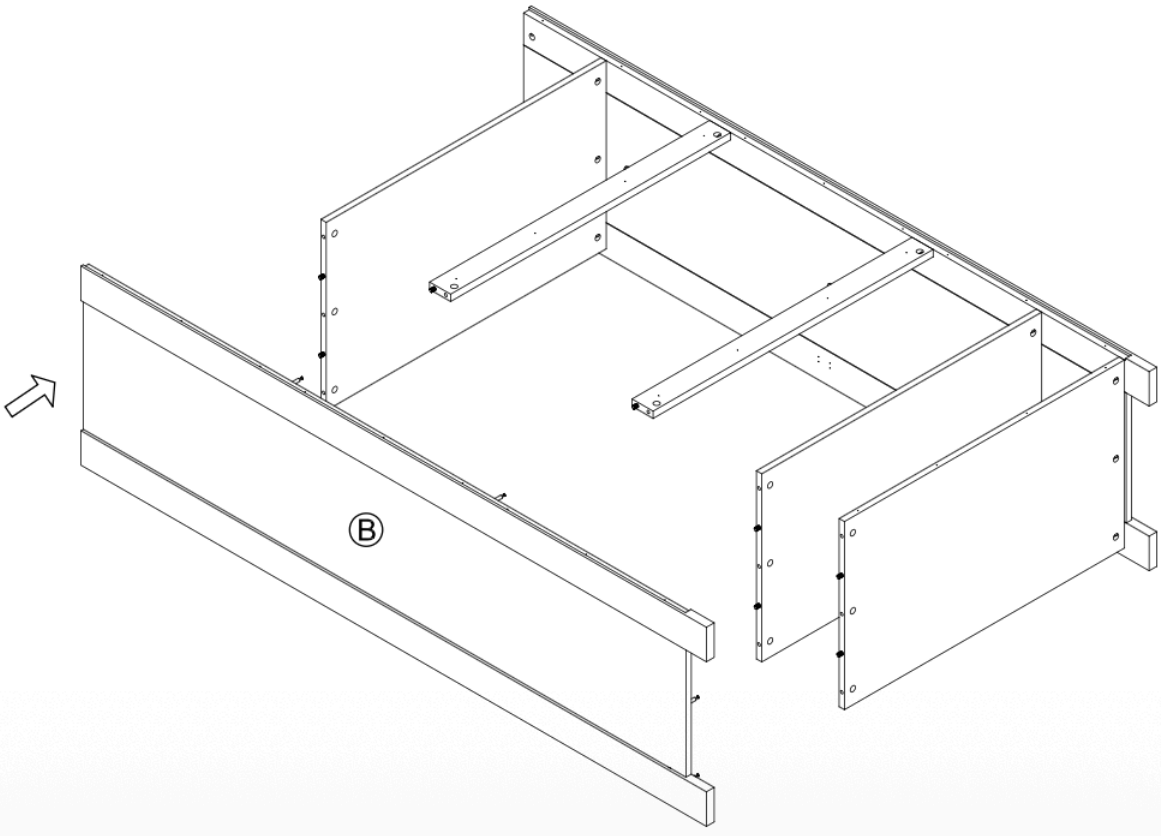

Stage 5


P1: ø8*30=4

P3: Ø15*12mm=11

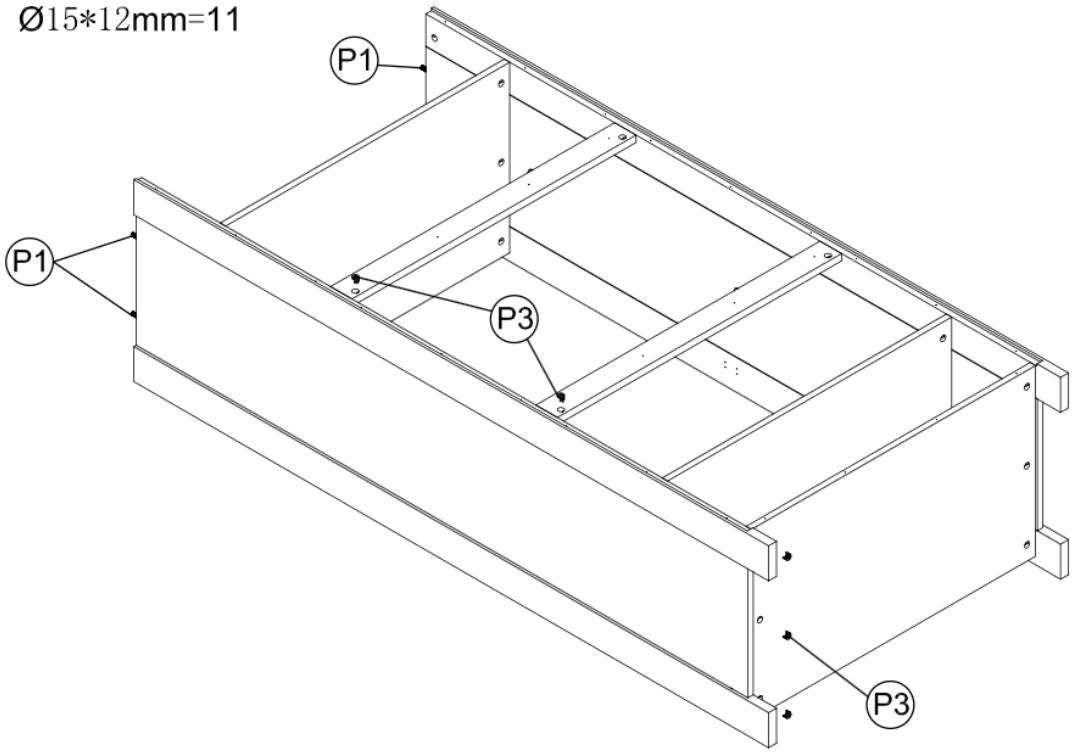


Stage 6

P2: M6*24=6

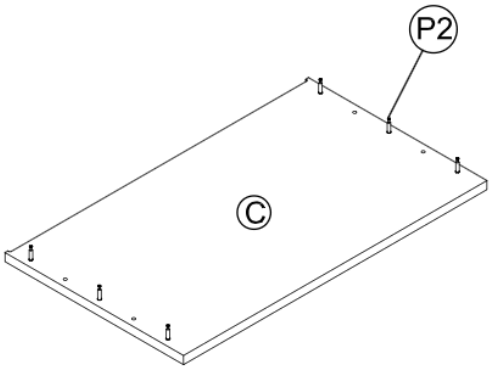


Stage 7

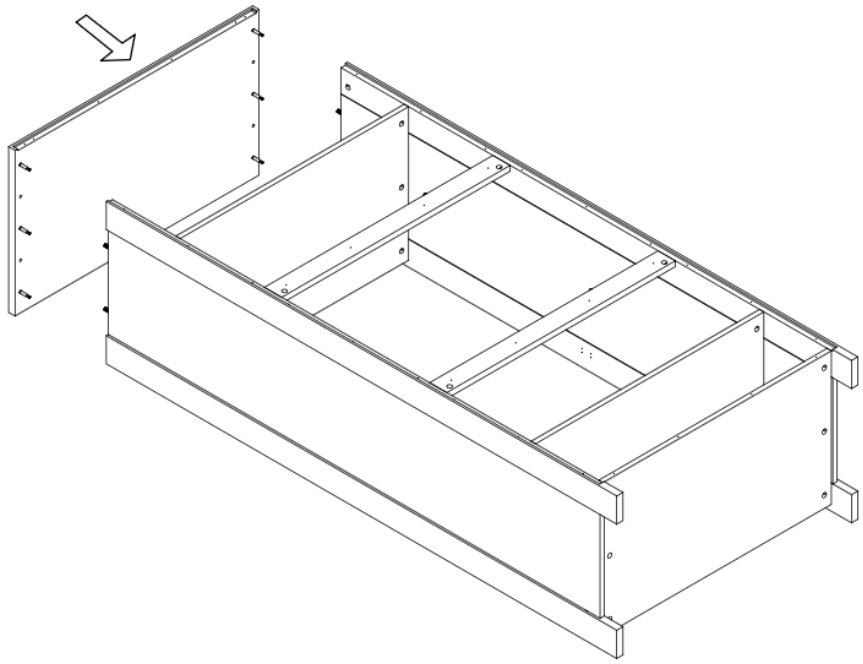


Stage 8

P3: Ø15*12mm=6

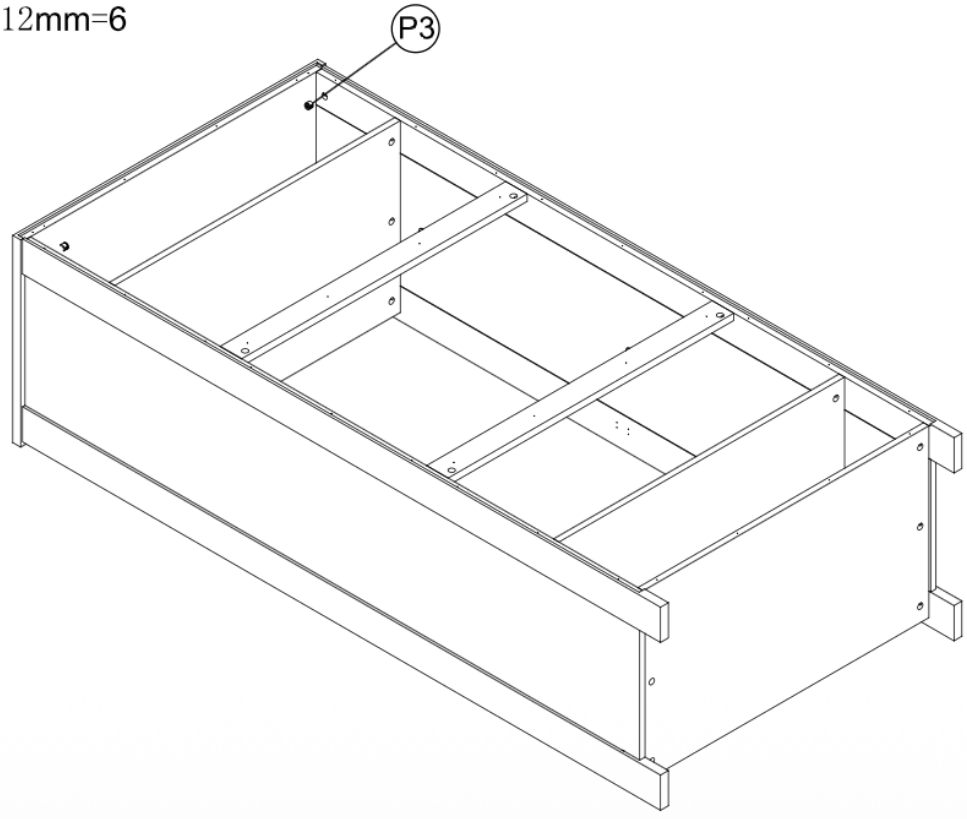

Stage 9


P4: ø9.5*3.5*15=34

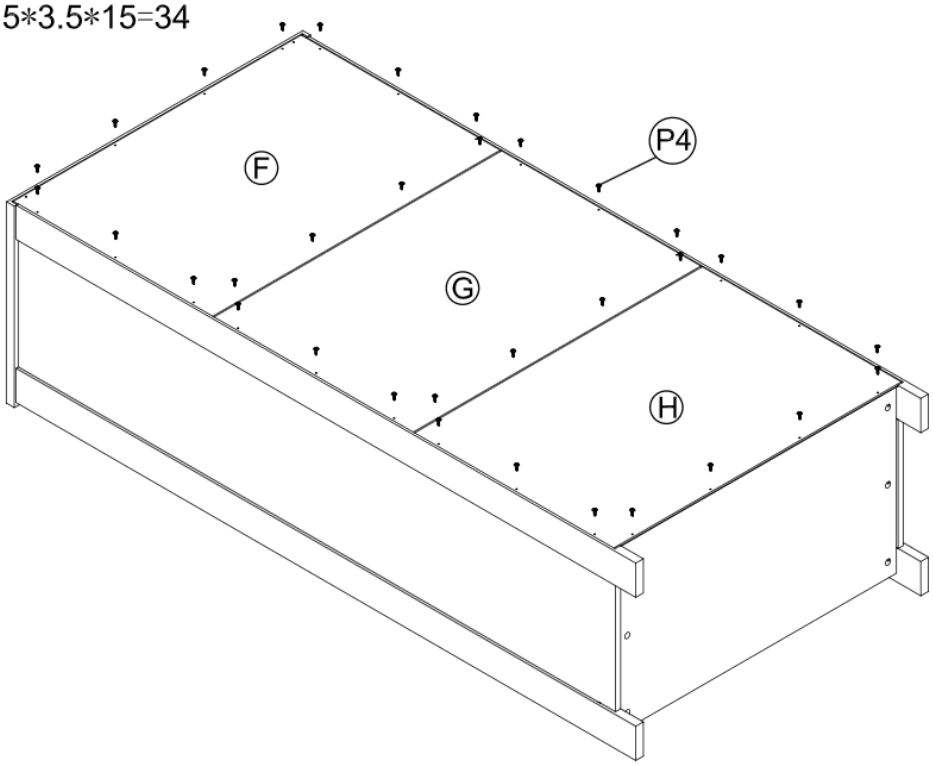


Stage 10

P11: 210*25=2

P12: ø12*4*20=2

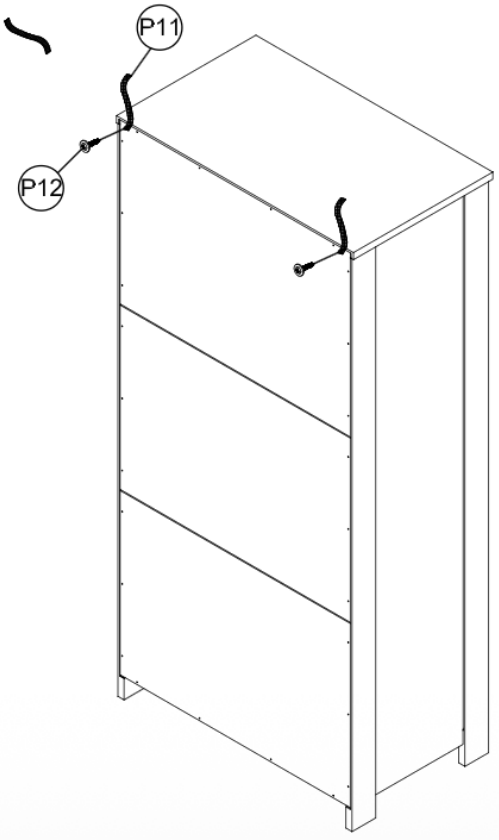


Stage 11

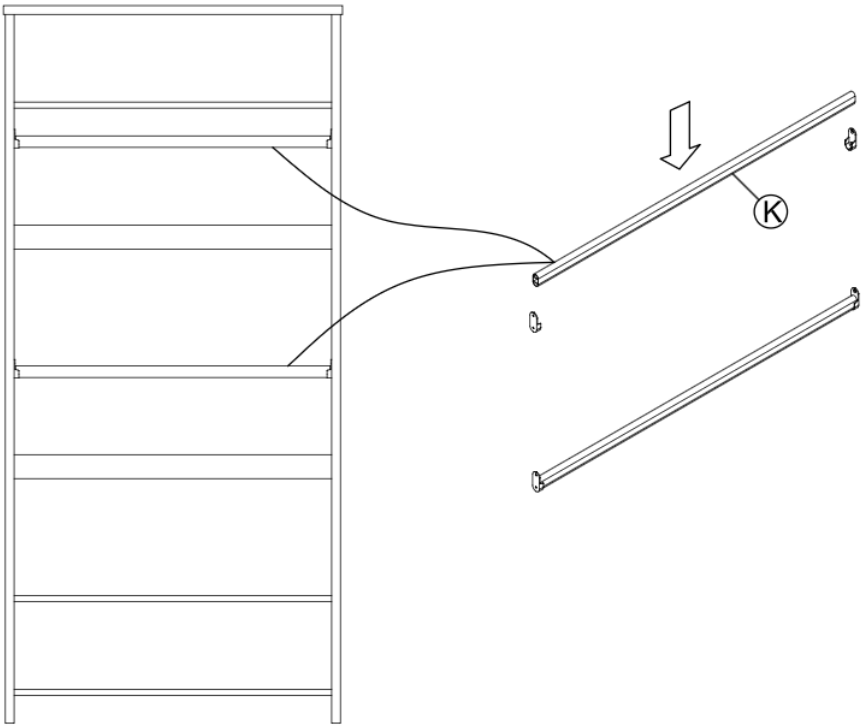

Stage 12


P7: 门铰链=6

P8: ø7*3.5*16=6x2=12

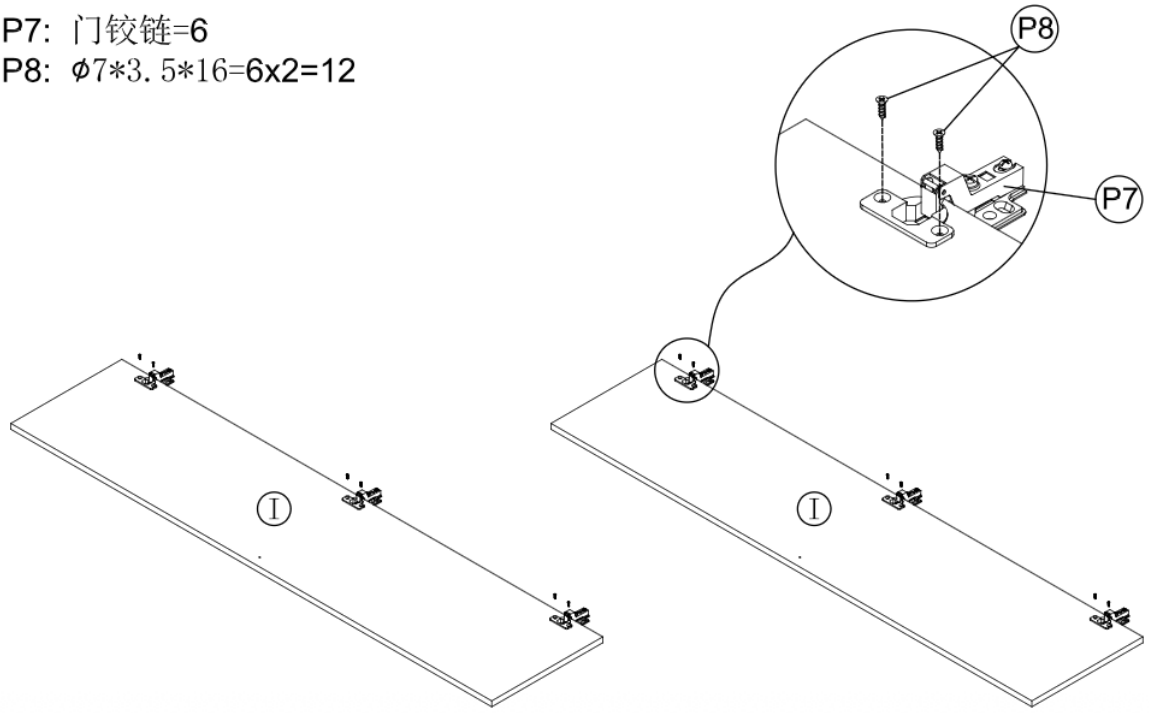

Stage 13

P8: φ7*3.5*16=4x6=24
P9: φ30*24=2
P10: M4*25=2

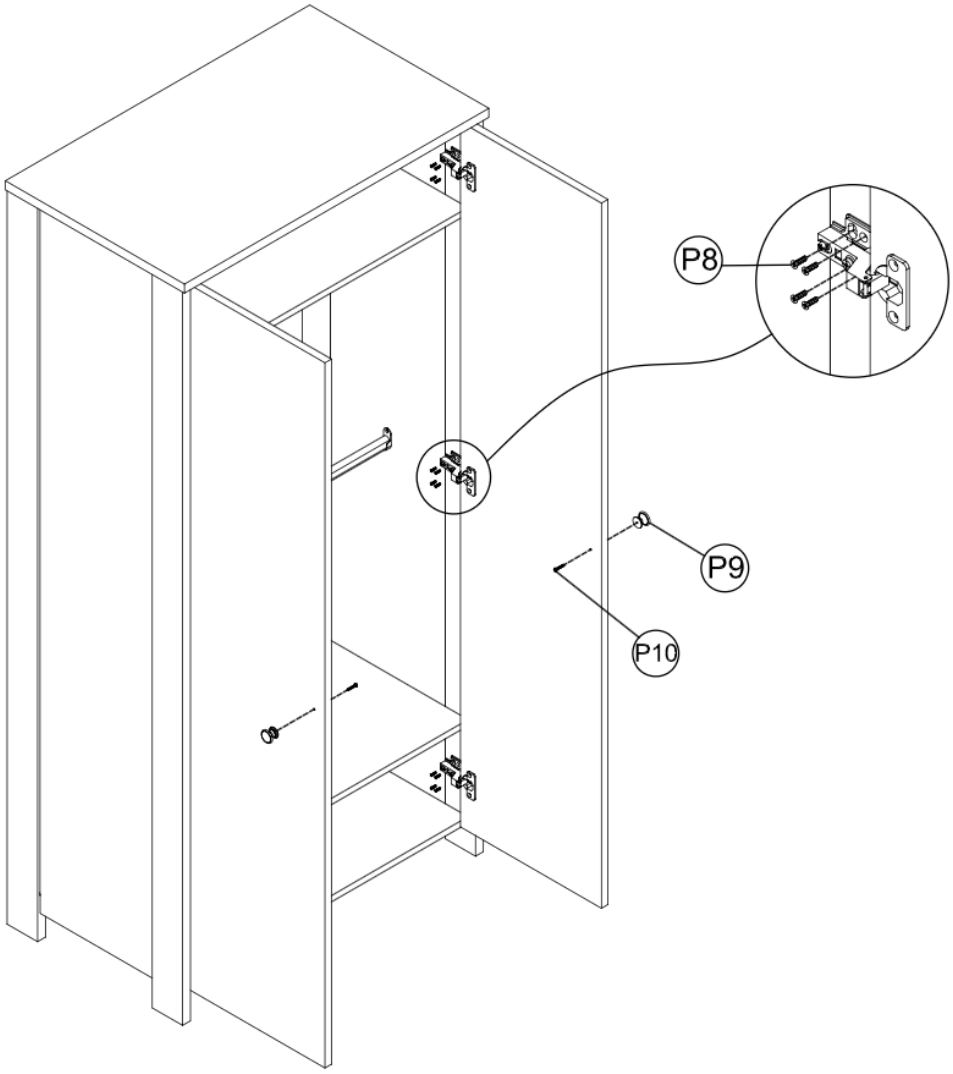

ROUTINE CARE & MAINTENANCE

Regularly check that all fittings and components are fully tightened and in working order.

- For cleaning use only a mild detergent and warm water.
- DO NOT USE BLEACH.
- DO NOT USE any abrasive substances.
- Take care when handling or moving furniture, careless handling can damage wooden furniture.

Due to constant updating and improvements, some components may occasionally differ slightly from the images shown in these instructions. We reserve the rights to change the specifications of any products without prior notice. If you need any assistance please contact your Bebe & Beyond retailer from whom you purchased your product, who will take appropriate action.

CONTACT US
Email: customerservice@bebeandbeyond.co.uk

bebe
& Beyond

LPD Home, Midland House, Midland Road, Hunslet, Leeds, LS10 2RJ

Authorised Rep Compliance Ltd, Ground Floor, 71 Lower Baggot Street, Dublin, D02 P593, Ireland.

www.bebeandbeyond.co.uk