The Wanderer Wide Changing Unit

IMPORTANT! RETAIN FOR FUTURE REFERENCE. READ CAREFULLY

bebe & Beyond

bebeandbeyond.co.uk



This changing unit conforms to BS EN 12221 :2008+A 1 :2013 & BS EN 14749:2016. To ensure that your changing unit is used in accordance with these instructions, please read them fully. Your child's safety may be affected if you do not follow these instructions. Assembly should be carried out by a competent adult only.

WARNING Installation shall be carried out exactly according to the manufacturers instructions – otherwise a safety risk can occur if incorrectly installed.


WARNING Do not leave the child unattended.

WARNING In order to prevent tipping this product must be used with the wall attachment devices provided. Serious or fatal crushing injuries can occur from furniture tipping over.

- Use the wall attachment devices provided
- Never allow children to climb or hang on drawers, doors or shelves
- Place heaviest items in the lower drawers or shelves
- Do not set TVs or other heavy objects on top of this product
- Never open more than one drawer at a time


Attachment devices are provided with your product, however you will need to source suitable fixings for your wall type. If in doubt, please consult a qualified tradesperson. Always ensure the wall to be drilled is free from hidden electrical wires, water and gas pipes.

- The changing unit must be used on a level and stable surface.
- Never move the changing unit with the child on it.
- Be aware of the risk of open fire and other sources of heat, such as electric bar fires, gas fires, etc. in the near vicinity of the changing unit.
- Do not use the changing unit if any part is broken or missing. Use only spare parts approved by the manufacturer.
- We recommend you use a changing mat with maximum dimension of 81cm x 46cm, placing the mat evenly inside the changing unit.
- The changing surface is designed for use from birth until 12 months, max weight 11 kg.
- All assembly fittings should be tightened properly and care should be taken to ensure that no screws are loose, as a child could trap parts of the body, or clothing (e.g. ribbons, drawstrings, necklaces) this could lead to strangulation.
- Regularly check that all fittings and components of the changing unit are fully tightened and in working order.
- Wood is a natural material, the colour will darken with age.
- During assembly children should be kept away from the product due to possible risk of injury.

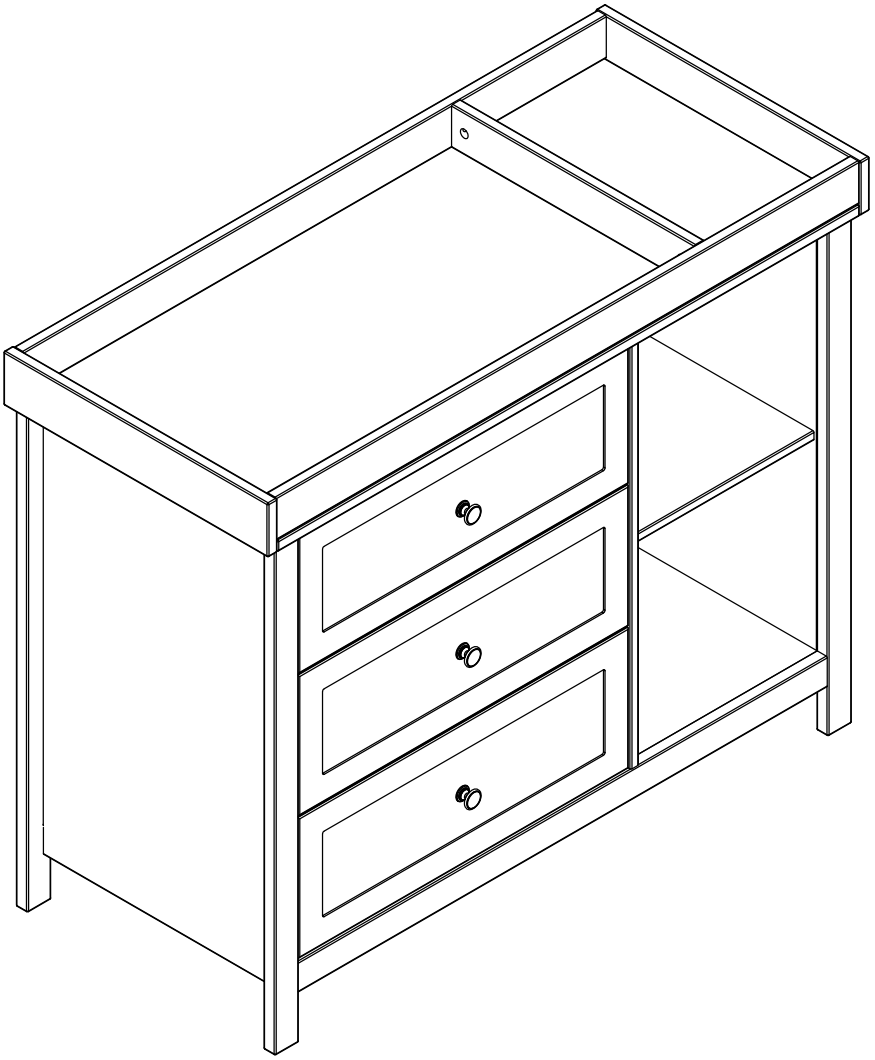


P16	46.5*19.4*12	2	
P17	φ7*3.5*14	4	
P18	φ10*5*16	2	
	φ16*φ7*1	2	
	210*25mm	2	
P19	M4*106	1	

P1	φ8*30	32	
P2	M6*24mm	21	
P3	Ø15*12mm	21	
P4	φ9.5*3.5*15	22	
P5	φ8*4*45	12	
P6	φ9*9	12	
P7	φ13*M6*50	6	
P8	φ13*M6*25	13	
P9	R10*15*10	4	
P10	φ4*30	4	
P11	φ3*φ5*20*13	2	
P12	φ30*24	3	
P13	M4*22	3	
P14	Ø10*M6*13	2	
P15	φ5*17	4	

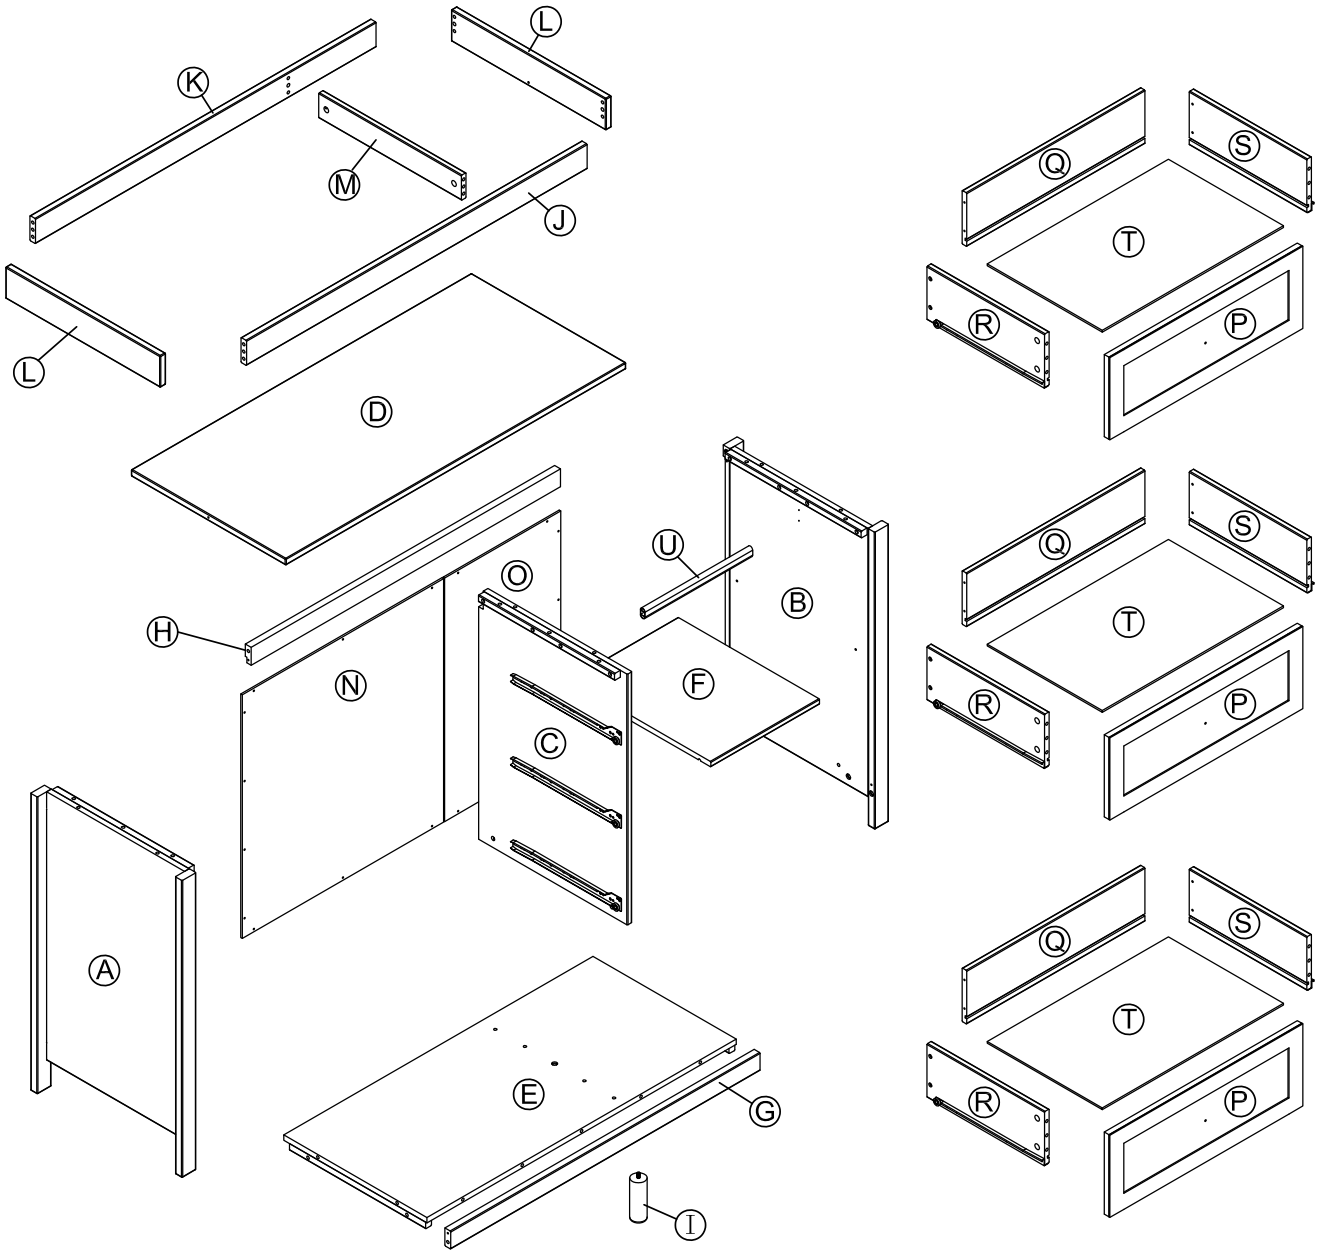
L
K
M
J
L
D
Q
S
T
R
P
U
O
B
H
N
F
C
A
E
G
I


Stage 1

P1:ø8*30=2
P2: M6*24=3
P3: Ø15*12mm=3

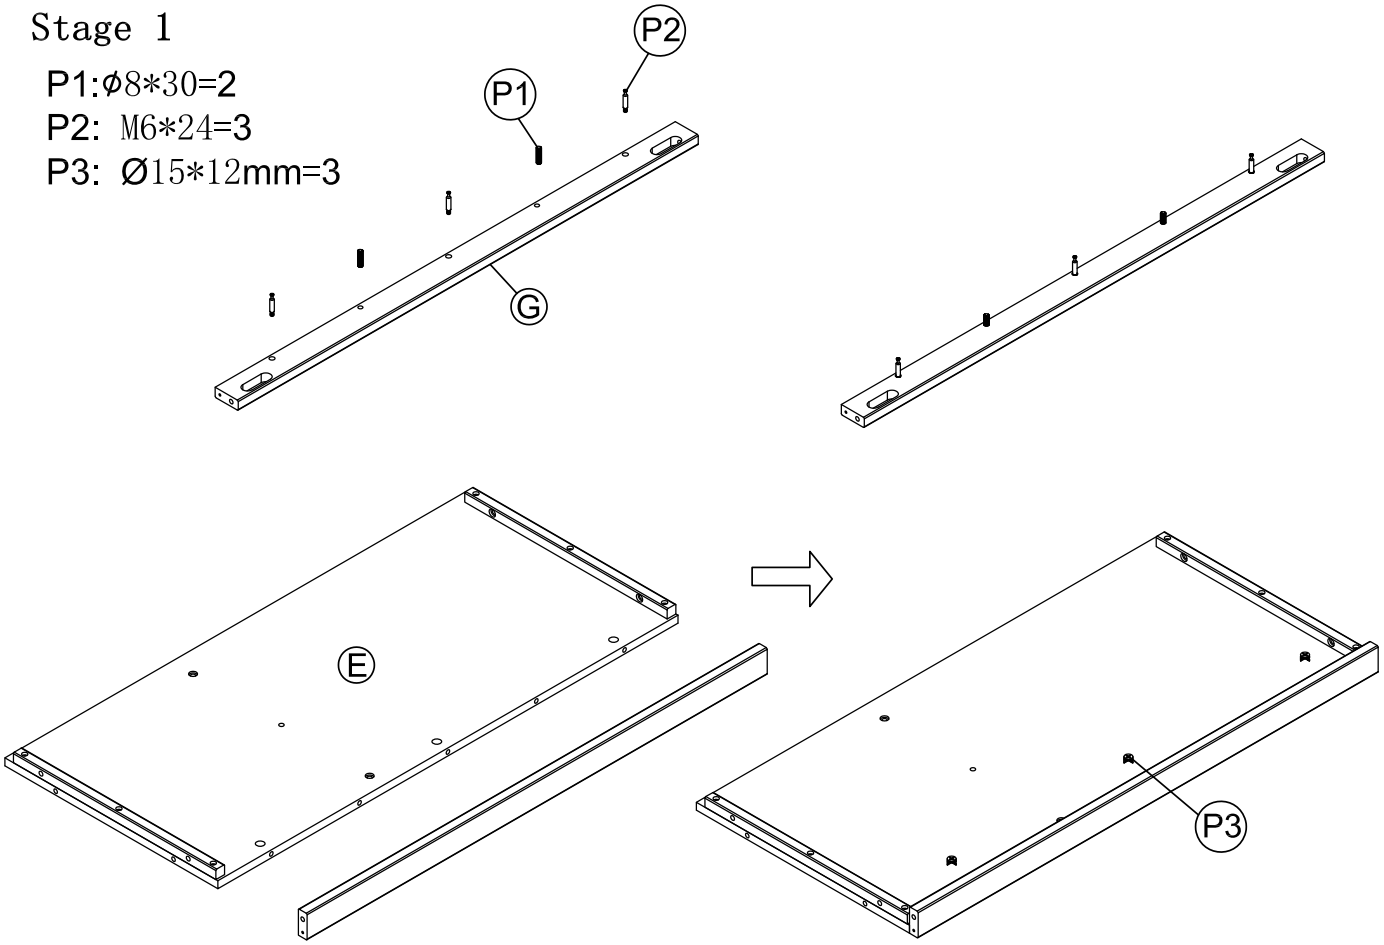


Stage 2

P16: 46.5*19.4*12=2
P17: Ø7*3.5*14=4

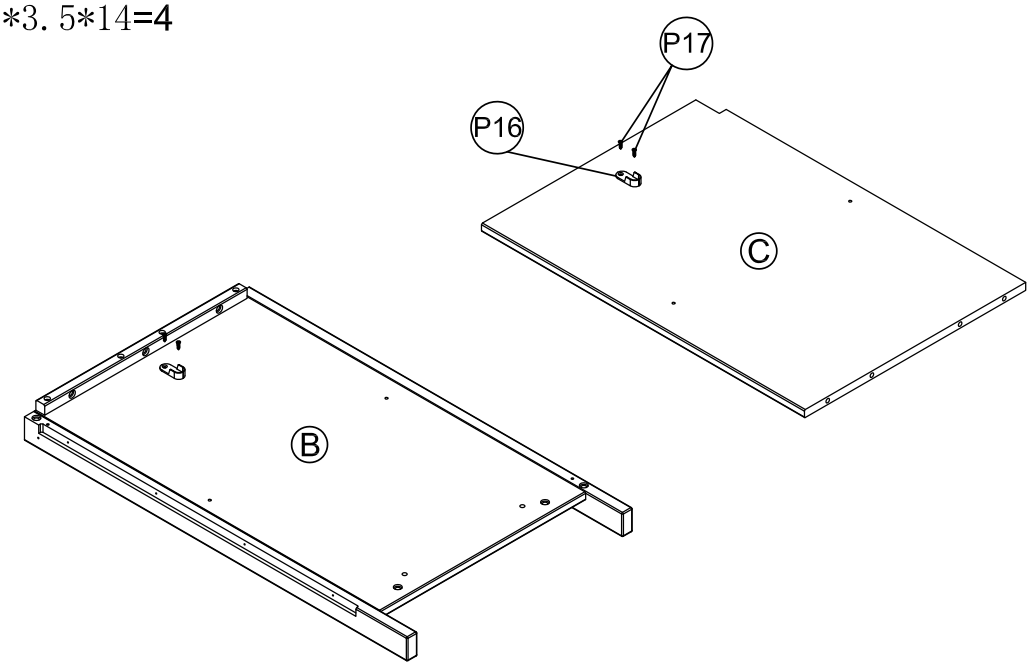


Stage 3

P1:ϕ8*30=2
P7: ϕ13*M6*50=2
P14: Ø10*M6*13=2

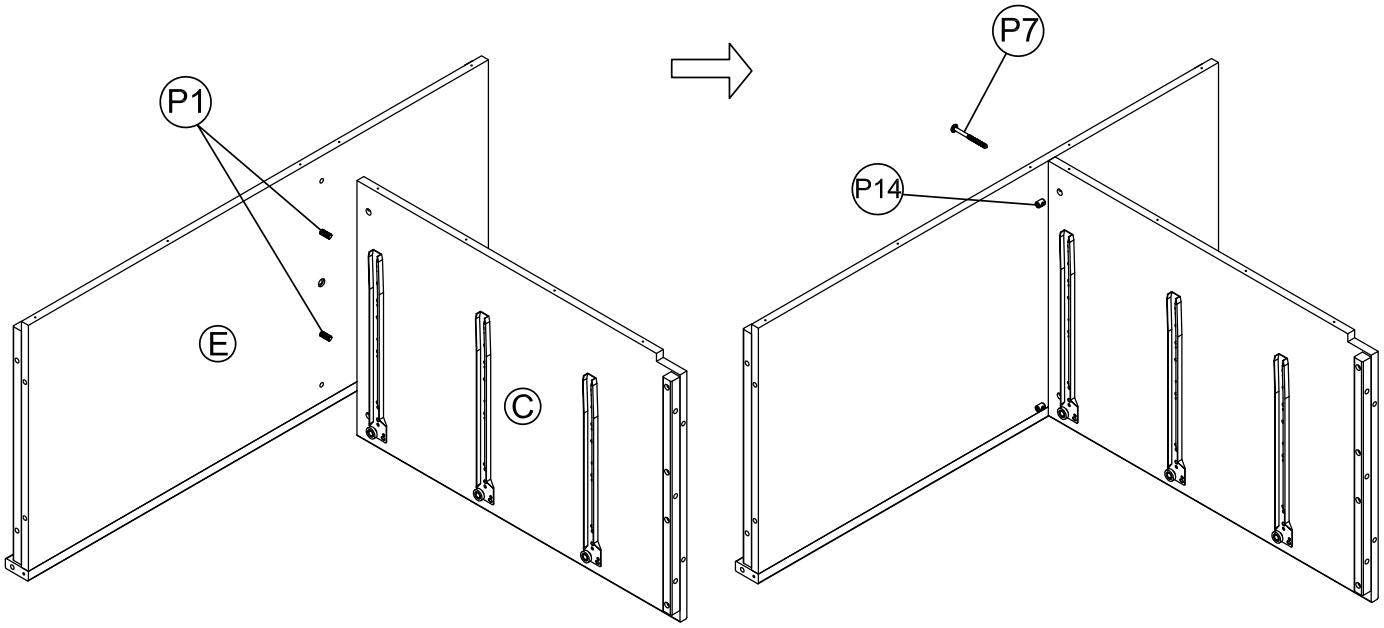


Stage 4

P1:ϕ8*30=4
P7: ϕ13*M6*50=4
P8: ϕ13*M6*25=4
P9: R10*15*10=4
P10: ϕ4*30=4

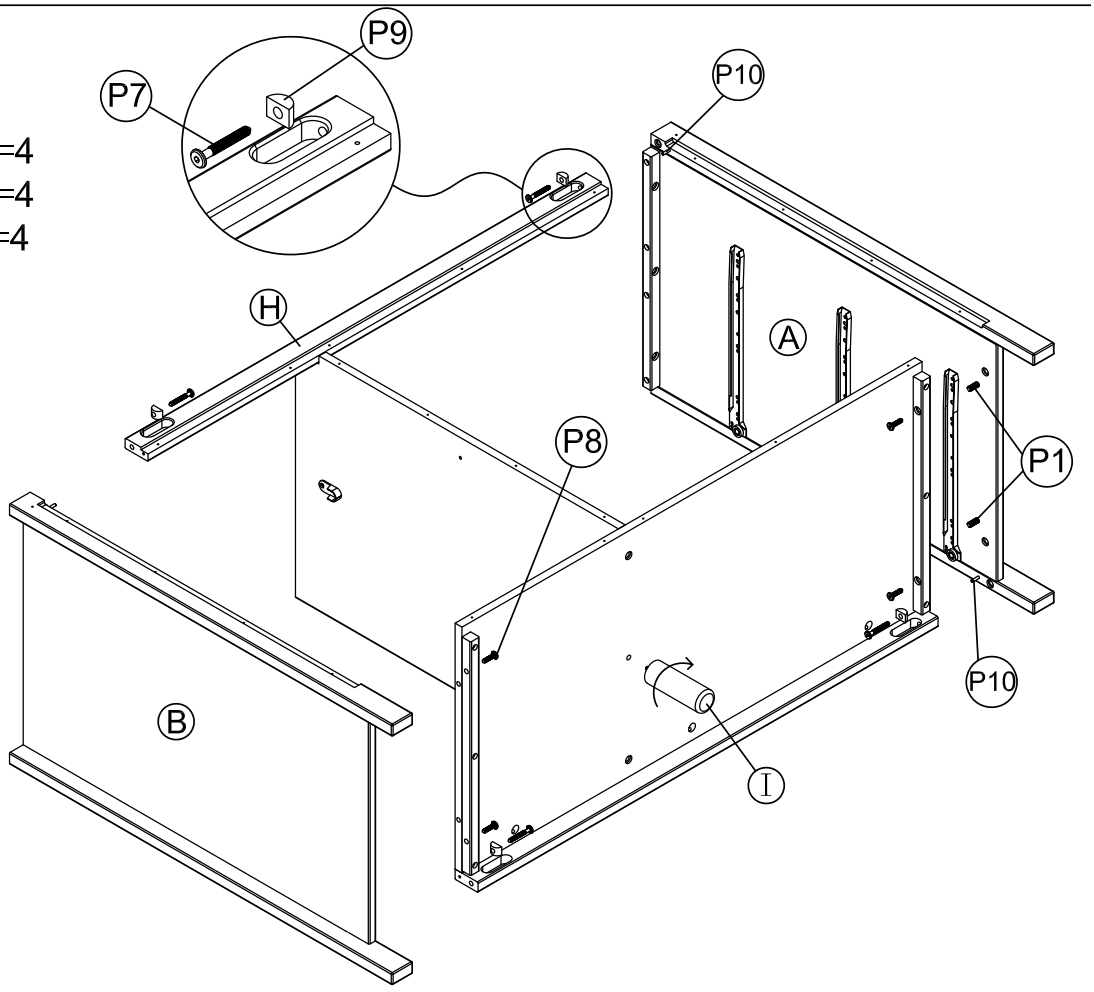


Stage 5

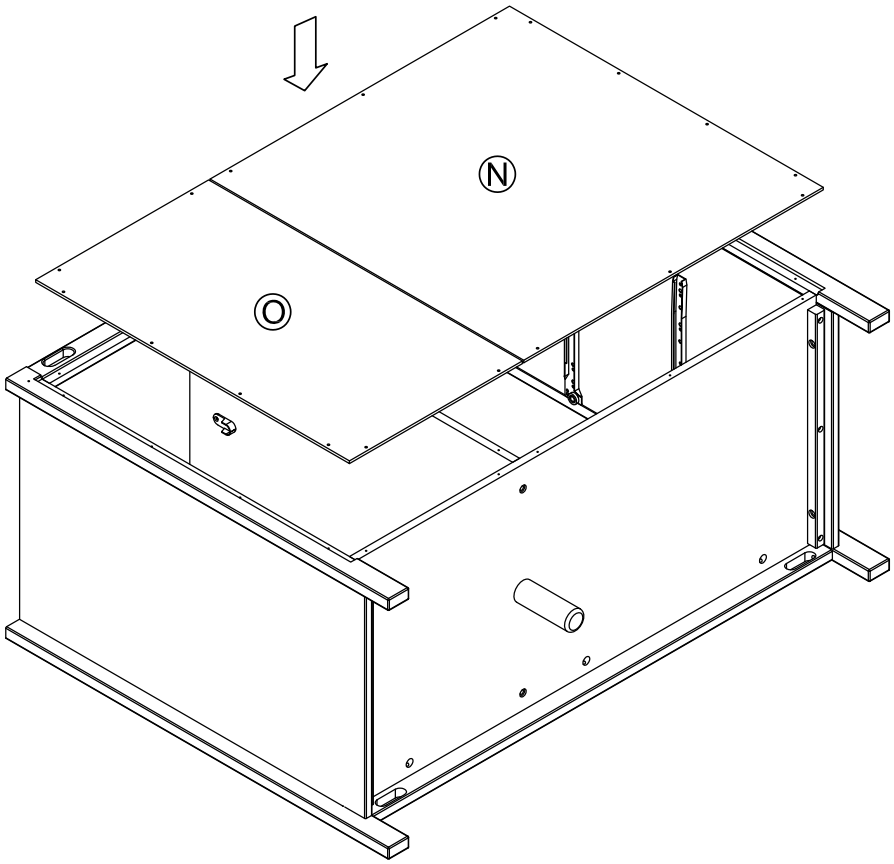


Stage 6

P4: ϕ9.5*3.5*15=22

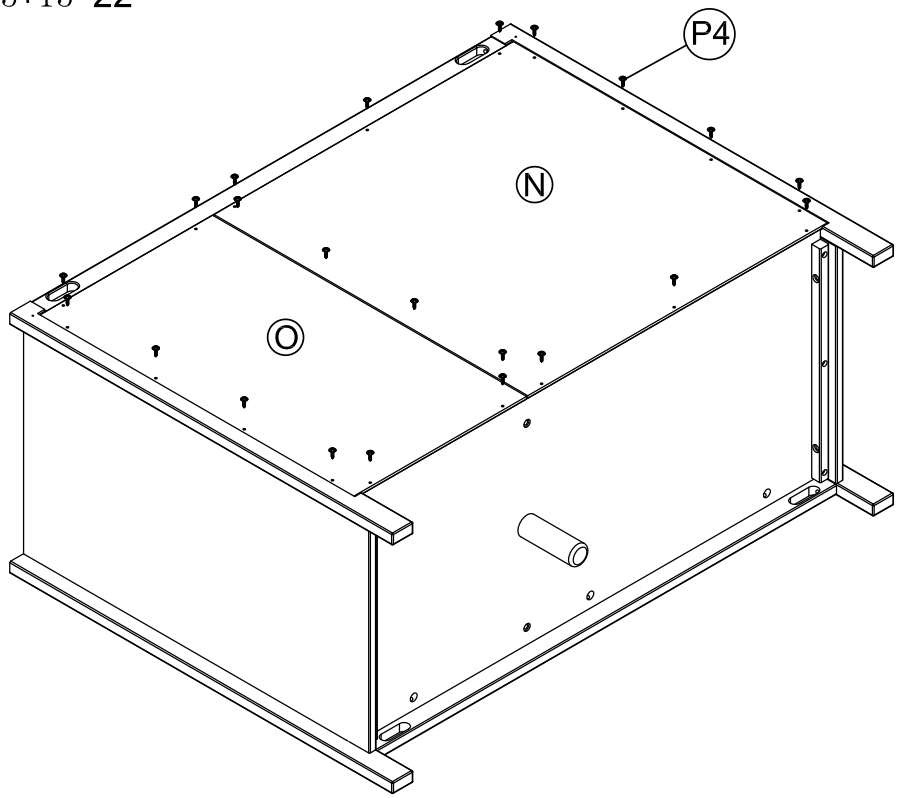


Stage 7

P1: ϕ8*30=6

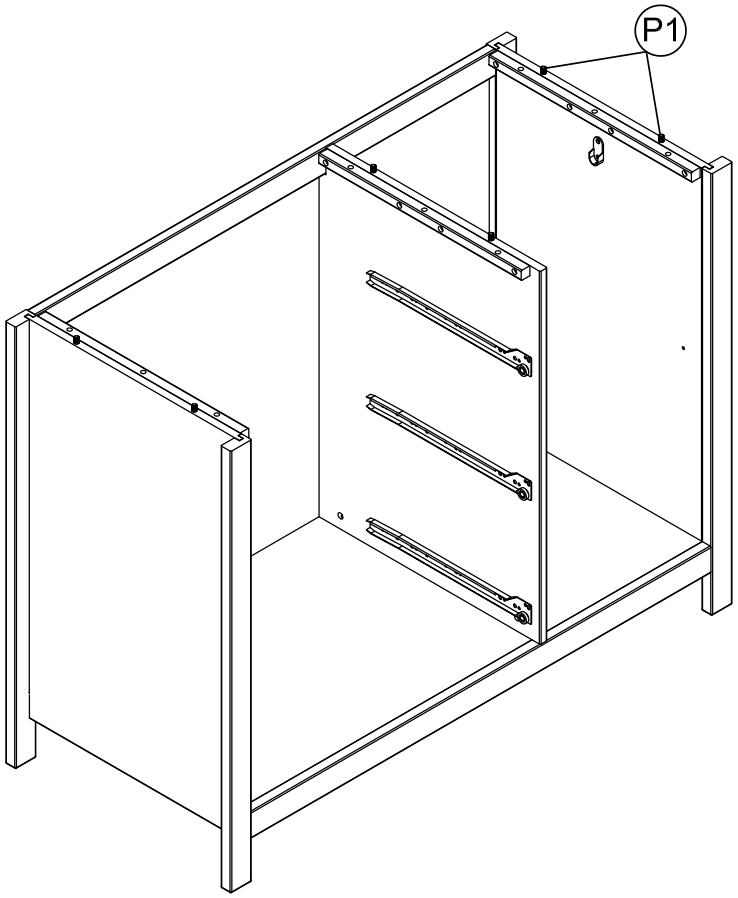

Stage 8

P8: ϕ13*M6*25=9

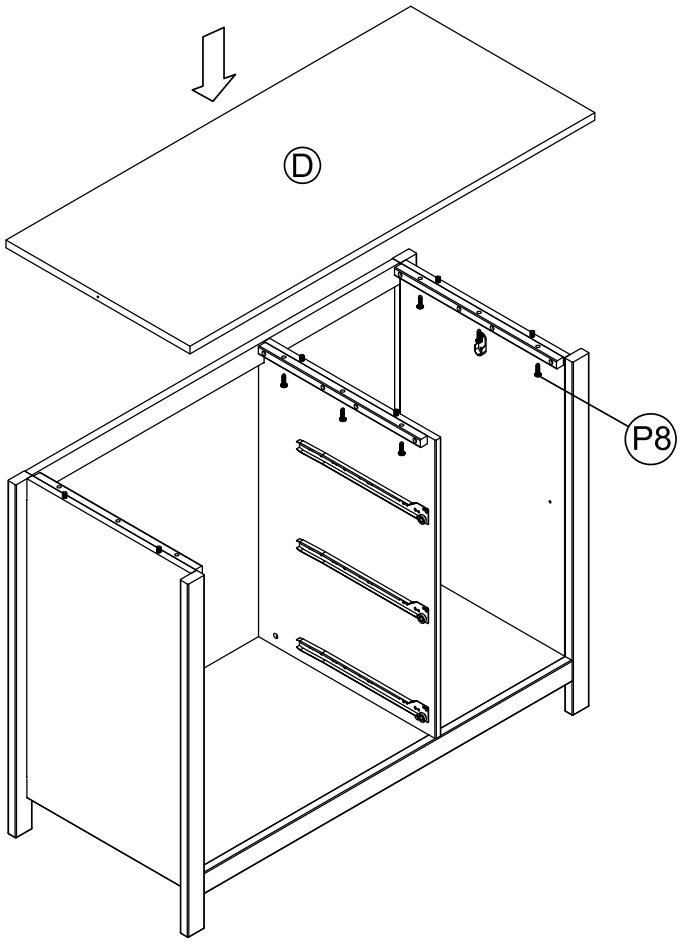


Stage 9

P18: ϕ10*5*16=2

ϕ16*ϕ7*1=2


210*25=2

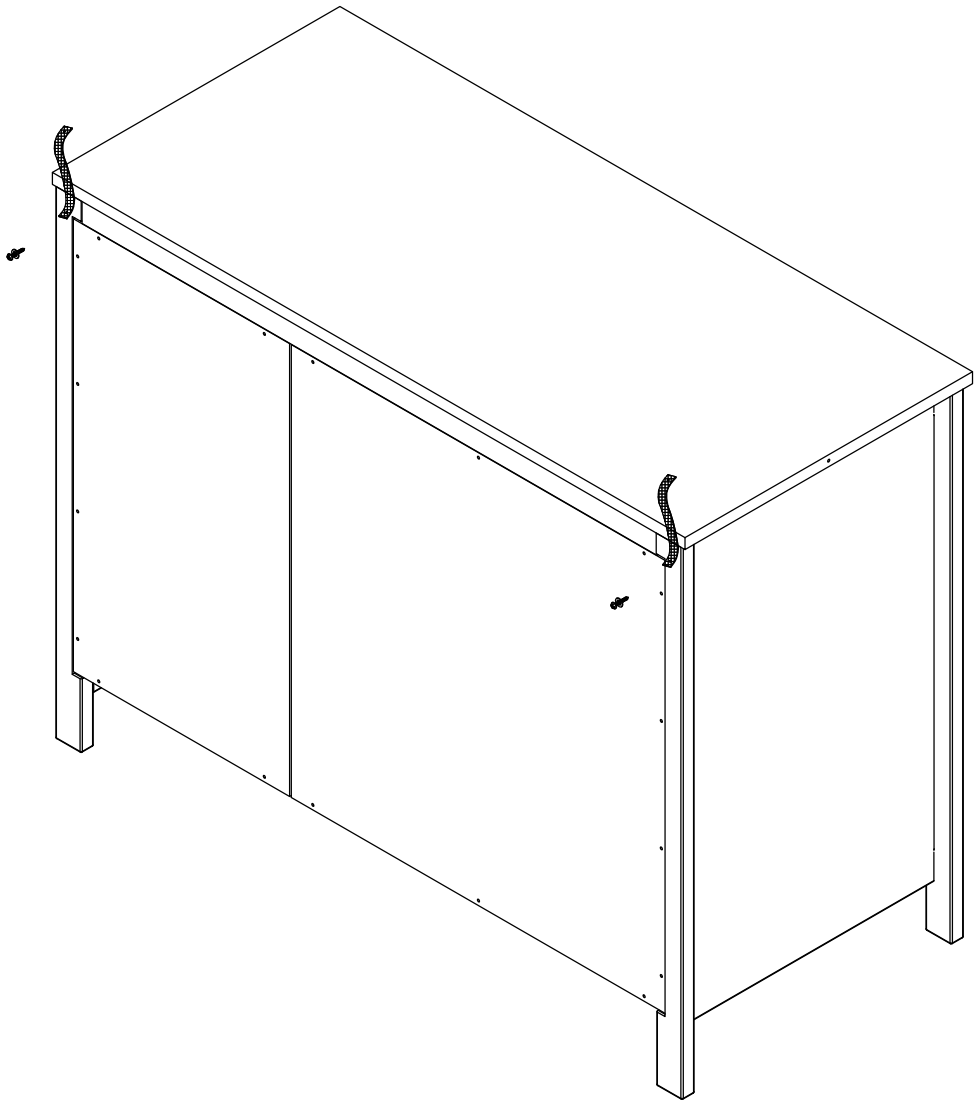


Stage 10

P1:ø8*30=4

P2: M6*24=2

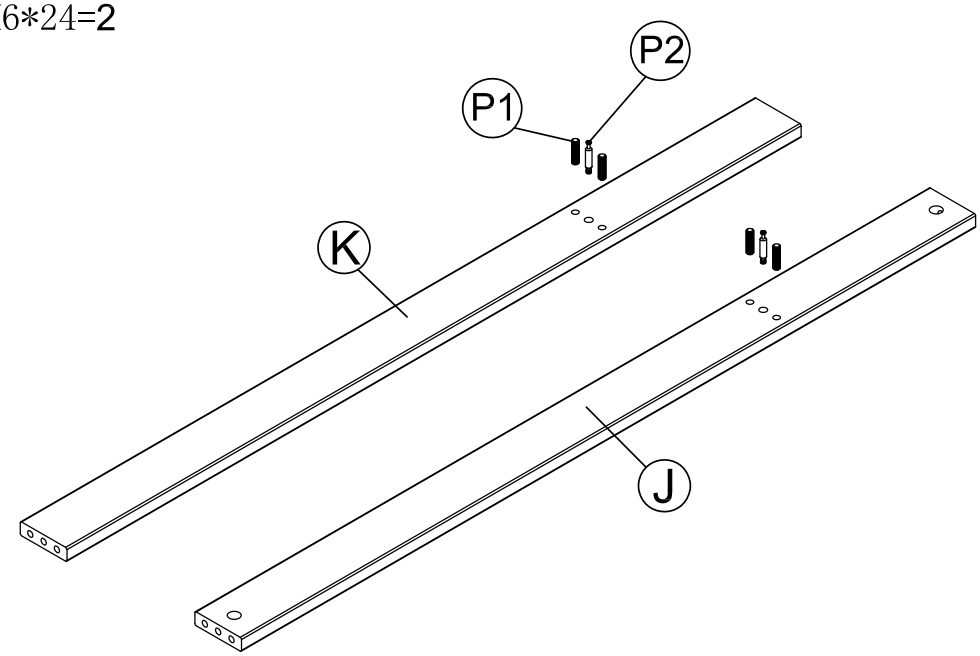


Stage 11

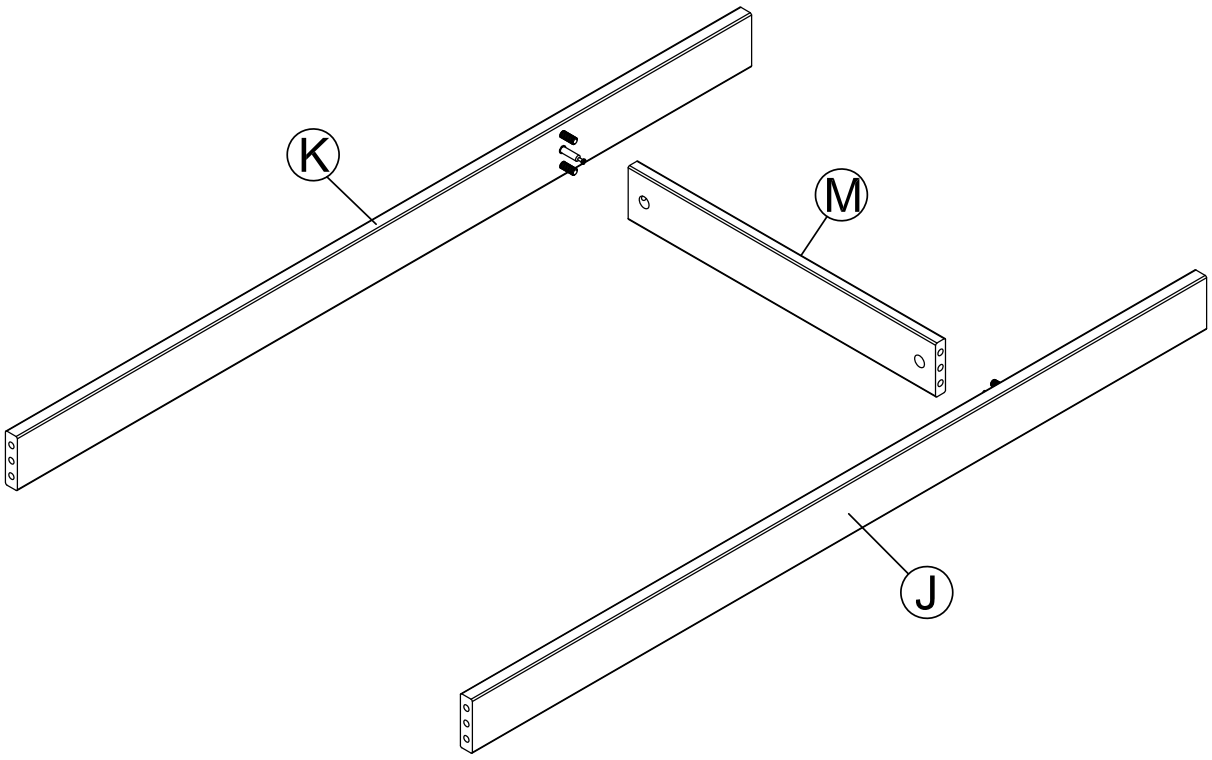

Stage 12

P3: Ø15*12mm=2

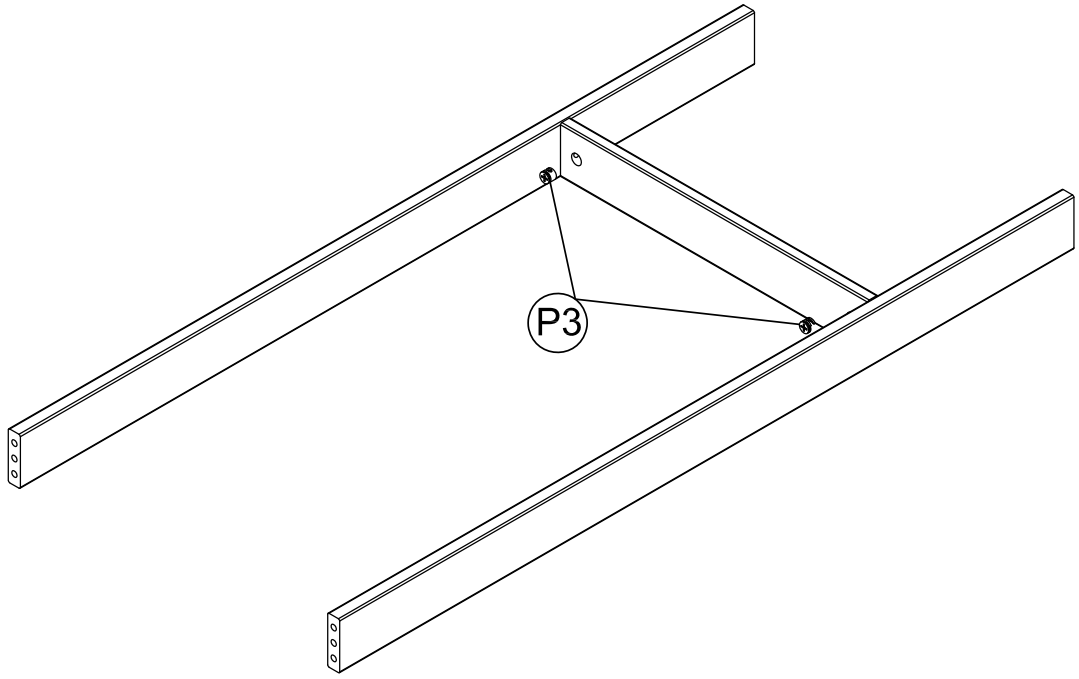


Stage 13


P1:ø8*30=8

P2: M6*24=4

P11:ø3*ø5*20*13=2

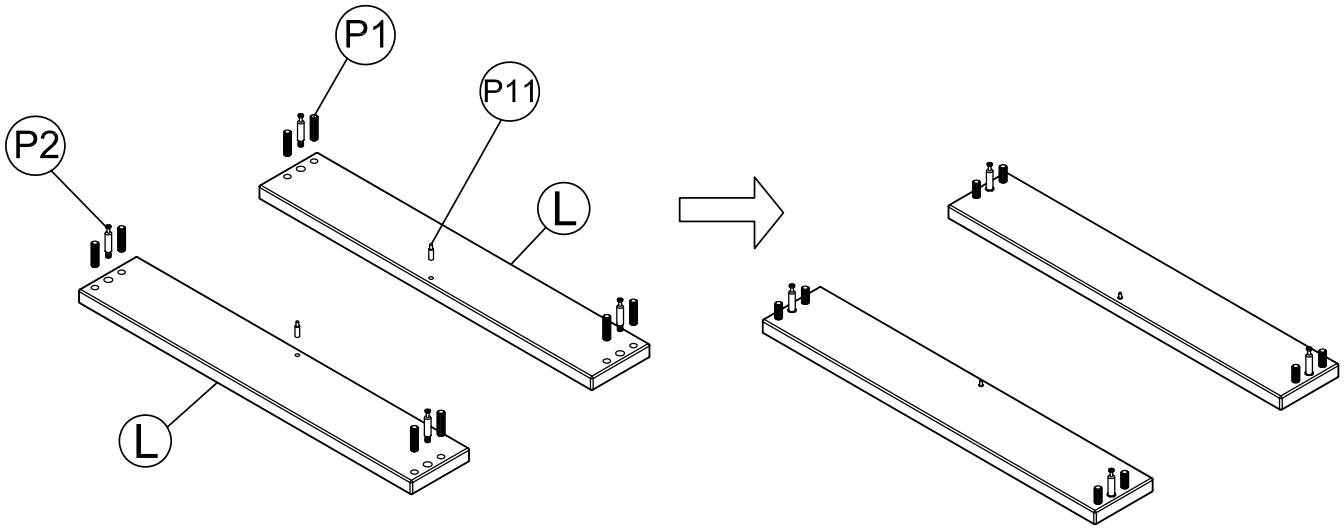


Stage 14

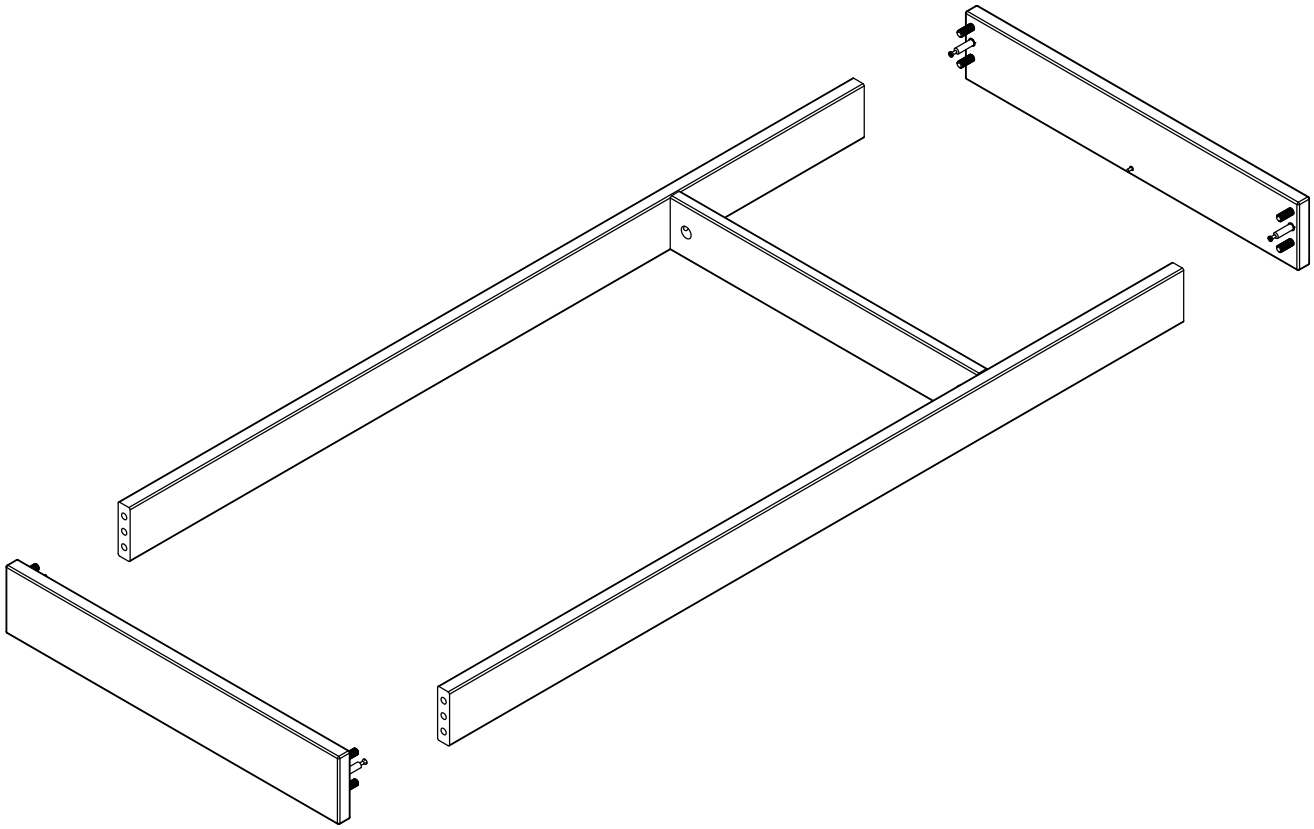


Stage 15

P3: Ø15*12mm=4

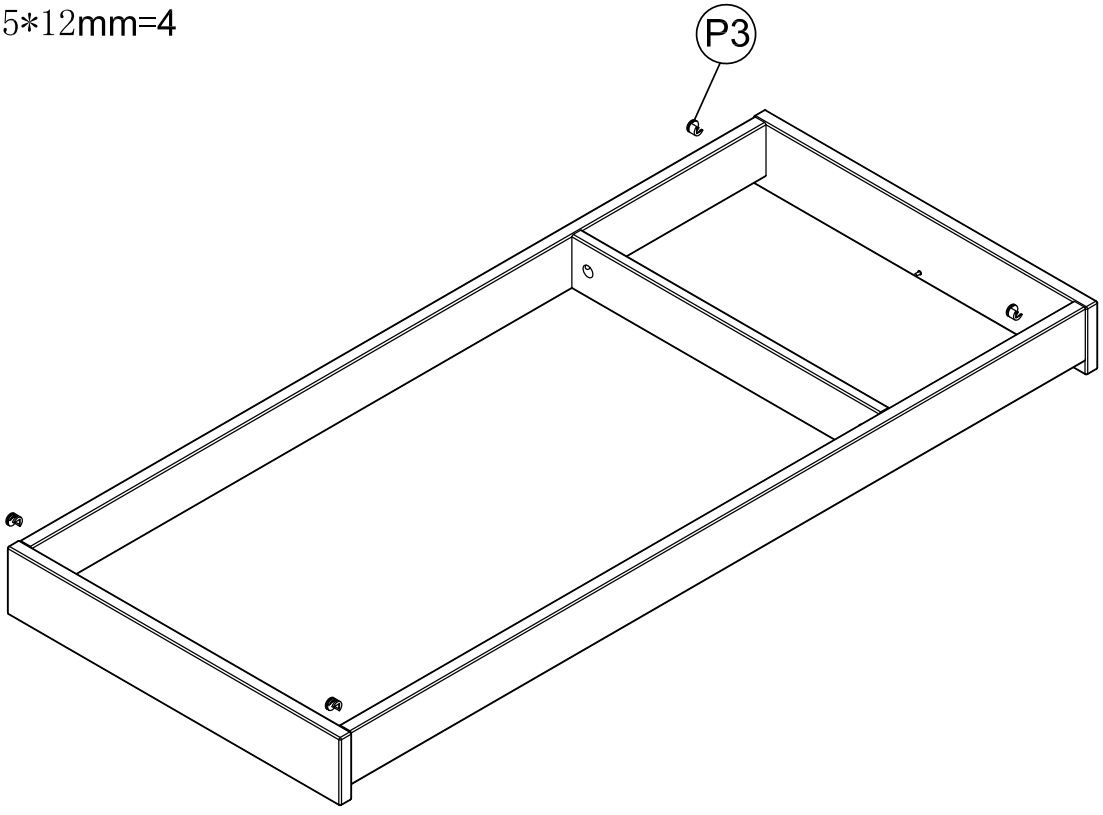


Stage 16

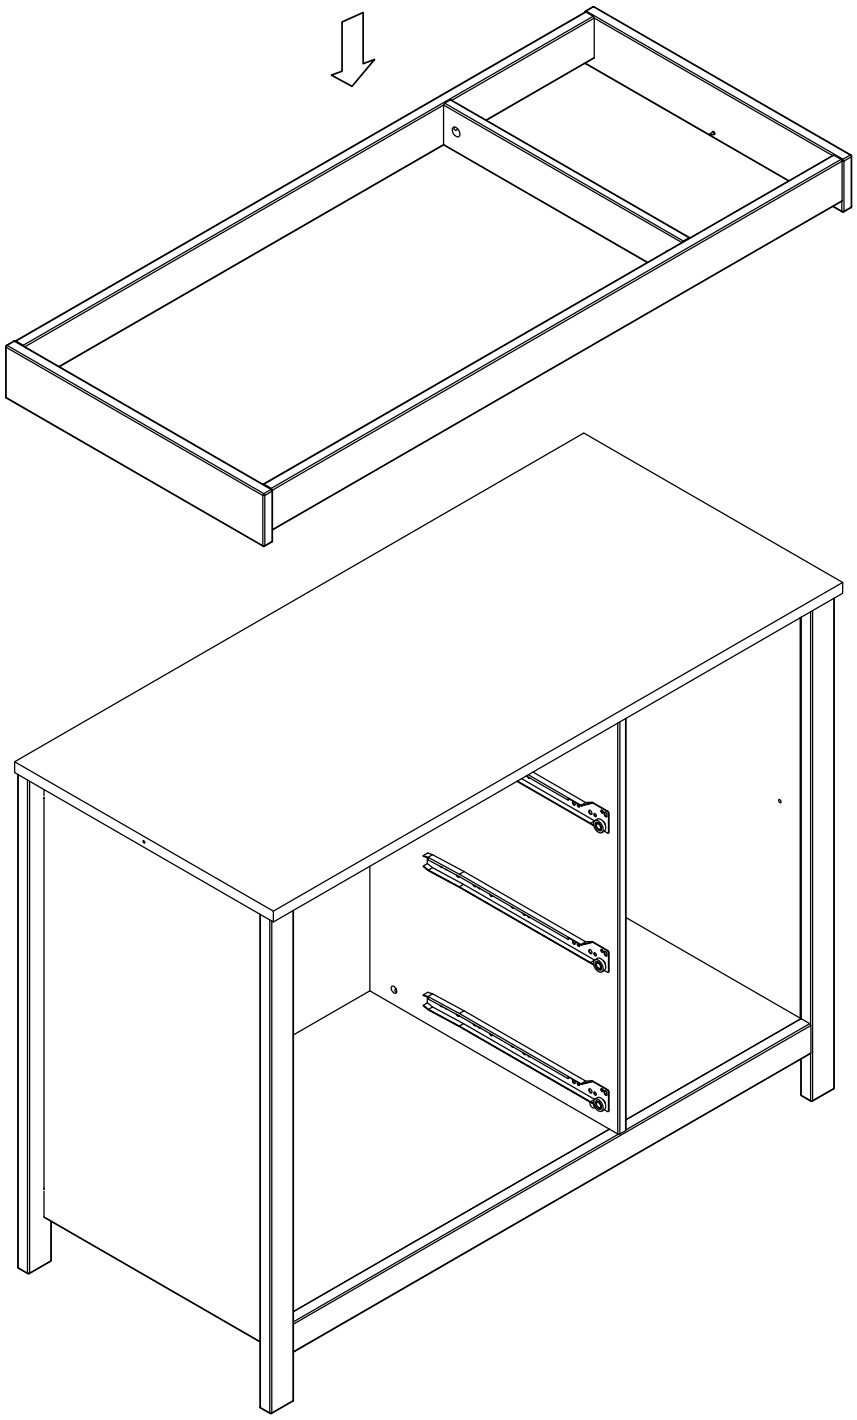


Stage 17

P15: φ5*17=4

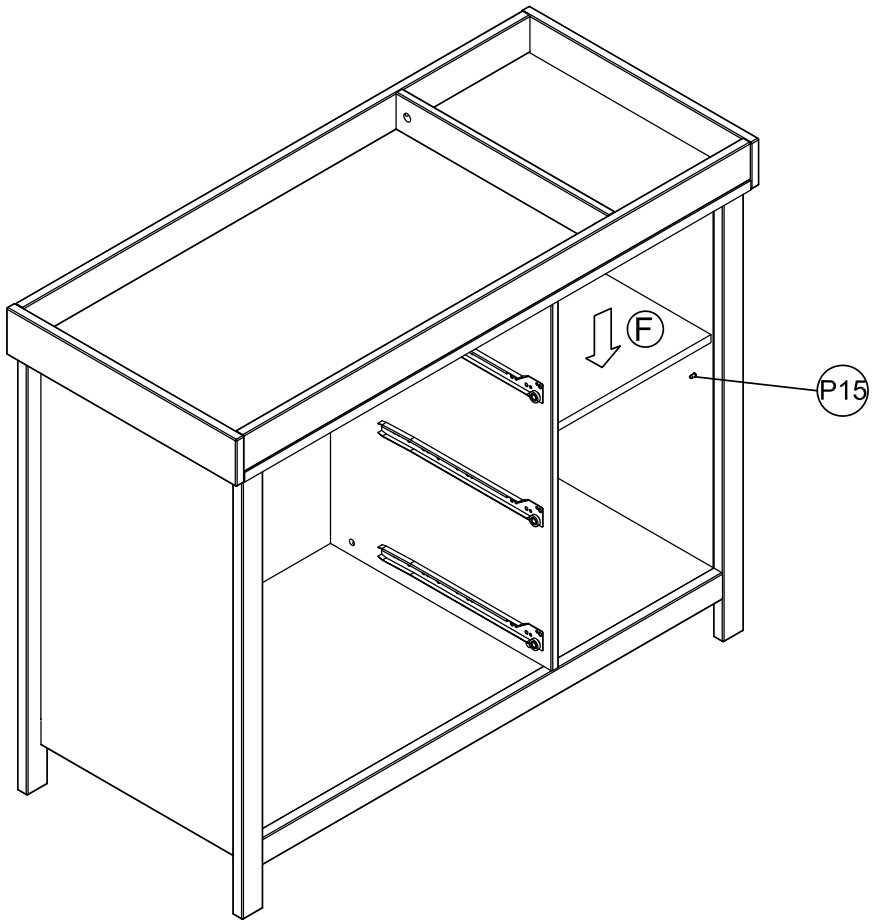


Stage 18

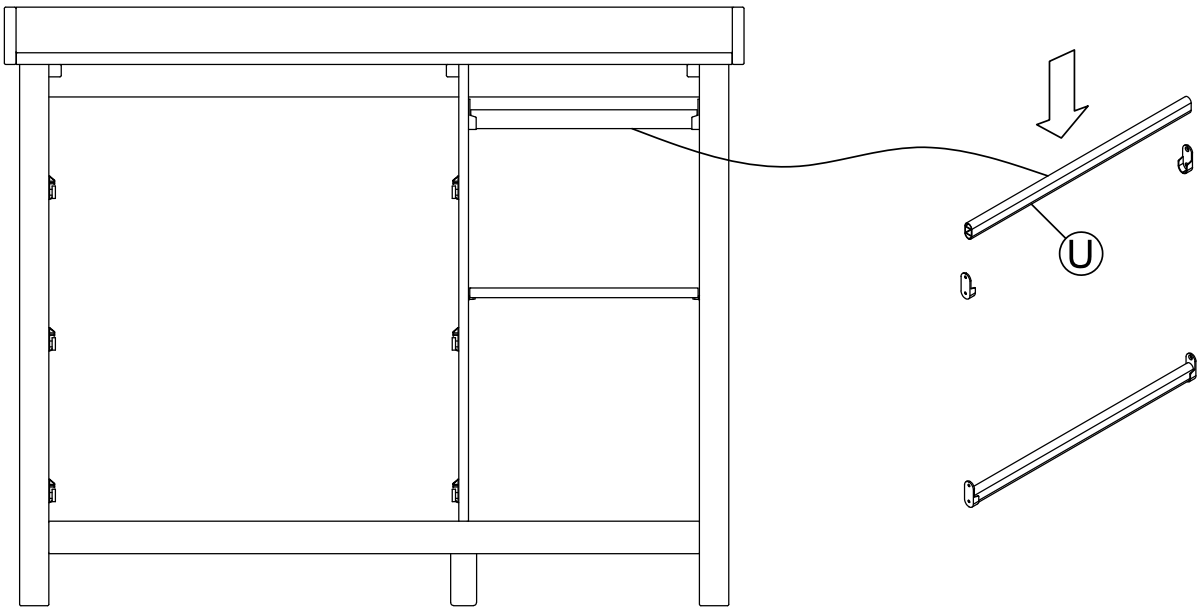

Stage 19


P1:ø8*30=2x3=6

P2: M6*24=4x3=12

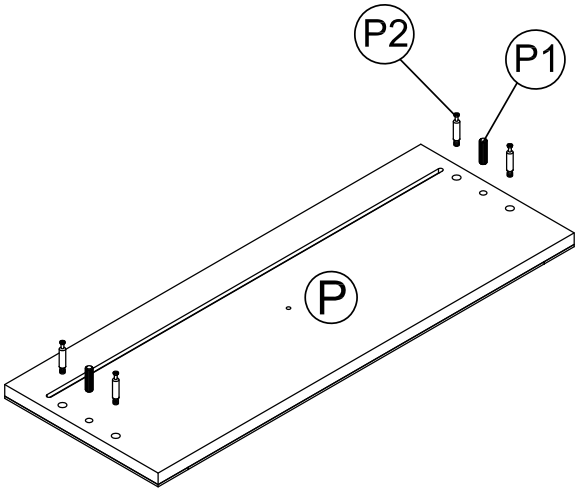

pcs x 3


Stage 20

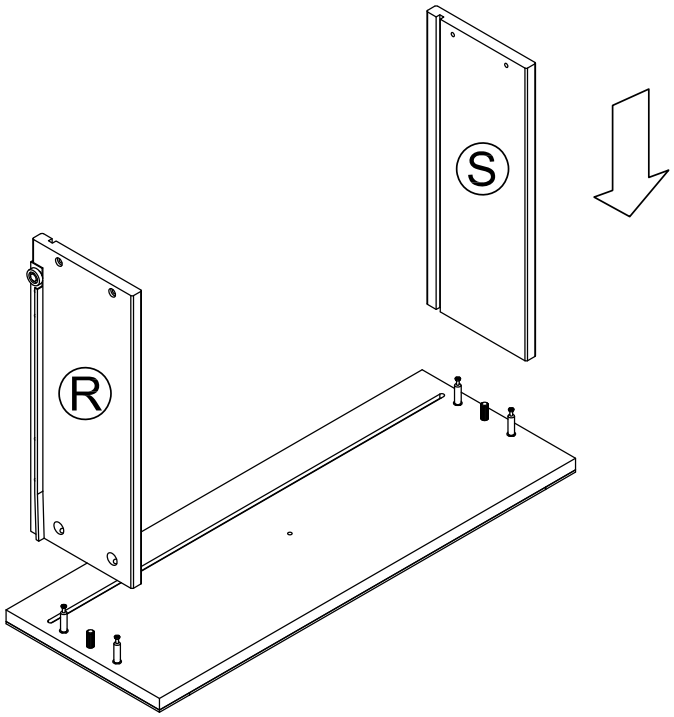

pcs x 3

Stage 21

P3: Ø15*12mm=4x3=12

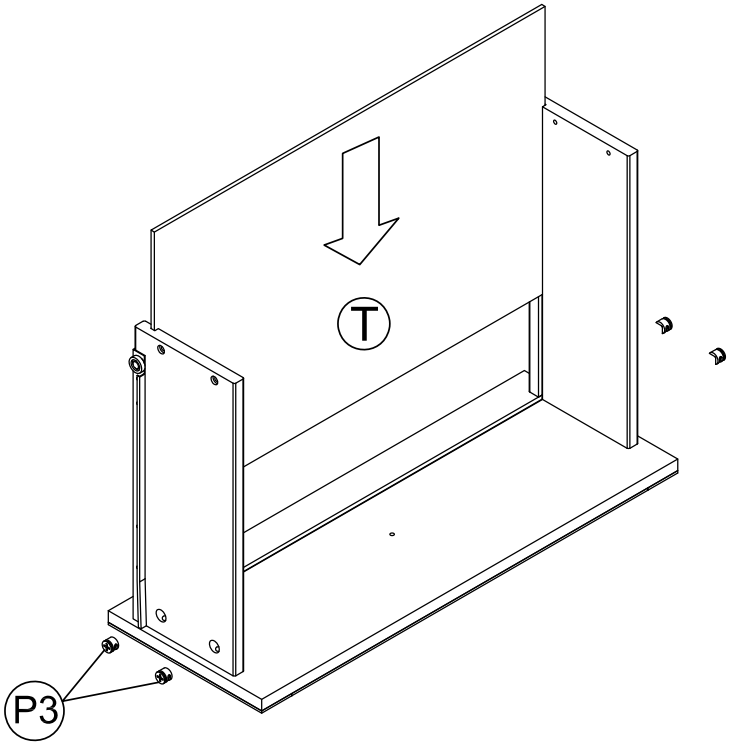


pcs x 3

Stage 22

P5: Ø8*4*45=4x3=12

P6: Ø9*9=4x3=12

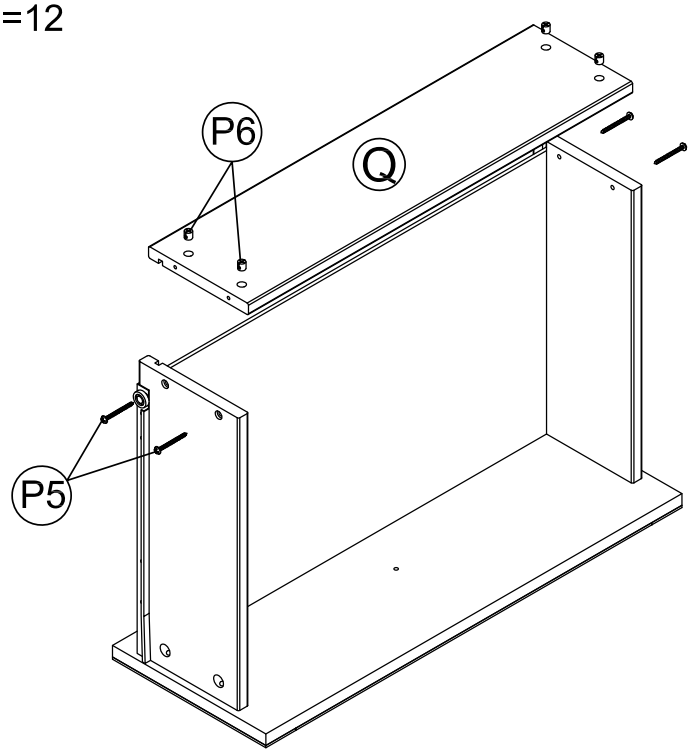


pcs x 3

Stage 23


P12: ϕ30*24=1x3=3

P13: M4*22=1x3=3

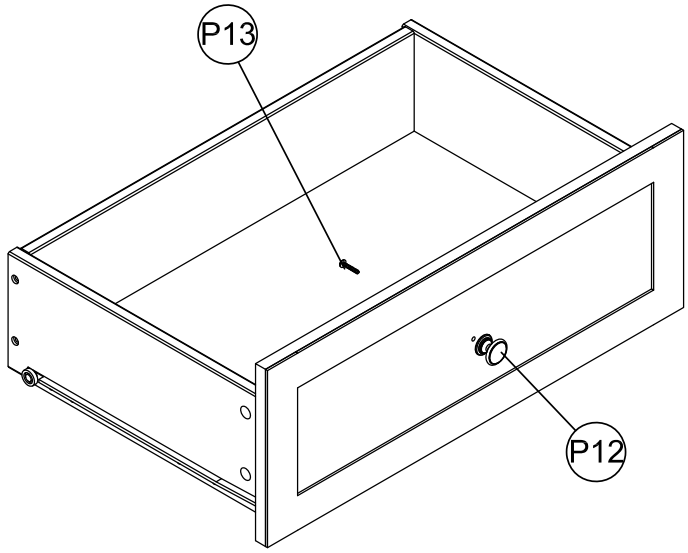

pcs x 3

Stage 24

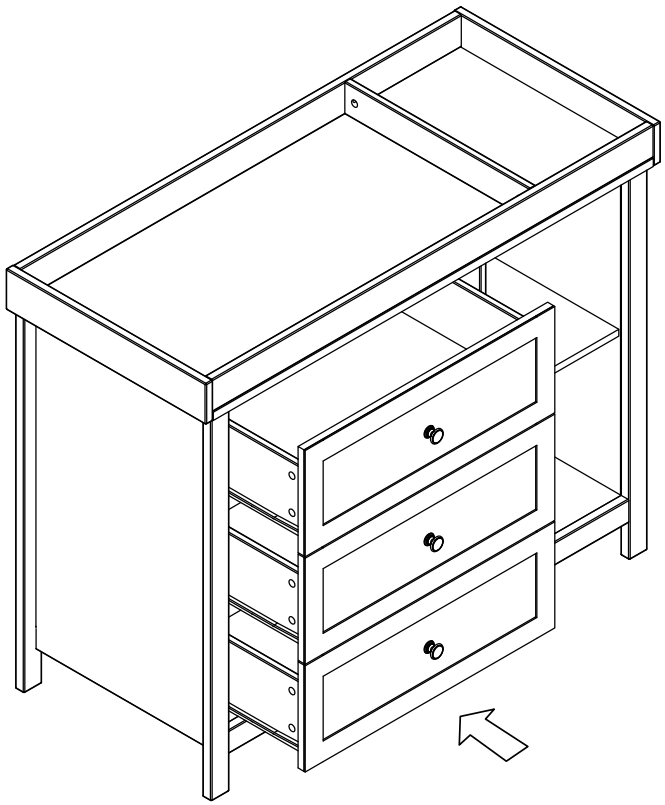

WALL STRAP INFORMATION

Never modify or change the wall strap in anyway. Never use any other fittings other than those supplied to attach the wall strap to the dresser.

The wall strap provided is to be used with this product only.

Never use the screws provided to attach the strap to the wall. All walls are of different composition and it is important that the correct wall fittings are used. Consult a professional before attempting to attach the strap to the wall. No wall fittings are supplied with this product.

The wall strap must not be used to replace any other fittings supplied with this piece of furniture.

We recommend the wall strap is used in all cases. To improve the stability of the furniture an even wood or tiled floor is best. A carpeted or warped floor can enable the furniture to rock, increasing the potential of the furniture to fall over.

ROUTINE CARE & MAINTENANCE

Regularly check that all fittings and components are fully tightened and in working order.

- For cleaning use only a mild detergent and warm water.
- DO NOT USE BLEACH.
- DO NOT USE any abrasive substances.
- Take care when handling or moving furniture, careless handling can damage wooden furniture.

Due to constant updating and improvements, some components may occasionally differ slightly from the images shown in these instructions. We reserve the rights to change the specifications of any products without prior notice. If you need any assistance please contact your Bebe & Beyond retailer from whom you purchased your product, who will take appropriate action.

CONTACT US
Email: customerservice@bebeandbeyond.co.uk

bebe
& Beyond

LPD Home, Midland House, Midland Road, Hunslet, Leeds, LS10 2RJ

Authorised Rep Compliance Ltd, Ground Floor, 71 Lower Baggot Street, Dublin, D02 P593, Ireland.

www.bebeandbeyond.co.uk