
1850W Large Stove Effect Heater

30162412 / 30162413

Installation & Care Instructions

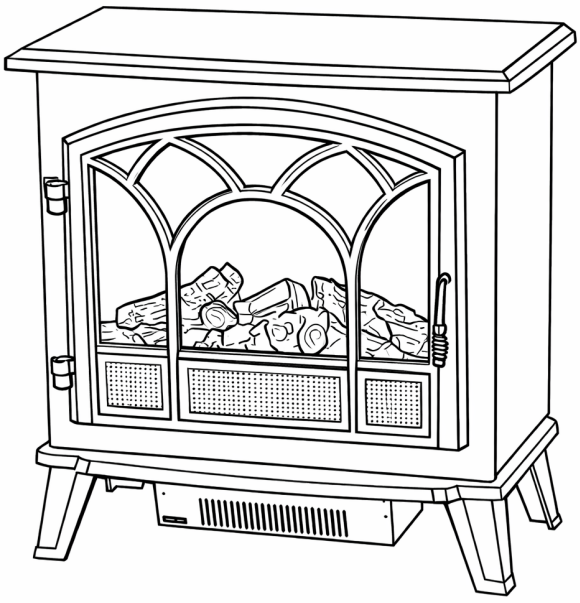

www.dunelm.com

Contents

Page No.	
2	Contents
3	Getting Started
3-5	Safety Advice
6	Parts Supplied
7	Description of Parts
7	Description of the Control Panel
8	Before first use of your Stove Effect Heater
8	Operating Instructions – Heat Setting
8	Hint on Setting the Correct Temperature
8	Fan Only Mode
8	Using the Flame Effect
9	Care and Use of Your Stove Effect Heater
9	Replacing the Flame Effect Bulbs
10	Safety Cut-Out
10	Electrical Rating
10	Non-Rewireable Mains Plug
11	ErP Data
12	Recycling
12	Customer Service
13	Guarantee

Getting Started

1. Check you have received all the parts as detailed in the parts supplied section. Beware that sometimes parts are packaged within the product/packaging so not immediately visible after opening.
2. Check that the product is intact and undamaged. Any issues, stop and contact our customer service team.
3. When using electrical appliances, basic safety precautions should always be followed.
4. Only use the product as described in this user manual. Any other use is considered improper and may result in damage to property or persons. The manufacturer or vendor cannot be held liable for damages or injuries incurred through improper or incorrect use.

Safety Advice

Dear Customer

- **IMPORTANT** – The first step you need to take is to ensure your safety! Please take time to read and understand these instructions before using the product.
- Please keep these instructions for future reference.
- This is a class I product and therefore requires an earth connection.
- **WARNING!** To avoid overheating, **DO NOT COVER** the heater.
- **WARNING!** To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1m from the air outlet.
- **DO NOT** locate the appliance immediately below an electrical socket outlet.
- **DO NOT** use this heater with a programmer, timer, separate remote-control system or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
- **DO NOT** use this heater with an extension cable.
- Check that the voltage indicated on the data plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- Close supervision is required when using this appliance near children.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years, and less than 8 years, shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Keep the appliance and its cord out of reach of children aged less than 8 years
- Children aged from 3 years, and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance
- **WARNING!** Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- **DO NOT** use this heater in the immediate surroundings of a bath, a shower or a swimming pool.

Safety Advice

- **DO NOT** use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
- **DO NOT** immerse the appliance or its cord in water or any other liquids.
- **DO NOT** leave the appliance unattended during use.
- **DO NOT** leave the appliance unattended whilst connected to the mains supply.
- Always use this appliance on a solid, level, heat resistant surface.
- **DO NOT** use this appliance outdoors.
- It is imperative to unplug the power cord after the appliance has been used, before it is cleaned and whilst being repaired.
- Repairs to electrical appliances should only be performed by a qualified electrician. Improper repairs may place user at serious risk.
- **DO NOT** operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
- Regular, periodic checks should be carried out on the mains cable to ensure no damage is evident. Should there be any signs of damage the appliance should not be used.
- If the power cable is damaged, it should only be replaced by the manufacturer or a suitable qualified after-sales service in order to avoid a hazard
- **DO NOT** allow the mains cable to hang over sharp edges or come in contact with hot surfaces.
- **DO NOT** run the mains cable under carpets, rugs, etc.
- Allow the unit to cool before storage.
- Before cleaning, disconnect the appliance from the mains supply and allow to cool. Never place the appliance near to flammable material or high pressure containers. E.g. Paper, wood, petrol, solvents, spray canisters.
- This appliance is intended for household use only and should not be used for industrial purposes.
- **DO NOT** use any accessories or attachments with this appliance other than those supplied or recommended by supplier.
- **DO NOT** use any accessories or attachments with this appliance other than those supplied or recommended by supplier.
- **DO NOT** push objects into any openings as damage to the appliance and/or electric shock may occur.
- The appliance should not be installed in areas which have a fire-risk, such as garages, stables or wooden sheds; this is applicable also for rooms in which highly inflammable gasses or dust can develop. Danger of fire!
- Unplug after each use. Grasp the plug, not the cord.

CAUTION

Keep Hearth Rugs and other soft furnishings away from the front of the heater. They could obstruct the free flow of air from the fan and damage both soft furnishings and heater.

The heater must stand on a solid, level non-flammable surface such as stone, slate, ceramic or concrete.
DO NOT Stand the heater on a carpet, rug or other soft floor covering.

DO NOT COVER THE HEATER


THIS STOVE HEATER MUST ONLY BE OPERATED IN THE UPRIGHT POSITION WITH THE LEGS FITTED.

THIS APPLIANCE MUST BE EARTHED


This appliance has been ERP classified as a portable space heater and should only be used for supplementary, secondary or temporary heating. It should not be considered for primary permanent heating in a room or dwelling.

During the first few minutes of initial use, you may notice a slight odour and a little smoke. This is normal and will quickly disappear, It is the coating applied to the heating elements to prevent any corrosion during transit.

Stove Heater

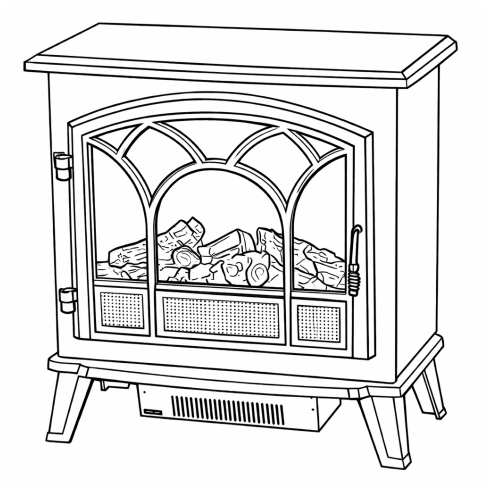


Description of Parts

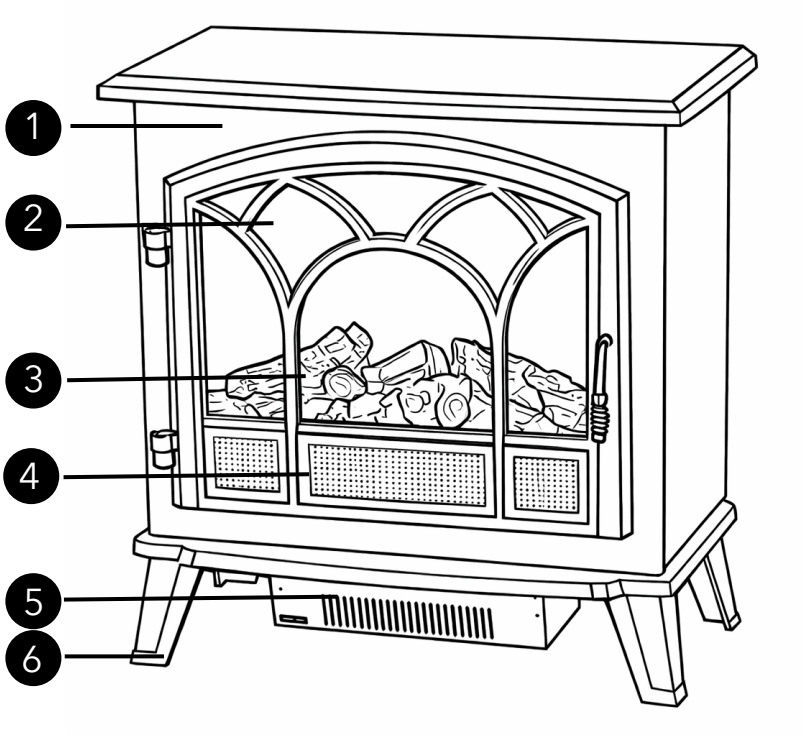

1. Heater Body
2. Door
3. Flame Effect
4. Control Panel (behind door)
5. Heat Outlet
6. Legs (x4)

Description of the Control Panel (4)

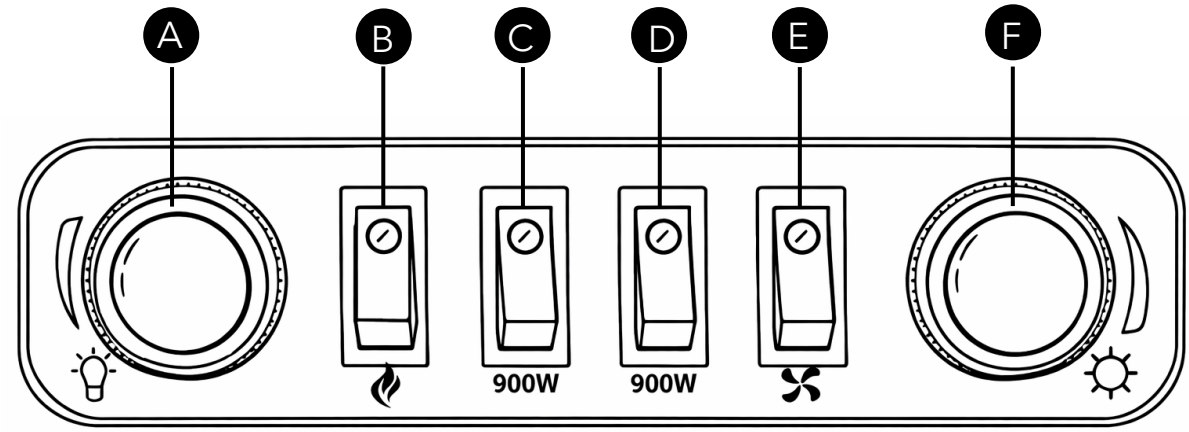

A. Flame Effect Dimmer Control
B. Flame Effect ON/OFF Switch
C. 900W Heat Switch
D. 900W Heat Switch
E. Fan ON/OFF Switch
F. Thermostat Control

Before first use of your Stove Effect Heater

Remove all packaging materials and discard responsibly.

Ensure that all parts are present before assembling your Stove Effect Heater – see **Description of Parts** above.

Operating Instructions – Heat Setting

Place the heater on a solid, level heat resistance surface.
Open the **Door** (2) to reveal the **Control Panel** (4) below the **Flame Effect** (3).

- Ensure that all **Control Panel** (4) **Switches** (B, C, D and E) are in the OFF position.
- Insert the mains plug into a suitable mains socket outlet.
- For the low heat setting, press the **900W Heat Switch** (C) and the **Fan Switch** (E).
- For the high heat setting, press both the **900W Heat Switches** (C & D) and **Fan Switch** (E).
- Rotate the **Thermostat Control** (F) clockwise to increase the temperature and anticlockwise to decrease the temperature as desired.

During use, the lights in both **900W Heat Switches** (C&D) will go on and off indicating that the set temperature is being maintained, this is quite normal**.**

The **Fan Switch** (E) must be pressed in order for the heat function to operate.

Hint on Setting the Correct Temperature

Set the heater to the desired heat setting as above.
Rotate the **Thermostat Control** (F) to the maximum position and allow the area to warm up. Once the desired temperature has been reached turn the **Thermostat Control** (F) anticlockwise until the heater just clicks off then turn it back up clockwise very slightly. The **Thermostat Control** (F) will now maintain the temperature, if necessary, further increasing or decreasing the **Thermostat Control** (F) may be required to 'fine tune' the ideal temperature.

Fan Only Mode

Press the **Fan Switch** (E) only to enable the fan to operate for cool air output.

Using the Flame Effect

Press the **Flame Effect ON/OFF Switch** (B) to operate the **Flame Effect** (3), rotate the **Flame Effect Dimmer Control** (A) to vary the brightness of the effect.

The flame effect can be used separately from the heating function.

Care and Use of Your Stove Effect Heater

Always disconnect the stove heater from the mains power supply and allow to cool before cleaning.
Clean outside of the heater with a clean damp cloth. Never clean with harsh or abrasive cleaners.
Do not submerge any part of the stove effect heater in water or any other liquids.

Replacing the Flame Effect Bulbs

Before changing the bulbs, always disconnect the stove effect heater from the mains power supply and allow to cool**.**
STEP 1 Loosen the screws at the front of the log bed (see Fig. 1)
STEP 2 Lift up the log bed effect. Two bulbs are located under the log be – see Fig. 2 below:

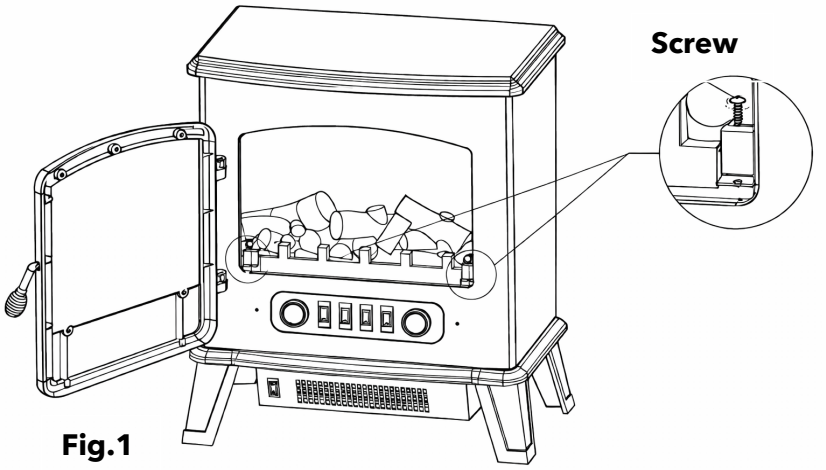


Fig.1

STEP 3 Remove the defective bulb by pulling it out of the holder – see Fig 2. circled below.
STEP 4 Replace with a new **25W G9 Halogen Bulb** taking care not to touch the bulb with bare hands and ensure the bulb is fully pushed home:

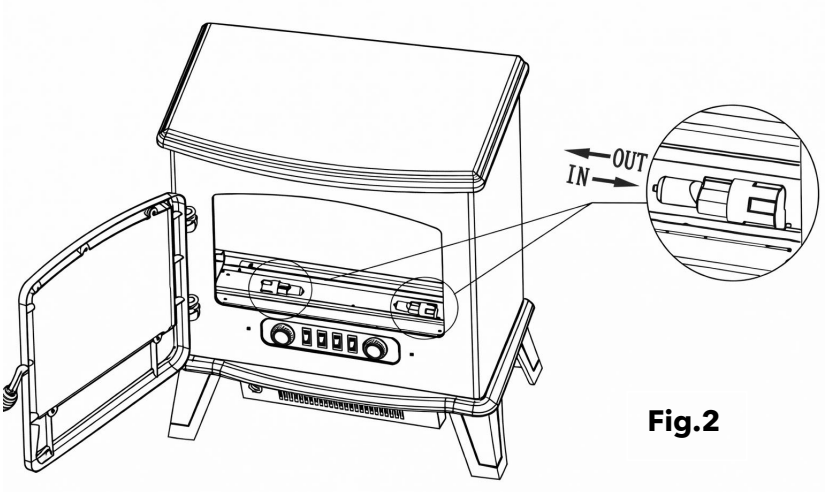


Fig.2

STEP 5 To reassemble, follow the above instructions in reverse order.

Safety Cut-Out

⚠ **WARNING!** This appliance is fitted with a built in safety cut-out, if the cut-out is activated the unit stops working, unplug the heater from the mains and check that the air intake area is not blocked or covered.
Leave for an hour to cool and reset before plugging back into the mains.

Electrical Rating

220-240V~ 50Hz 1850W
Model Numbers: 30162412 / 30162413
This equipment complies with Annex III of Commission Regulation (EU) 2023/826
ErP: Off mode power consumption is 0.0 W, which is within the permitted limit of 0.50 W in accordance with Commission Regulation (EU) 2023/826.

Non-Rewireable Mains Plug


If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating). Never use a plug with the fuse cover missing. If in doubt, consult a qualified electrician.
If you need to remove the plug -**DISCONNECT FROM THE MAINS**- and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of electric shock.

Model identifier(s): 30162412 / 30162413					
Item	Symbol	Value	Unit	Item	Unit
Heat output				**Type of heat output / room temperature control (select one)**	
Nominal heat output	P_{nom}	1,850	kW	single stage heat output and no room temperature control	[no]
Minimum heat output (indicative)	P_{min}	0,925	kW	two or more manual stages, no room temperature control	[no]
Maximum continuous heat output	$P_{max,c}$	1,850	kW	with mechanic thermostat room temperature control	[yes]
Power consumption				with electronic room temperature control	[no]
In off mode	P_o	0,00	W	electronic room temperature control plus day timer	[no]
In standby mode	P_{sm}	N.A.	W	electronic room temperature control plus week timer	[no]
In idle mode	P_{idle}	N.A.	W	**Other control options (multiple selections possible)**	
In network standby	P_{nsm}	N.A.	W	room temperature control, with presence detection	[no]
Standby mode with display of information or status [no]				room temperature control, with open window detection	[no]
Seasonal space heating energy efficiency in active mode	$\eta_{S,on}$	85,0	**%**	distance control option	[no]
				adaptive start control	[no]
				working time limitation	[no]
				black bulb sensor	[no]
				self-learning functionality	[no]
				control accuracy	[no]

Recycling

Our packaging is recyclable, please recycle where facilities exist.

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist.

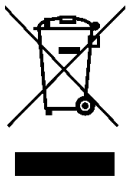

Check with your Local Authority or retailer for recycling advice.

We're happy to recycle your old stove heater for free. Simply bring it to store within 28 days of purchase of your new stove heater, with your receipt and we'll make sure your old unit stays out of landfill.

Customer Service

If you have any issues with this product, you can call our Customer Service team on:
0345 165 6565 Monday to Friday **9am to 5:00pm.**
Alternatively, you can contact our team by Live Chat on: **Dunelm.com**
Monday to Friday 8am – 8:30pm
Saturdays 8am – 5:30pm
Sundays and bank holidays 9am – 4:30pm.

2 YEARS	This product is covered by a Guarantee. Any accidental damage caused by misuse is not covered.
The Guarantee is valid from the date of purchase. Please keep your proof of purchase as we will need to see this to validate your Guarantee. The Guarantee applies only when the product has been used for domestic use only within England, Scotland, Wales, Northern Ireland and Jersey.	
For further information, please see our Guarantee T&C document on the product page on Dunelm.com or contact our customer service team.	

FSC TO BE CONFIRMED

www.dunelm.com

Dunelm (Soft Furnishings) Ltd. LE7 1AD
& Dunelm (Soft Furnishings) Holding Ltd. Dublin D12 WR25

Made In China