


Aluminium Curtain Track

Installation & Care Instructions

Suitable for Pencil Pleat Curtains

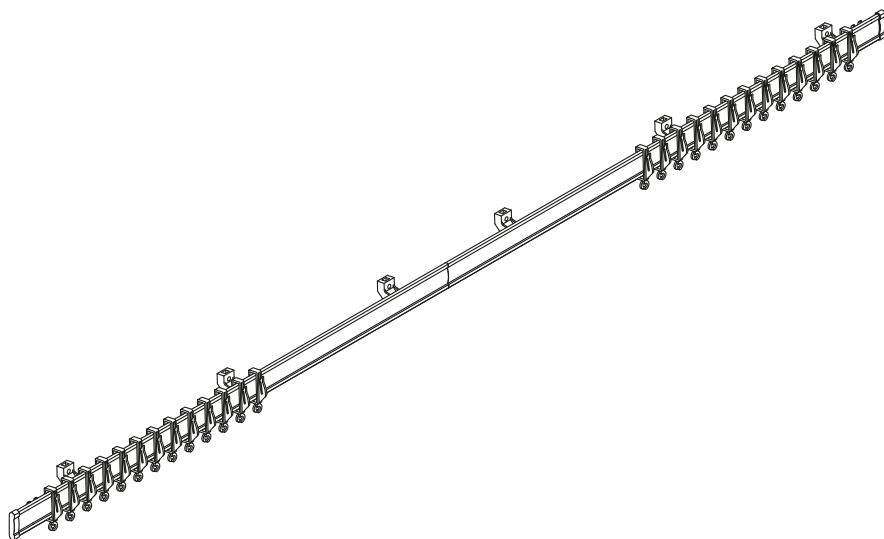

Aluminium Curtain Track

Quick and easy installation without the need for special tools.

- A. Check you have received all parts supplied listed and the correct quantity of each. Beware that sometimes parts are packaged within the product so not immediately visible after opening.
- B. Please check the installation guide section for more details. If anything is missing, stop installing the product and contact our customer service team.
- C. Check all parts are intact and undamaged. Any issues, contact our customer service team.
- D. Check you have the right tools for the job. Required tools which are not provided are listed overleaf. If you are unsure of how to use these tools, please contact a professional tradesperson. We recommend Airtasker as an easy way to find trades people in your local area.
- E. Ensure that all wall plugs and screws provided are suitable for your type of wall/window.
- F. We recommend two people to fit longer length tracks 400cm and above.

Care Advice

Wipe clean only.

Note:







Modification of the design or configuration of the track or its integral or non-integral component parts shall not be made without consulting the manufacturer.




Important Safety Instructions

Dear customer

- **IMPORTANT** - The first step you need to take is to ensure your safety! Please take the time to read and understand these instructions before installing the curtain track.
- Please keep these instructions for future reference.
- This item is intended for indoor use only - unless otherwise specified.
- During installation children should be kept away from the product due to possible risk of injury. The product may contain small parts that could also cause choking if swallowed.
- Products can be dangerous if incorrectly fitted or assembled. Installation should be carried out by a competent person and instructions followed. No liability will be accepted for damage or injury caused by incorrectly installed or assembled products.
- Restrain children from climbing or playing on or around the product. Always consider where products are positioned to ensure children cannot get access to long cords or windows.
- Keep all plastic wrapping materials away from babies and children to avoid danger of suffocation.
- Ensure that all packaging is disposed of carefully and responsibly. Please recycle where possible.
- Once items are part or fully installed, they are not returnable unless faulty.

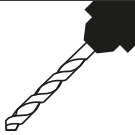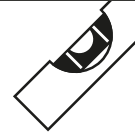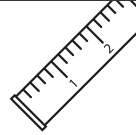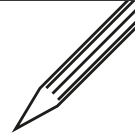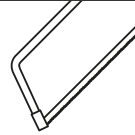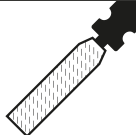
Tools required which are not included						
Drill	Cross head screwdriver	Spirit level	Tape measure	Pencil	Hacksaw (if adjusting the track size)	File (if adjusting the track size)
						

Parts Supplied For Track

Ref	Part	Visual	Qty for 120cm Track	Qty for 180cm Track	Qty for 240cm Track	Qty for 300cm Track	Qty for 360cm Track	Qty for 400cm Track
1	Track		1	1	2	2	2	2
2	Gliders		16	24	32	40	48	56
3	Brackets		4	5	7	9	11	12
4	End Stop		2	2	2	2	2	2
5	Track End Caps		2	2	2	2	2	2
6	Joiner		N/A	N/A	1*	1*	1*	1*
7	Screws & Wall Plugs		4	5	7	9	11	12

*Joiner supplied with track lengths of 240cm and over only.

Tracks over 240cm will arrive with 4 track end caps for protection. Please discard 2 of these to join the tracks together.

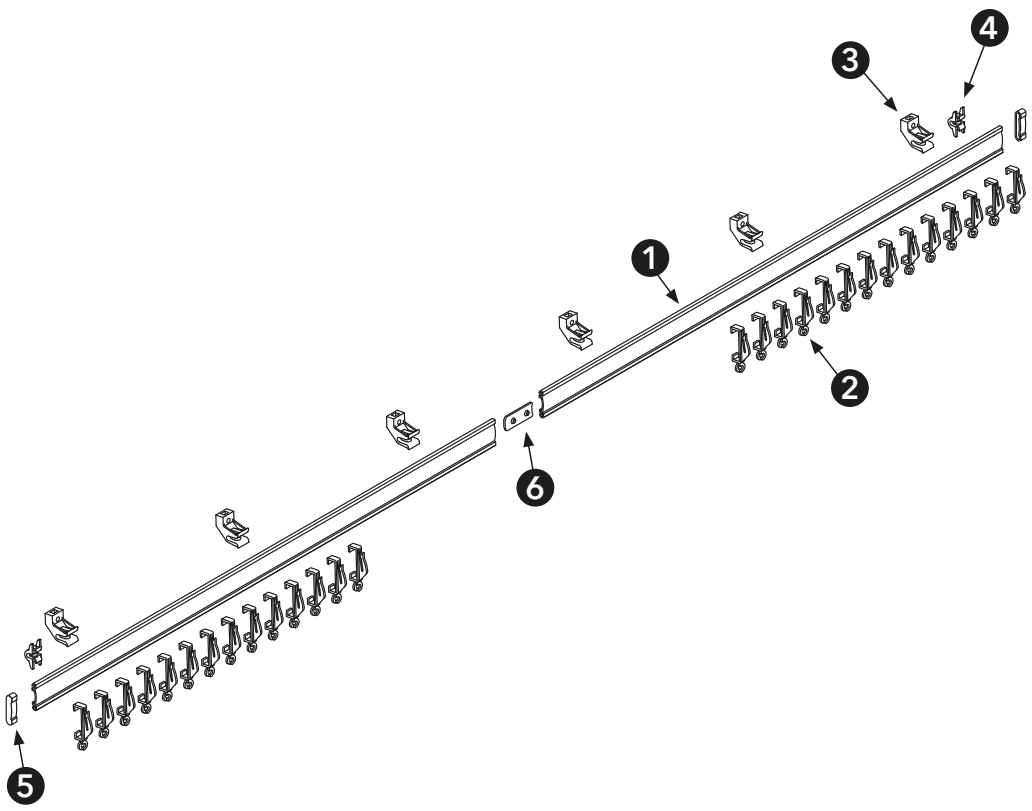

Important

When drilling into walls always check there are no hidden wires or pipes etc. Make sure that the screws and wall plugs being used are suitable for supporting your blind. If you are unsure of the below guidance, consult a qualified tradesperson for advice or help.

Hints

- General Rule; Always use a larger screw and wall plug if you are not sure.
- Ensure you use the recommended drill bit to match the wall plug and hole size.
- Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
- Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure the plug is fitted below the ceramic tile to avoid splitting or cracking.
- Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Wall Plug Types		
You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone, wood or plastic board.		
GENERAL PURPOSE	PLASTERBOARD	HAMMER
For light loads only. Options available for most wall types.	For light loads only. Attach into plasterboard.	For light loads only. For solid walls covered with plasterboard. Allows the fixing to be attached into brick behind.
CAVITY - LIGHT LOAD	CAVITY - HEAVY LOAD	SHIELD ANCHOR
Light load cavity wall plug for use into plasterboard or hollow wooden doors.	Heavy load cavity wall plug for use into plasterboard or hollow wooden doors.	For heavier loads into masonry, brickwork or concrete.

Care and maintenance

Regularly check the fixings to ensure the wall plug or screws have not become loose. Tighten or stop using the product if they have.


Important - Keep these instructions for future reference

- Ensure that all wall plugs and screws provided are suitable for your type of wall/window. If in doubt consult a professional. See wall fixing guide within this document for guidance.
- Make sure the screws and wall plugs used are suitable for your wall type and that they can support the weight of the product. Consult a qualified tradesperson if unsure.
- Before drilling into walls, always check there are no hidden wires or pipes behind.

1. Measuring your window


First check the width of your window recess, the width of the track should be a minimum of 20cm wider than the windows recess (minimum 10cm each side).

Note: The track length can be reduced if required - see step 2 for further detail.

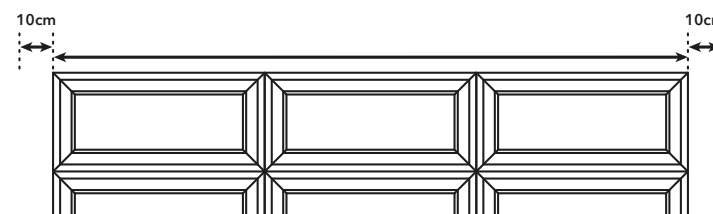

For all track sizes:

Using a spirit level and pencil, mark a straight line along the wall or batten to the required track length. Mark the end bracket positions 3cm in from each end of the track and then evenly distribute the remaining brackets no more than 36cm apart as shown.

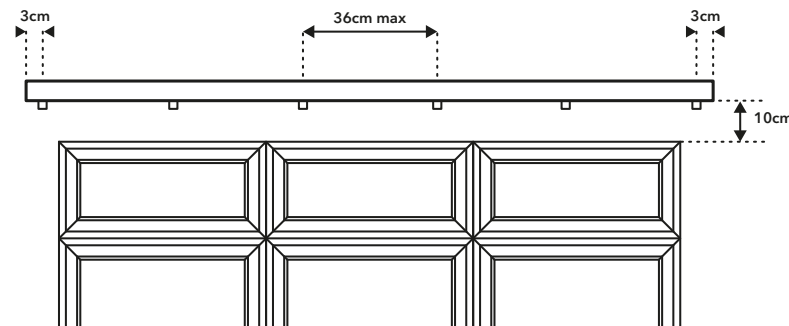

2. Shortening the track


Please ensure you have the correct size of track before cutting down to size.

For tracks up to 180cm: Cut from one end only.

For tracks over 240cm: Cut equal amounts from the end of both track pieces.

Eg. To reduce the overall length by 10cm you need to remove 5cm from one end of each piece.


- Remove end cap before cutting the track down.
- Using a hacksaw, carefully cut to length ensuring a straight edge remains. Remove all burrs using a file.
- Once you have desired length, re-attach the end cap.

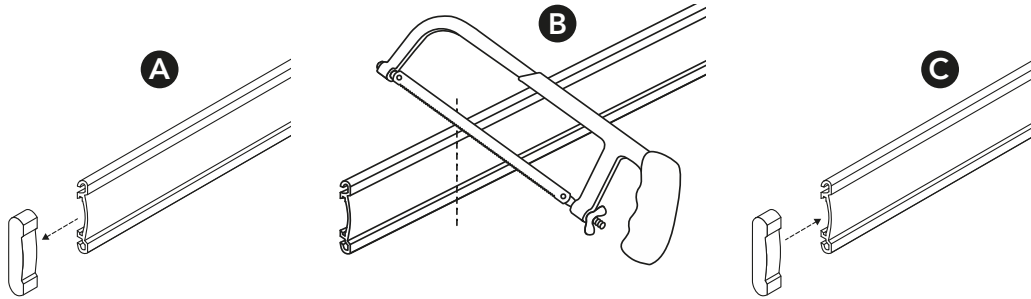

For tracks 240cm and above: Join the two pieces of track together using the joiner provided and secure into place with 2 x grub screws.

3. Preparing the bracket

- Once you are happy with the bracket positions marked in step 2, secure fixing brackets as required ensuring the correct drill bit & fixings are used.

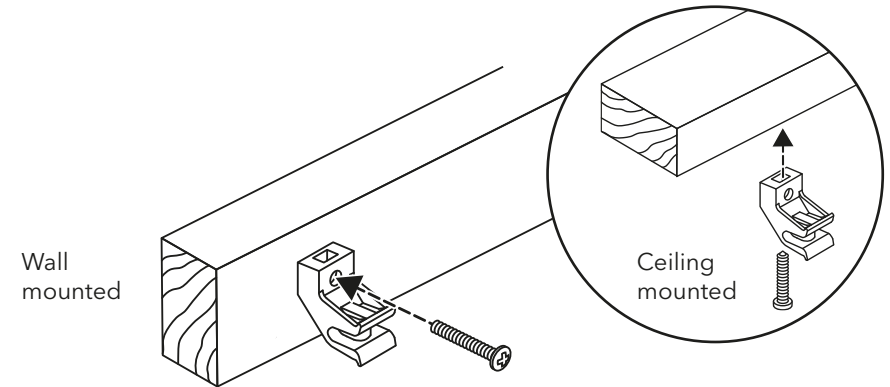


4. Preparing the track


Your track can be bent to suit bay windows with 90 degrees or shallower bends.

Use a curved surface to support the track when hand forming and note the minimum bend radius is 15cm otherwise the track may kink and distort.

Brackets at corners should be located as shown.

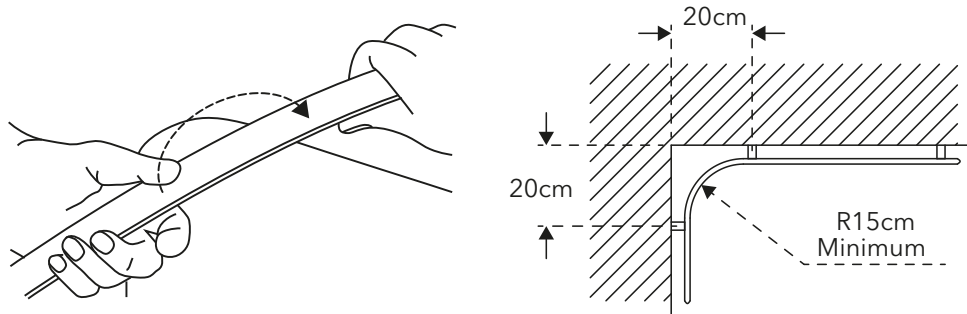

Fit an end stop at each end of the track by sliding or clicking into rear channel. Using a flat head screwdriver, fix into position and take care not to over tighten.

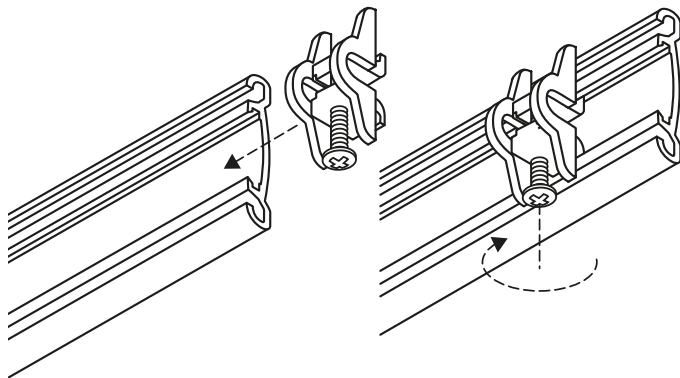


5. Fixing track to the wall


Note: When installing longer lengths, assistance may be required to support the rail at the other end. We recommend two people to fit longer length tracks.

For tracks over 180cm:

Join the two pieces of track together using the joiner piece. The joiner is to be slotted equally into the back channel of both tracks and secured into position using screws provided.

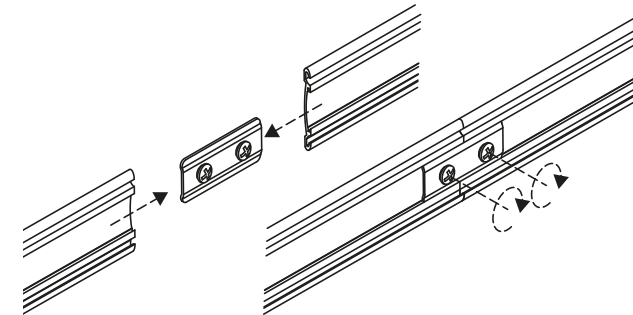


- Offer the track up to the previously installed brackets and clip into position.
- Check each bracket is properly engaged at the rear of the track and then tighten carefully with a cross head screwdriver.
- When all brackets and end stops are secure, the track end caps can be attached.

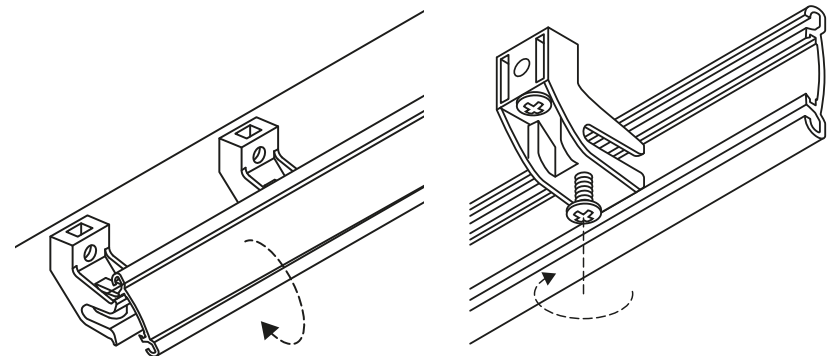

6. Attaching the curtains


The supplied gliders can be attached to a curtain header tape with the hook or curtain hooks can be used in the lower eyes.

Using a header tape, insert the glider hooks into the curtain tape pockets at approximately 8cm intervals.

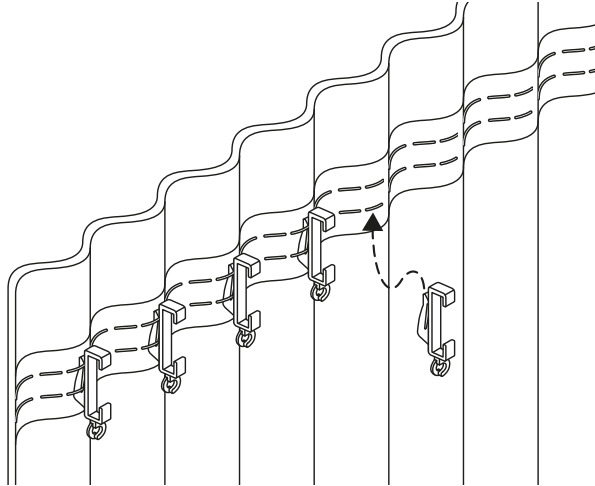

Gliders can be clipped onto the rail by engaging the lower part with the bottom edge of the rail and then snapping the top onto the top rail edge.

To fix the curtain ends in place, snap the last glider over the end stop brackets.

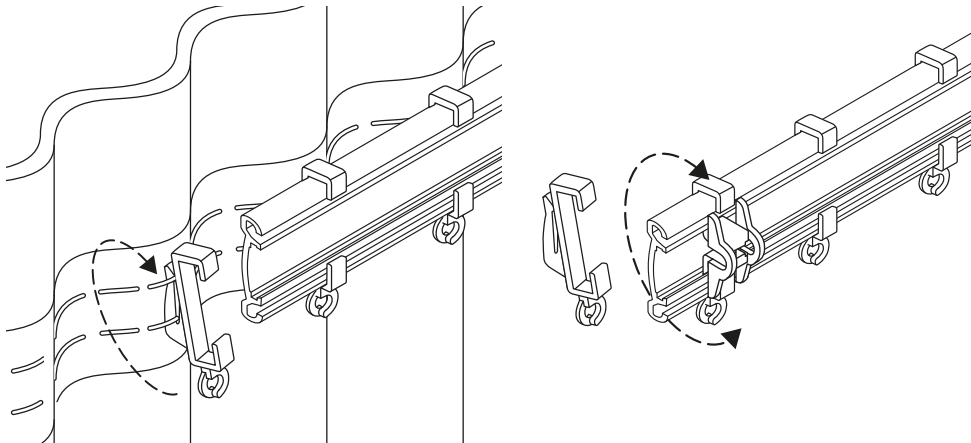

Customer Service Centre

If you have any issues with this product, you can call our **Customer Service** team on:
0345 165 6565 Monday to Friday **9am to 5:00pm**.

Alternatively, you can contact our team by Live Chat on:

Dunelm.com

Monday to Friday 8am - 8:30am

Saturdays 8am - 5:30pm

Sundays and bank holidays 9am - 4:30pm



Dunelm (Soft Furnishings) Ltd. LE7 1AD &
Dunelm (Soft Furnishings) Holdings Ltd. Dublin D12 WR25

OPRL

FSC

Manufactured in China