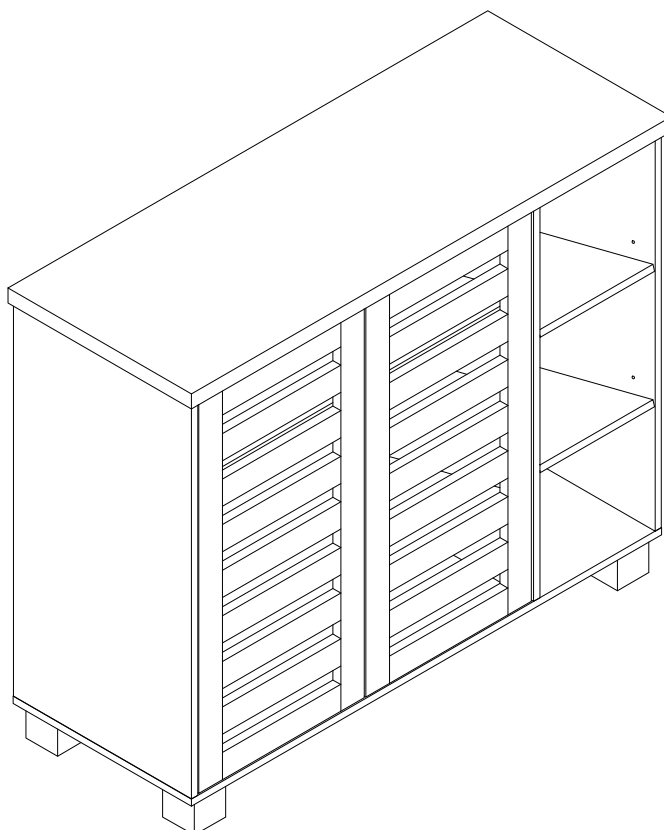


# BODIE SHOE CABINET ASSEMBLY INSTRUCTIONS

Thank you for purchasing the BODIE SHOE CABINET. Please read the instructions carefully to ensure safe operation of the product.



Size:L91.5xW35xH75cm

---

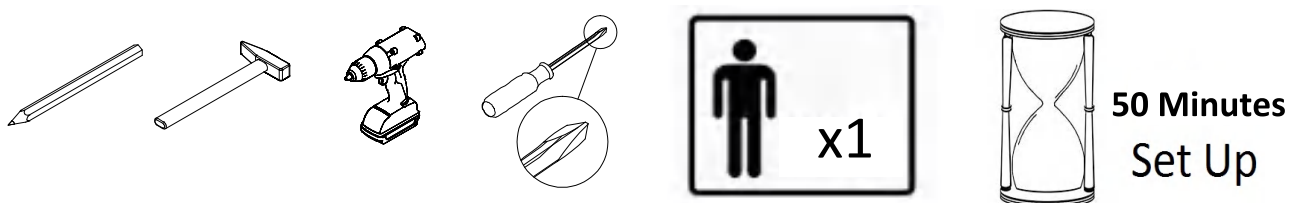
**PLEASE READ** this sheet prior to assembly to familiarise yourself with the various stages of construction.

Carefully open the pack supplied and check the contents against the parts and fittings check list. Do not destroy any of the packaging until you are certain that you have all the necessary parts for the assembly.

**CAUTION:** There are small components used in the construction of this unit. These loose items should be kept away from young children whilst assembling your unit to avoid the danger of choking hazards.

---

## Tool Required



# BODIE SHOE CABINET ASSEMBLY INSTRUCTIONS

## IMPORTANT - READ CAREFULLY - RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

### INFORMATION

Due to the size of this product we recommend that it is assembled in the room intended for use.  
When you are ready to start, make sure that you have the right tools, plenty of space and a clean, dry area for assembly.  
Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to prevent it from scratching.  
Check the pack and make sure you have all the parts listed .  
Ensure that this product is fully assembled as illustrated before use.  
Check all screws or bolts are tightened and inspect regularly.  
This product should only be used on firm, level ground.  
Keep small parts out of reach of children.  
Make sure the legs remain in contact with the ground.  
Tools not included.

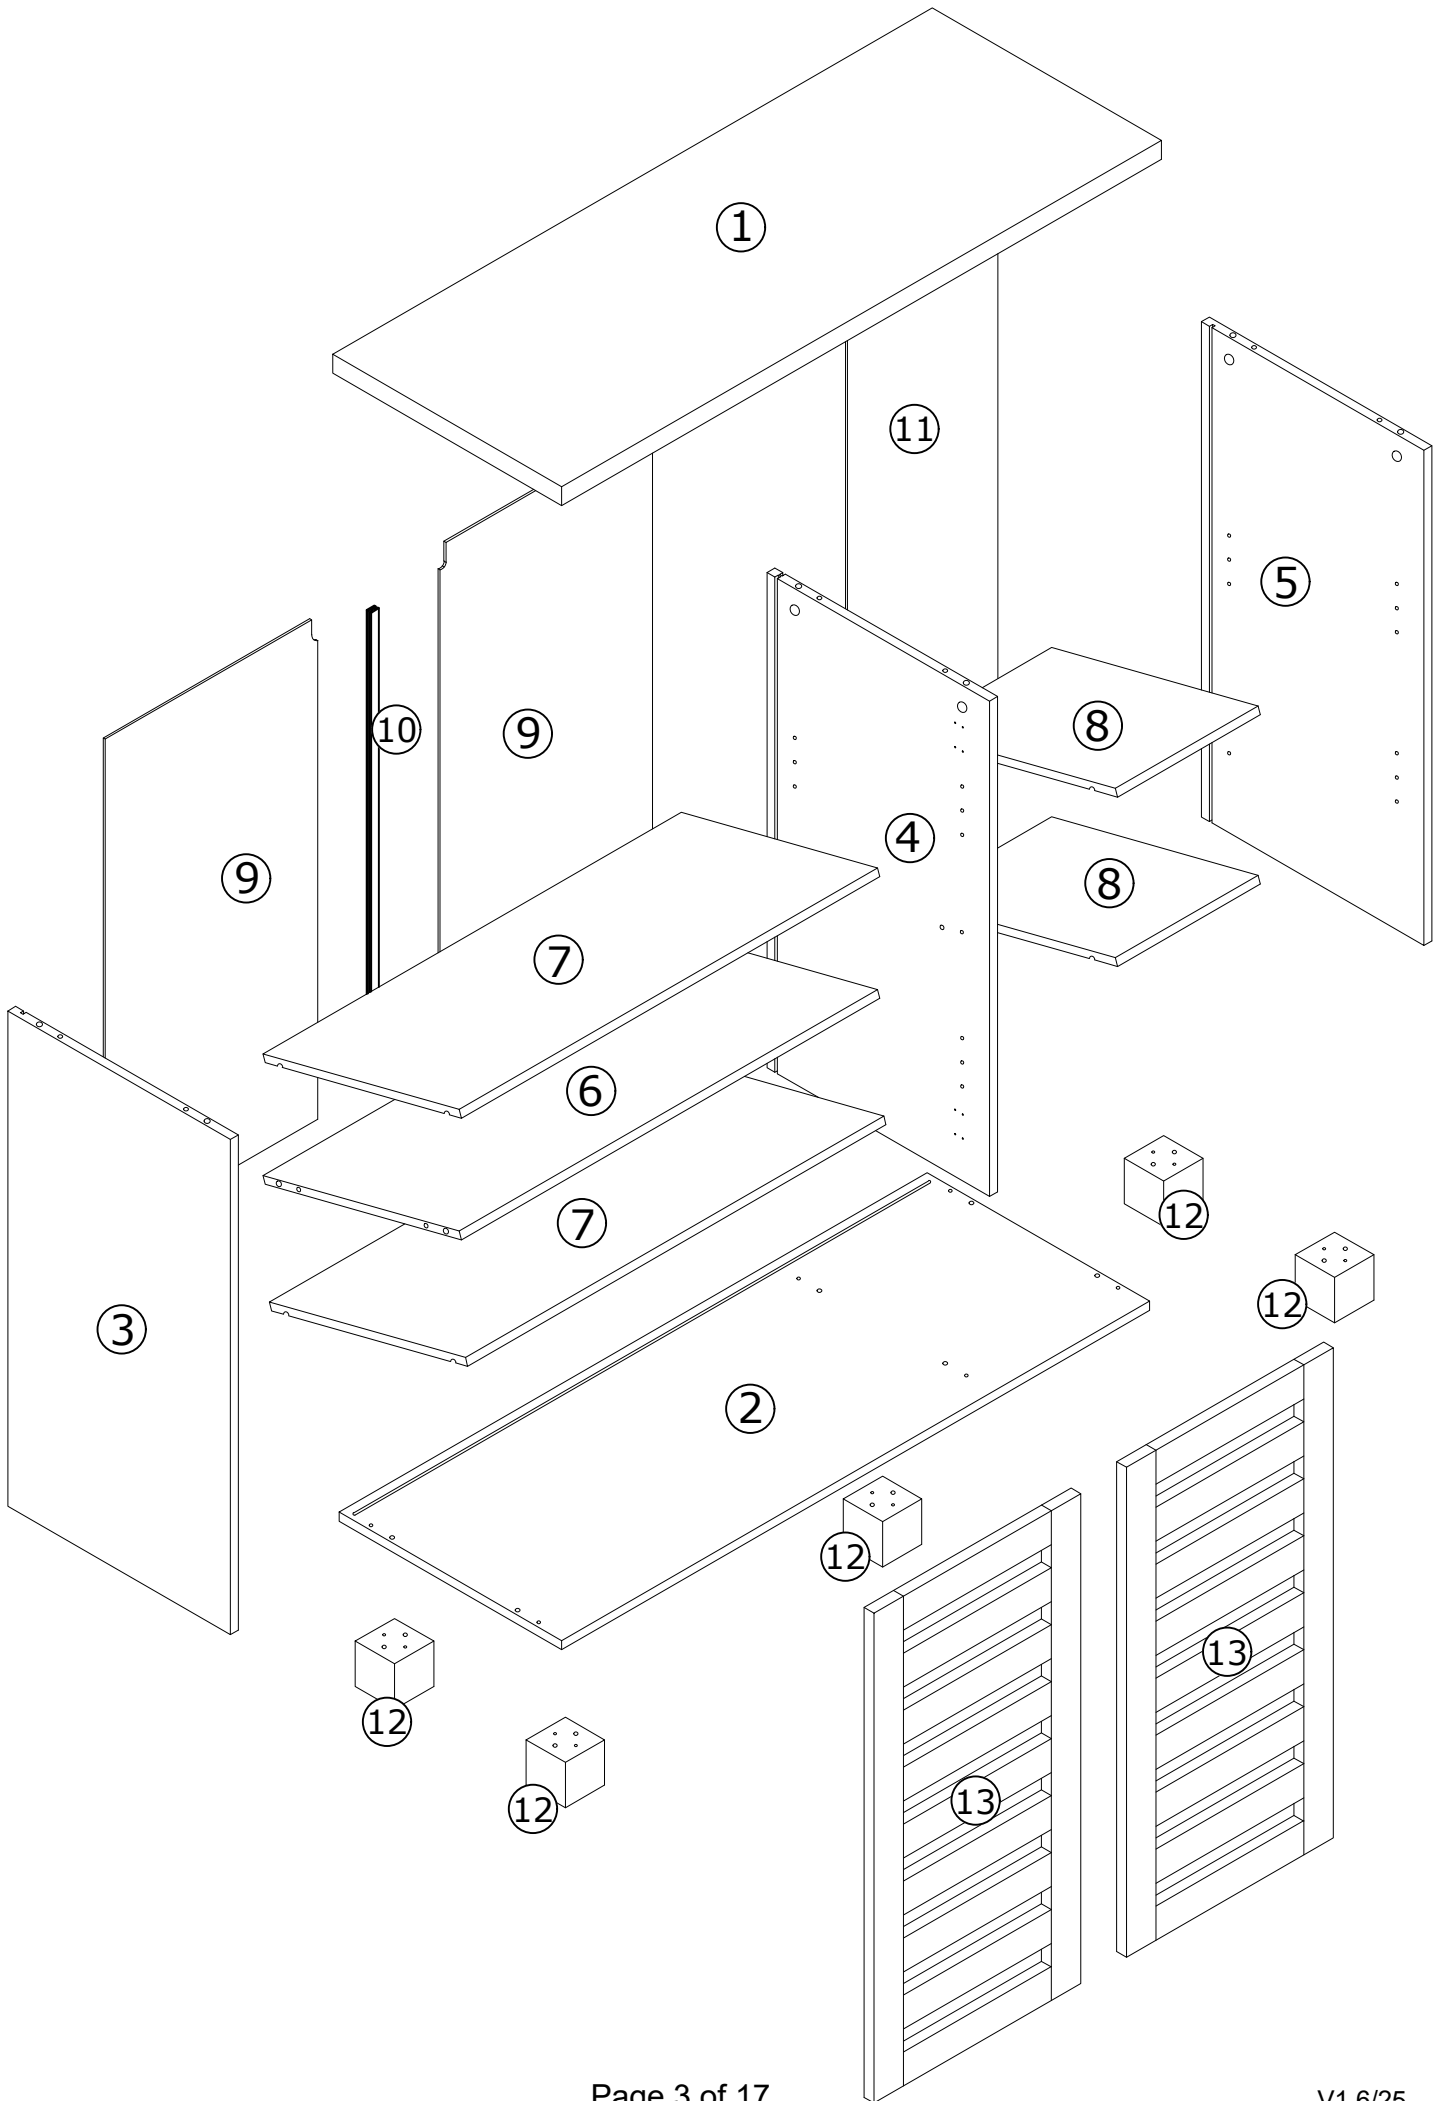
### WARNINGS

DO NOT use power tools to construct this product.  
DO NOT over tighten screws or bolts.  
DO NOT use this product if parts are missing, damaged or worn.  
DO NOT stand on the product.  
DO NOT place very hot or very cold items on the surface unless adequately thick tablemats are use to prevet such items damaging your table top.  
We recommend the use of wall safety bracket provided for safety reasons.  
N.B. Wall fixings suitable for a solid wall are included although the wall plug provided may not be suitable for another type of walls such as hollow walls.  
Fixings suitable for your wall types must be obtained separately.  
If in doubt please consult a qualified trade person.  
Always ensure the area to be drilled is free from hidden electrical wires,water and gas pipe.  
It is essential that this unit is fixed to a wall with the fixing provided.

### CARE INFORMATION

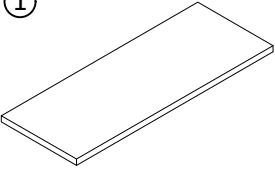
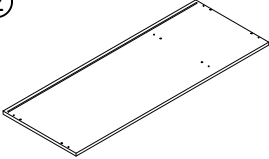
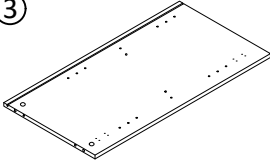
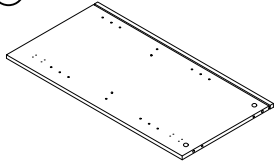
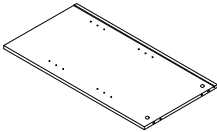
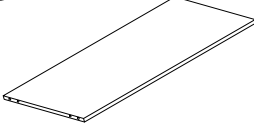
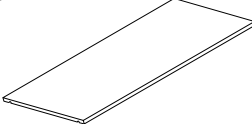
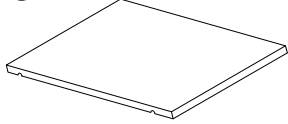





Never use scourers, abrasives or chemical cleaners.  
To clean wipe with a sponge and warm soapy water. Do not use solvent based cleanersor detergents as they can bleach or damage the product.

# BODIE SHOE CABINET ASSEMBLY INSTRUCTIONS



# BODIE SHOE CABINET ASSEMBLY INSTRUCTIONS

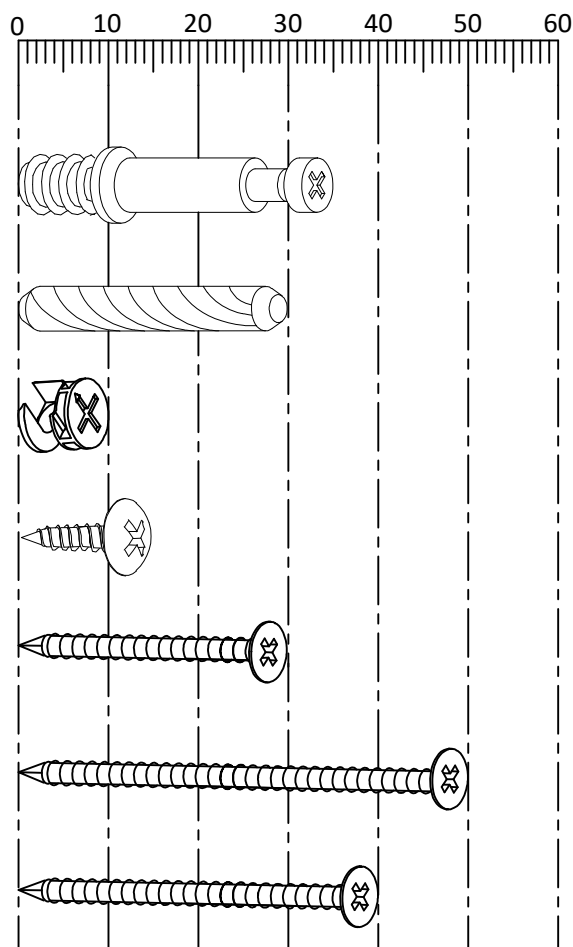
## Parts

①	②	③	④
			
Description: Top panel Qty: 1PC	Description: Bottom panel Qty: 1PC	Description: Left Side panel Qty: 1PC	Description: Middle Vertical panel Qty: 1PC
⑤	⑥	⑦	⑧
			
Description: Right Side panel Qty: 1PC	Description: Middle shelf Qty: 1PC	Description: Adjustable shelf Qty: 2PCS	Description: Adjustable shelf Qty: 2PC
⑨	⑩	⑪	⑫
			
Description: Back panel Qty: 2PCS	Description: Backboard connecting strip Qty: 1PC	Description: Back panel Qty: 1PC	Description: Legs Qty: 5PCS
⑬			
			
Description: Door Qty: 2PCS			

# BODIE SHOE CABINET ASSEMBLY INSTRUCTIONS

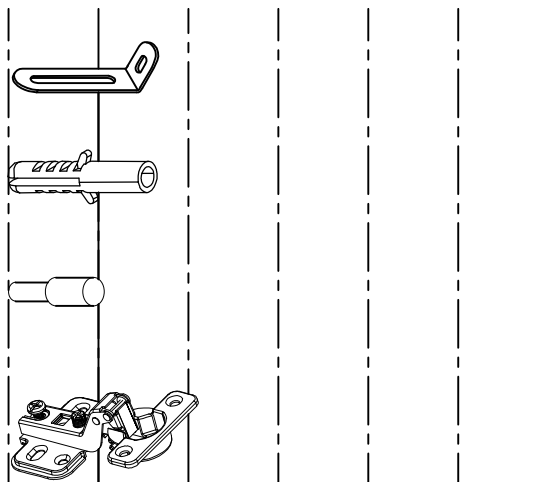
## Fittings(to scale)

Ref	Dlmentslons	Qty
<b>A</b>	Cam bolt (6x35mm)	<b>10</b>
<b>B</b>	Wood dowel (6x30mm)	<b>26</b>
<b>C</b>	Cam (15x10mm)	<b>10</b>
<b>E</b>	Screw (4x14mm)	<b>26</b>
<b>F</b>	Screw (4x30mm)	<b>6</b>
<b>G</b>	Screw (4x50mm)	<b>10</b>
<b>K</b>	Screw (4x40 mm)	<b>1</b>



## (Not to scale)

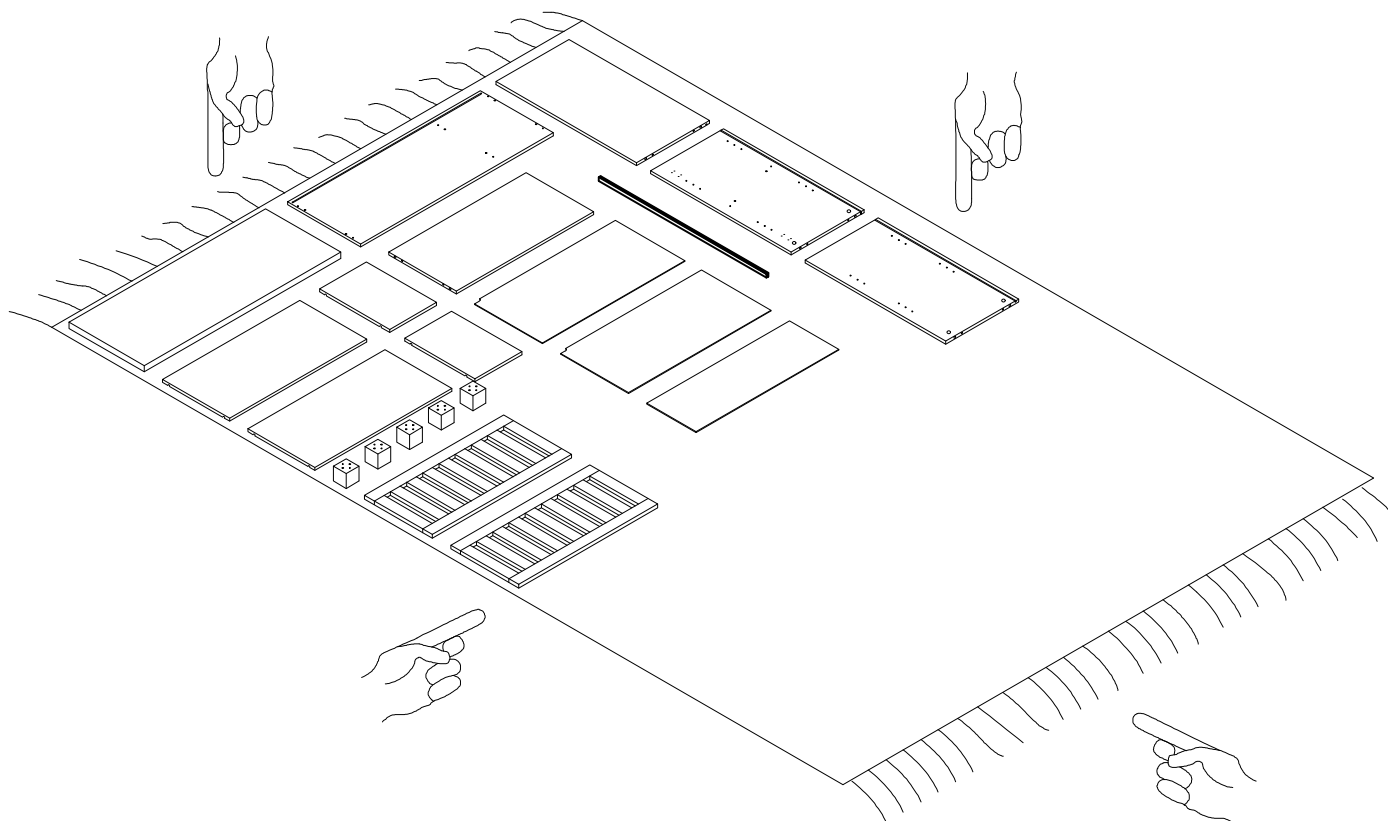
<b>D</b>	L-Mounting bracket	<b>1</b>
<b>I</b>	Wall plug	<b>1</b>
<b>J</b>	Shelf Support Pin	<b>16</b>
<b>K</b>	Hinge(L)	<b>4</b>



# BODIE SHOE CABINET ASSEMBLY INSTRUCTIONS

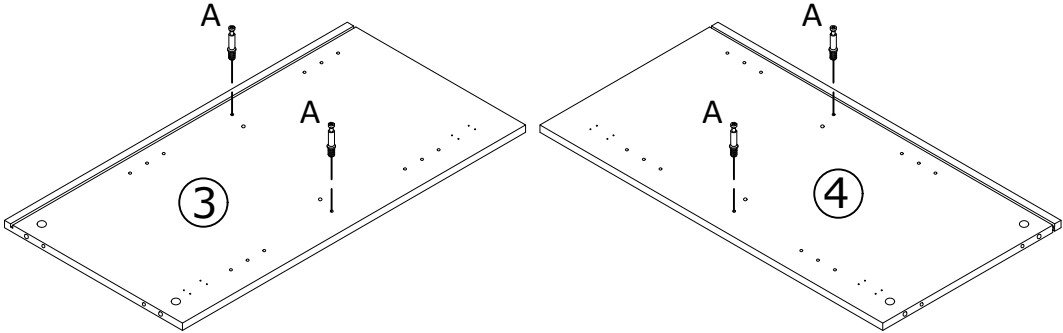
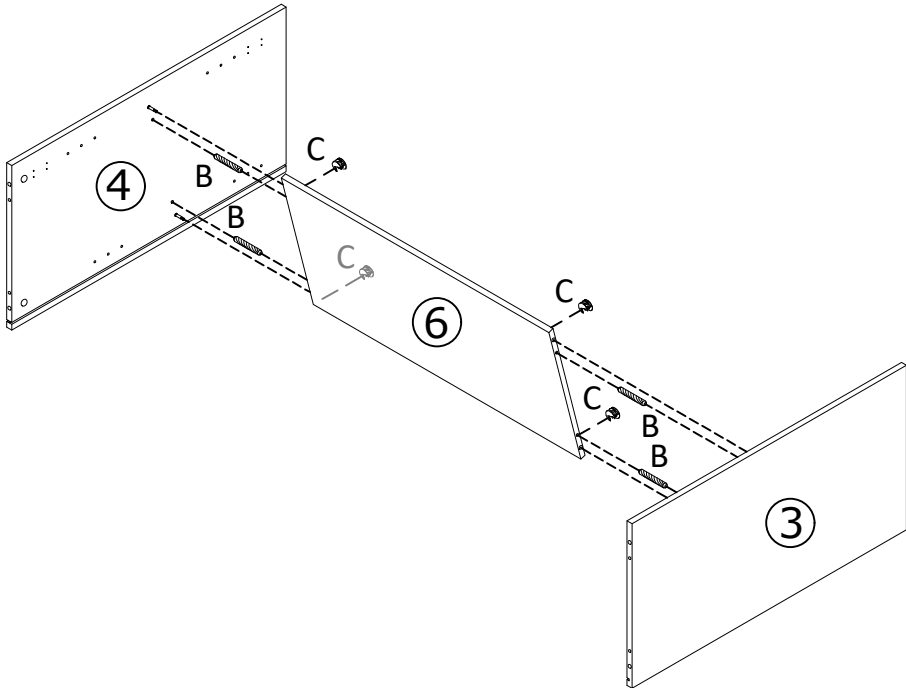
## Layout Parts on Soft Surface

Lay out all parts on a soft surface i.e. Rug, Carpet or Packaging Carton

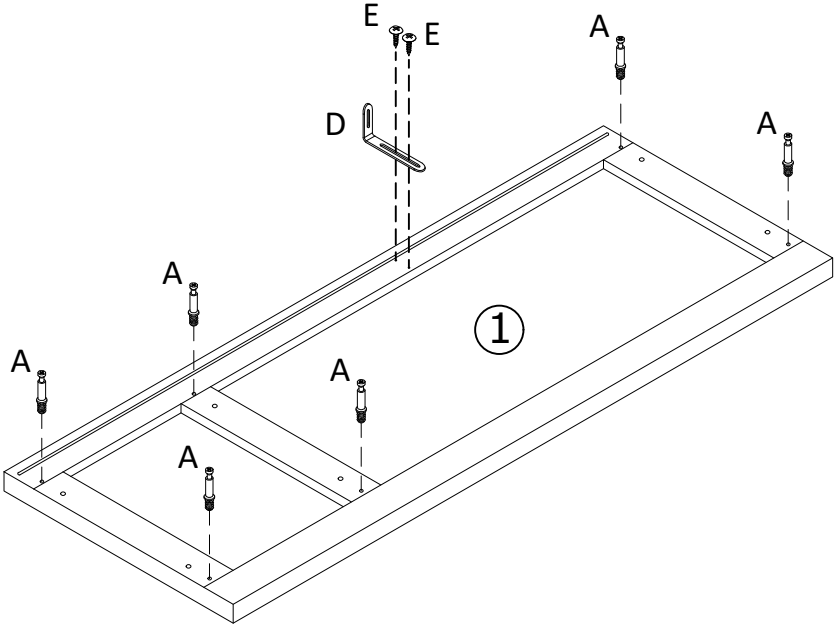
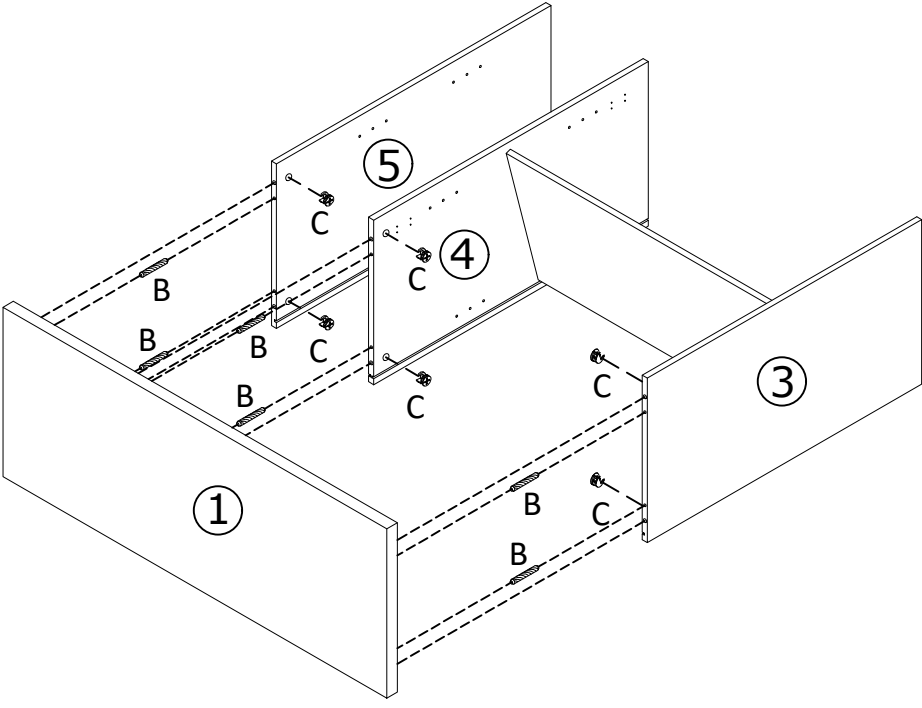


**CAUTION:** There are many small components used in the construction of this product. Please keep these components away from young children whilst assembling this product. If you keep the fittings in a bowl during assembly you will be less likely to lose them!

# BODIE SHOE CABINET ASSEMBLY INSTRUCTIONS

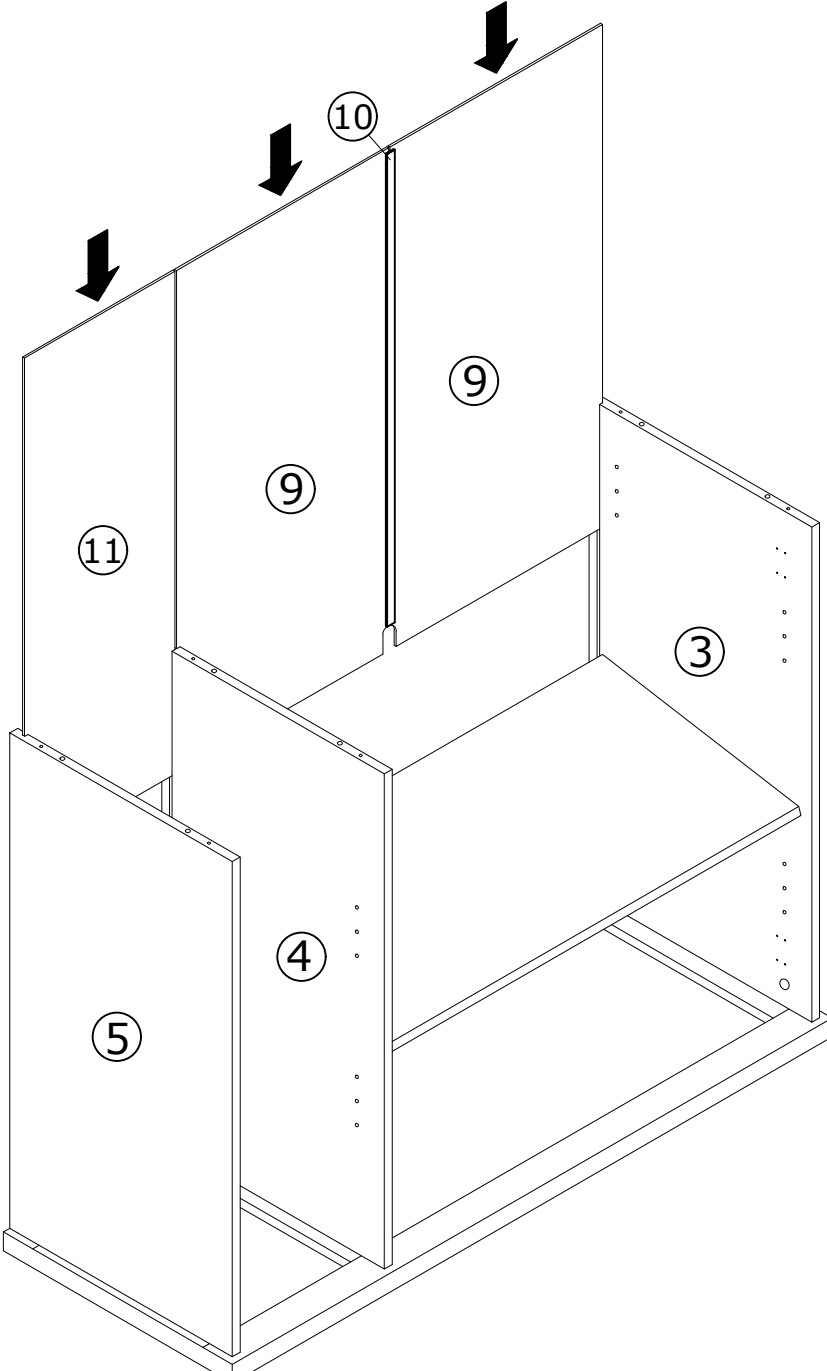
STEP 1	Parts Required
	<p>③ Left Side panel ×1 ④ Middle Vertical panel ×1</p> <p>A Cam bolt (6x35mm) ×4</p>
STEP 2	Parts Required
	<p>⑥ Middle Vertical panel ×1</p> <p>B Wood dowel (6x30mm) ×4 C Cam (15x10mm) ×4</p>

# BODIE SHOE CABINET ASSEMBLY INSTRUCTIONS

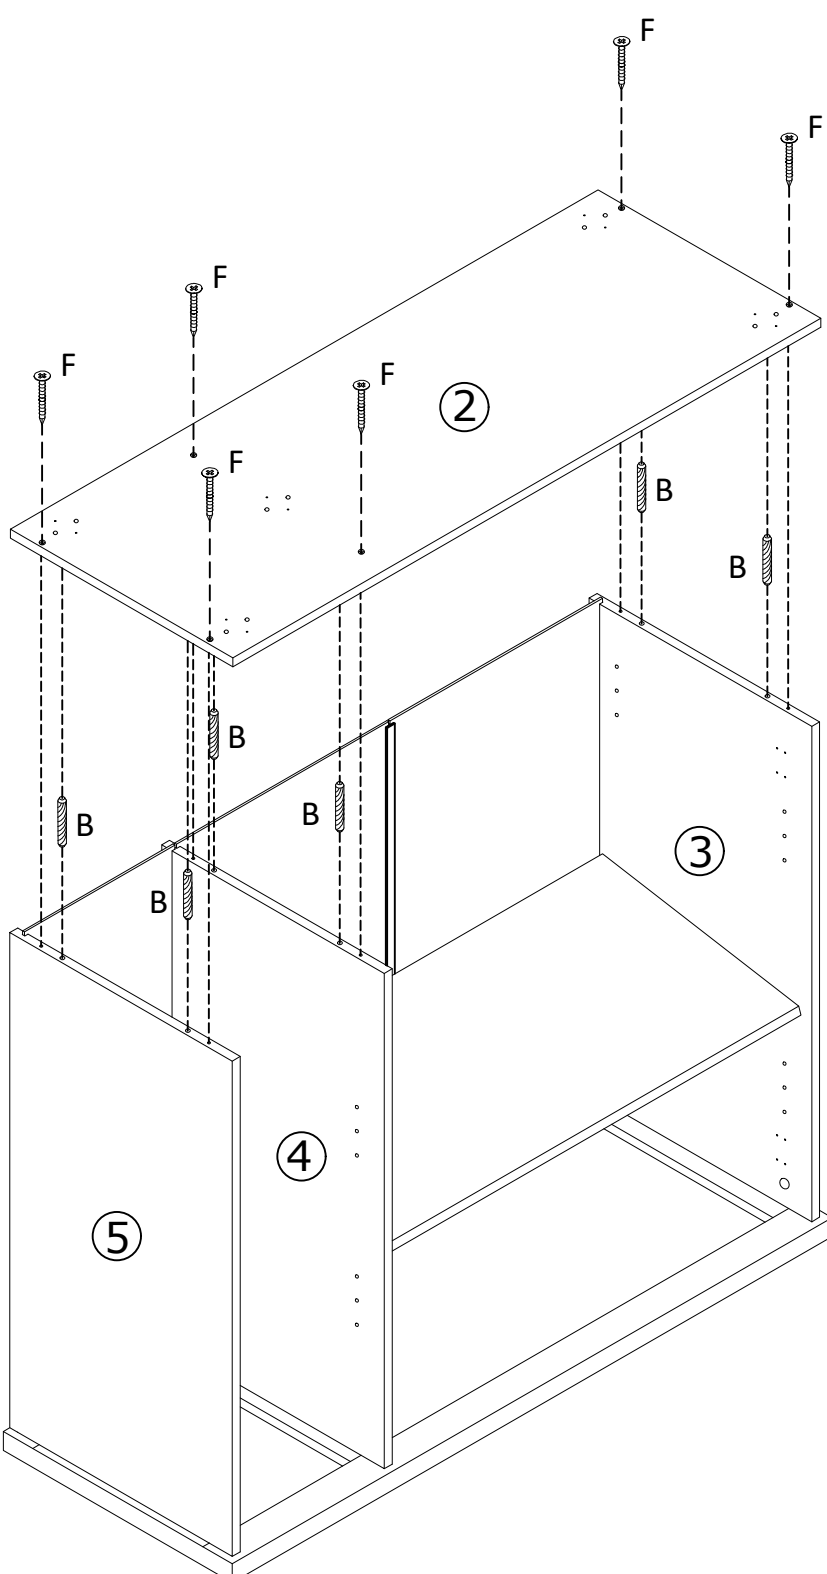
STEP 3	Parts Required
	<p>① Top panel ×1</p> <p>A Cam bolt (6x35mm) ×6 D L-Mounting bracket ×1 E Screw (4x14mm) ×2</p>
STEP 4	Parts Required
	<p>⑤ Right Side panel ×1</p> <p>B Wood dowel (6x30mm) ×6 C Cam (15x10mm) ×6</p>



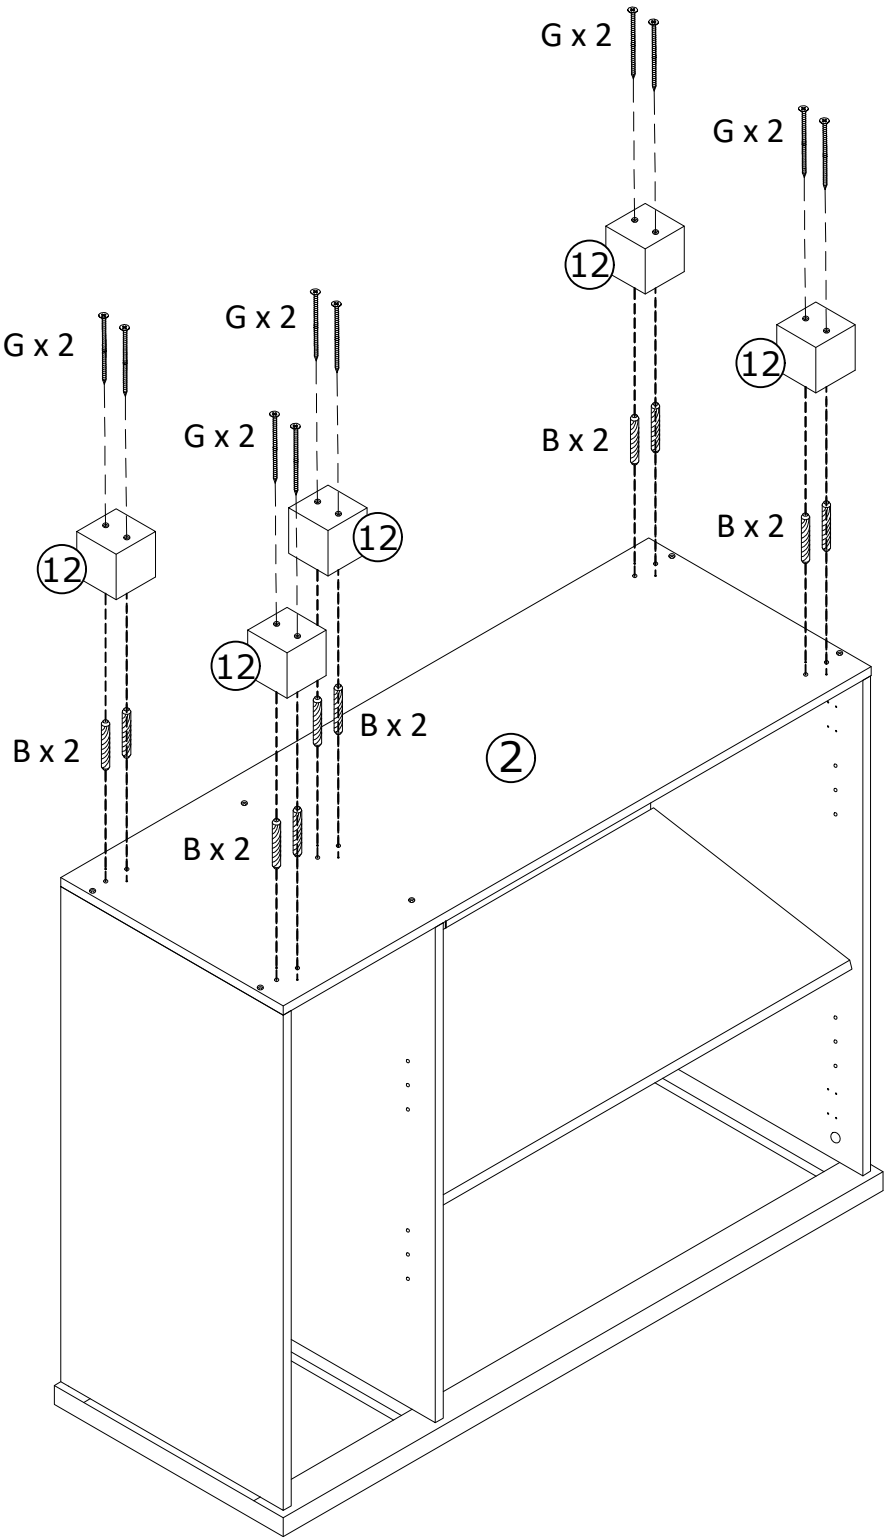
# BODIE SHOE CABINET ASSEMBLY INSTRUCTIONS

STEP 5	Parts Required
	<ul style="list-style-type: none"><li>⑨ Back panel ×2</li><li>⑩ Backboard connecting strip ×1</li><li>⑪ Back panel ×1</li></ul>

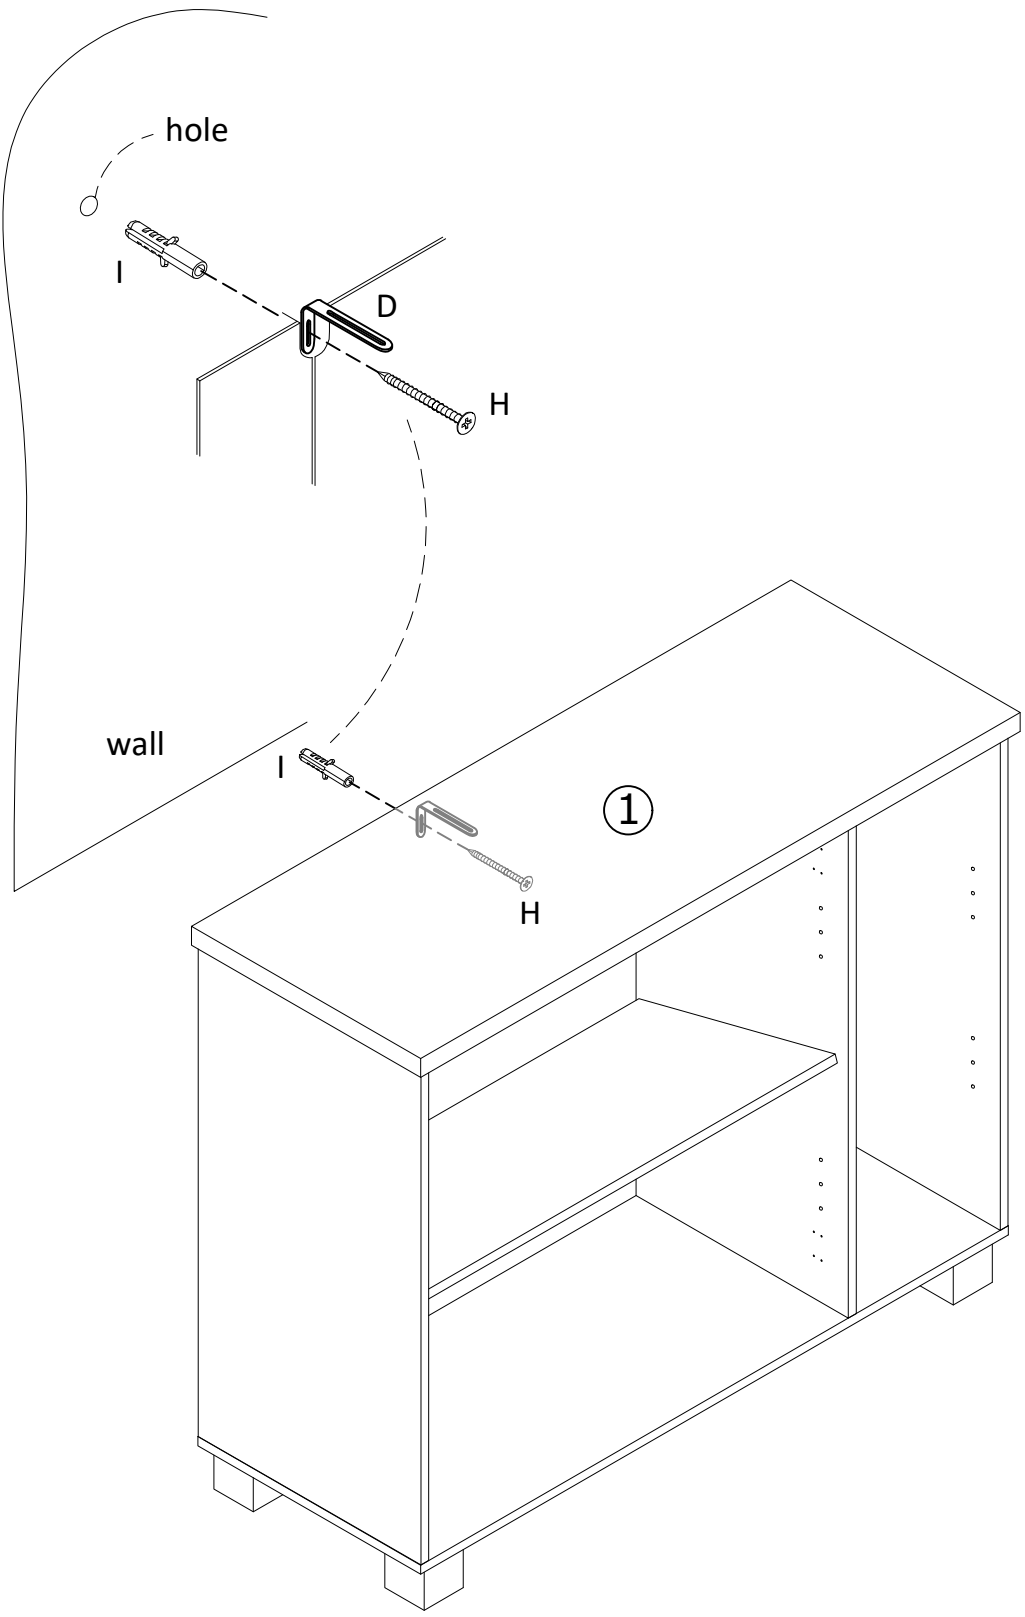
# BODIE SHOE CABINET ASSEMBLY INSTRUCTIONS

STEP 6	Parts Required
	<p>② Bottom panel ×1</p> <p>B Wood dowel (6x30mm) ×6</p> <p>F Screw (4x30mm) ×6</p>

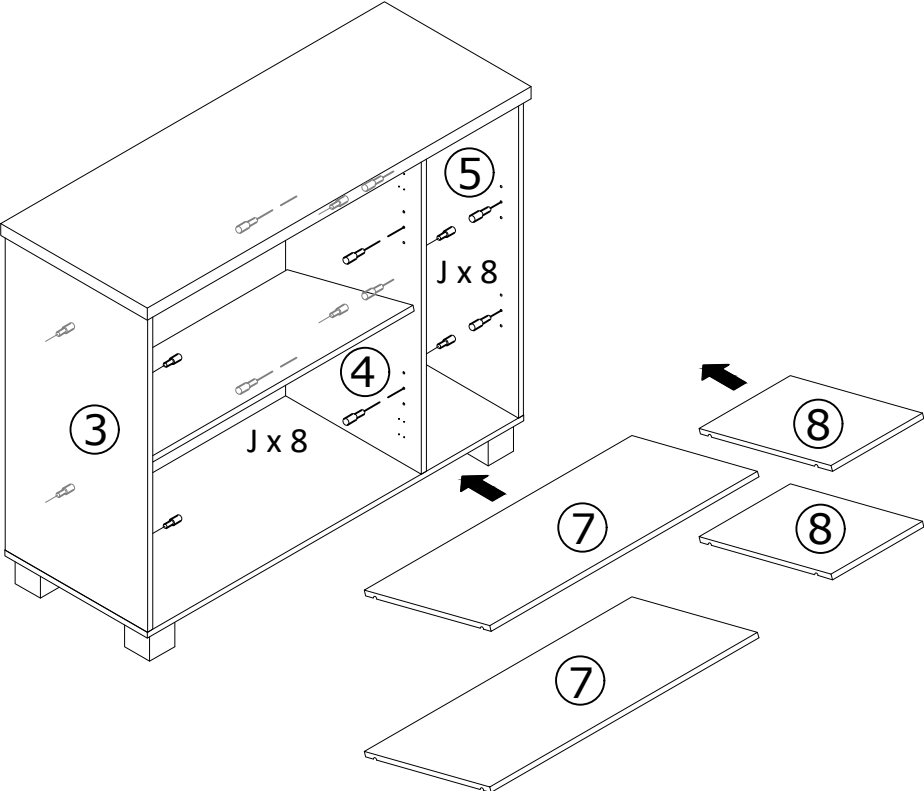

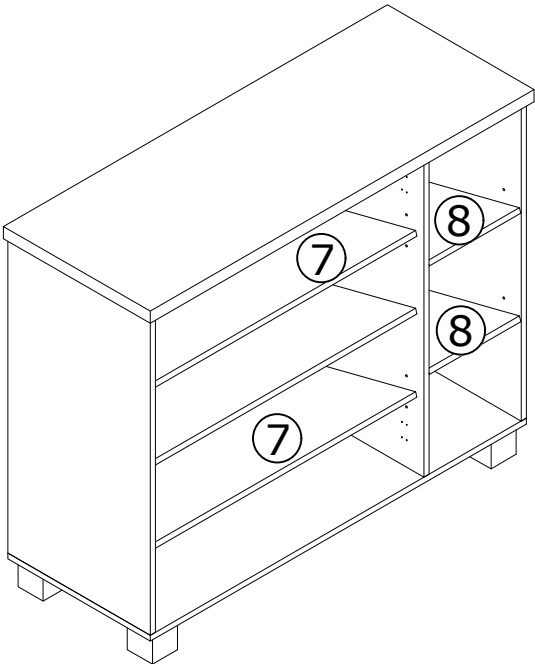
# BODIE SHOE CABINET ASSEMBLY INSTRUCTIONS

STEP 7	Parts Required
	<p>⑫ Legs x5</p> <p>B Wood dowel (6x30mm) x10</p> <p>G Screw (4x50mm) x10</p>

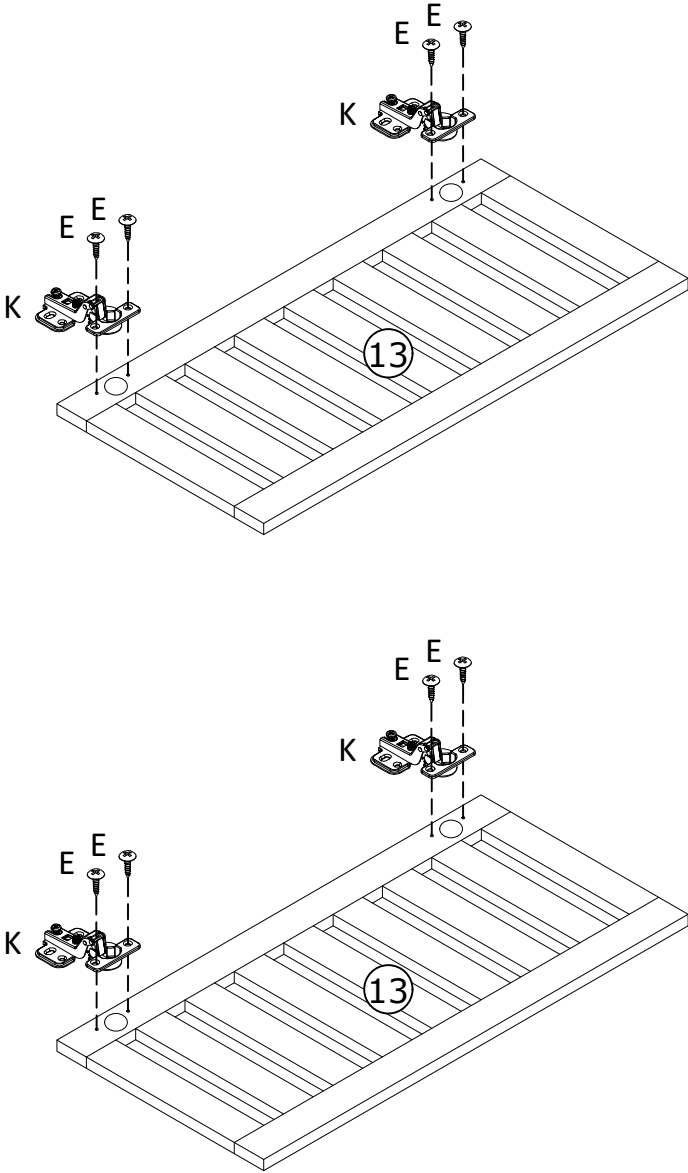
# BODIE SHOE CABINET ASSEMBLY INSTRUCTIONS

STEP 8	Parts Required
<div data-bbox="103 280 1133 1892"></div> <p data-bbox="103 1915 1133 2072">NOTE: The wall fixing, plug Supplied with this product is suitable for solid and brick walls. For hollow and stud type walls fixing devices suitable for those type of walls must be obtained separately Please ensure the fixing is safe and secure before use and that the area to be drilled is free from hidden wires. water and gas pipes.</p>	<p data-bbox="1189 1355 1508 1467">H Screw (4x40mm) ×1 I Wall plug ×1</p>

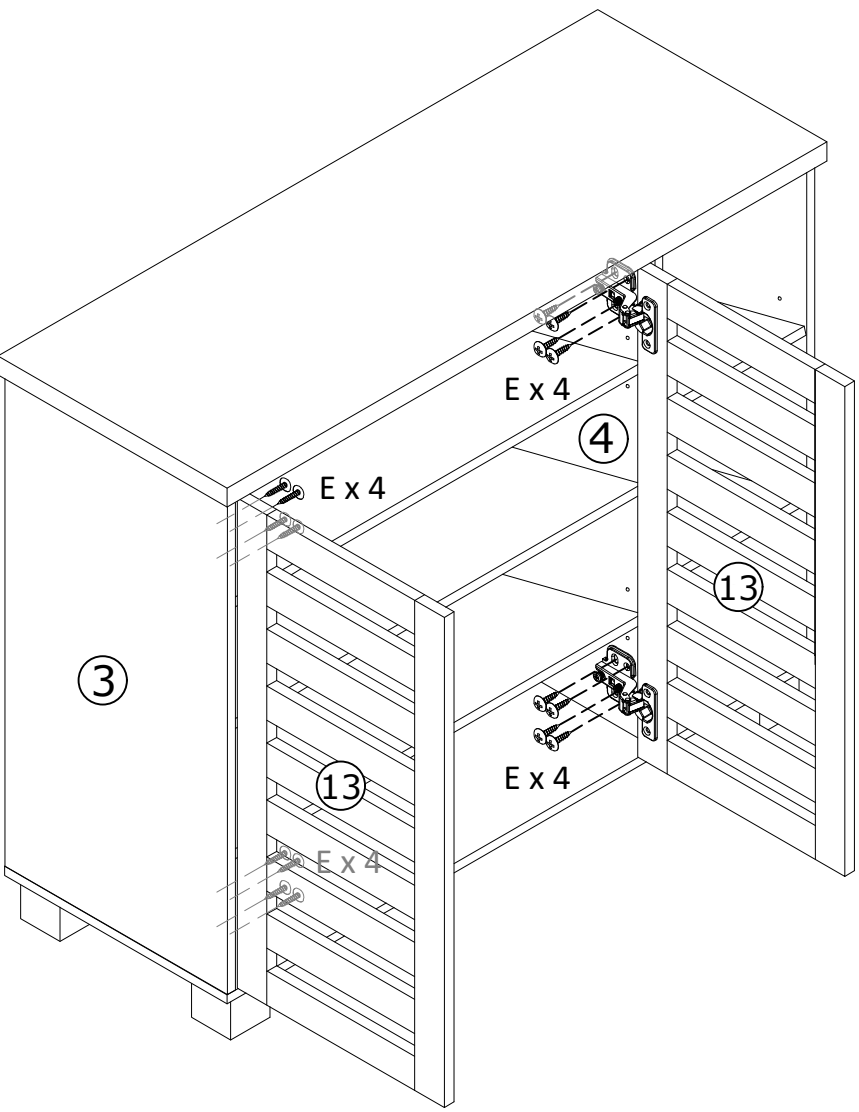
# BODIE SHOE CABINET ASSEMBLY INSTRUCTIONS

STEP 9	Parts Required
<div data-bbox="172 309 1101 1097"></div> <div data-bbox="443 1176 497 1265"></div> <div data-bbox="245 1332 782 1993"></div> <div data-bbox="477 2004 1166 2105"><p>Note: The middle shelf is fixed, while the upper and lower shelves are adjustable. The three shelves need to be installed at an angle inside the cabinet.</p></div>	<div data-bbox="1198 1025 1517 1164"><p>⑦ Adjustable shelf x2</p><p>⑧ Adjustable short shelf x2</p></div> <div data-bbox="1190 1391 1484 1424"><p>J Shelf support pin x16</p></div>

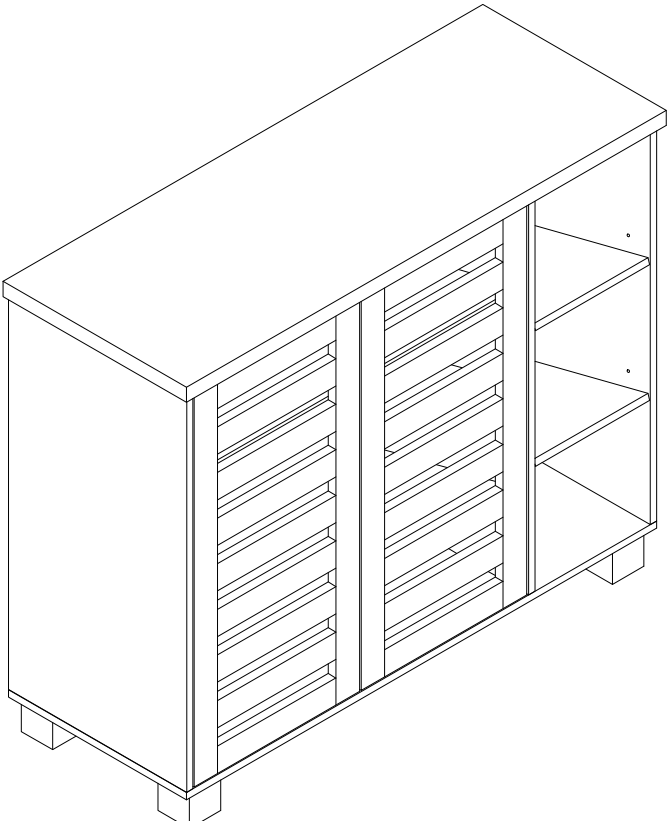
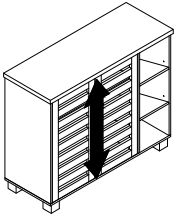
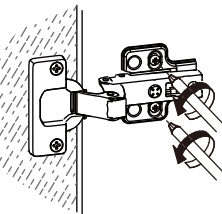
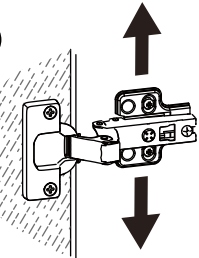
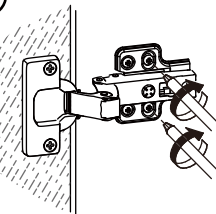
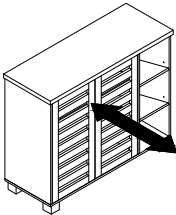
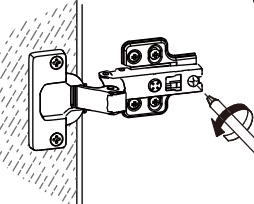
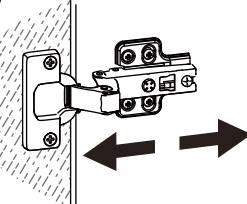
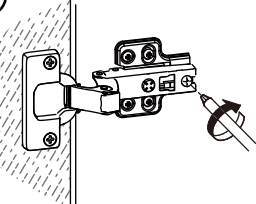
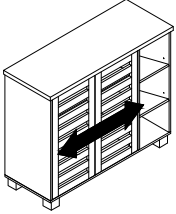
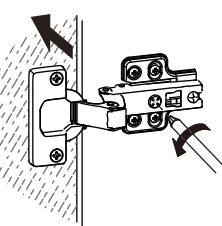
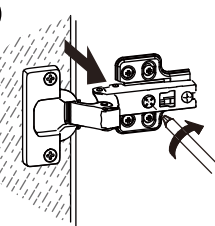
# BODIE SHOE CABINET ASSEMBLY INSTRUCTIONS

STEP 10	Parts Required
 <p>The diagram shows two identical door panels, each labeled with a circled '13'. Each panel has five horizontal slats. Two hinges, labeled 'K', are shown being attached to the top edge of each panel. Each hinge is secured with two screws, labeled 'E'. Dashed lines indicate the alignment and placement of the hinges and screws on the door panels.</p>	<p>⑬ Door panel ×2</p> <p>K Hinge ×4 E Screw (4x14mm) ×8</p>

# BODIE SHOE CABINET ASSEMBLY INSTRUCTIONS

STEP 11	Parts Required
	<p>E Screw (4x14mm)×16</p>

# BODIE SHOE CABINET ASSEMBLY INSTRUCTIONS

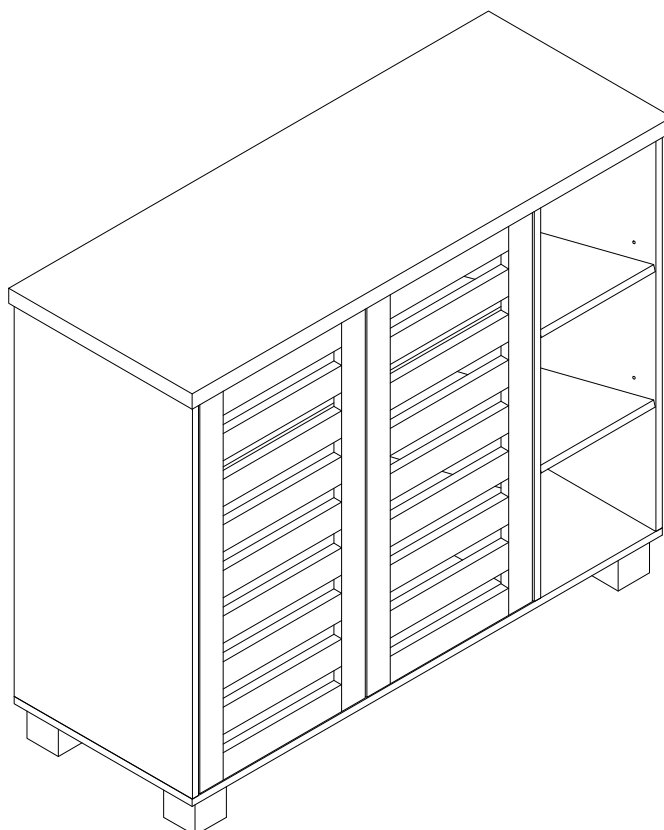
STEP 11	Parts Required
<div data-bbox="343 313 1013 1131"></div> <div data-bbox="87 1176 1165 2049"><div><div data-bbox="95 1254 271 1467"></div><div><div data-bbox="279 1187 327 1243">I</div><div data-bbox="327 1220 550 1433"></div><div><div data-bbox="574 1187 622 1243">II</div><div data-bbox="622 1176 821 1433"></div><div><div data-bbox="861 1187 909 1243">III</div><div data-bbox="909 1220 1125 1433"></div></div></div><div><div data-bbox="95 1523 271 1736"></div><div><div data-bbox="279 1500 327 1556">I</div><div data-bbox="327 1534 582 1736"></div><div><div data-bbox="574 1500 622 1556">II</div><div data-bbox="622 1534 869 1736"></div><div><div data-bbox="861 1500 909 1556">III</div><div data-bbox="909 1534 1165 1736"></div></div></div><div><div data-bbox="95 1792 271 2004"></div><div><div data-bbox="279 1814 327 1870">I</div><div data-bbox="327 1825 550 2049"></div><div><div data-bbox="574 1814 622 1870">II</div><div data-bbox="622 1825 837 2049"></div></div></div></div></div></div></div></div></div>	



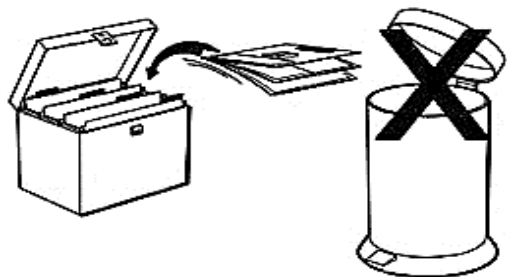
# BODIE SHOE CABINET ASSEMBLY INSTRUCTIONS

## Complete Assembly

Your BODIE SHOE CABINET is now completely assembled.  
Periodically check that the components are in the correct position and free from damage.  
Also make sure the connectors are tight and secure.



Keep instructions for future reference.



Supplied by : GFW THE FURNITURE  
WAREHOUSE  
Waterside Distribution Centre  
Waterside Business Park  
Johnson Road  
Lancashire  
BB3 3RT