


INDUSTRIAL BOSTON 3 DOOR MIRRORED WARDROBE

ASSEMBLY INSTRUCTIONS

Thank you for purchasing the *INDUSTRIAL BOSTON 3 DOOR MIRRORED WARDROBE*. Please read the instructions carefully to ensure safe operation of the product.

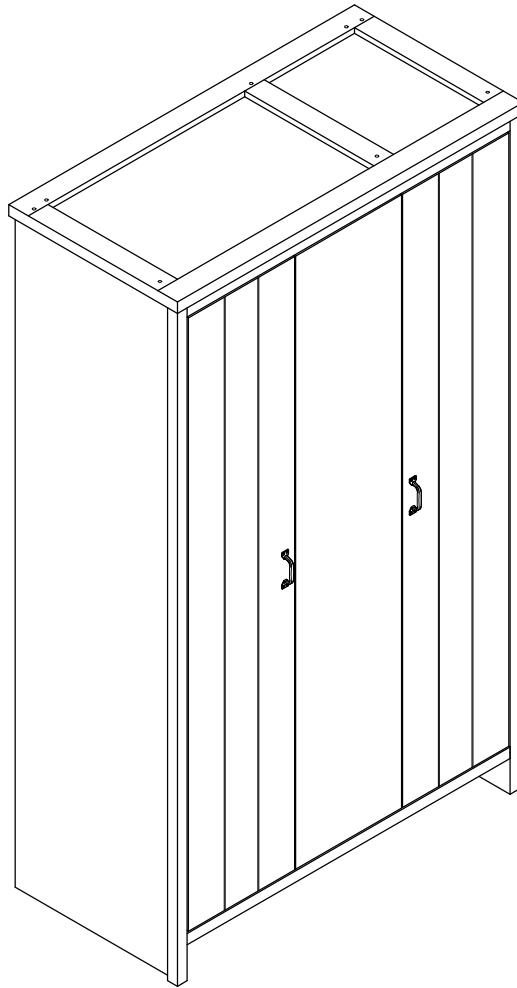


Size: 1056 x 518 x 1820mm

PLEASE READ this sheet prior to assembly to familiarise yourself with the various stages of construction.


Carefully open the pack supplied and check the contents against the parts and fittings check list. Do not destroy any of the packaging until you are certain that you have all the necessary parts for the assembly.

CAUTION: There are small components used in the construction of this unit. These loose items should be kept away from young children whilst assembling your unit to avoid the danger of choking hazards.


Tools Required

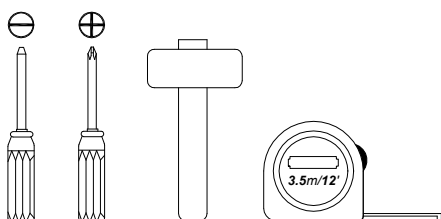

Person Required

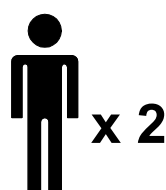

Approximate Assembly Time



1.5 Hours

IMPORTANT - READ CAREFULLY - RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

INFORMATION

Due to the size of this product we recommend that it is assembled in the room intended for use.
When you are ready to start, make sure that you have the right tools, plenty of space and a clean, dry area for assembly.
Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to prevent it from scratching.
Check the pack and make sure you have all the parts listed.
Ensure that this product is fully assembled as illustrated before use.
Check all screws or bolts are tightened and inspect regularly
This product should only be used on firm, level ground.
Keep small parts out of reach of children.
Make sure the legs remain in contact with the ground.
Tools not included.

WARNINGS

DO NOT use power tools to construct this product.
DO NOT over tighten screws or bolts.
DO NOT use this product if parts are missing, damaged or worn.
DO NOT sit or stand on the product.
It is essential that this unit is fixed to the wall with the brackets provided for safety reasons. NB wall fixings are not included. Please source suitable fixings for your wall type. If in doubt please consult a qualified tradesperson.
WARNING : Always ensure the area to be drilled is free from hidden electrical wires, water or gas pipes


CARE INFORMATION

Never use scourers, abrasives or chemical cleaners.
To clean wipe with a sponge and warm soapy water. Do not use solvent based cleaners or detergents as they can bleach or damage the product.


SPECIAL TIPS FOR DOOR ALIGNMENT

WE RECOMMEND FOR EASE TWO PEOPLE SUPPORT AND FIT THE DOORS


A. Lateral adjustment (Moving door left-right) by screw adjusting

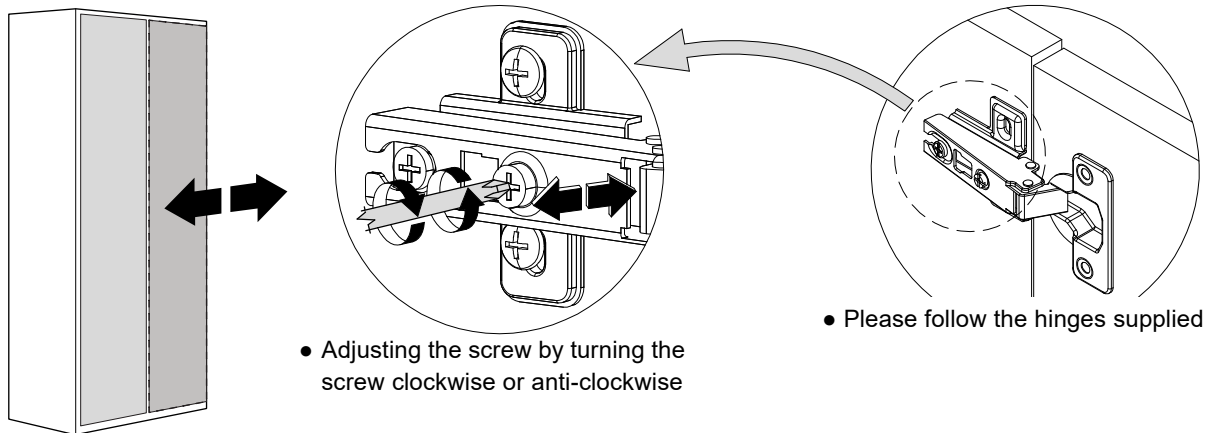

B. Vertical adjustment (Moving door up-down) via the slot on the mounting plate

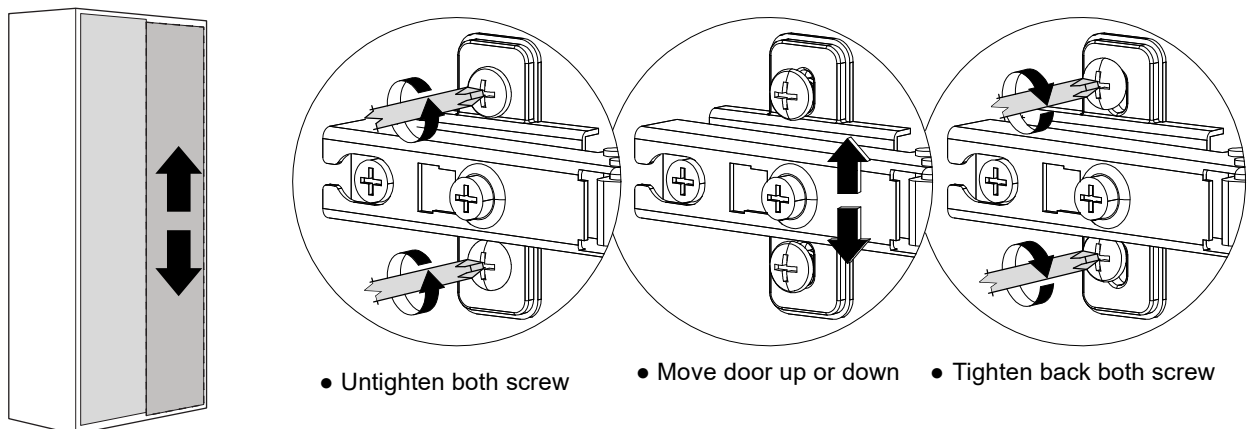

C. Front-to-back adjustment (Spacing Door Off Cabinet) by slackening the hinge arm mounting screw

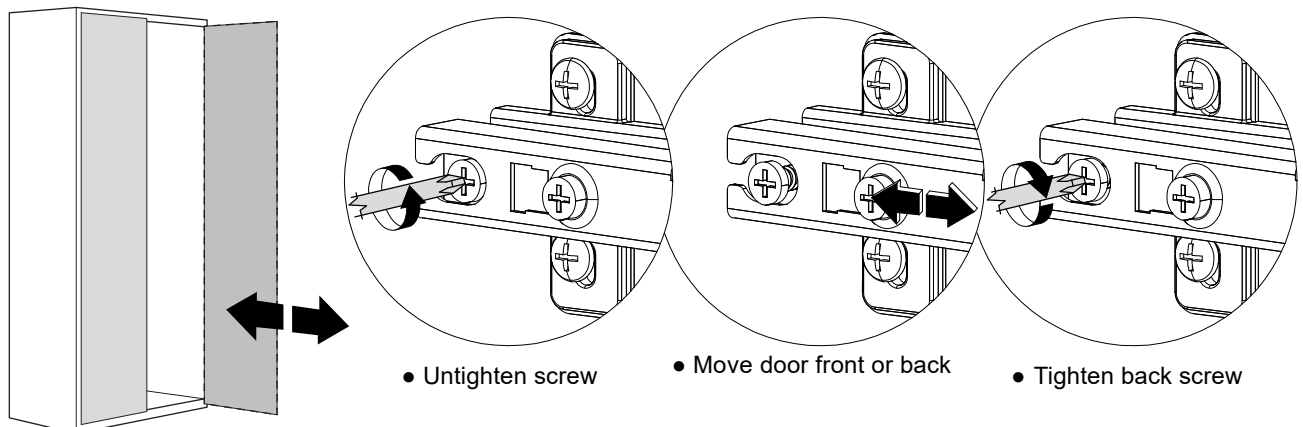


Please check the pack contents before assembling the product. If any components are missing, please contact your retailer. The fittings pack contains small items that should be kept away from small children.


Parts

CODE	PART NAME	QTY	DIMENSION
A	Side Panel - L	1	30 x 510 x 1785mm
B	Side Panel - R	1	30 x 510 x 1785mm
C	Top Panel	1	30 x 515 x 1056mm
D	Bottom Panel	1	30 x 510 x 986mm
E	Back Bar	1	15 x 80 x 648mm
F	Bottom Bar	2	15 x 110 x 986mm
G	Vertical Panel	1	15 x 495 x 1660mm


CODE	PART NAME	QTY	DIMENSION
H	Fix Panel Big	1	15 x 395 x 648mm
I	Fix Panel Small	1	15 x 395 x 323mm
J	Front Profile	1	30 x 65 x 986mm
K	Door - L & R	2	15 x 324 x 1622mm
L	Door - C	1	15 x 324 x 1622mm
	Back Panel	3	3 x 337 x 1701mm

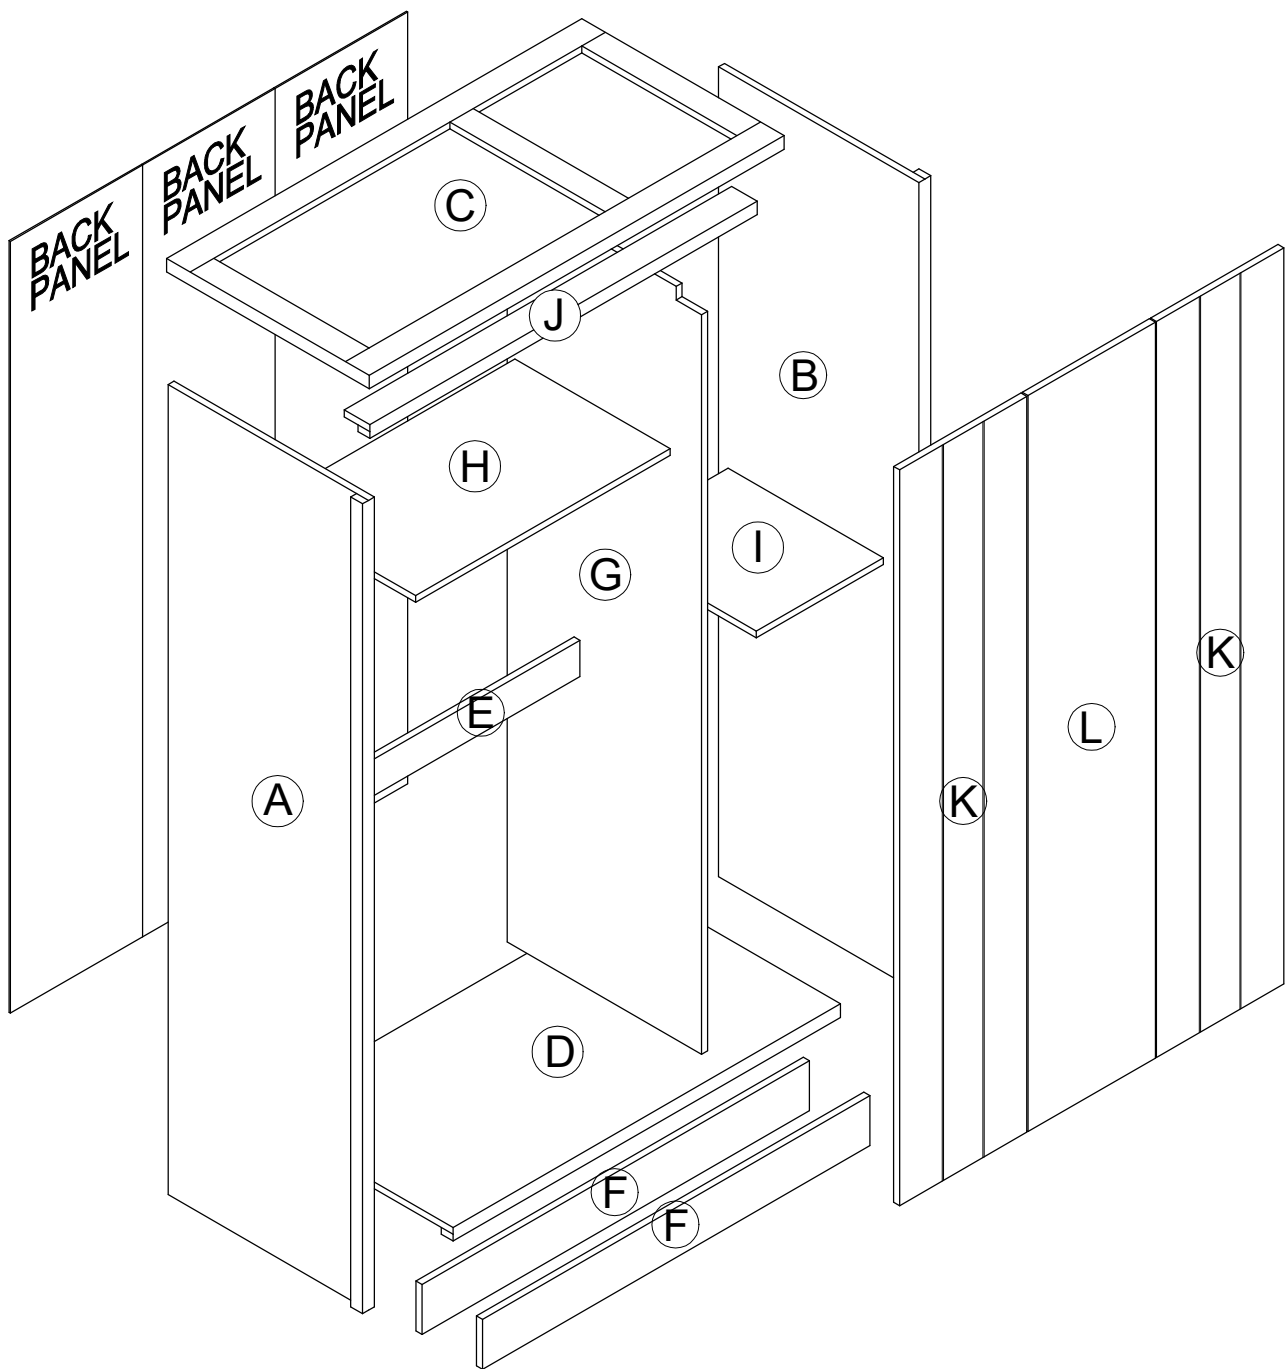


Fixings (to scale)

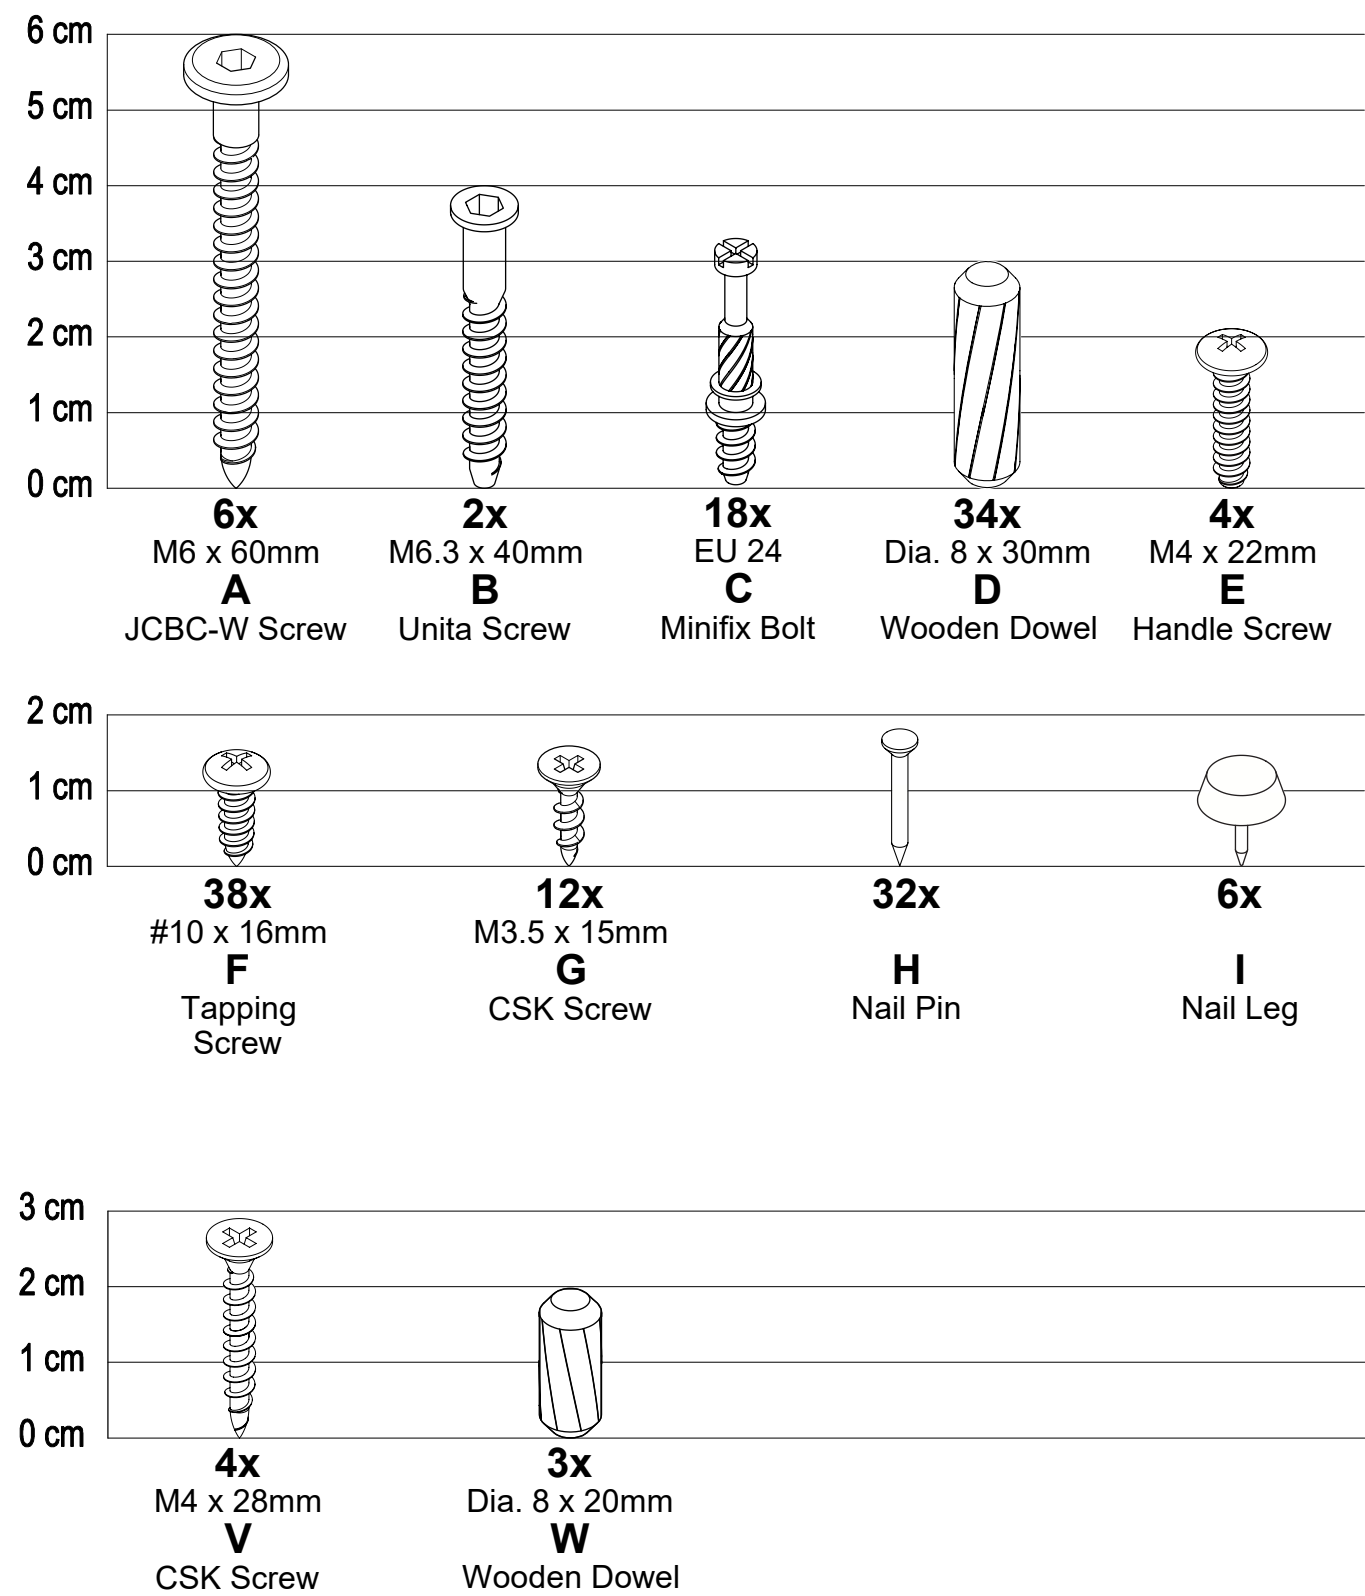


Fixings (not to scale)



18x
Dia. 15 x 12mm
J
Minifix Cam

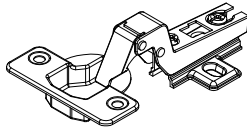


6x
K
Hinges (7/8")

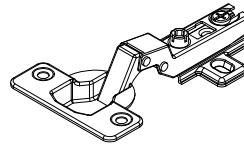


3x
L
Hinges (1/4")




4x
2mm
M
L-Bracket




6x
N
Plastic
U-Bracket




2x
O
Door
Stopper




2x
H-64mm
P
Metal Handle



2x
D-16mm
Q
Flat Washer

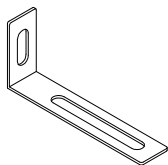

2x
1.2x15x32x75mm
R
L-Mounting
Bracket





1x
M4
S
Allen Key




2x
L-315mm
T
Metal Hanger




1x
L-640mm
U
Metal Hanger

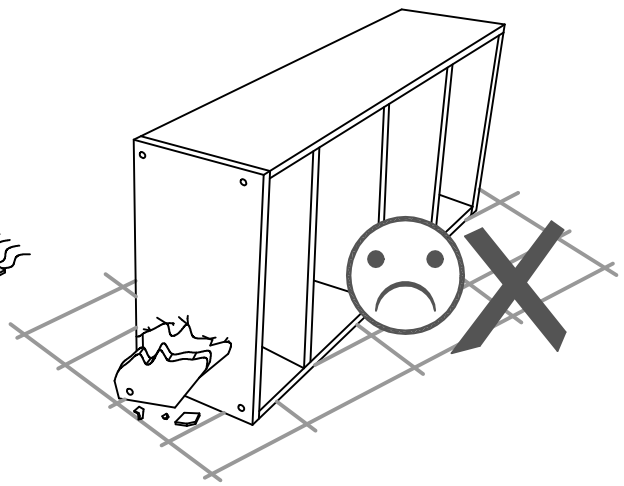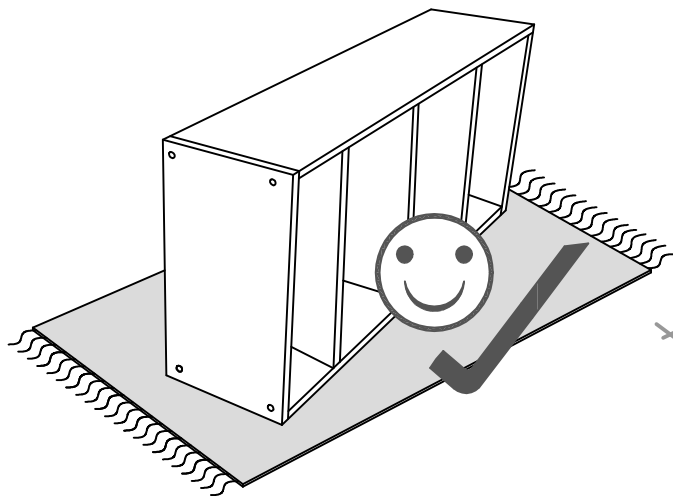


Layout Parts on Soft Surface

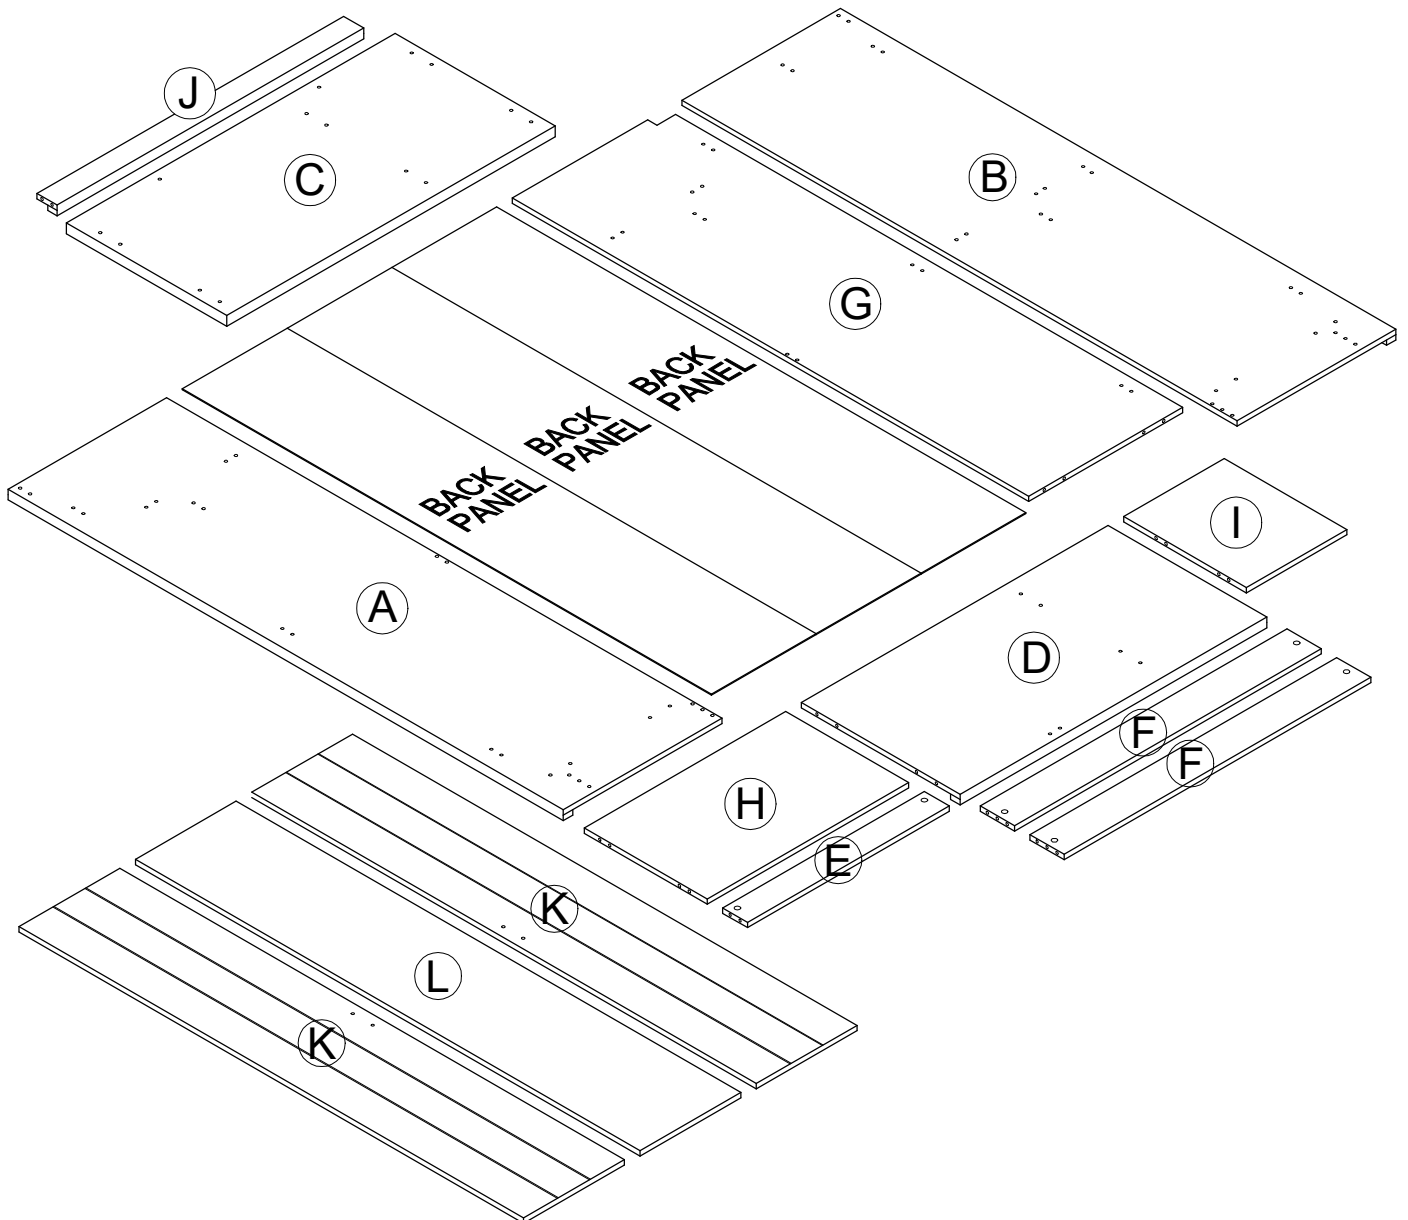


STEP 1

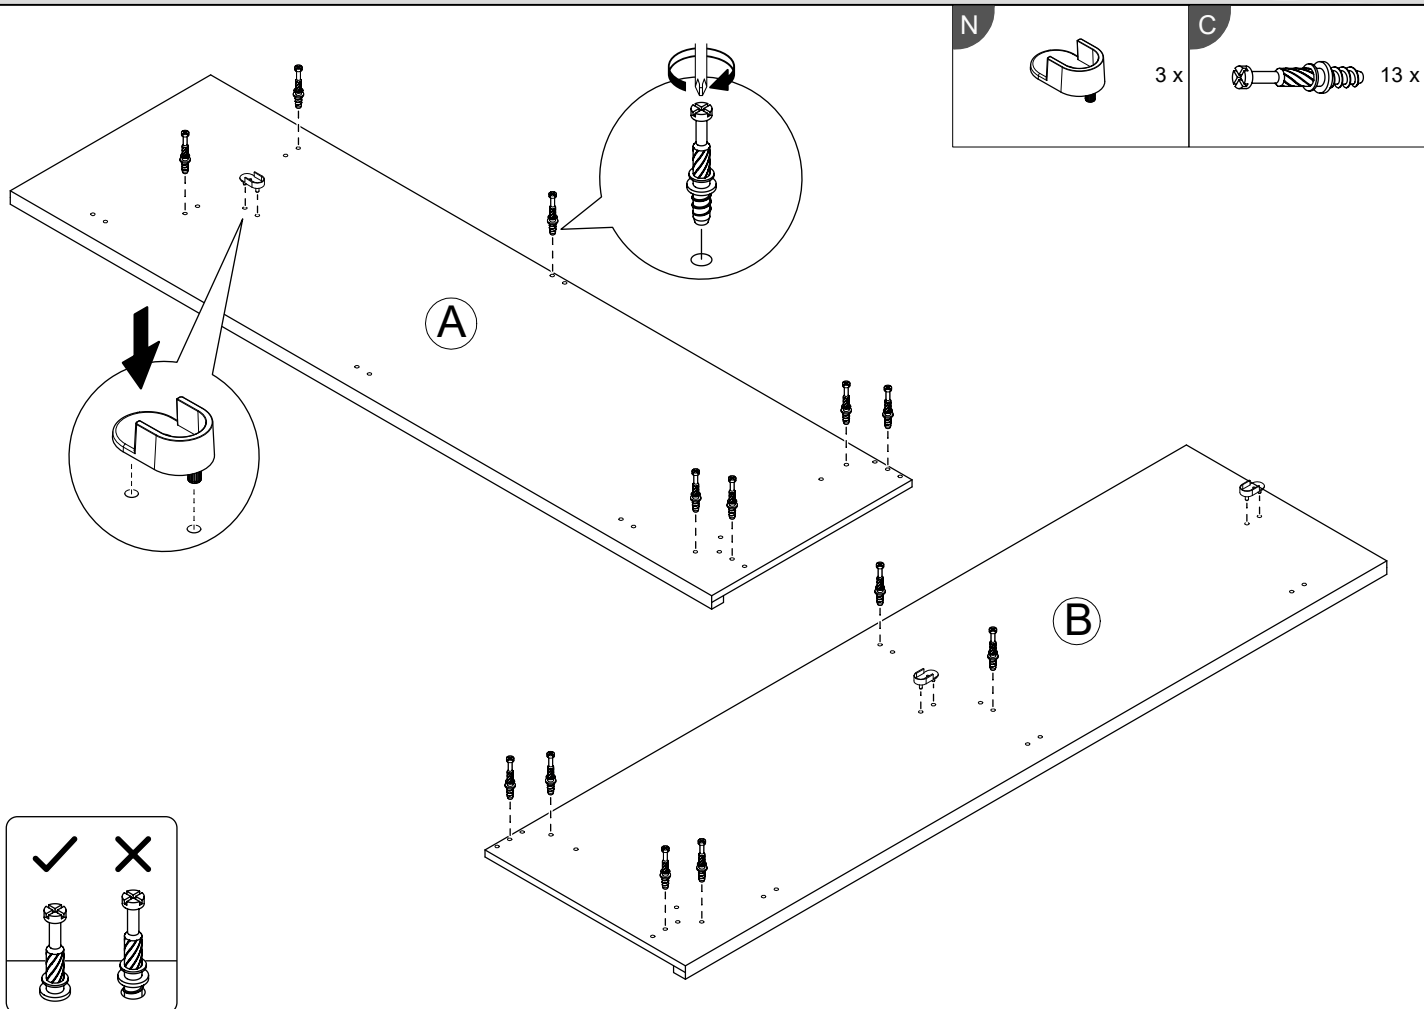


STEP 2

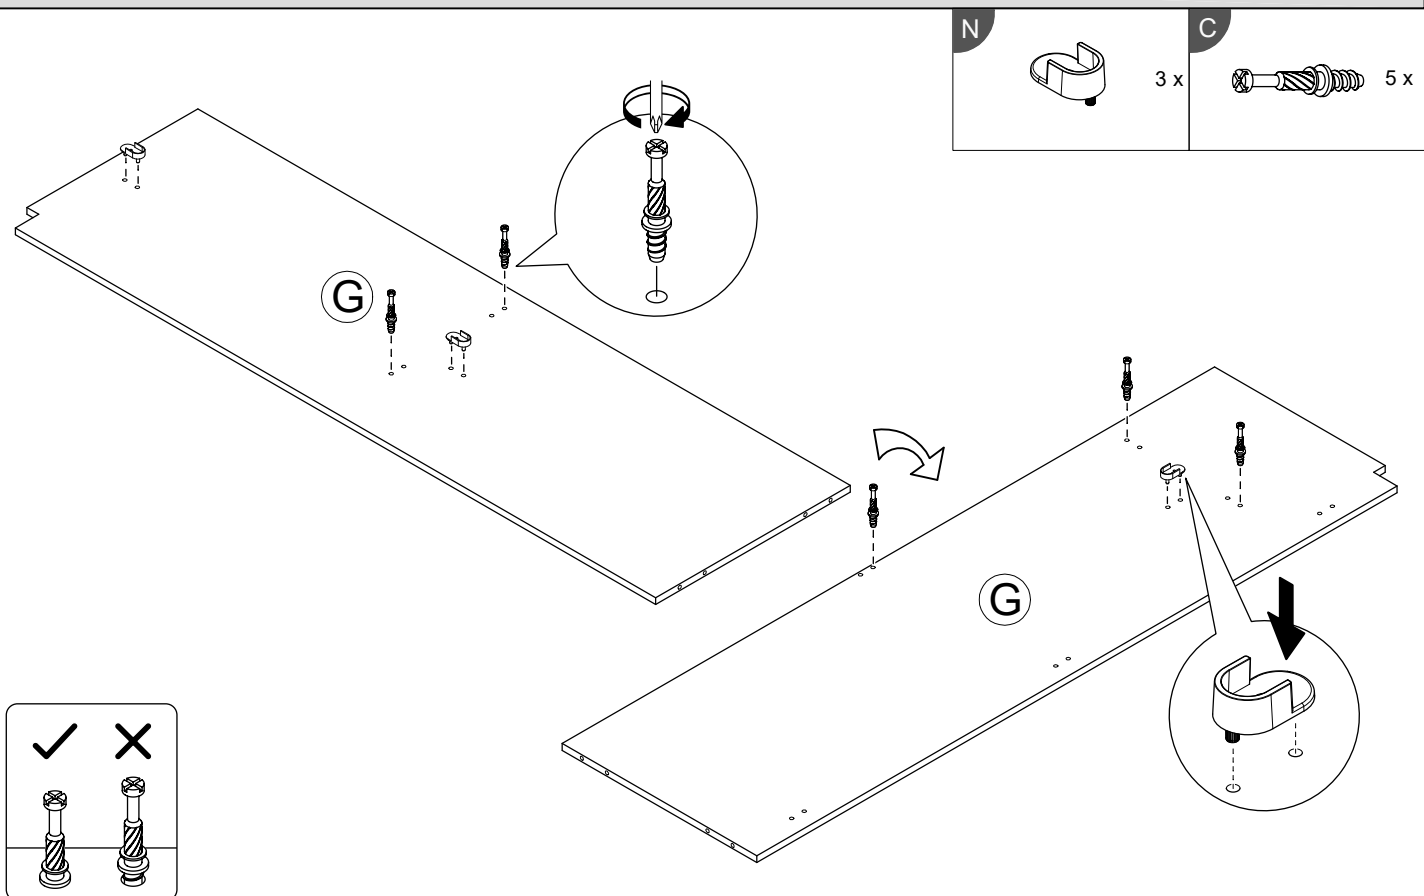

STEP 3

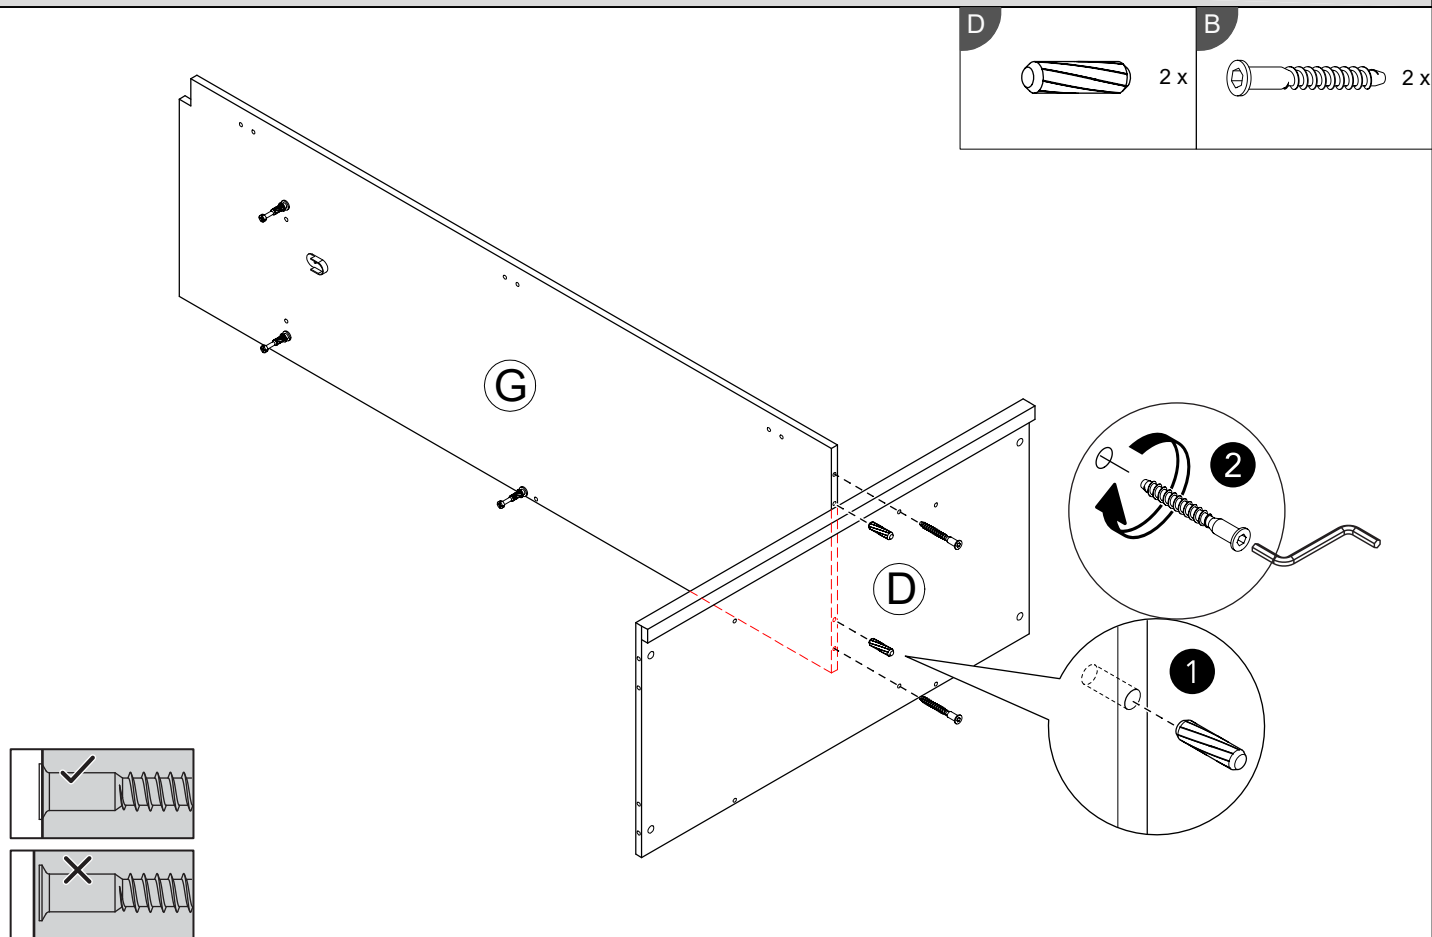


STEP 4

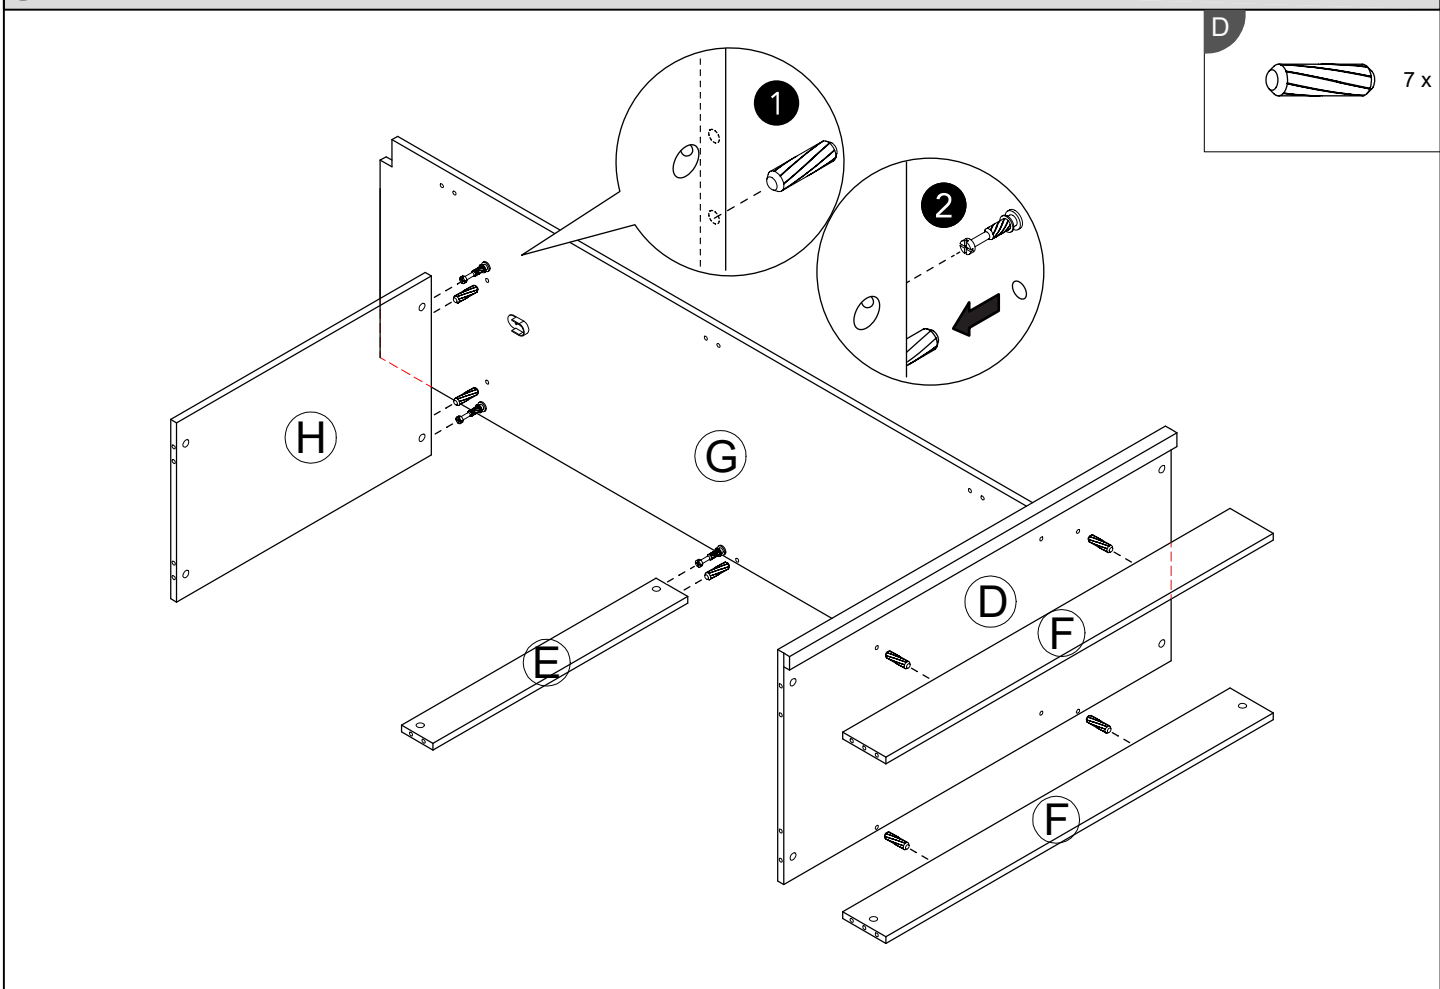

STEP 5

D


9 x

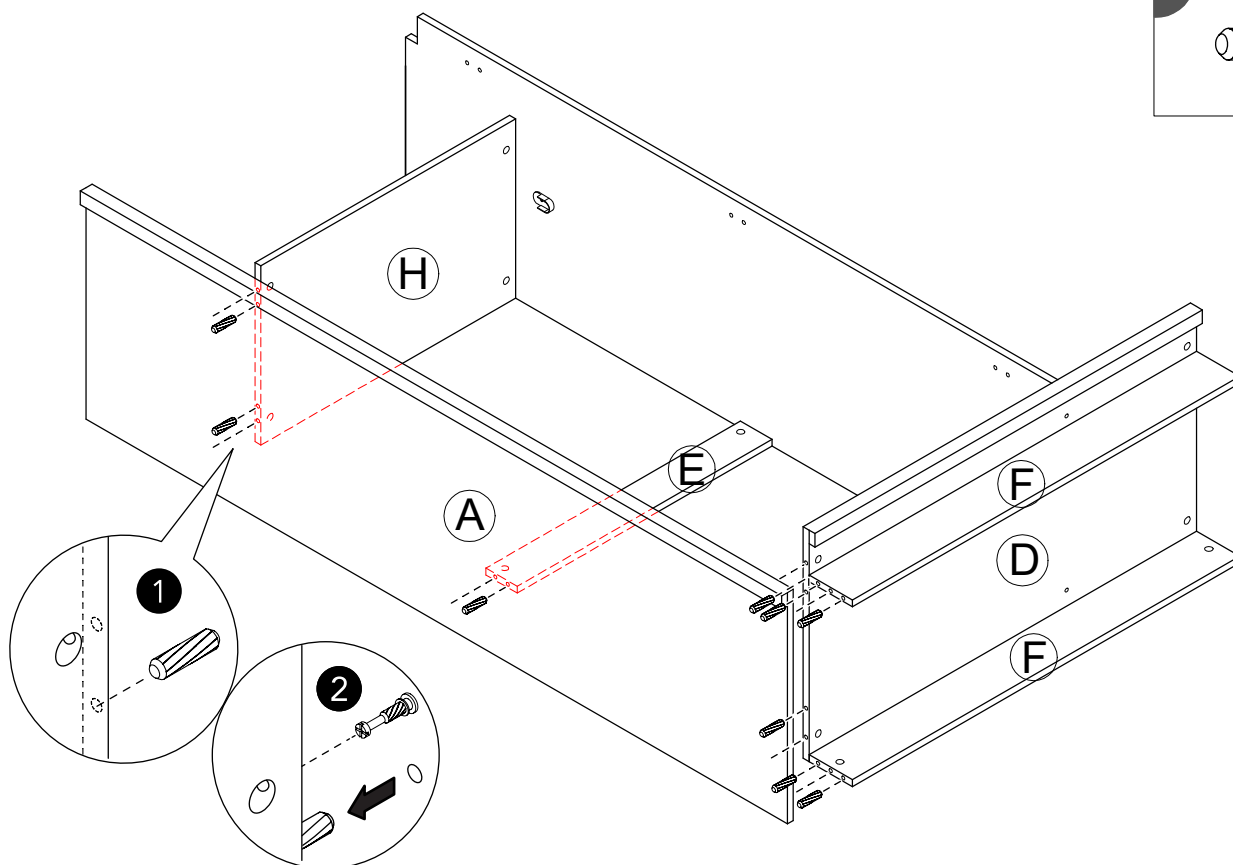


STEP 6

J


10 x

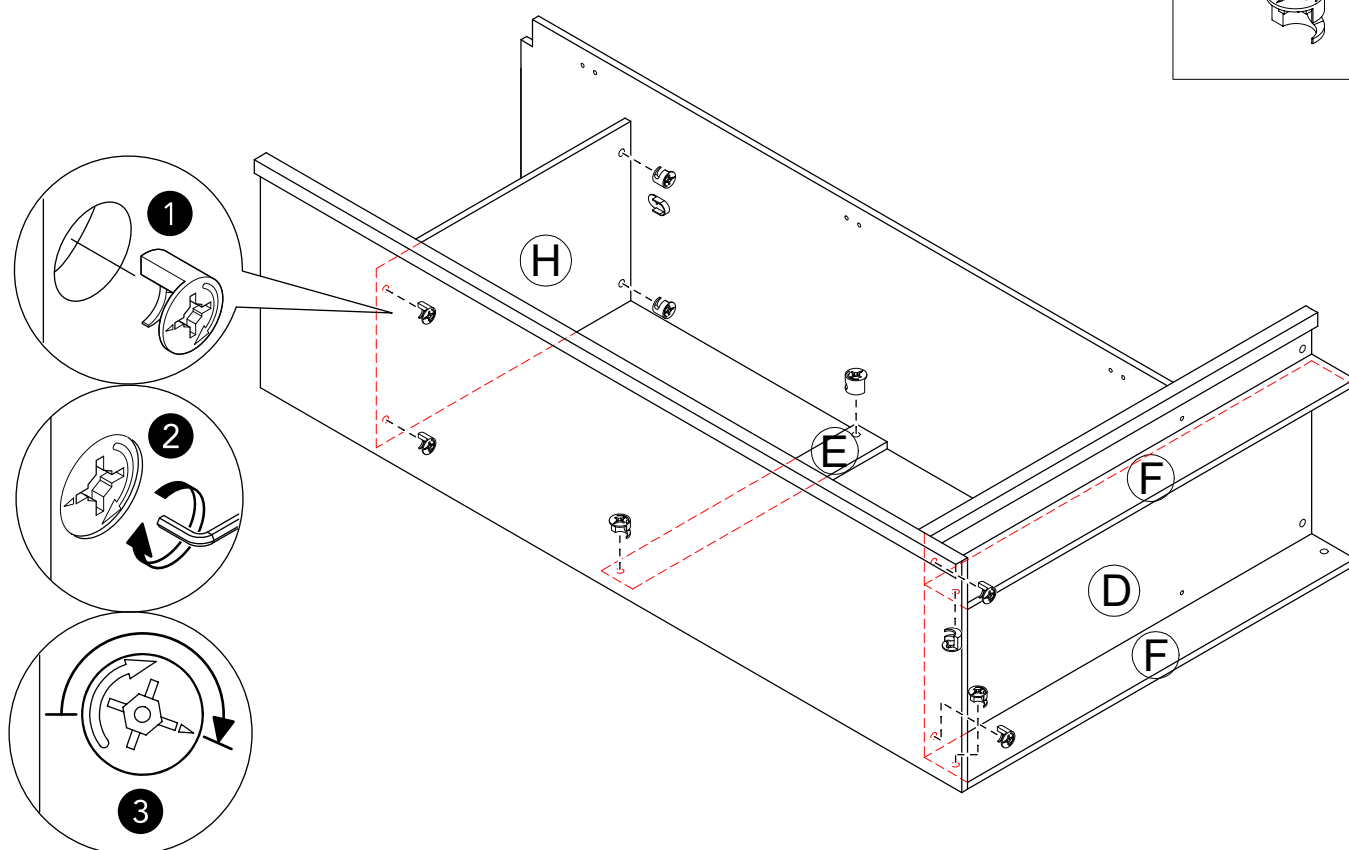


STEP 7

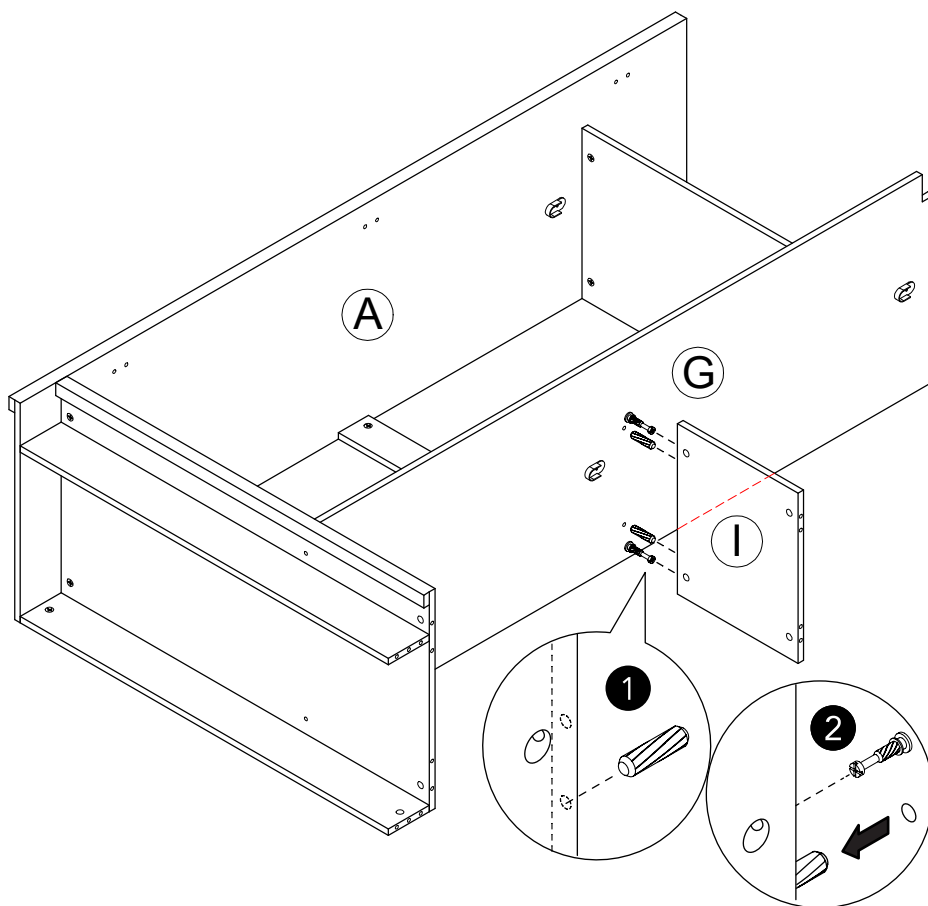


STEP 8

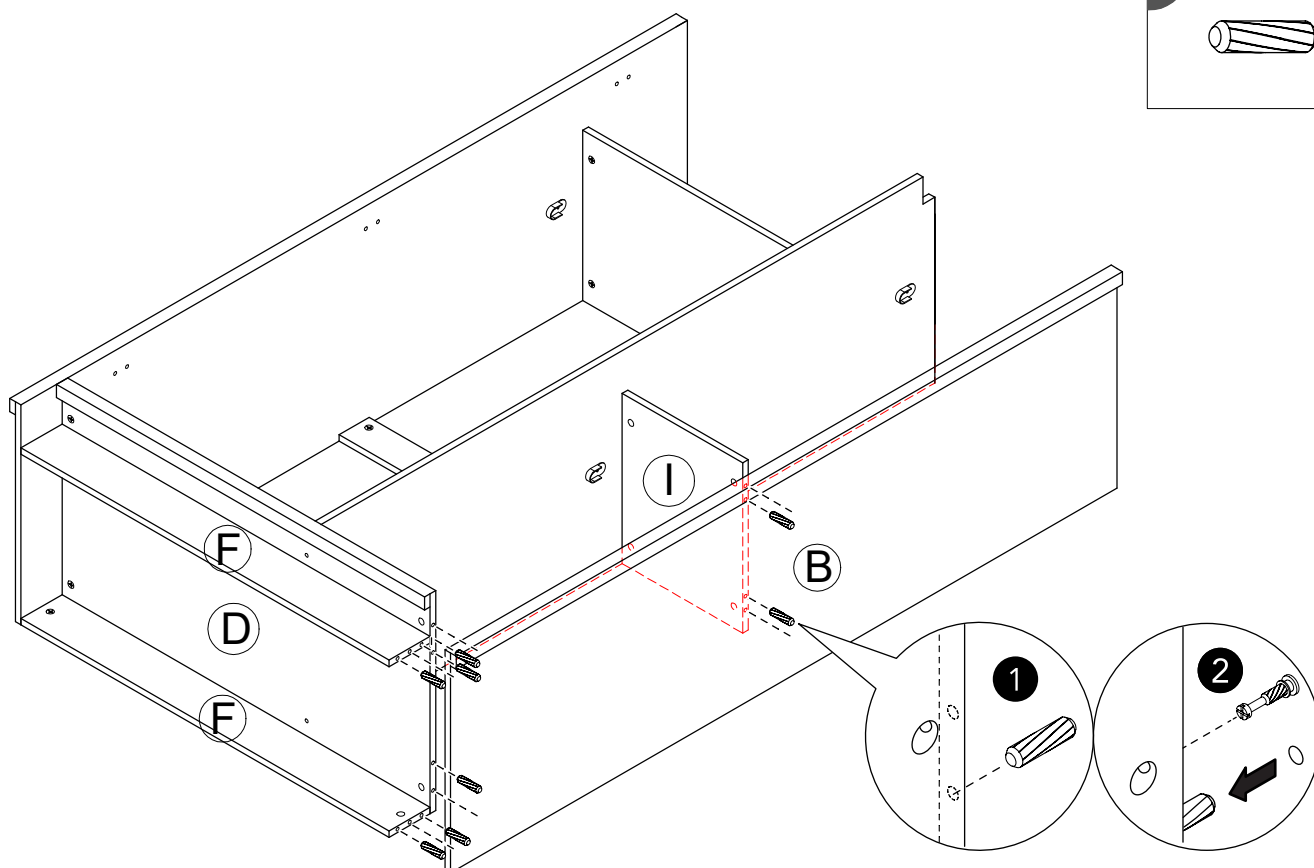




STEP 9

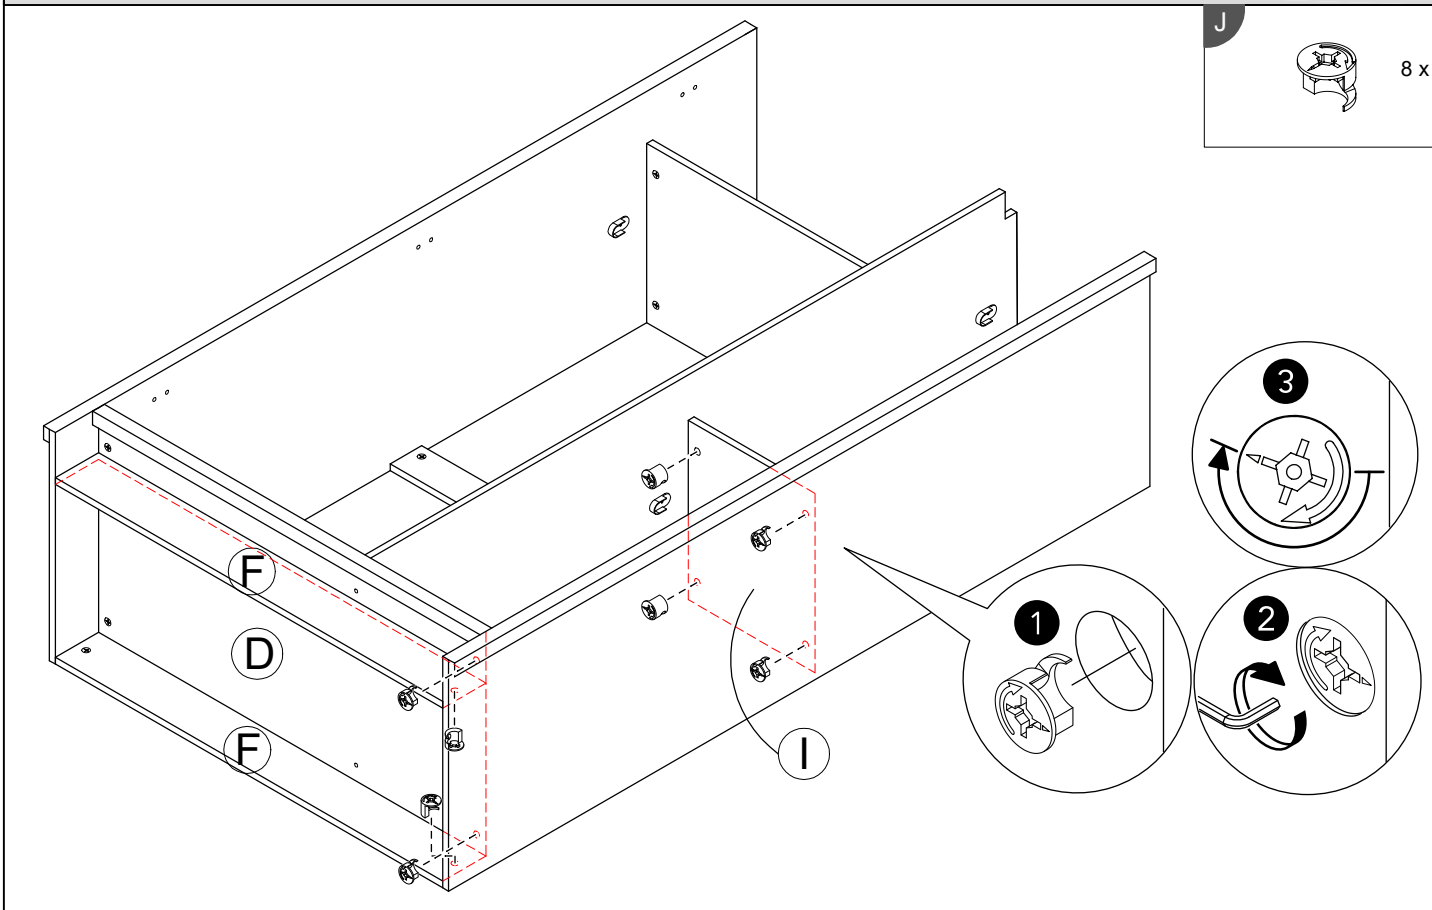



STEP 10

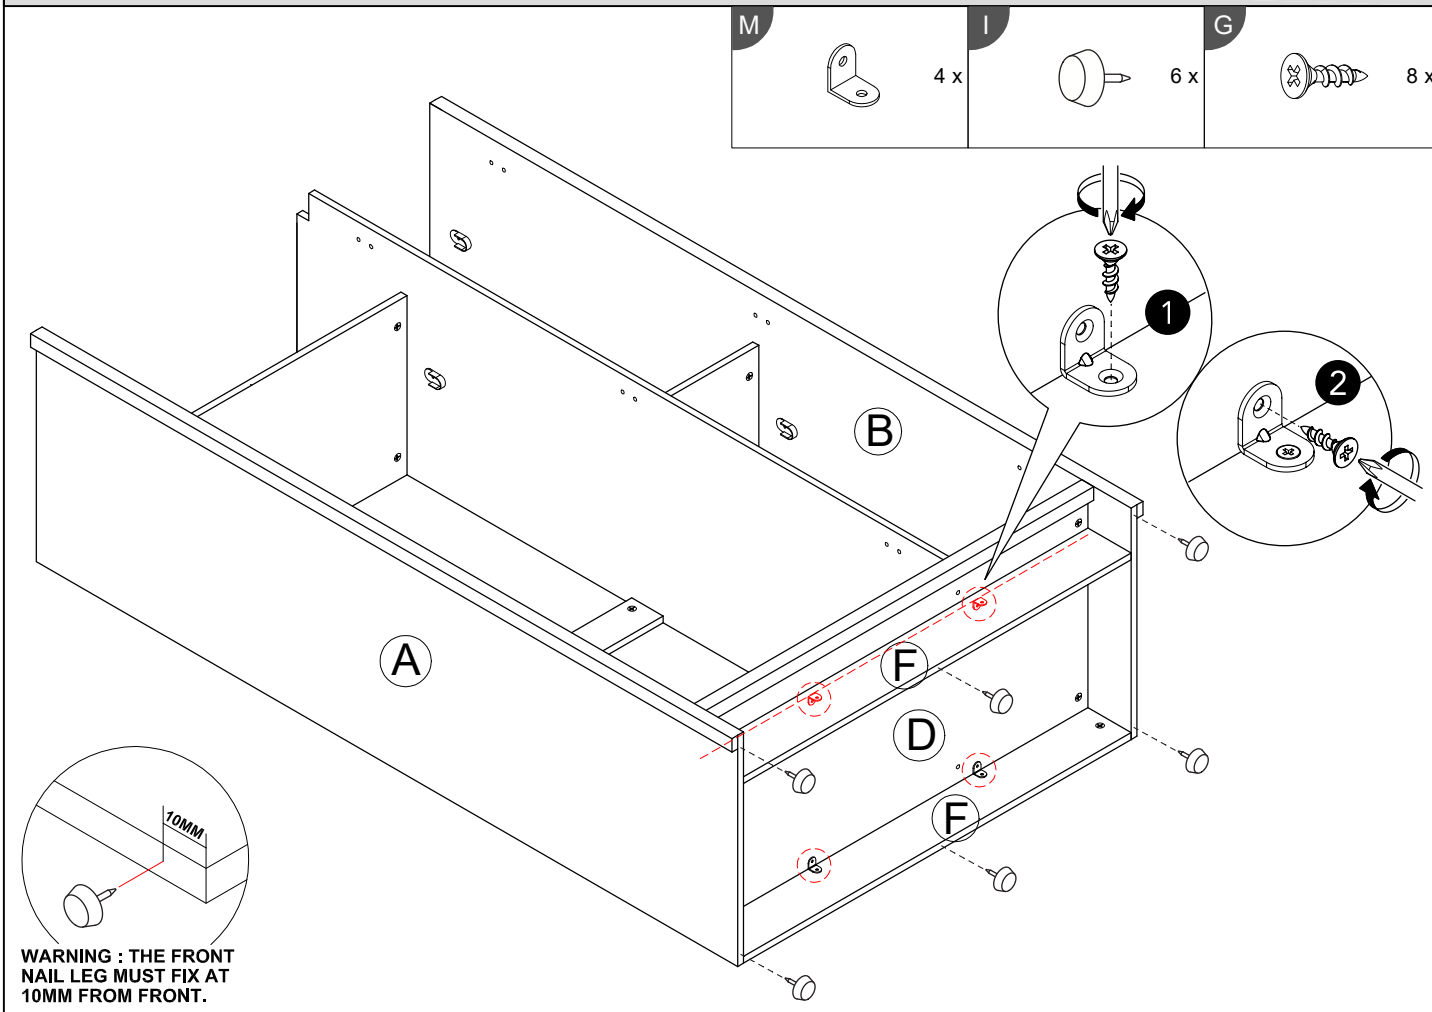

STEP 11

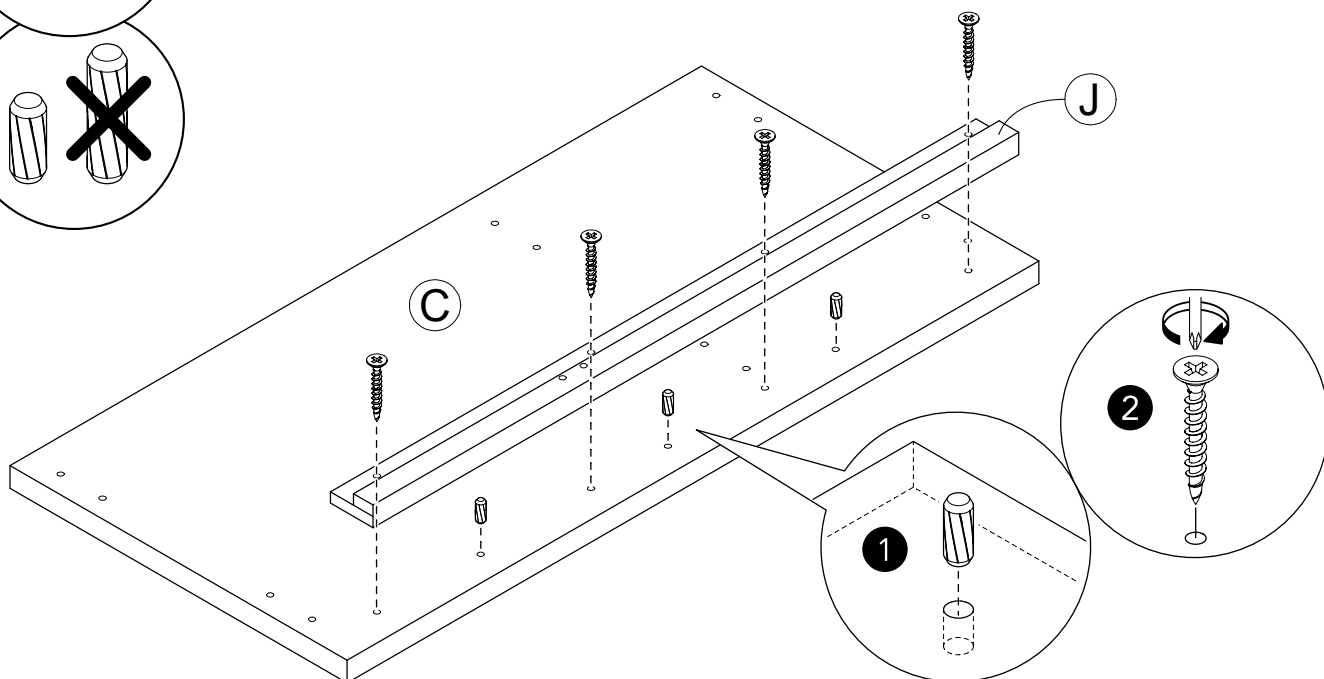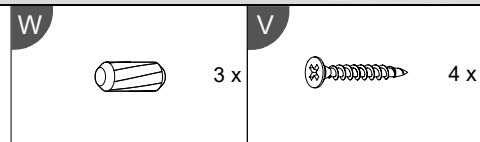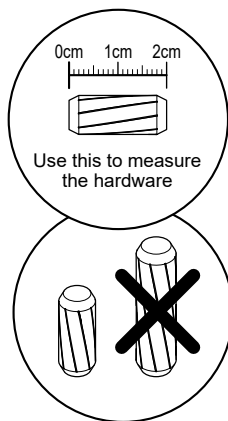

STEP 12

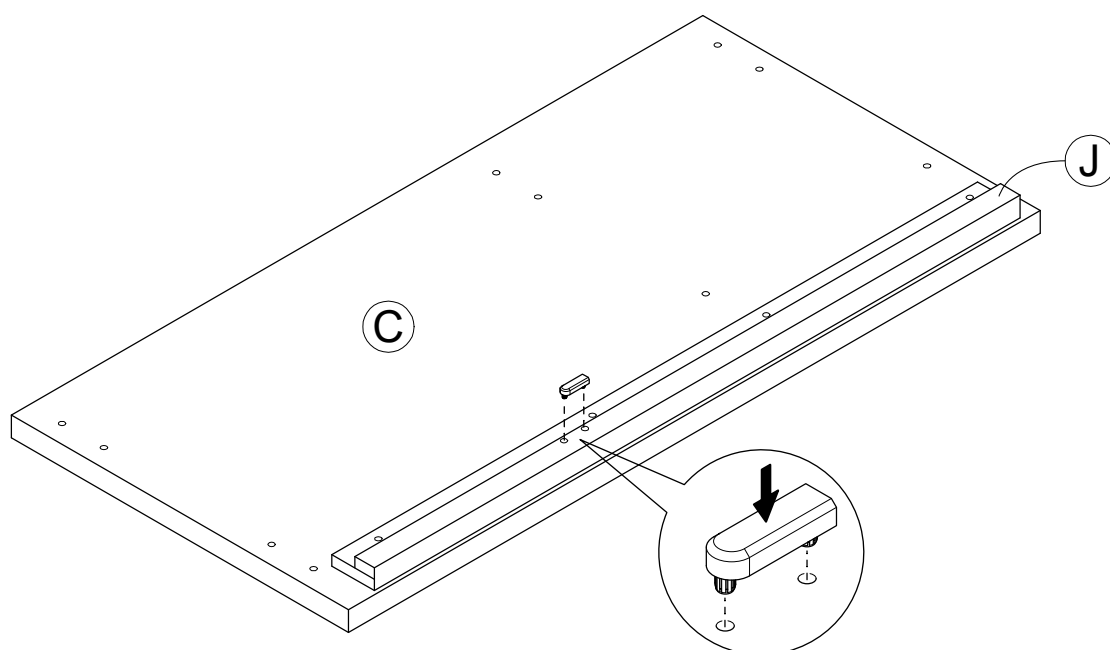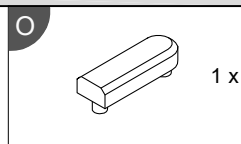

STEP 13

D




6 x



A




6 x

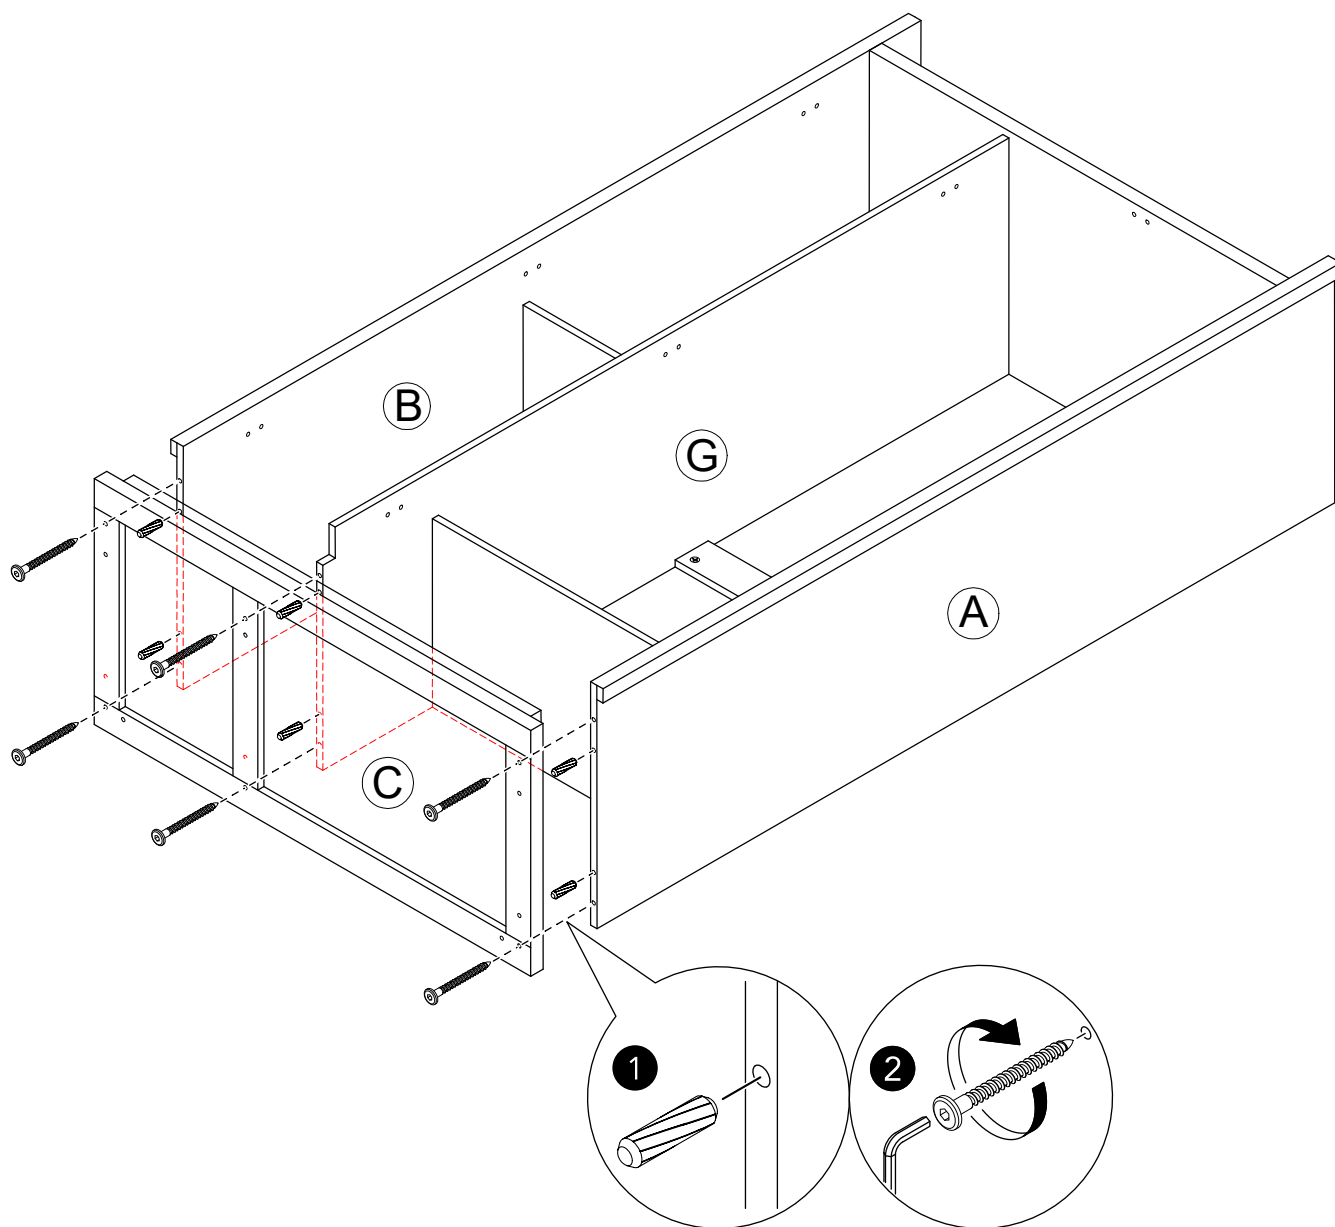

STEP 14

T		2 x	U		1 x	O		1 x
----------	---	-----	----------	---	-----	----------	---	-----



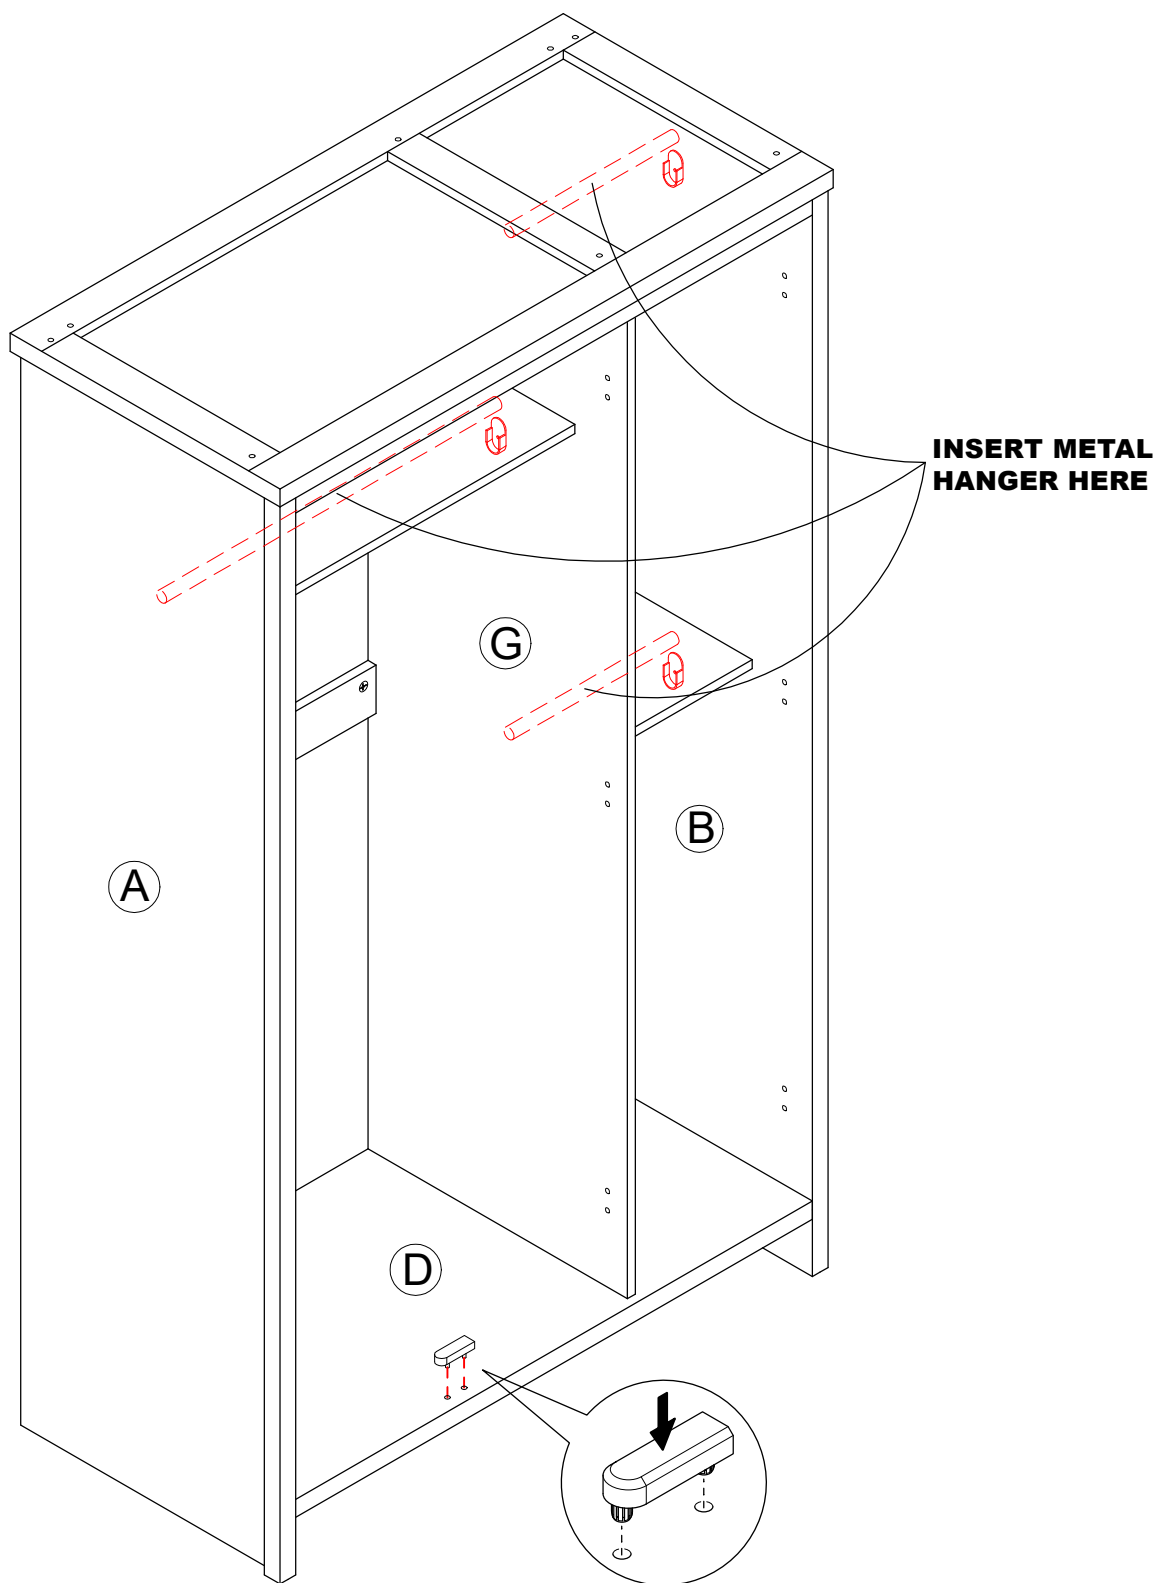


STEP 15



H



G

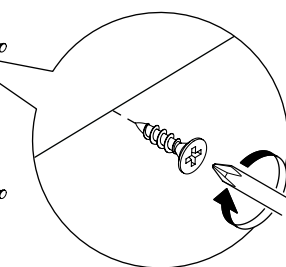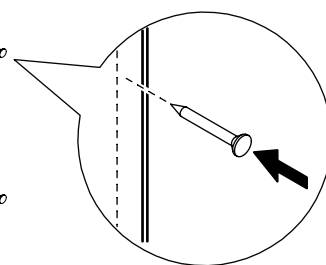
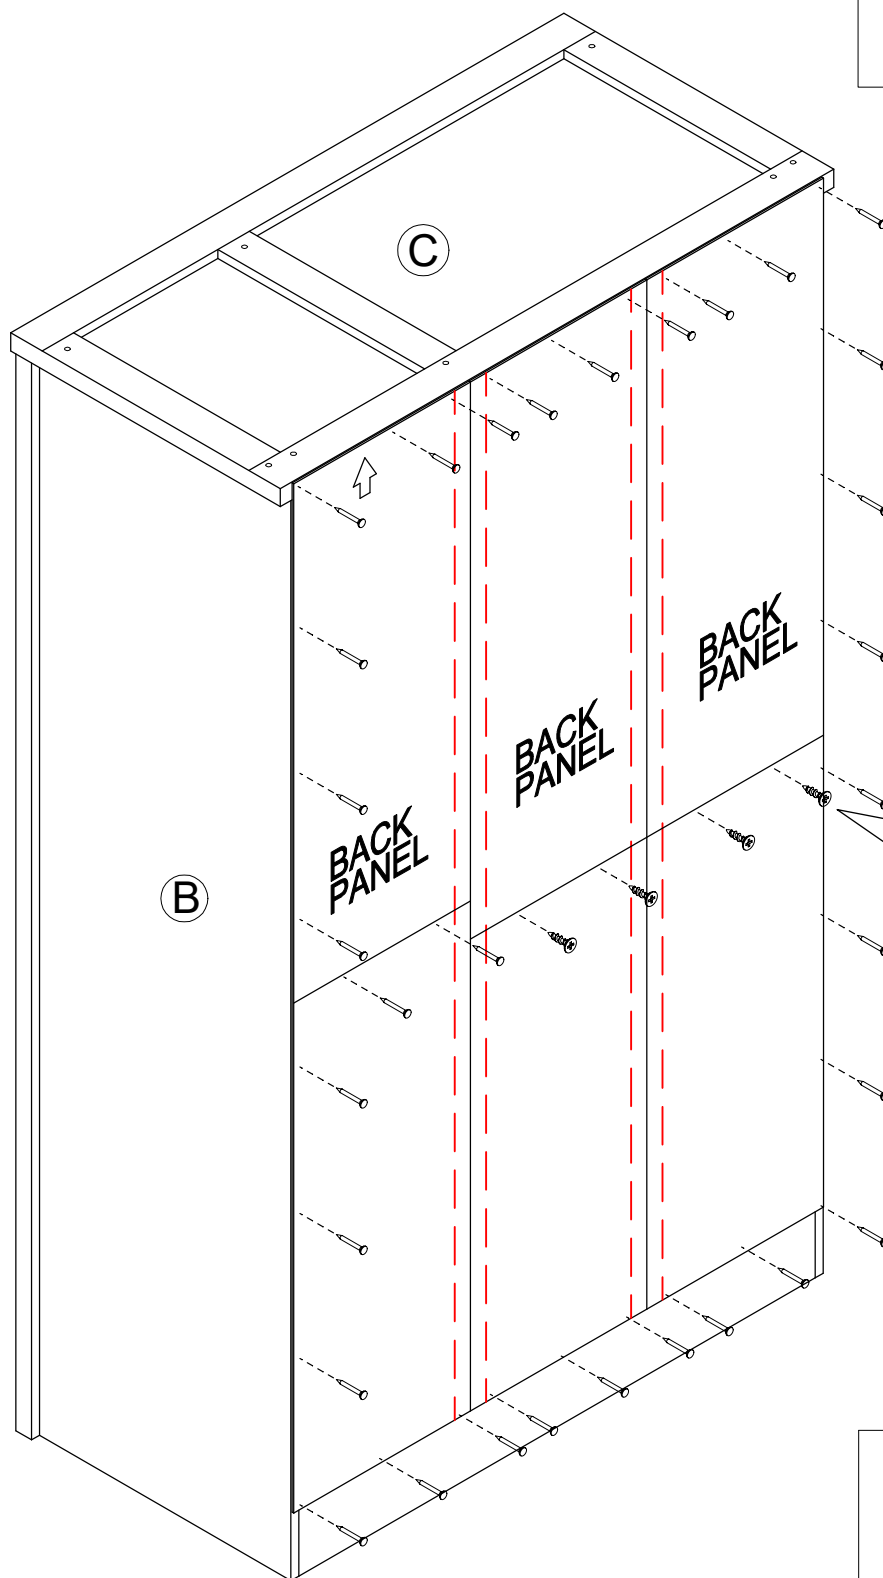


PLEASE ENSURE THAT EACH
OF THE FOUR CORNERS OF
THE CABINET IS SQUARE.

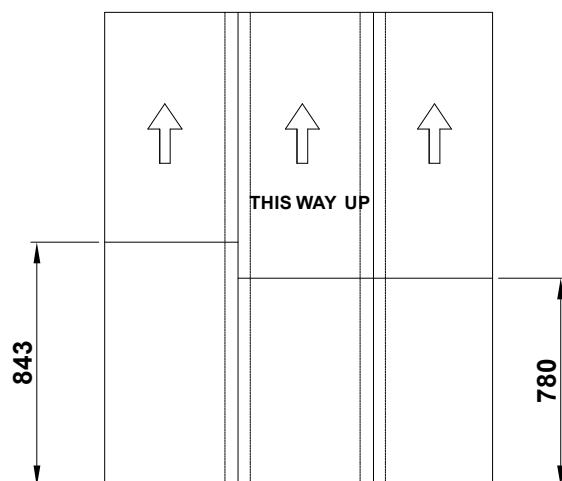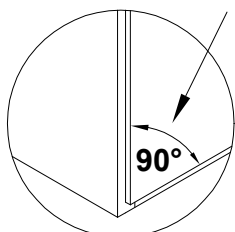



STEP 16

IMPORTANT ENSURE TYPE "K" BRACKET
IS SELECTED FOR THESE DOOR

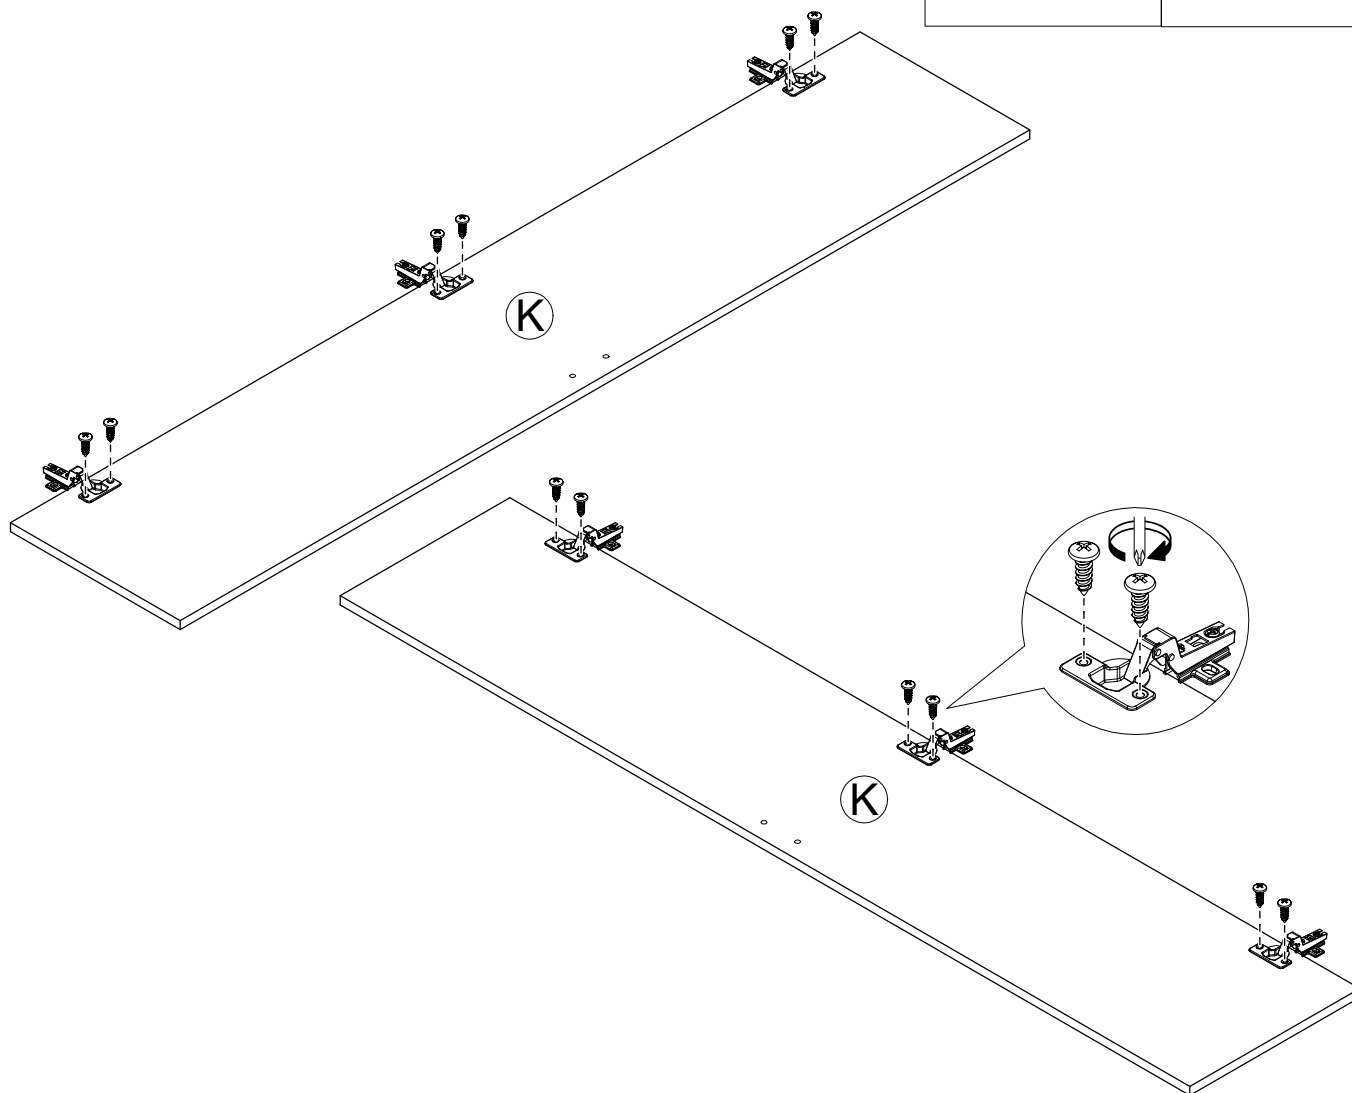
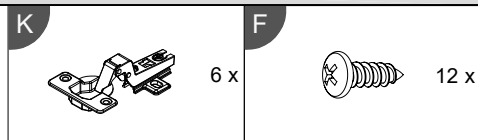




STEP 17

IMPORTANT ENSURE TYPE "L" BRACKET
IS SELECTED FOR THESE DOOR

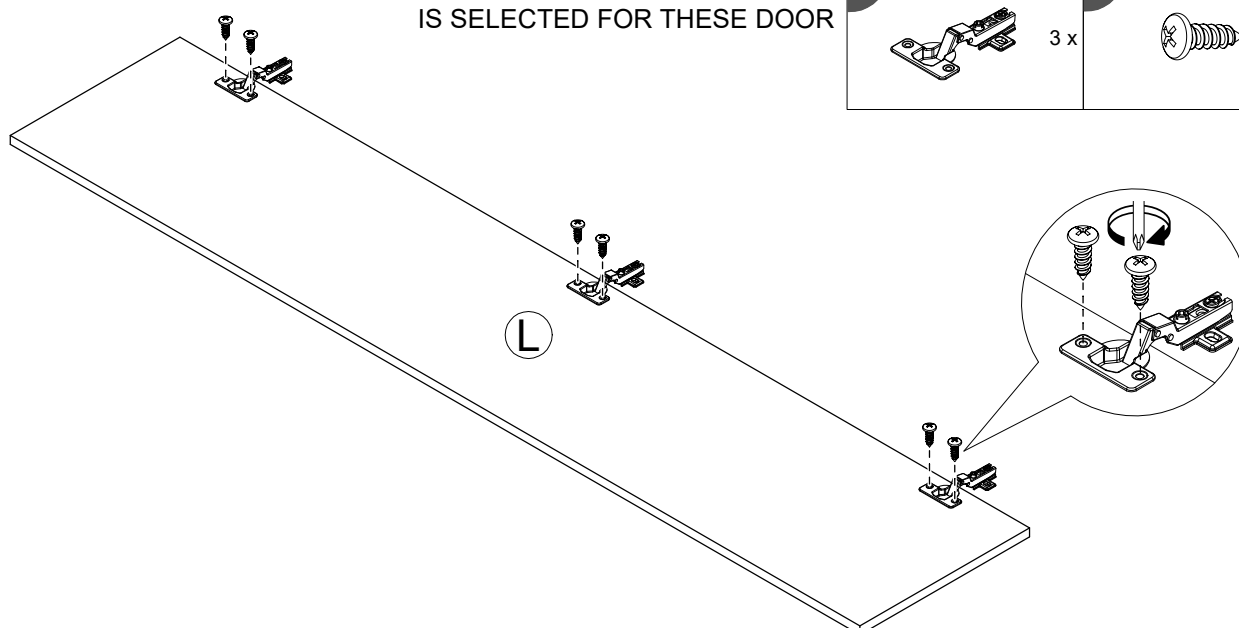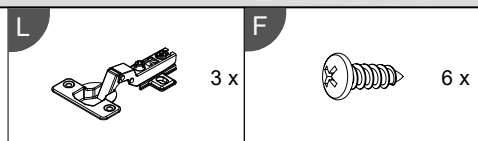


STEP 18


P		2 x	F		12 x	E		4 x
---	---	-----	---	---	------	---	---	-----

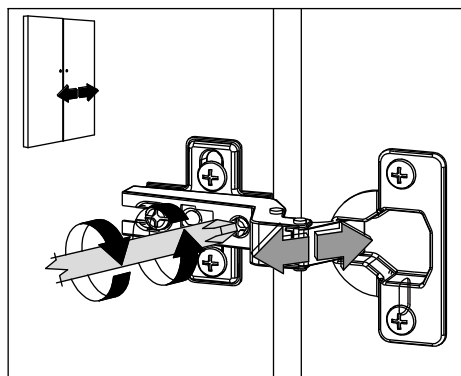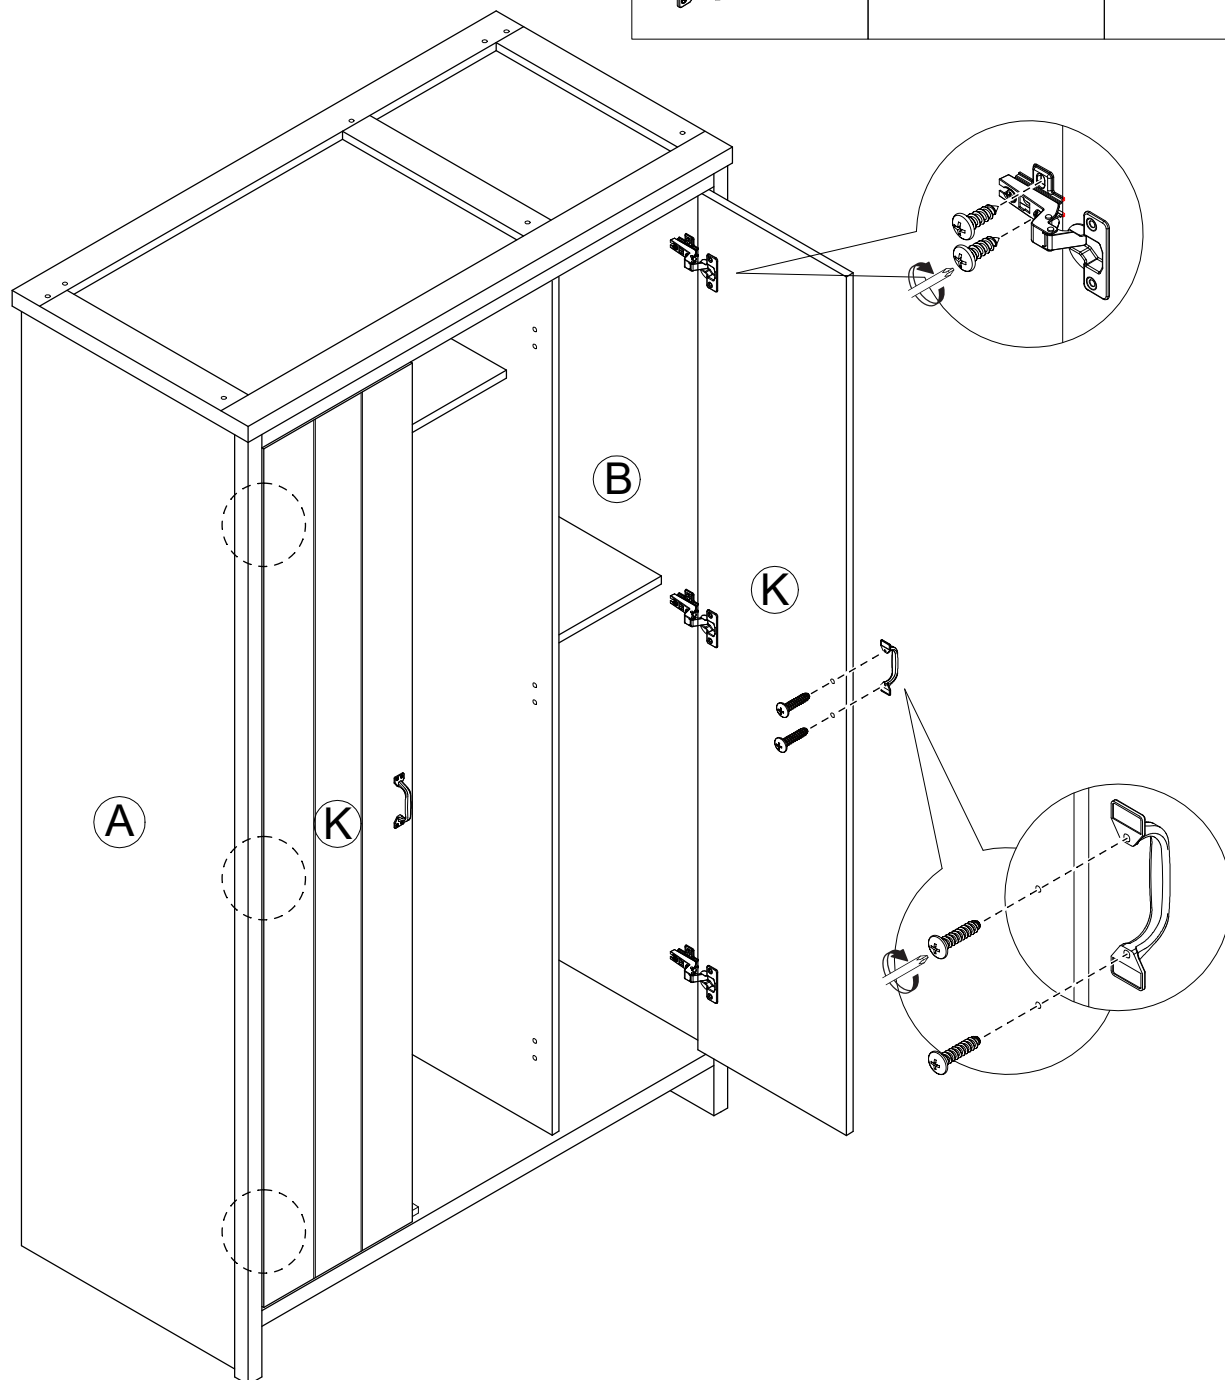

A. Lateral adjustment (Moving Door Left-Right) by screw adjusting

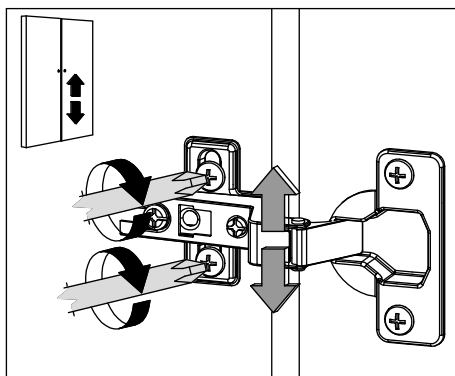

B. Vertical adjustment (Moving Door Up-Down) via slot in the mounting plate

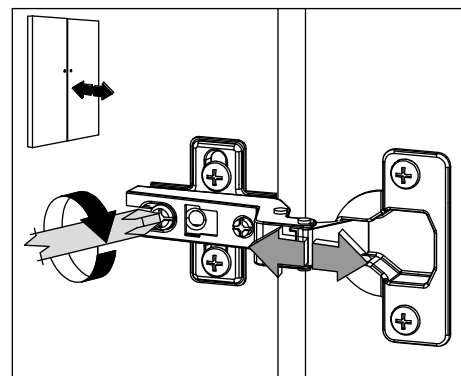



C. Front-to-back adjustment (Spacing Door Off Carcas) by slacking the hinge arm mounting screw

STEP 19


F




6 x

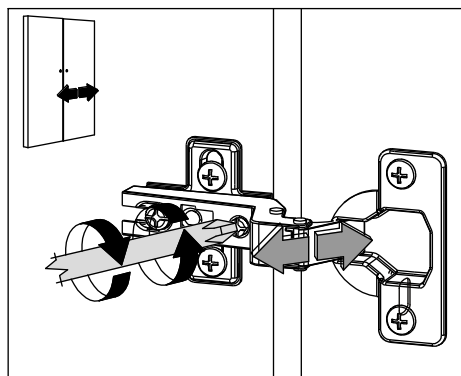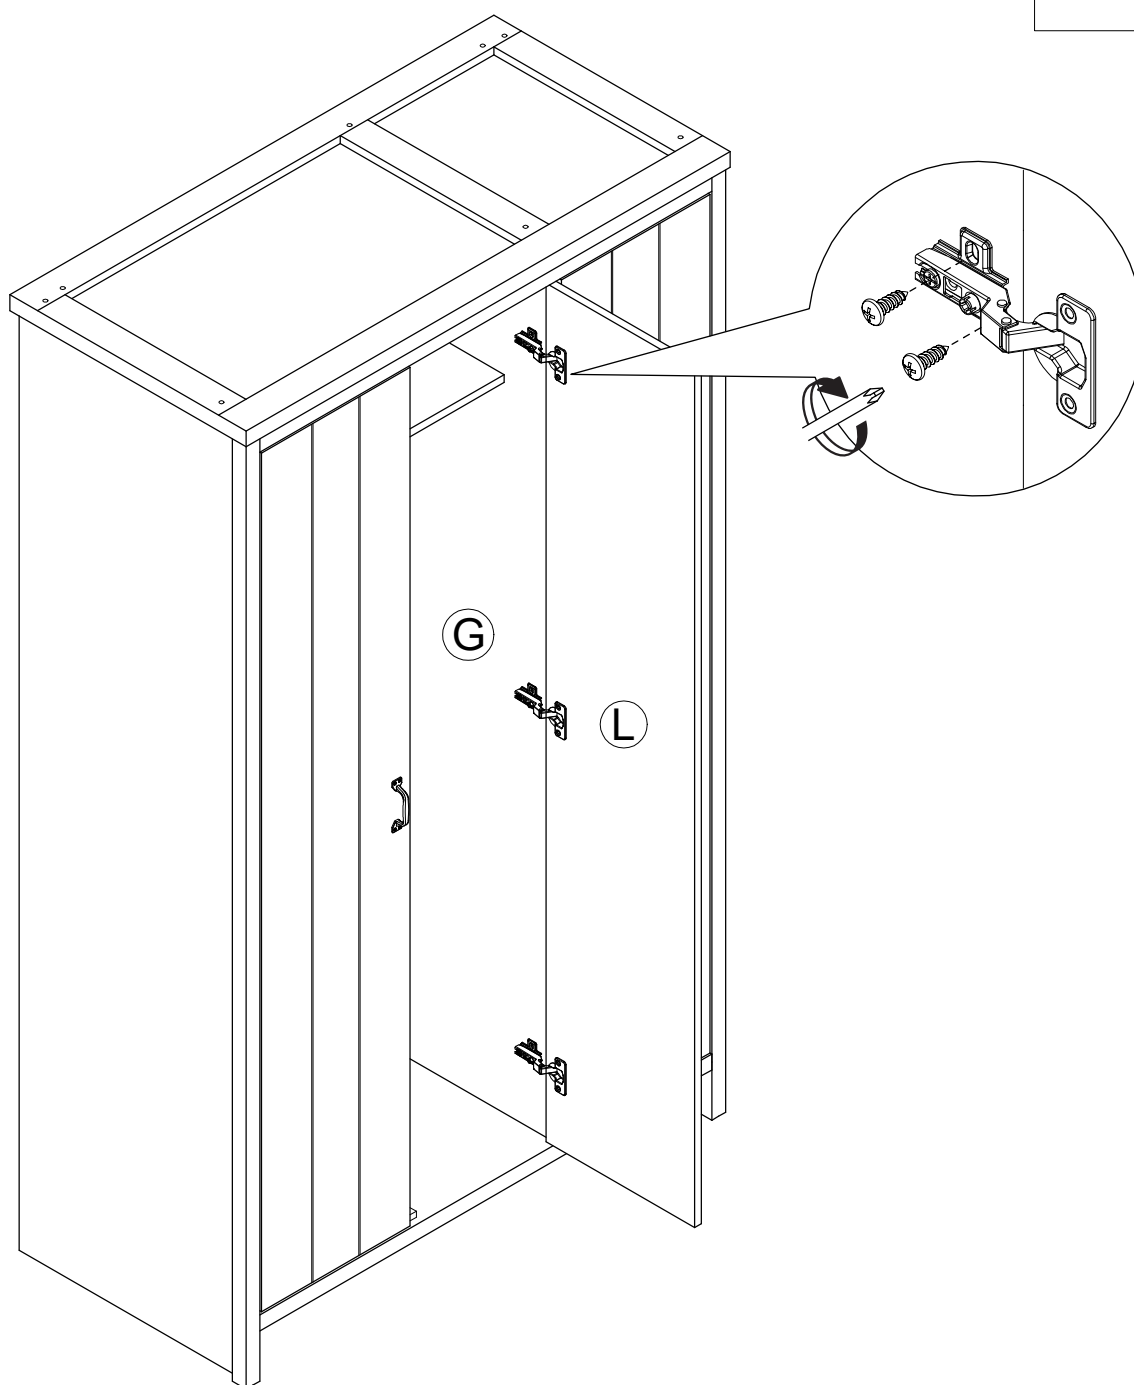

A. Lateral adjustment (Moving Door Left-Right) by screw adjusting








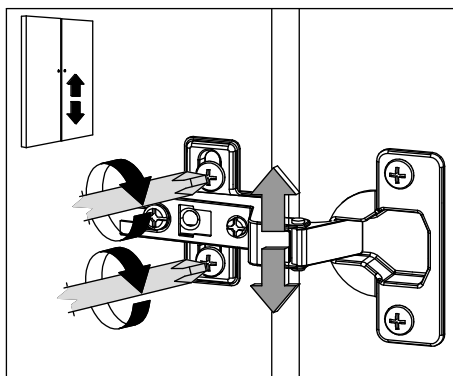


B. Vertical adjustment (Moving Door Up-Down) via slot in the mounting plate

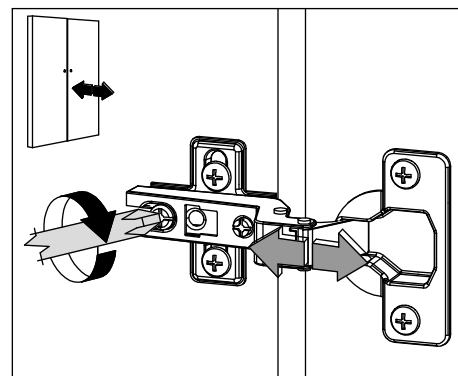

C. Front-to-back adjustment (Spacing Door Off Carcas) by slacking the hinge arm mounting screw

STEP 20

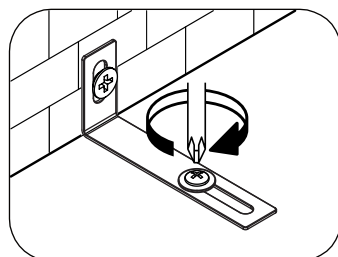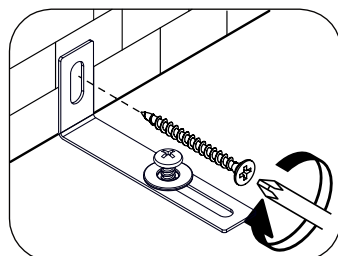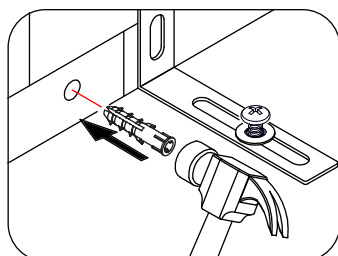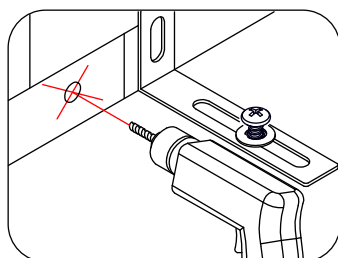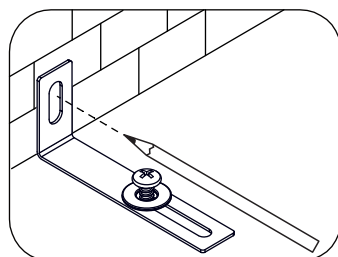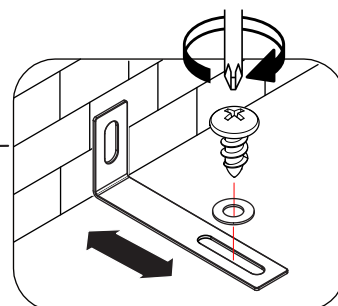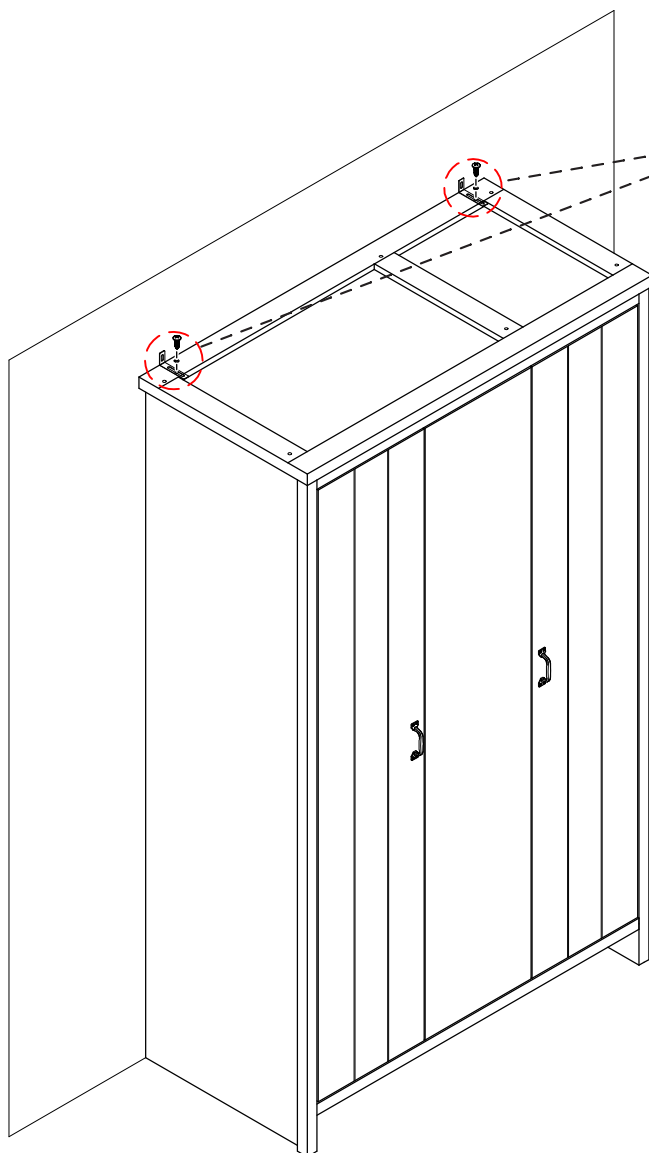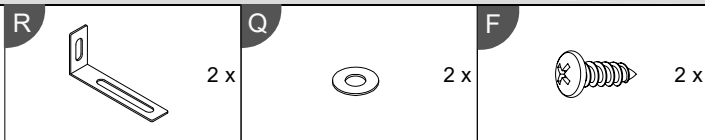


NOTE : Wall fixing are not supplied with this product as different wall materials require different types of fixing devices (such as Rawl plugs on brick work). You must use fixing devices suitable for the type of wall you intend to mount this product to. Please ensure that the head of any screw used has a diameter greater than the diameter of the mounting hole on the product and that the fixing is safe and secure before use.

The brackets and screws which to fix the strap on to the furniture are only supplied.


Complete Assembly

Your *INDUSTRIAL BOSTON 3 DOOR MIRRORED WARDROBE* is now completely assembled.

Periodically check to ensure that the components are in their proper position, free from damage. Also, make sure the connectors are tight and secure.

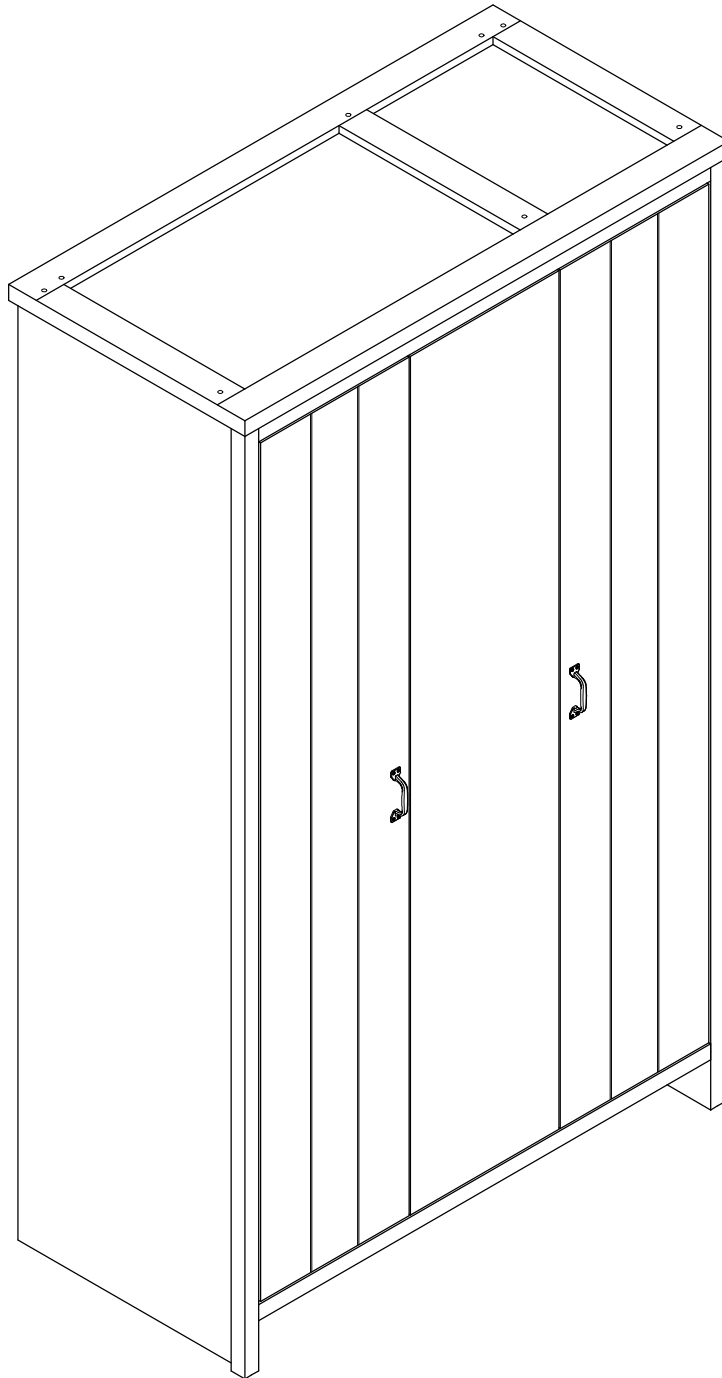

Keep instructions for future reference

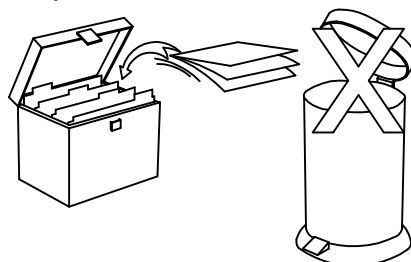

Supplied by: GFW THE FURNITURE WAREHOUSE.
Waterside Distribution Centre.
Waterside Business Park.
Johnson Road.
Lancashire. BB3 3RT.