


EZRA 2 DOOR 1 DRAWER WARDROBE

GFW
THE FURNITURE WAREHOUSE

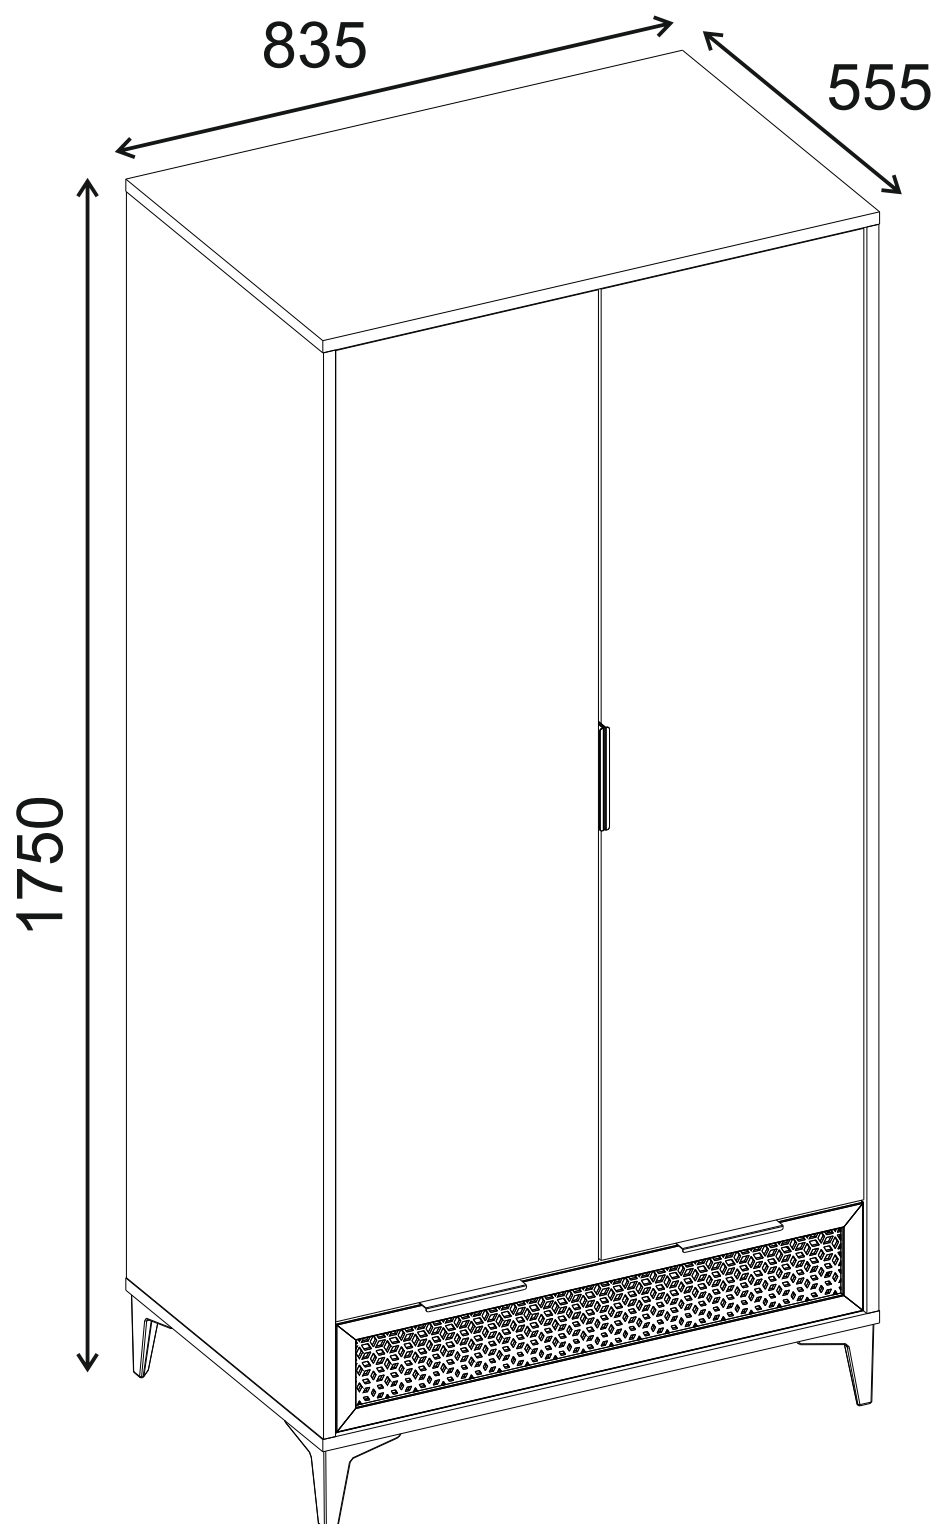

V1 04/25



Dear Customer,

Thank you for purchasing this product.
We design and produce our products for people to love and have fun with them as we do.
The product you bought was subjected to all sorts of tests and quality controls before sending it to you




- When you are ready to start, make sure that you have the right tools, and plenty of space and a clean, dry area for assembly.
- Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to prevent it from scratching.
- Check the pack and make sure you have all the parts listed.
- Ensure that this product is fully assembled as illustrated before use.
- Check all screws or bolts are tightened and inspect regularly
- Tools not included.
- Due to the size of this product we recommend that it is assembled in the room intended for use.



CARE INFORMATION

Never use scourers, abrasives or chemical cleaners.
To clean wipe with a sponge and warm soapy water. Do not use solvent based cleaners or detergents as they can bleach or damage the product.
Do not place hot or warm objects on the surface as these may damage the product.
Always use a suitable heat resistant mat.

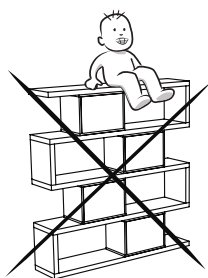






WARNINGS

Keep small parts out of reach of children.
Make sure the legs remain in contact with the floor.
This product should only be used on a firm and level floor.
Do not sit or stand on this product.



DO NOT use power tools to construct this product.
DO NOT over-tighten screws or bolts.
DO NOT use this product if parts are missing, damaged or worn.


We recommend the use of the fixings provided for safety reasons.
N.B If in doubt please consult a qualified trades person. Warning.
Always ensure the area to be drilled is free from hidden electrical wires, water and gas pipes

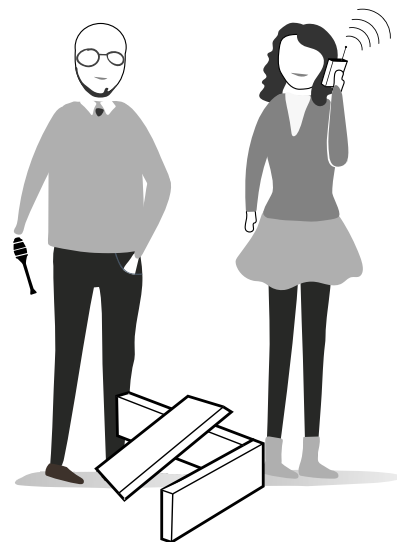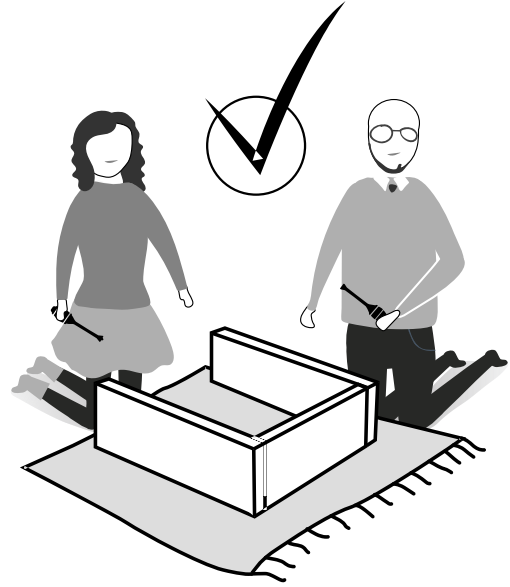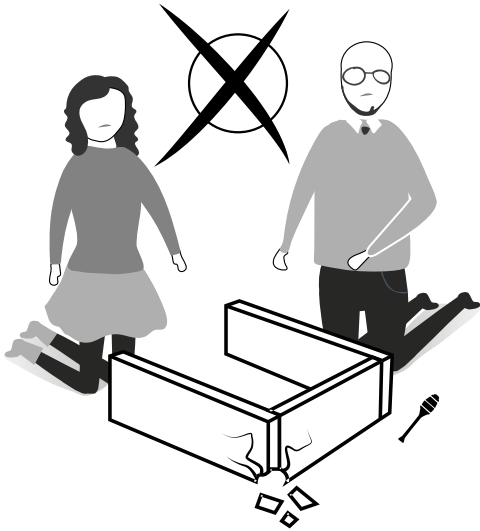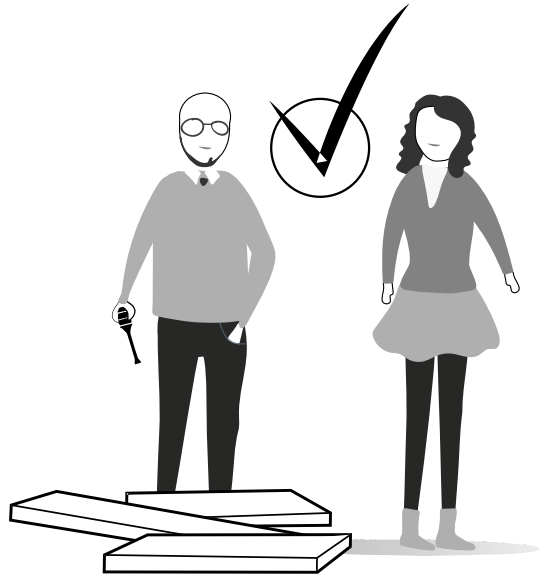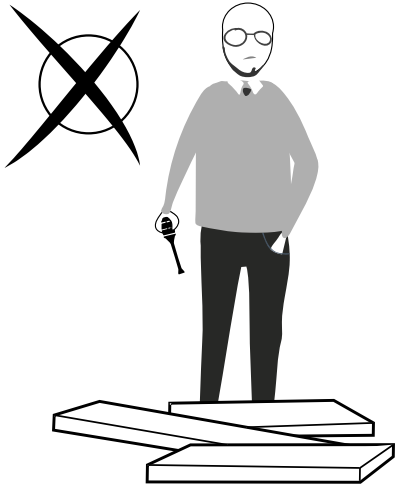


ATTENTION !!

Minifix is the main connection material used in our products.
Before starting assembly, please check the drawings below.


A04

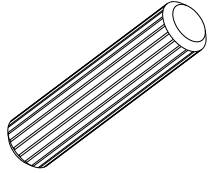


A23

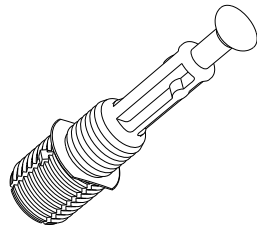


A22

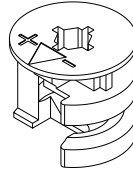


A12

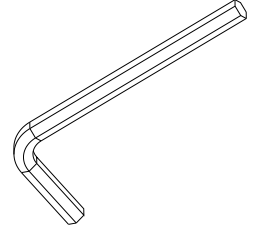


1

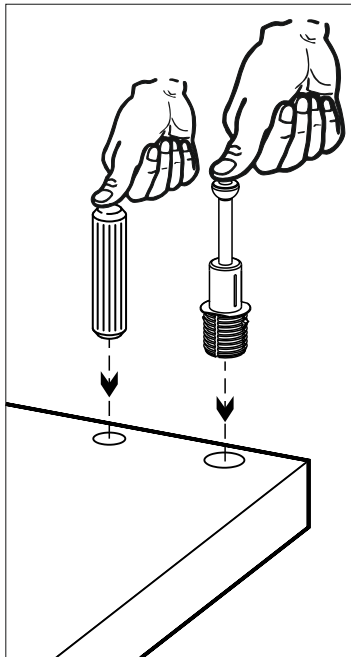


2

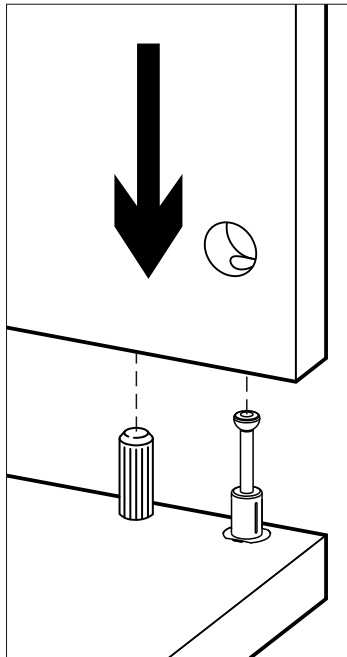

3

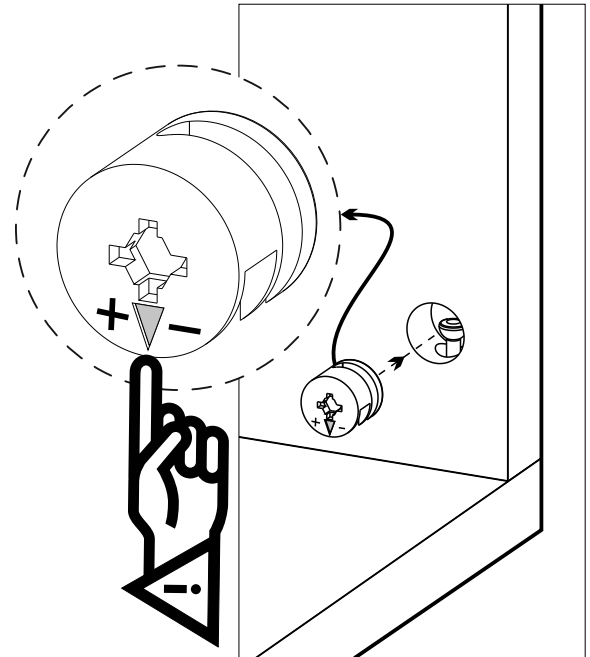

4

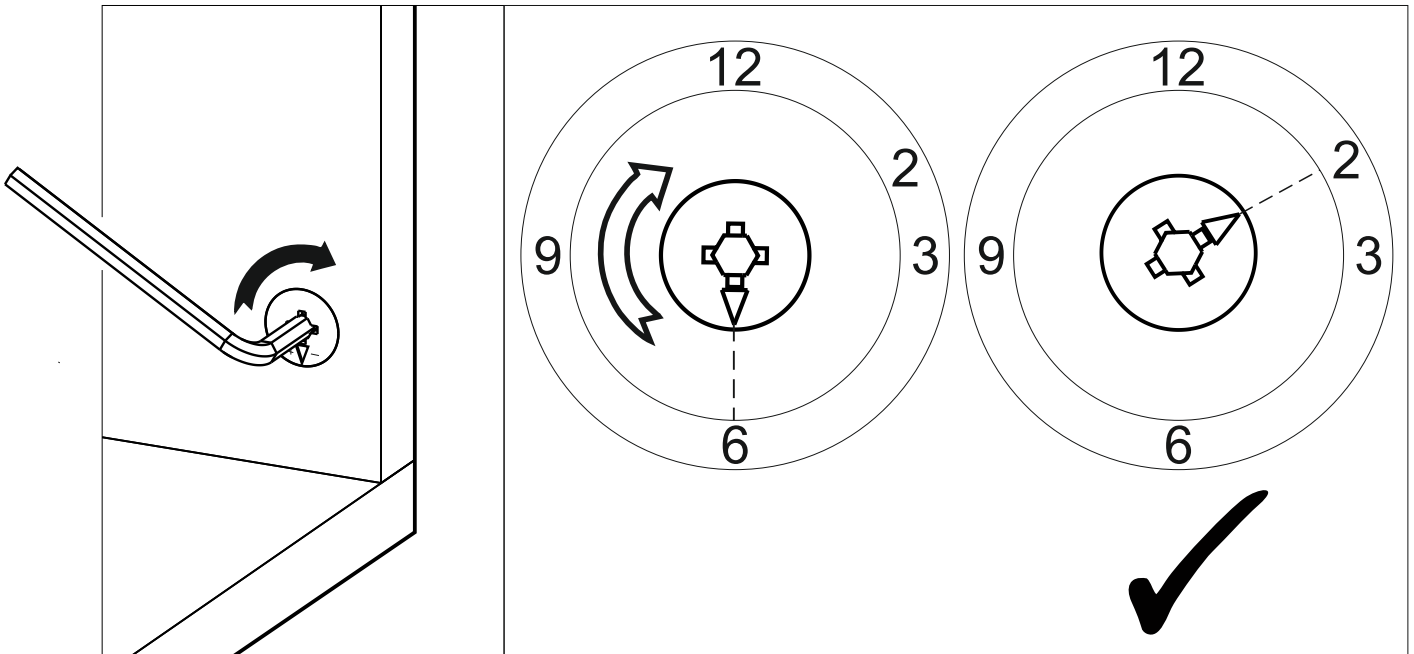

ATTENTION !!


Our products are screw system. Before you proceed with installation try to understand the following




A13




1

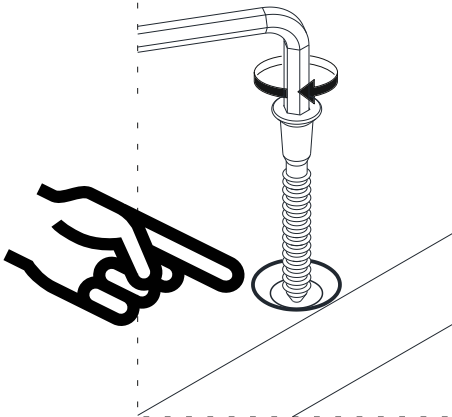


1

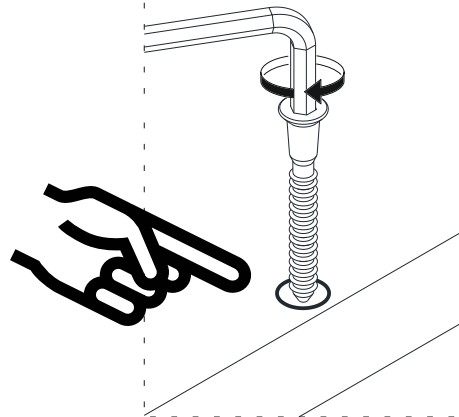


2

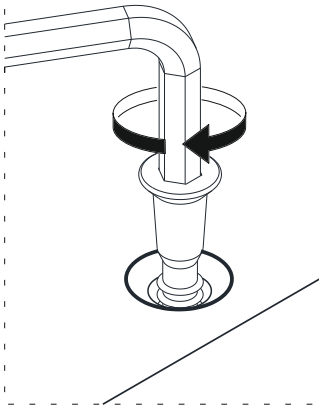


2

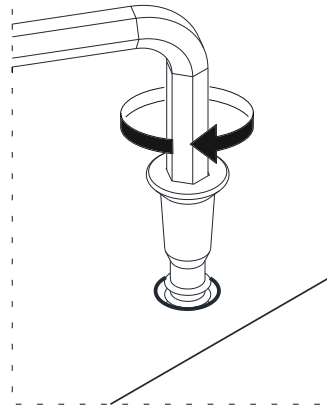


3

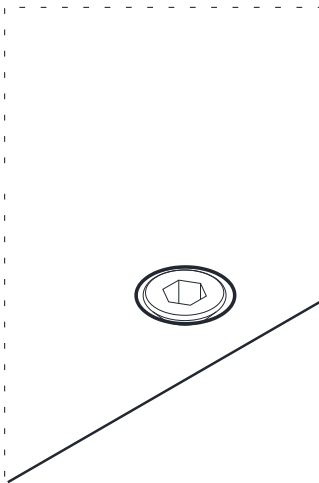

3

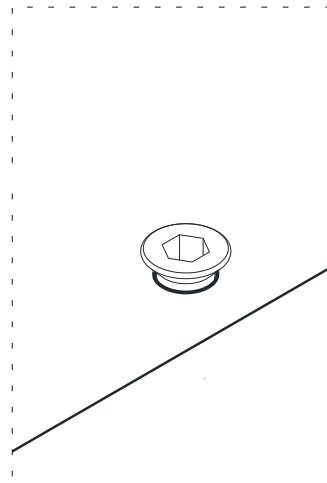














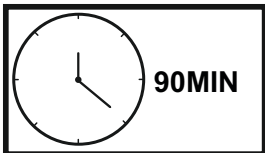



90MIN

Follow the installation steps in the order as shown.
Position the parts as shown in the installation guide steps.







HARDWARE LIST

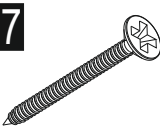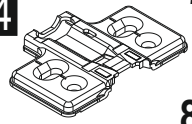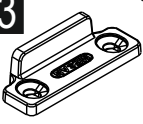
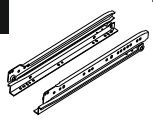
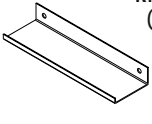
A04  12x	A06  24x	A12  1x	A13  4x	A16  1x
A17  1x	A18  79x	A22  20x	A23  20x	A25  14x
A42  4x	A50  8x	A69  8x	A87  1x	A100  3x
A132.a  4x	A132.b  4x	B14  8x	C33  8x	C34  8x
F08  2x	F15  1x	A123  1x	Z31  1x	Z551  4x

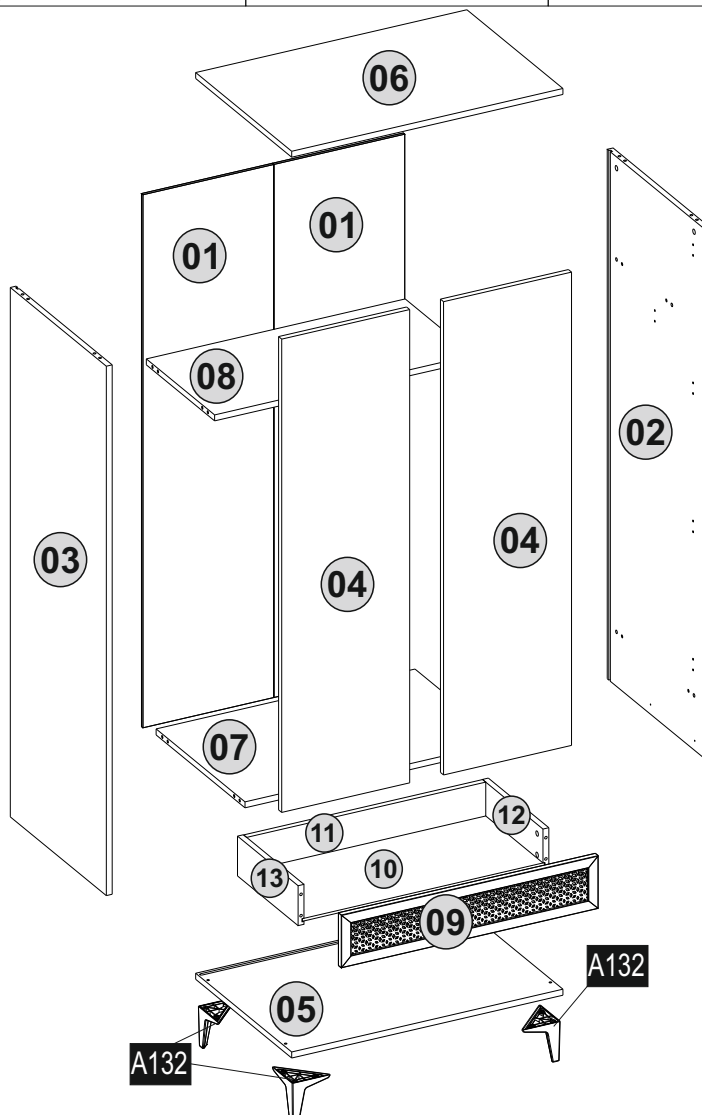




1

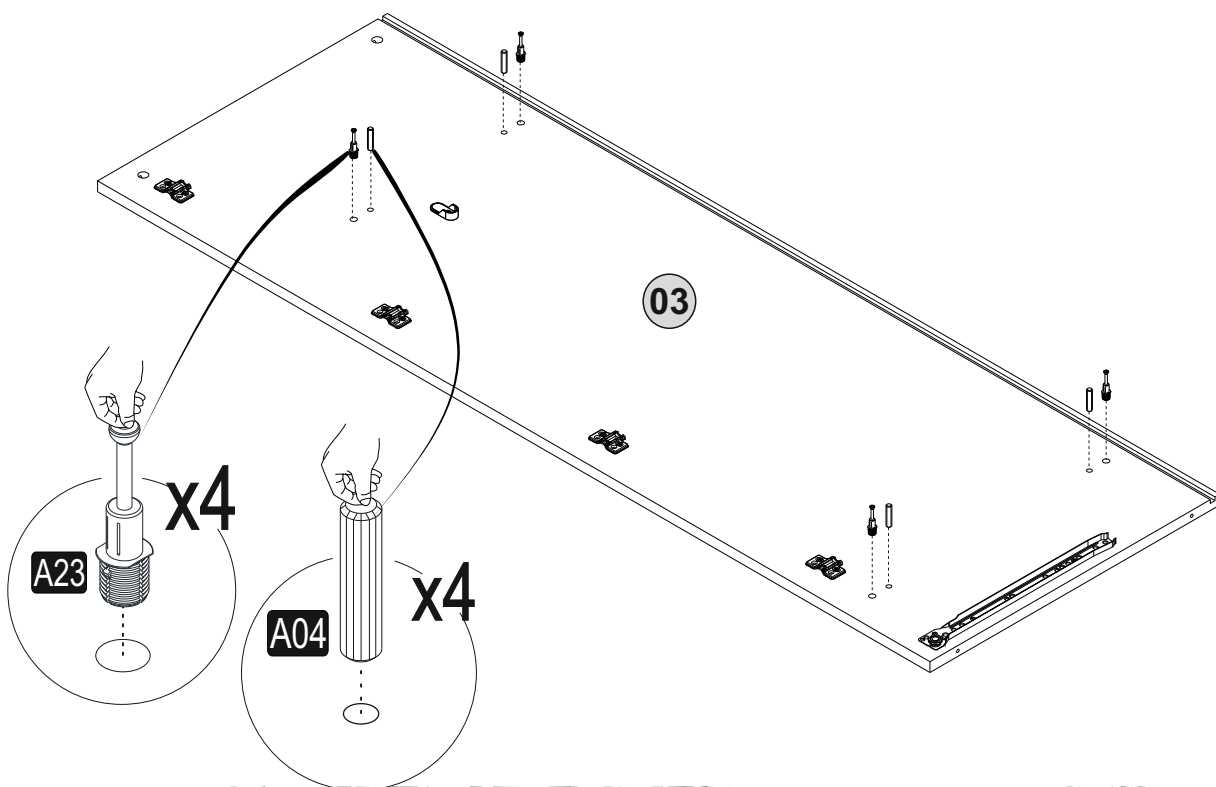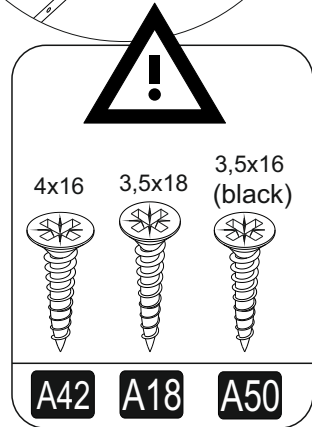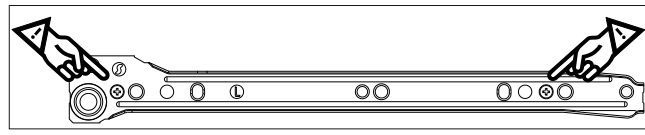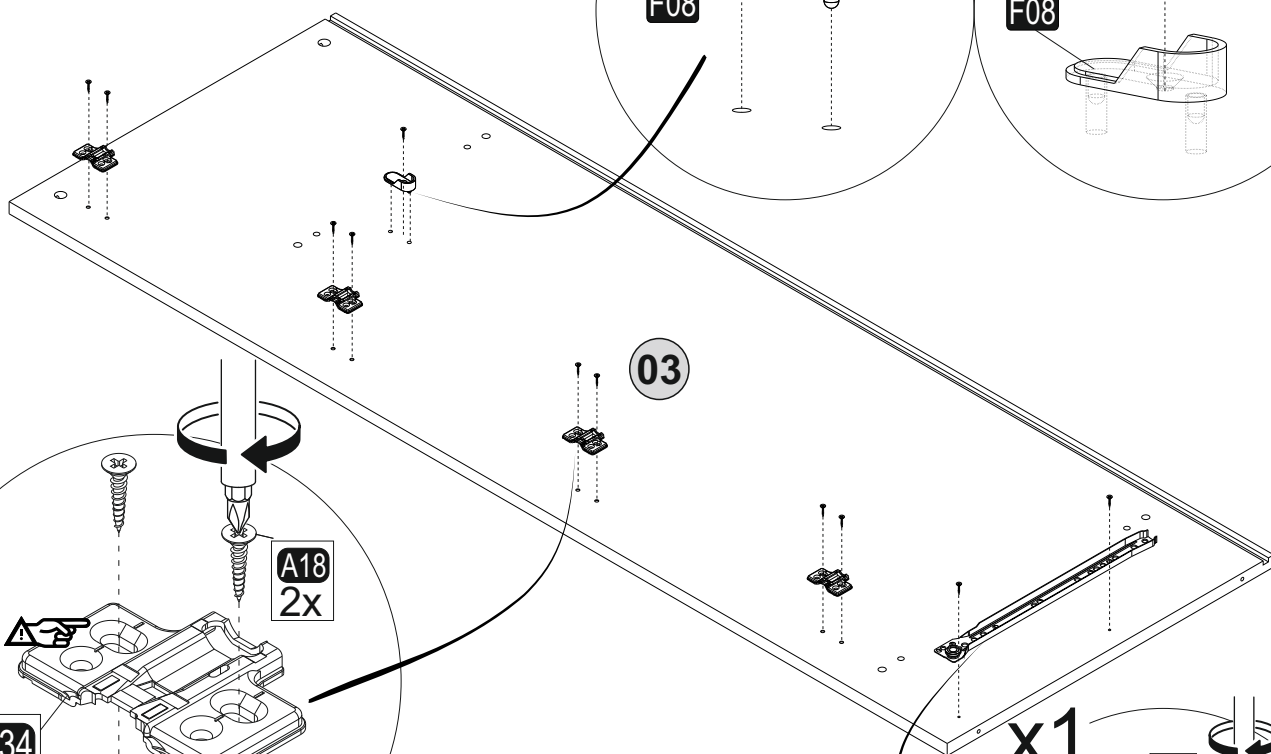


2

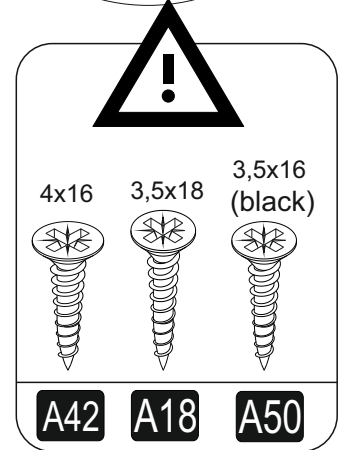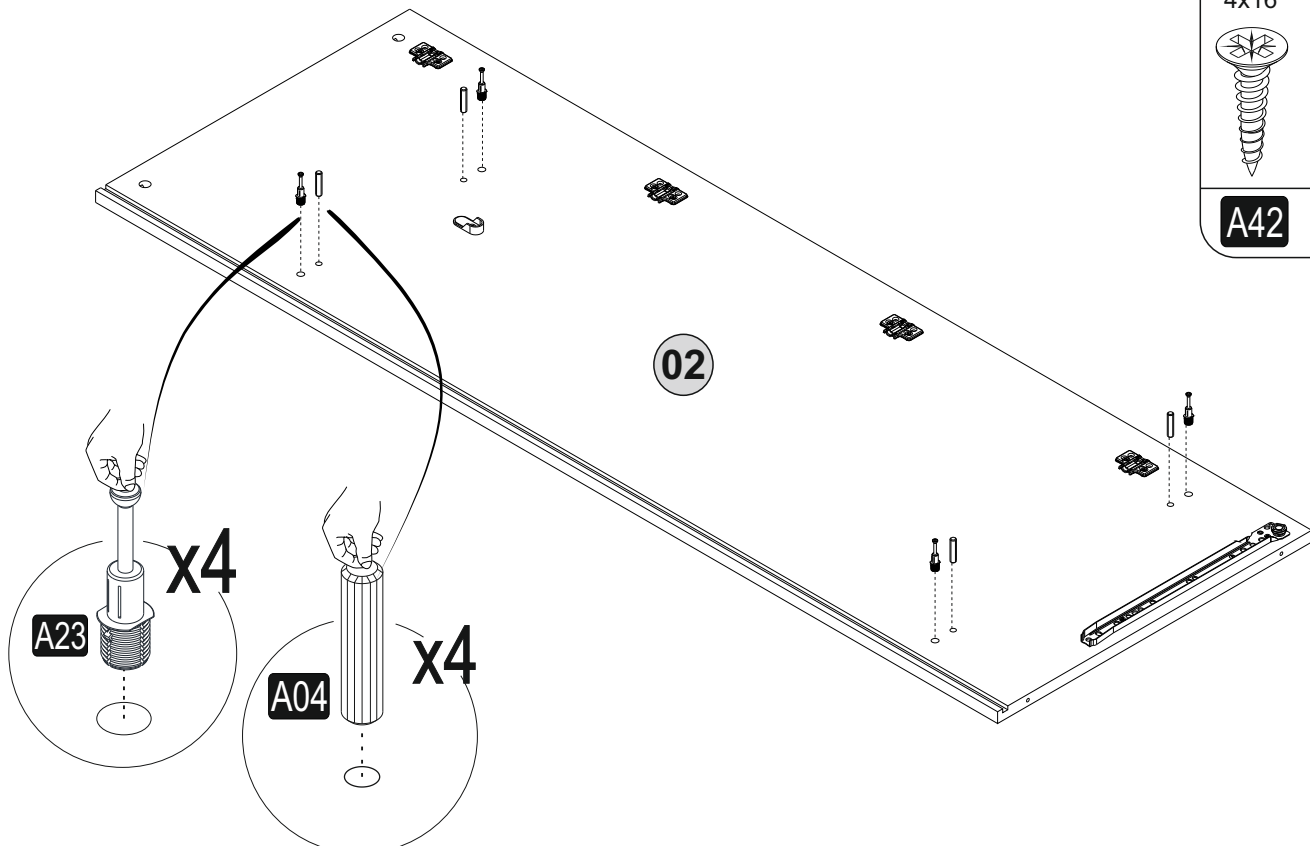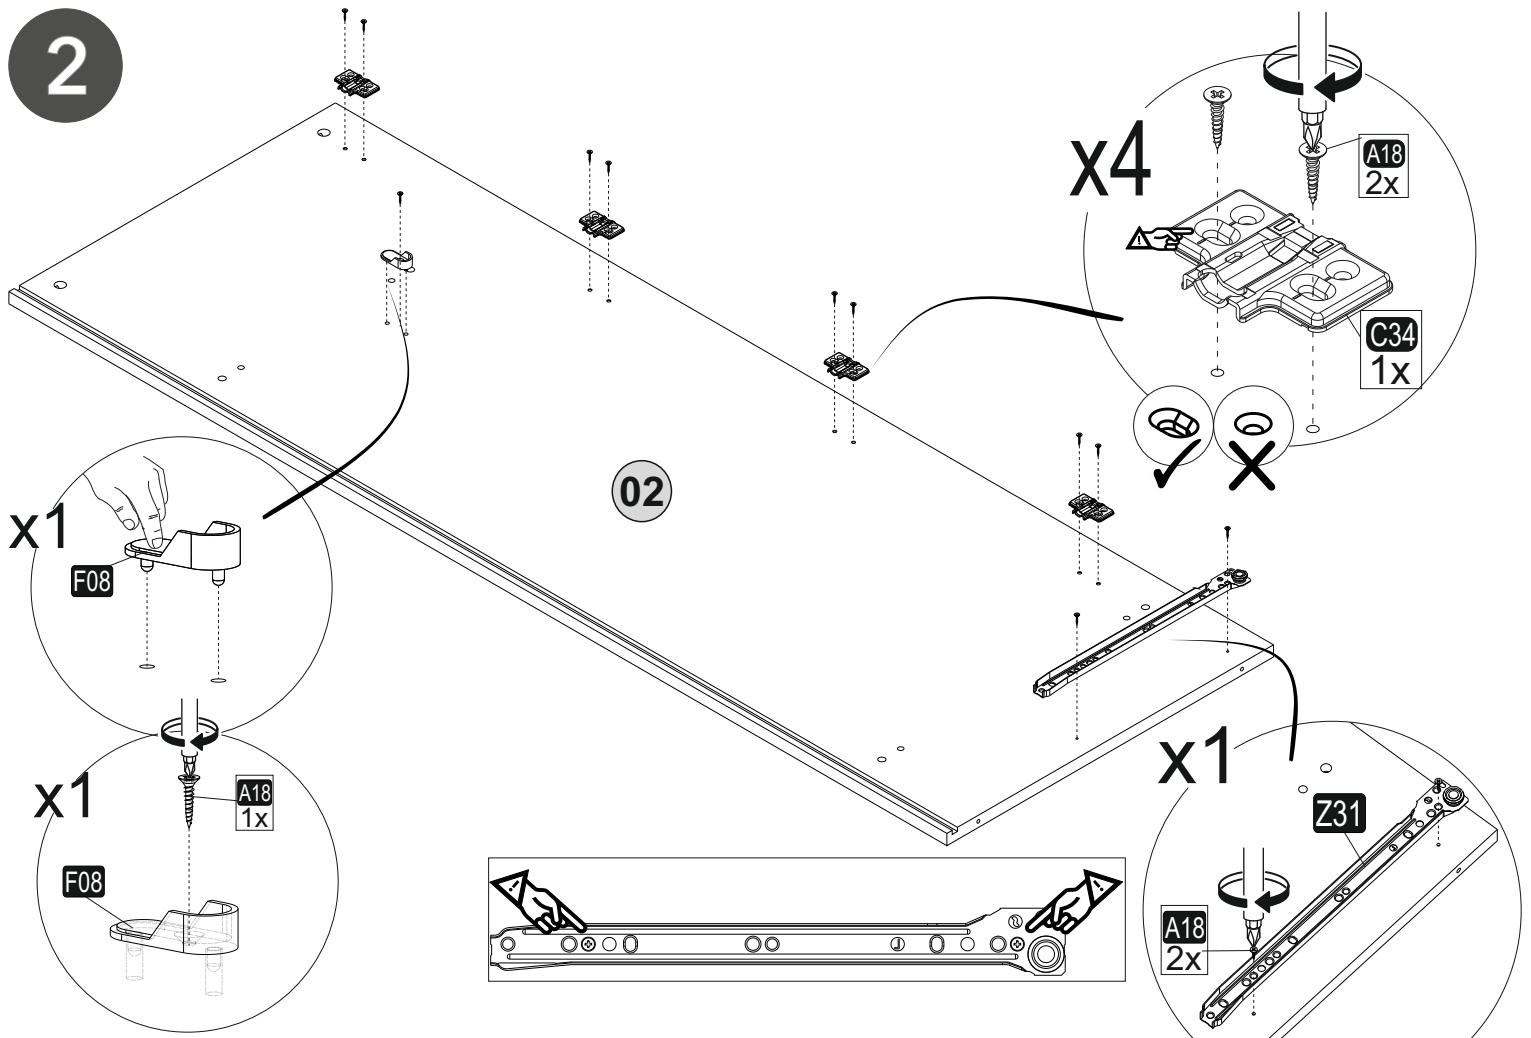




3

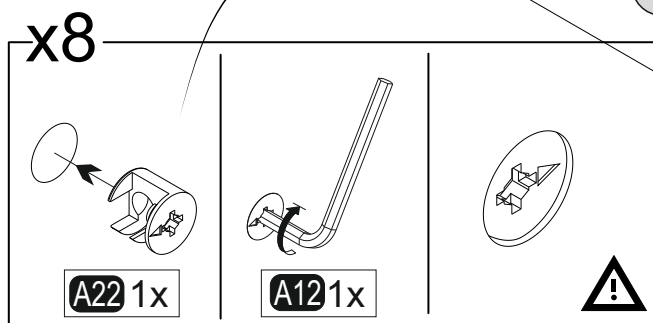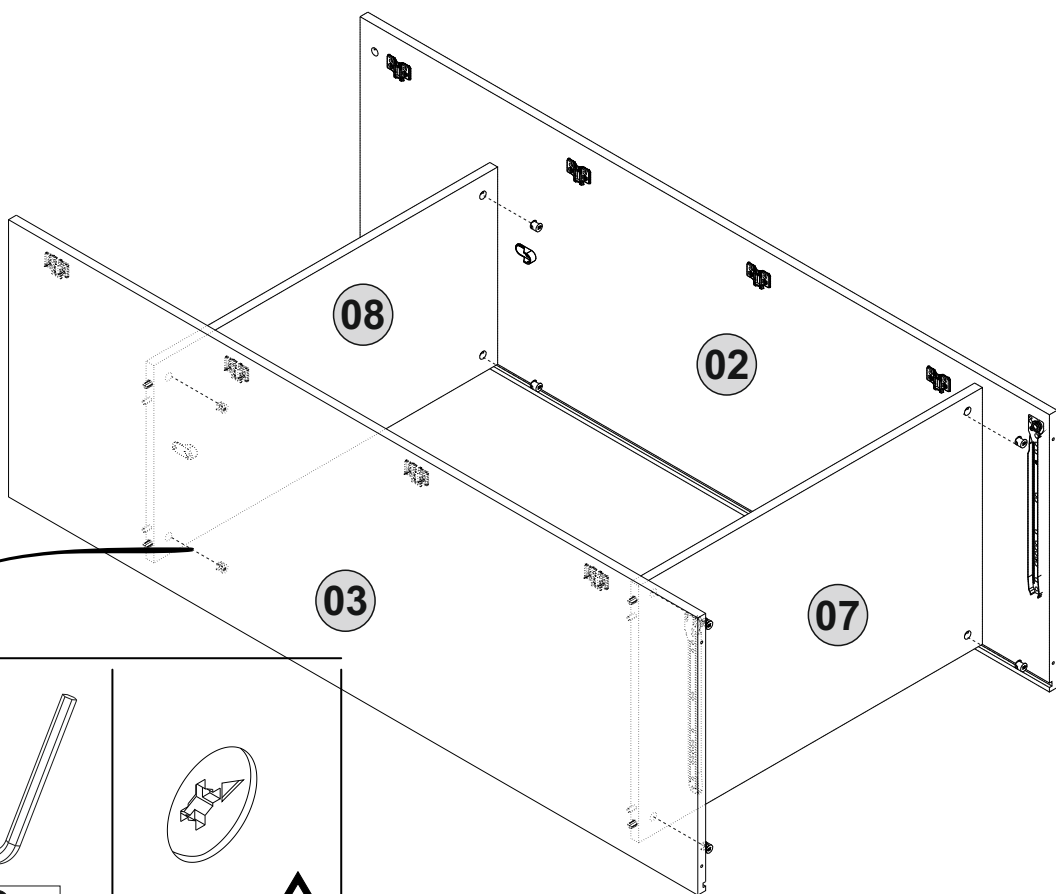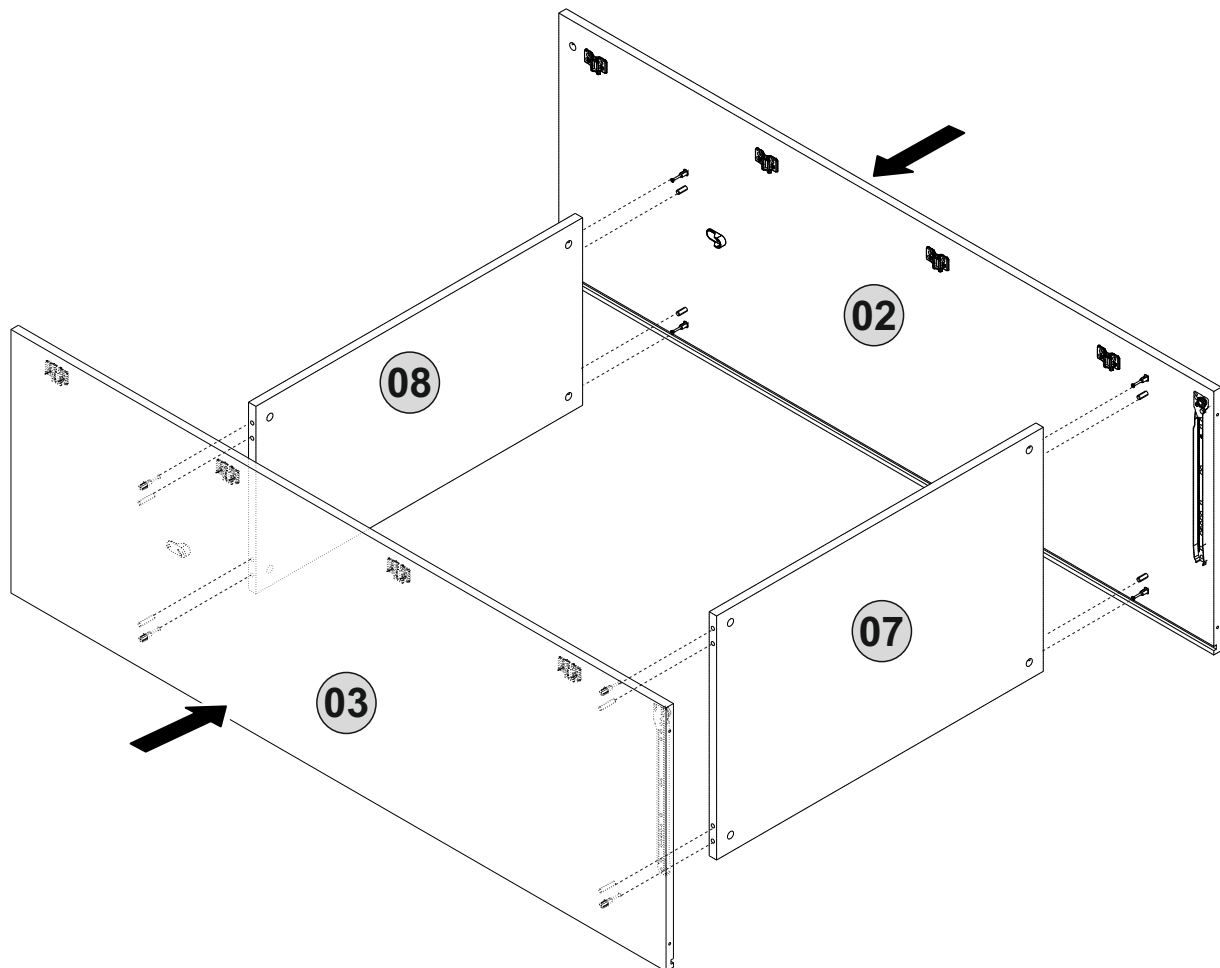


4

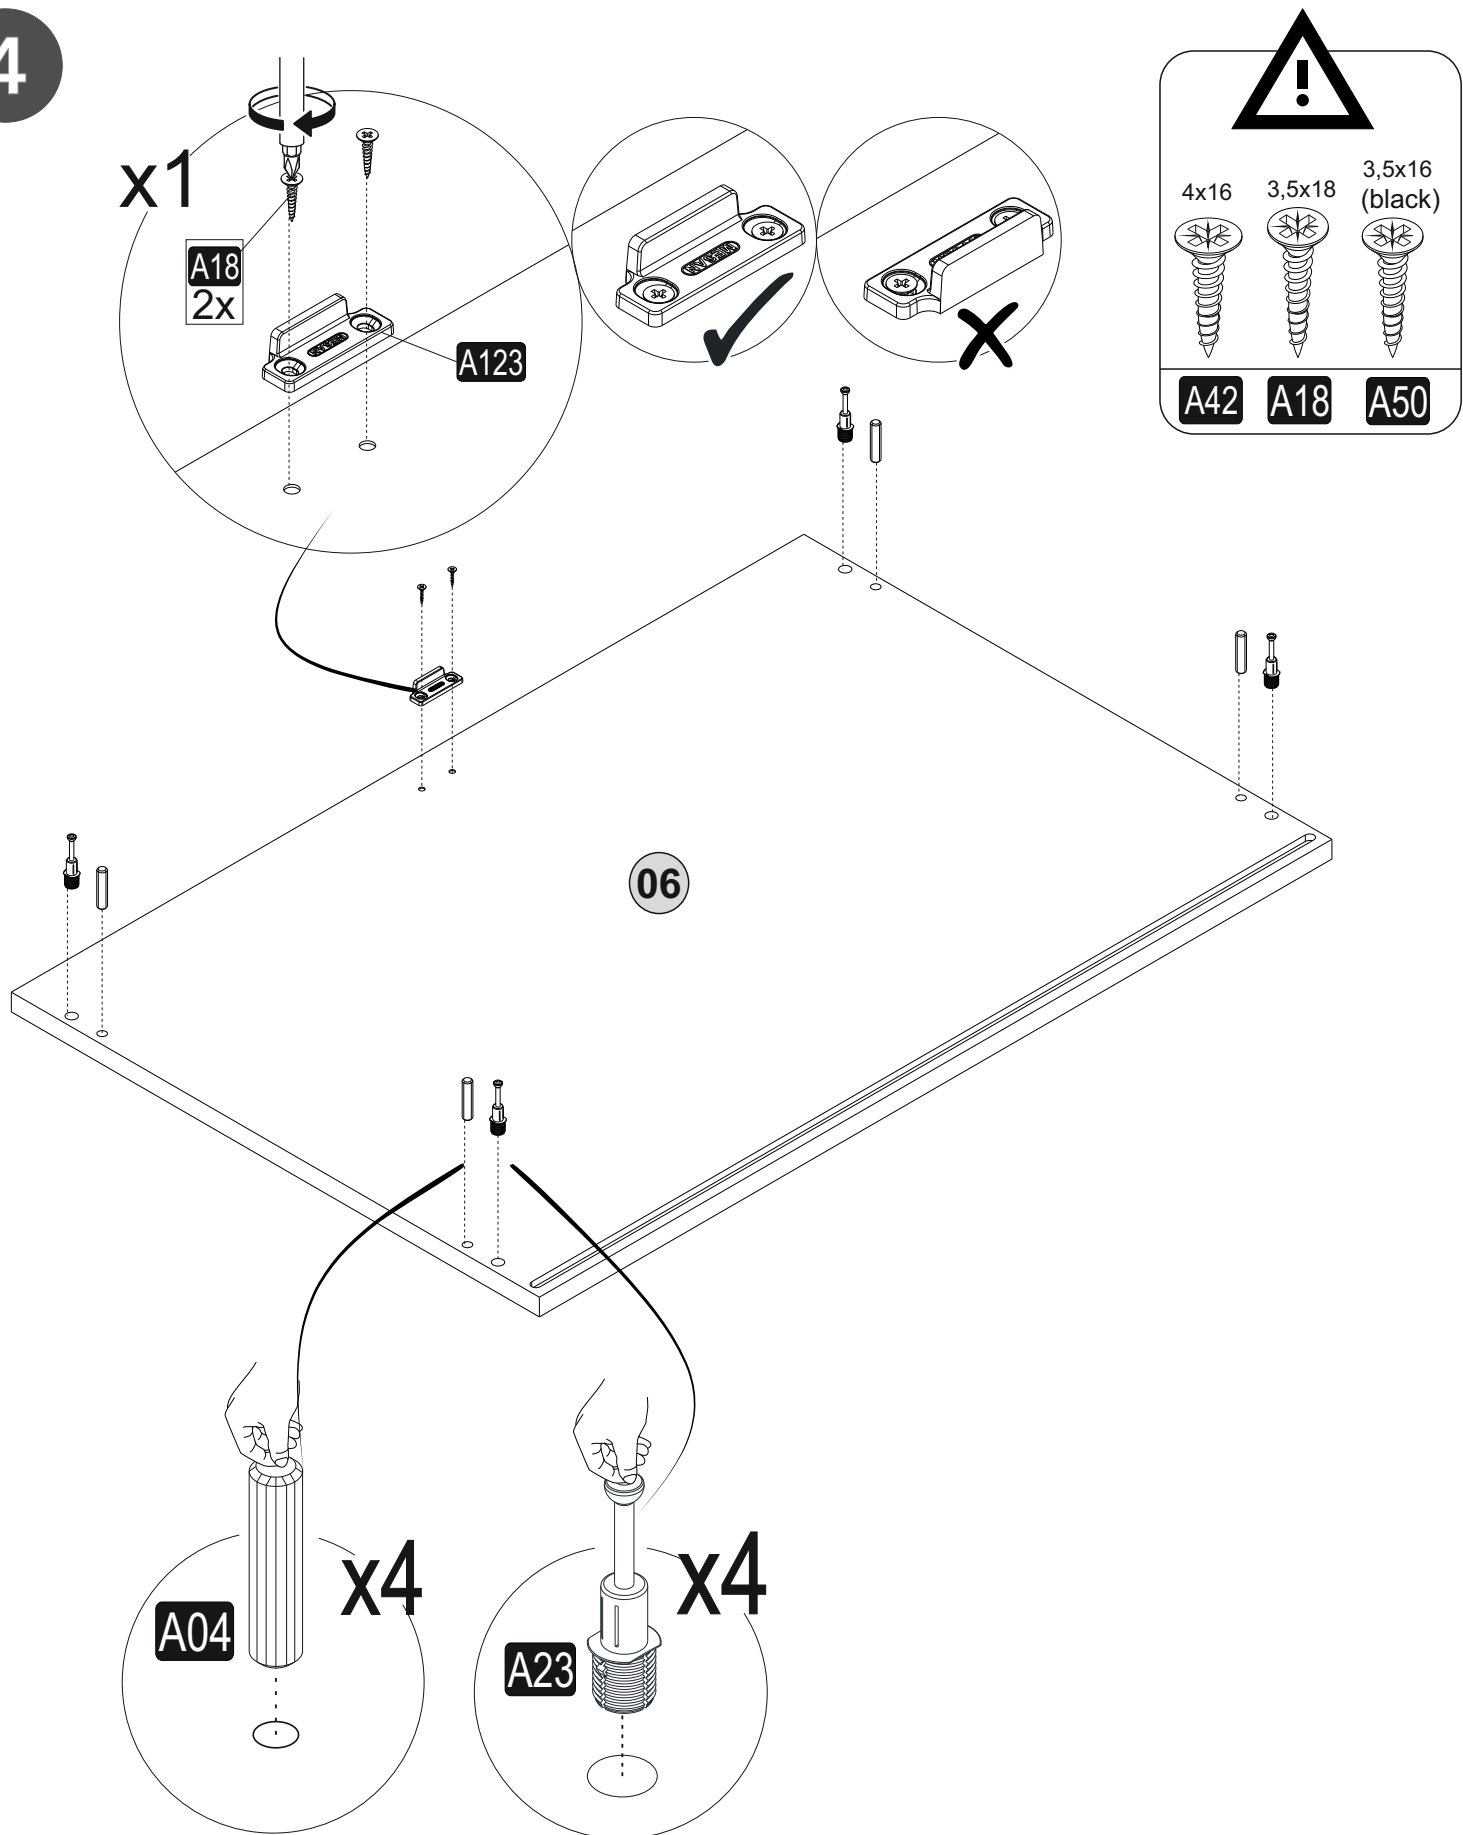


5

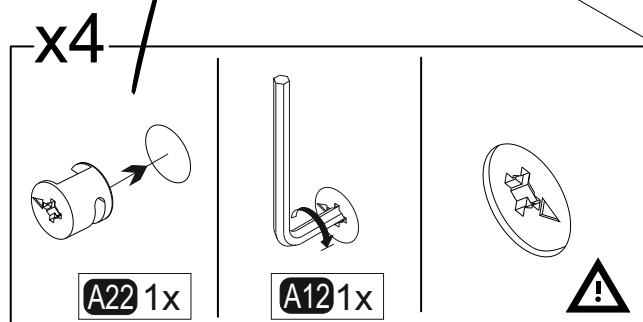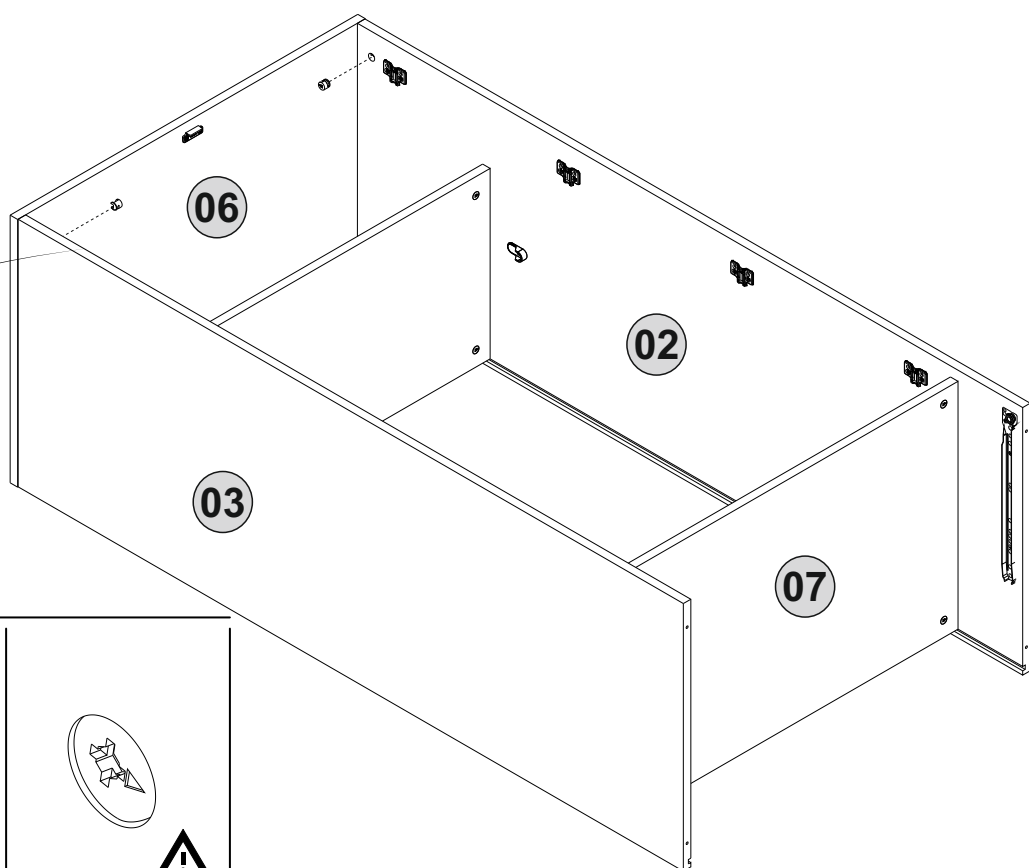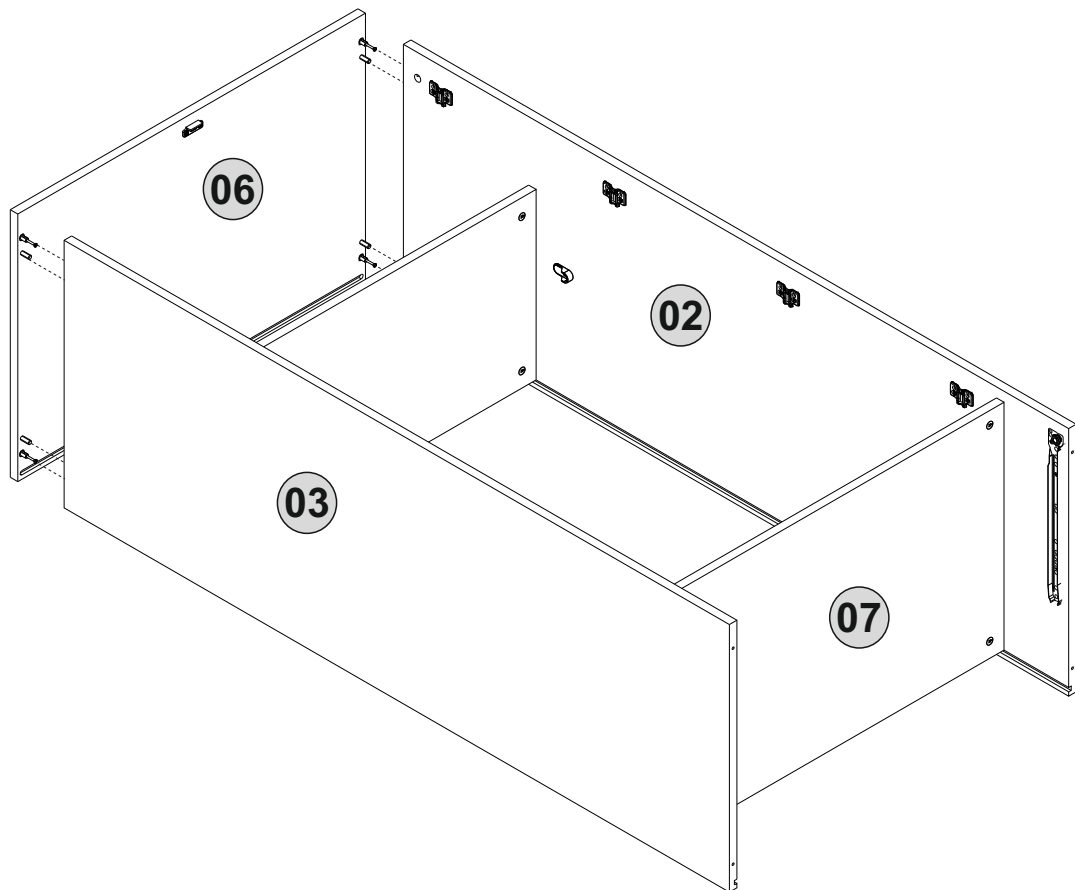

6

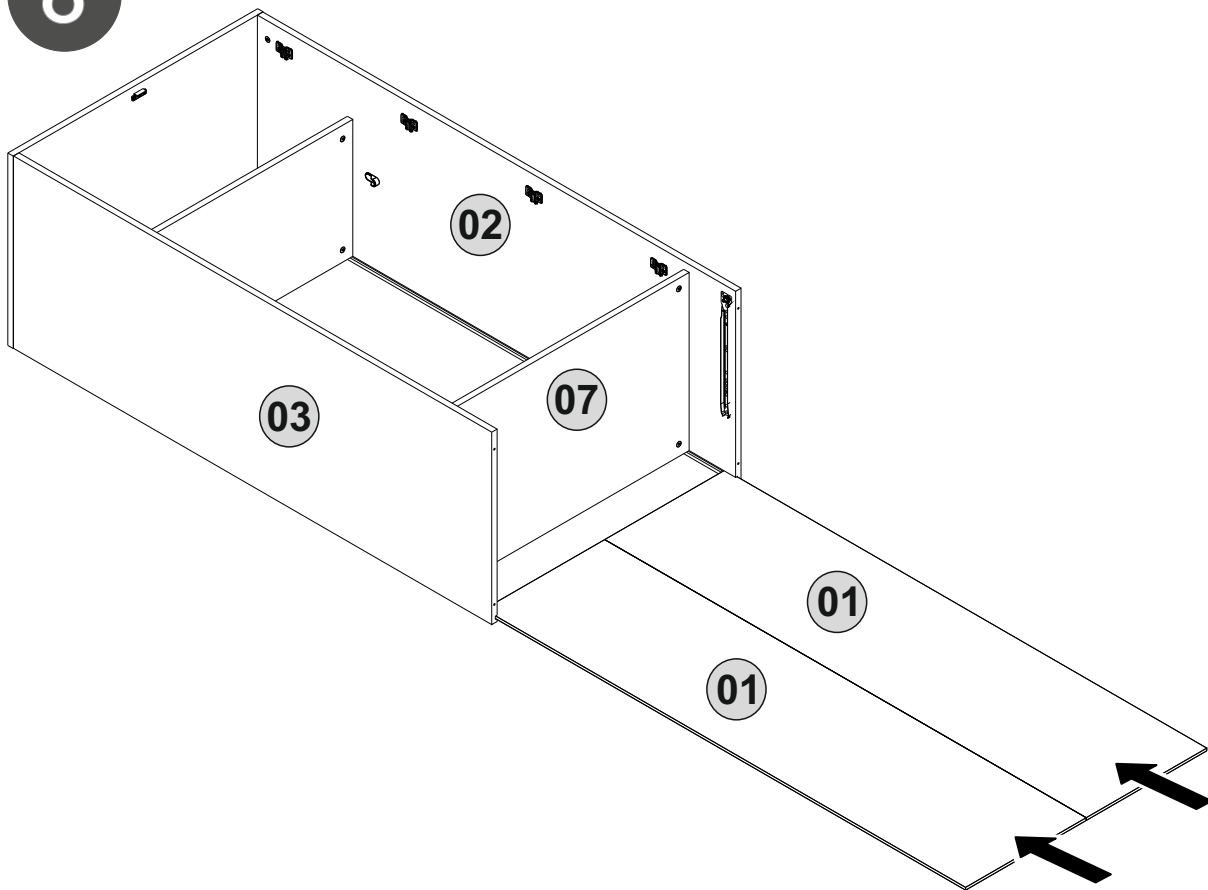

7

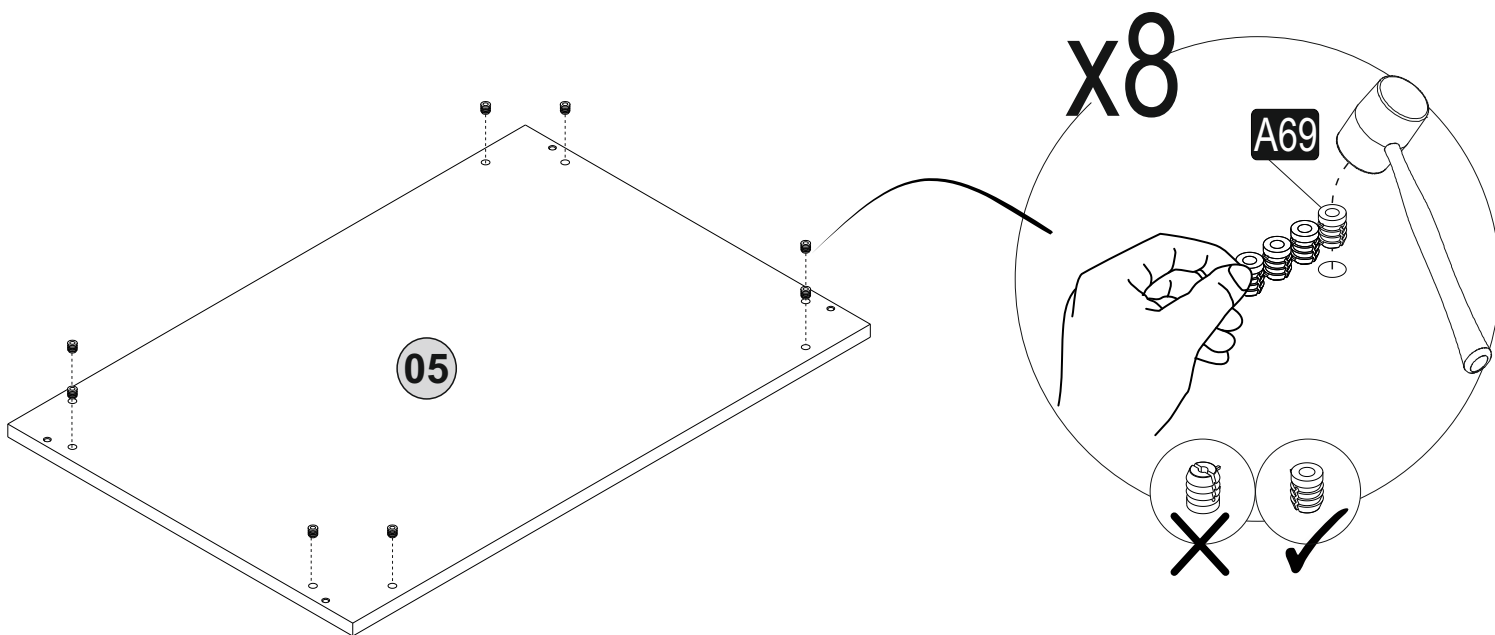

8

06

02

03

05

x4

A12





A13
1x

Place a round sticker A06 over each minifix and screw on the wardrobe.




A06

A06


9

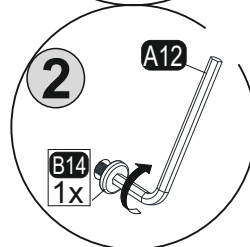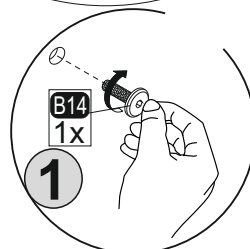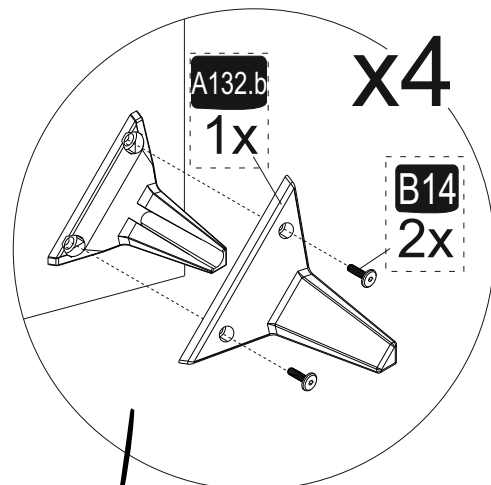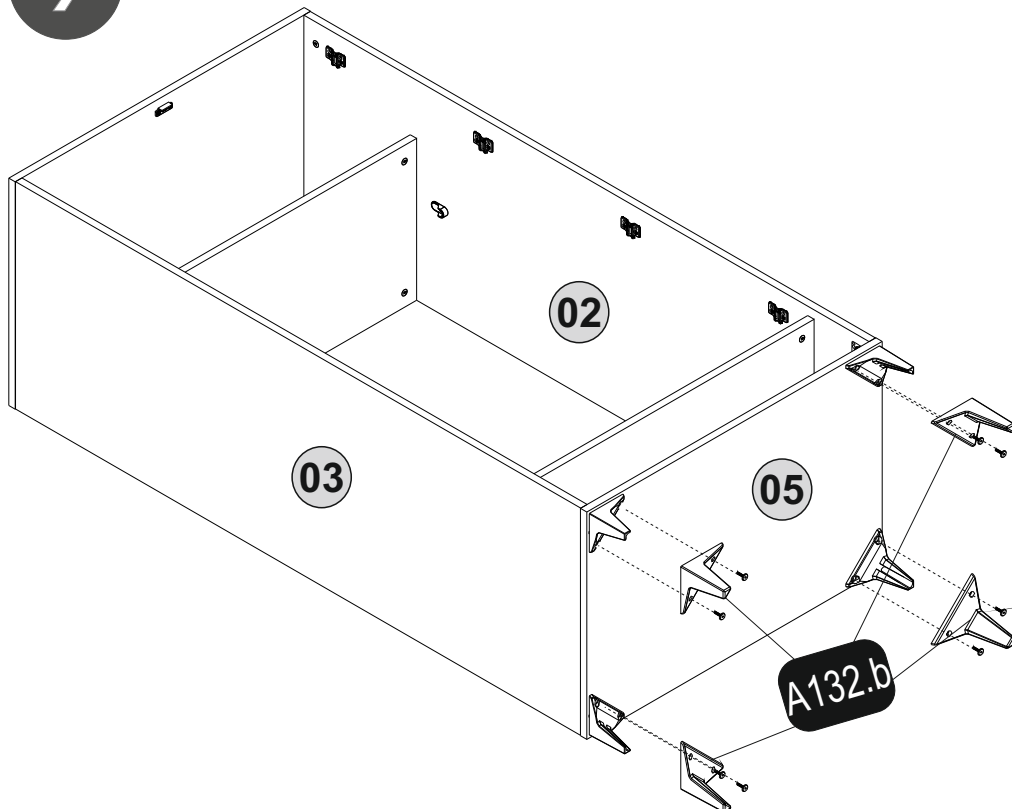


10

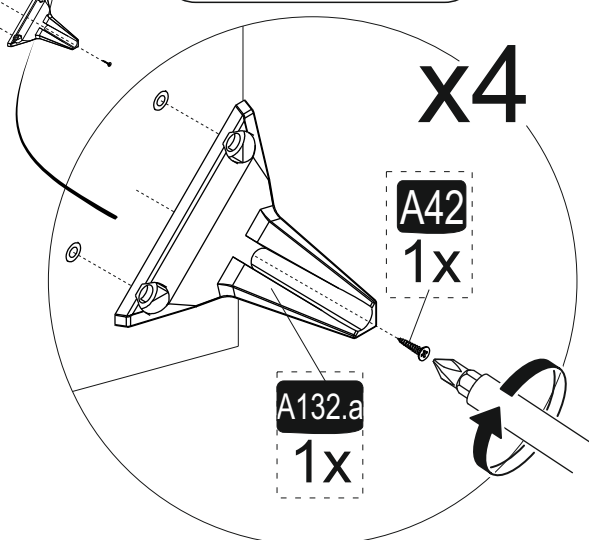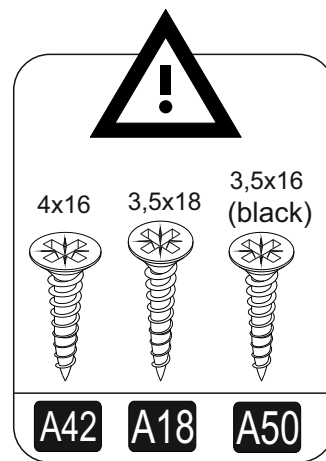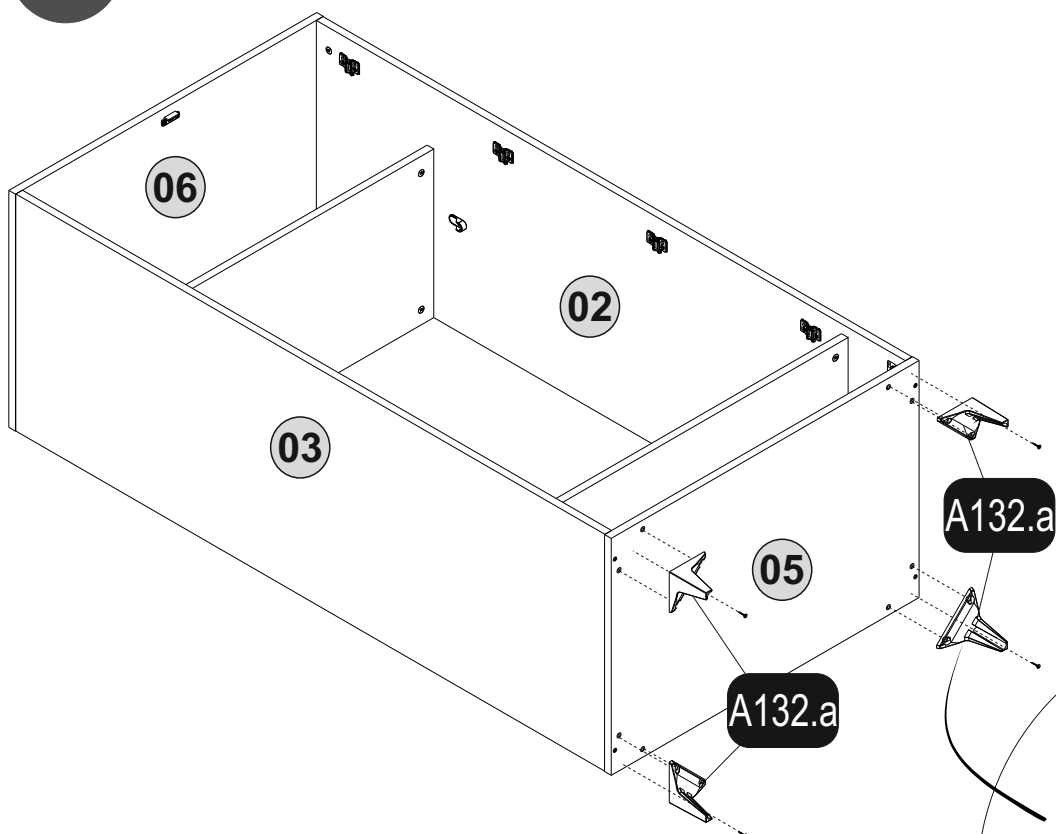


11

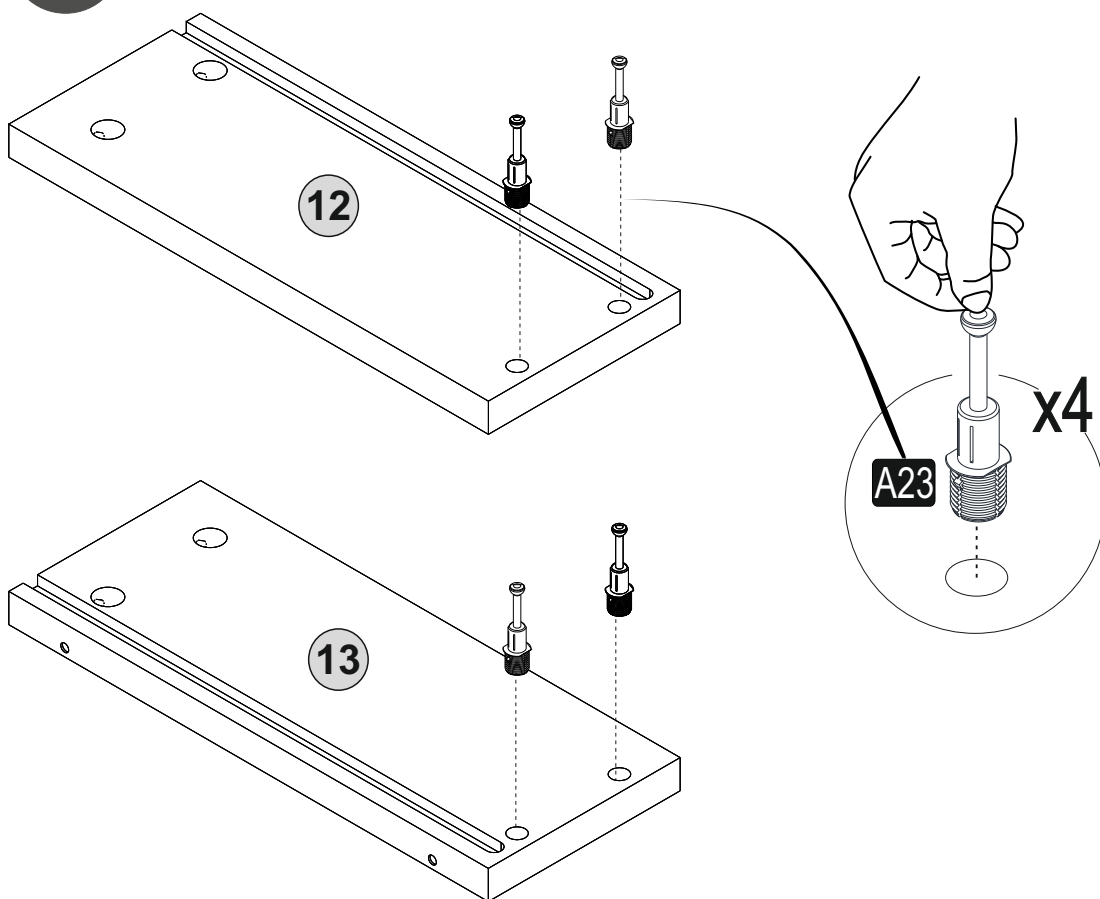



12

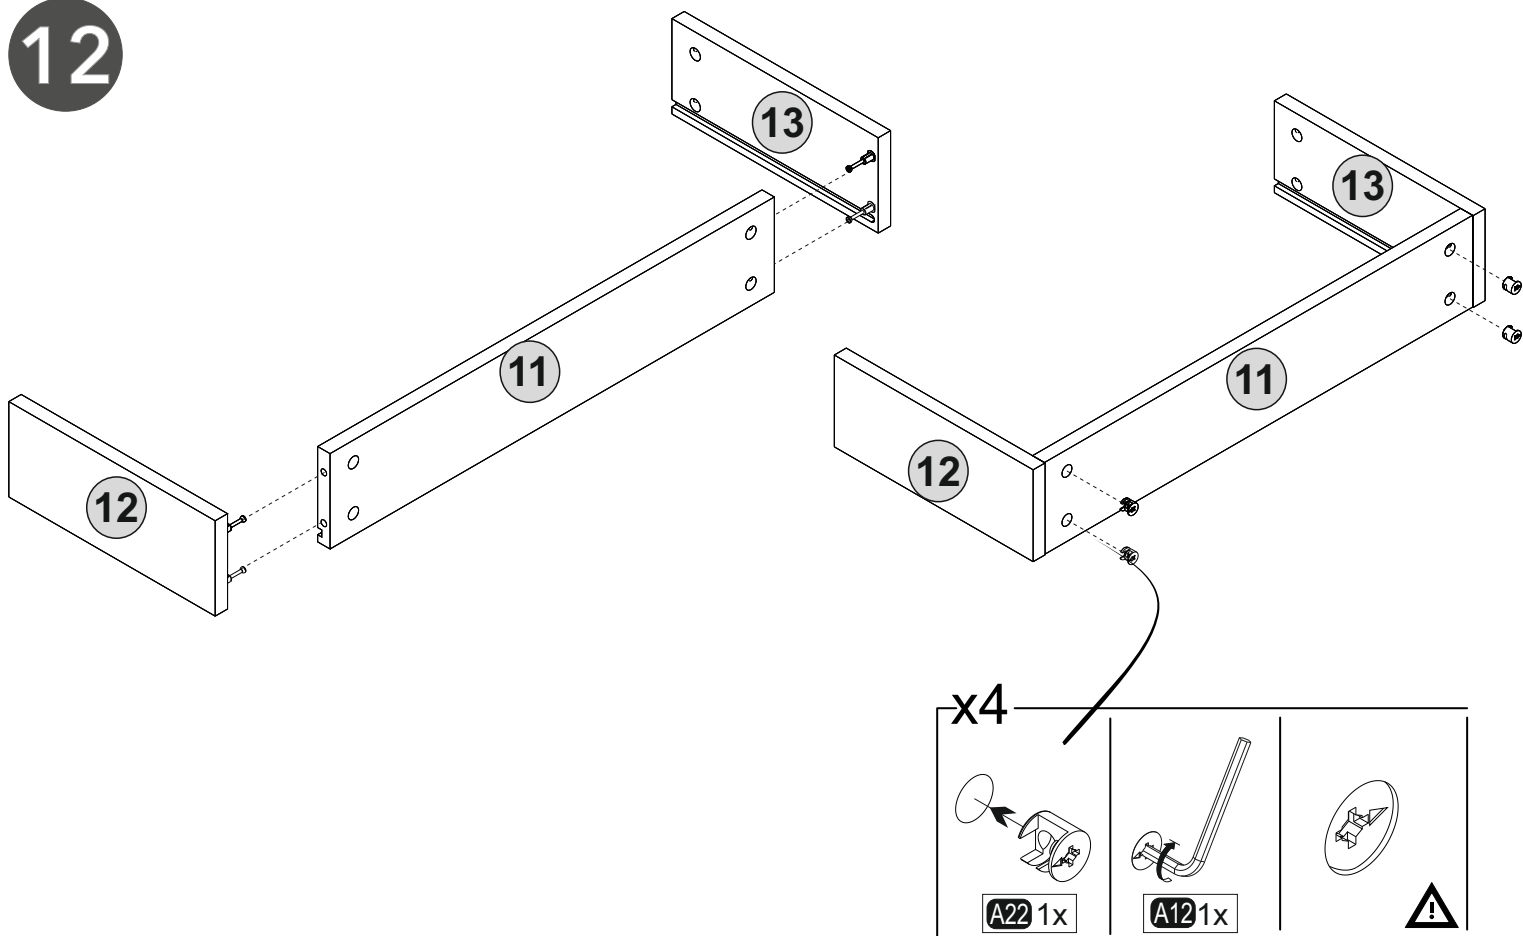







13

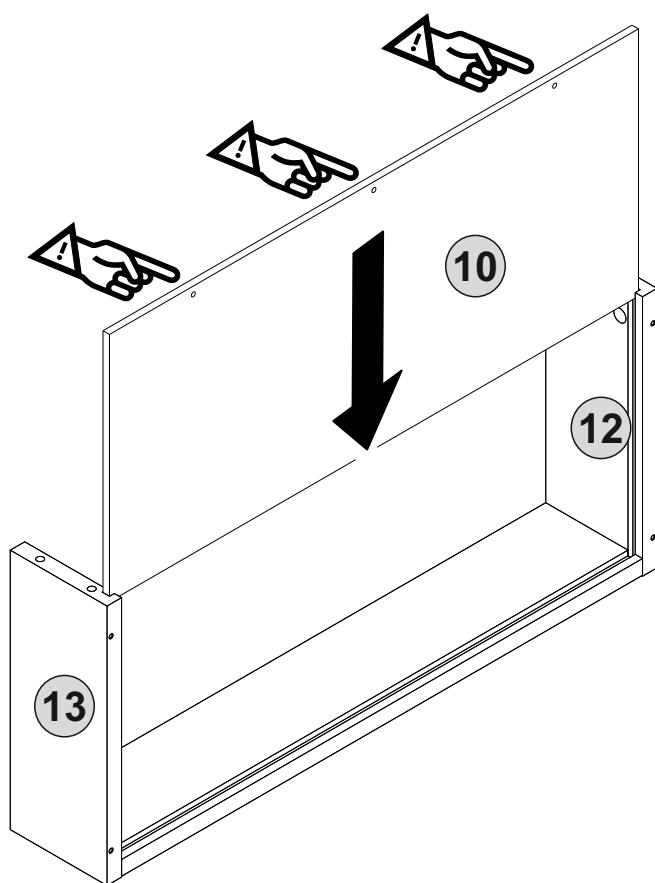




14

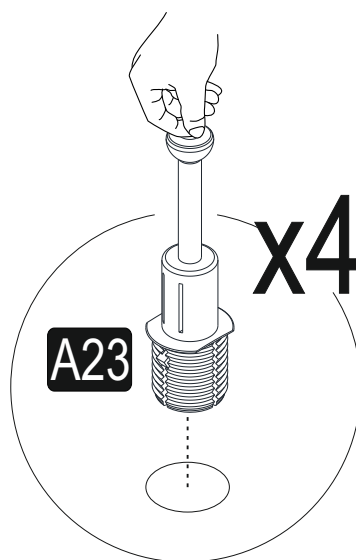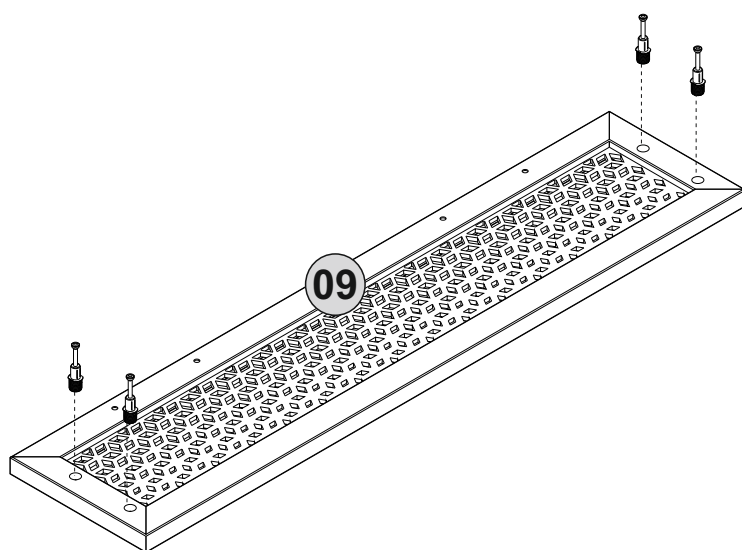


15

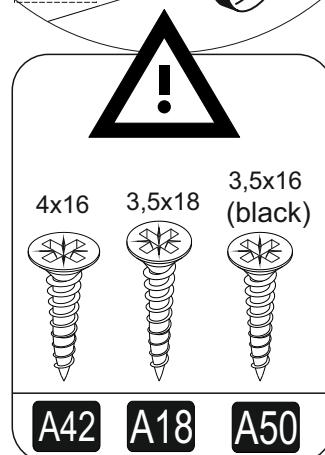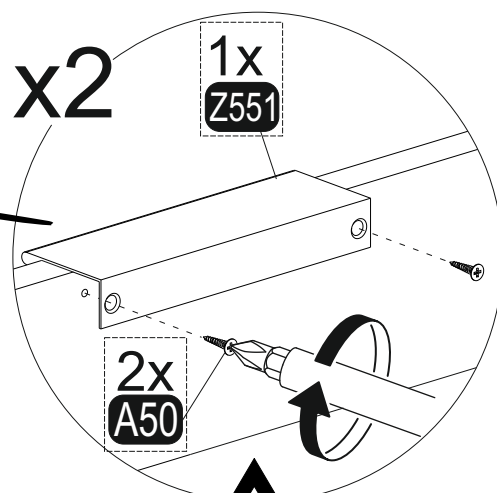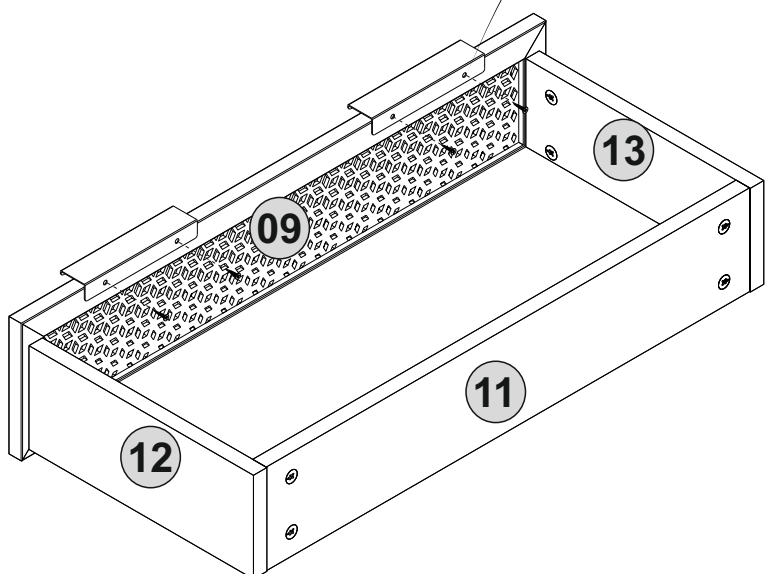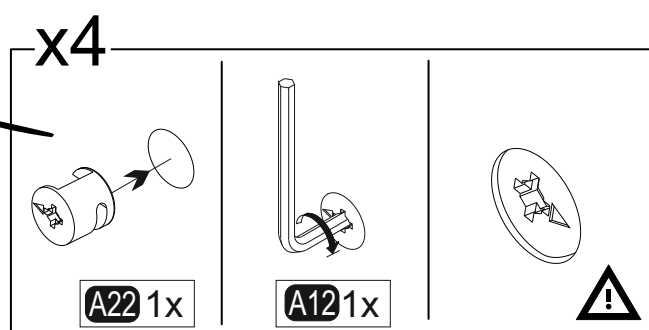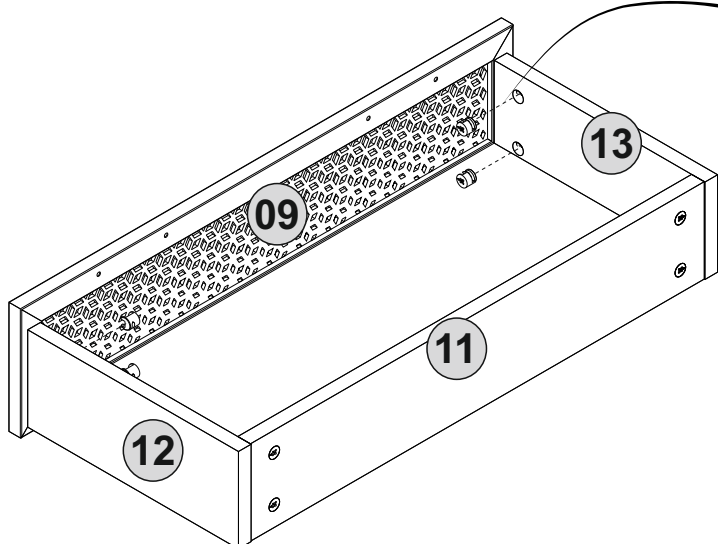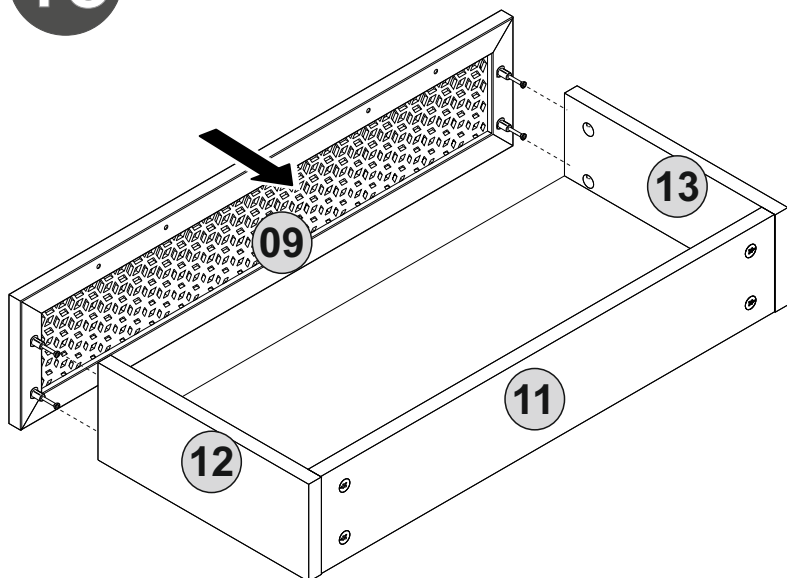



16

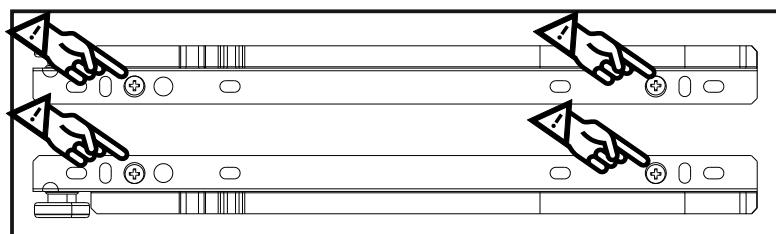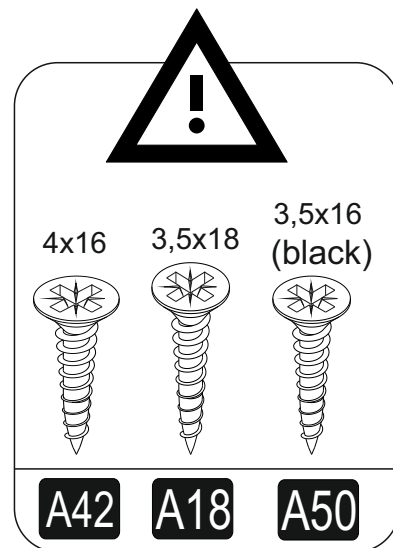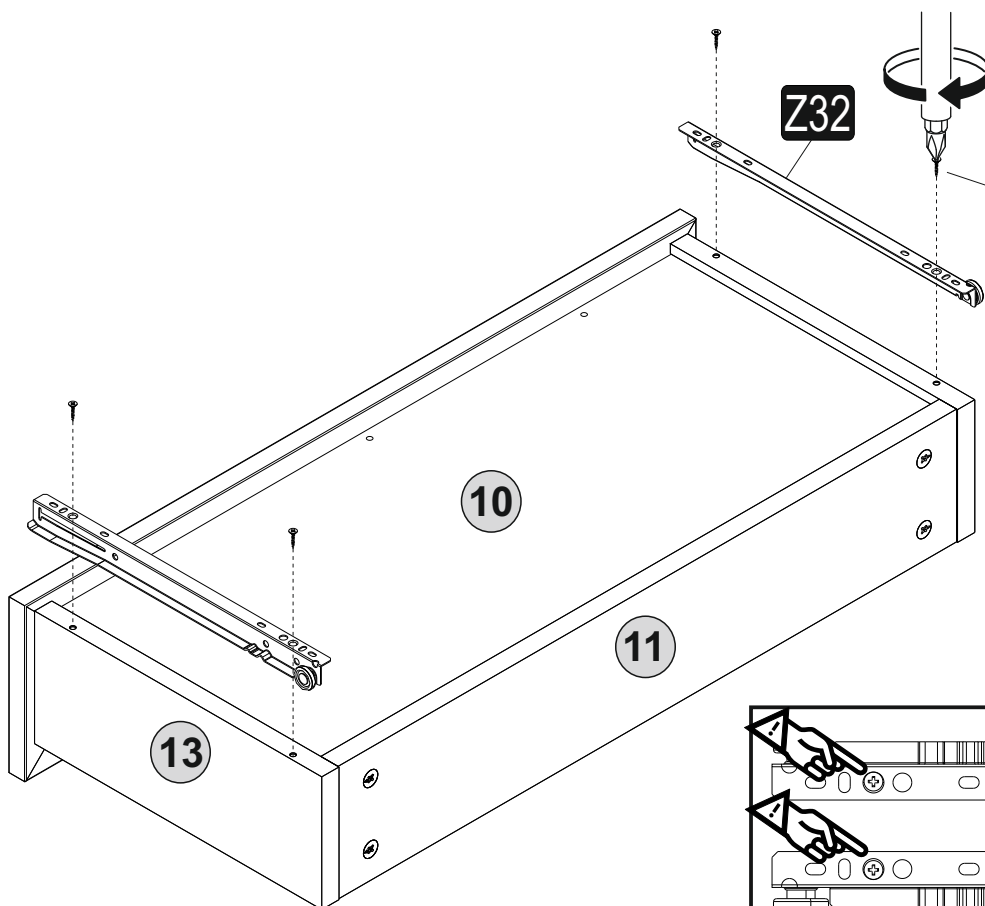


17

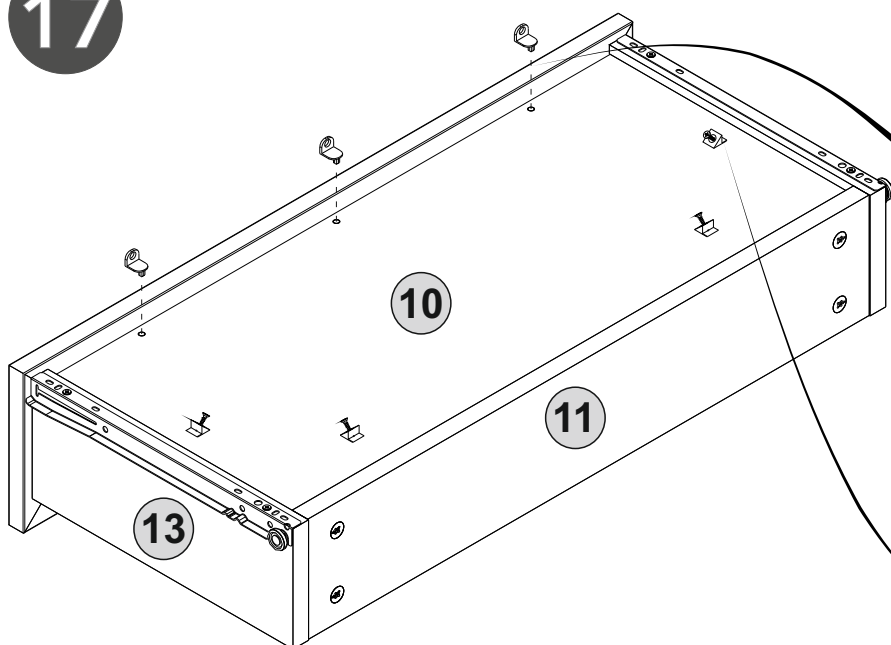






Place a round sticker A06 over each minifix on the drawer.






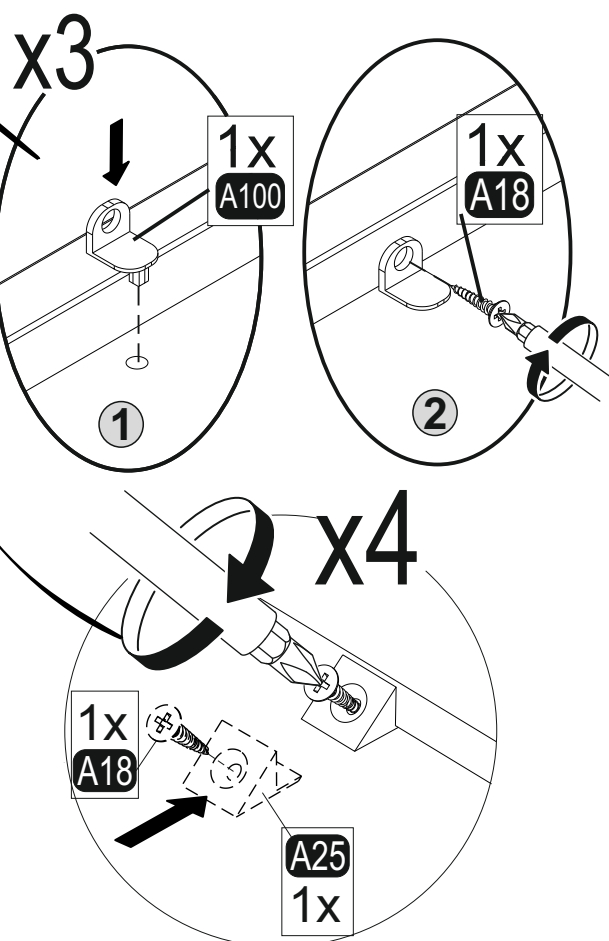
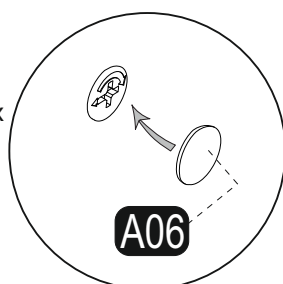




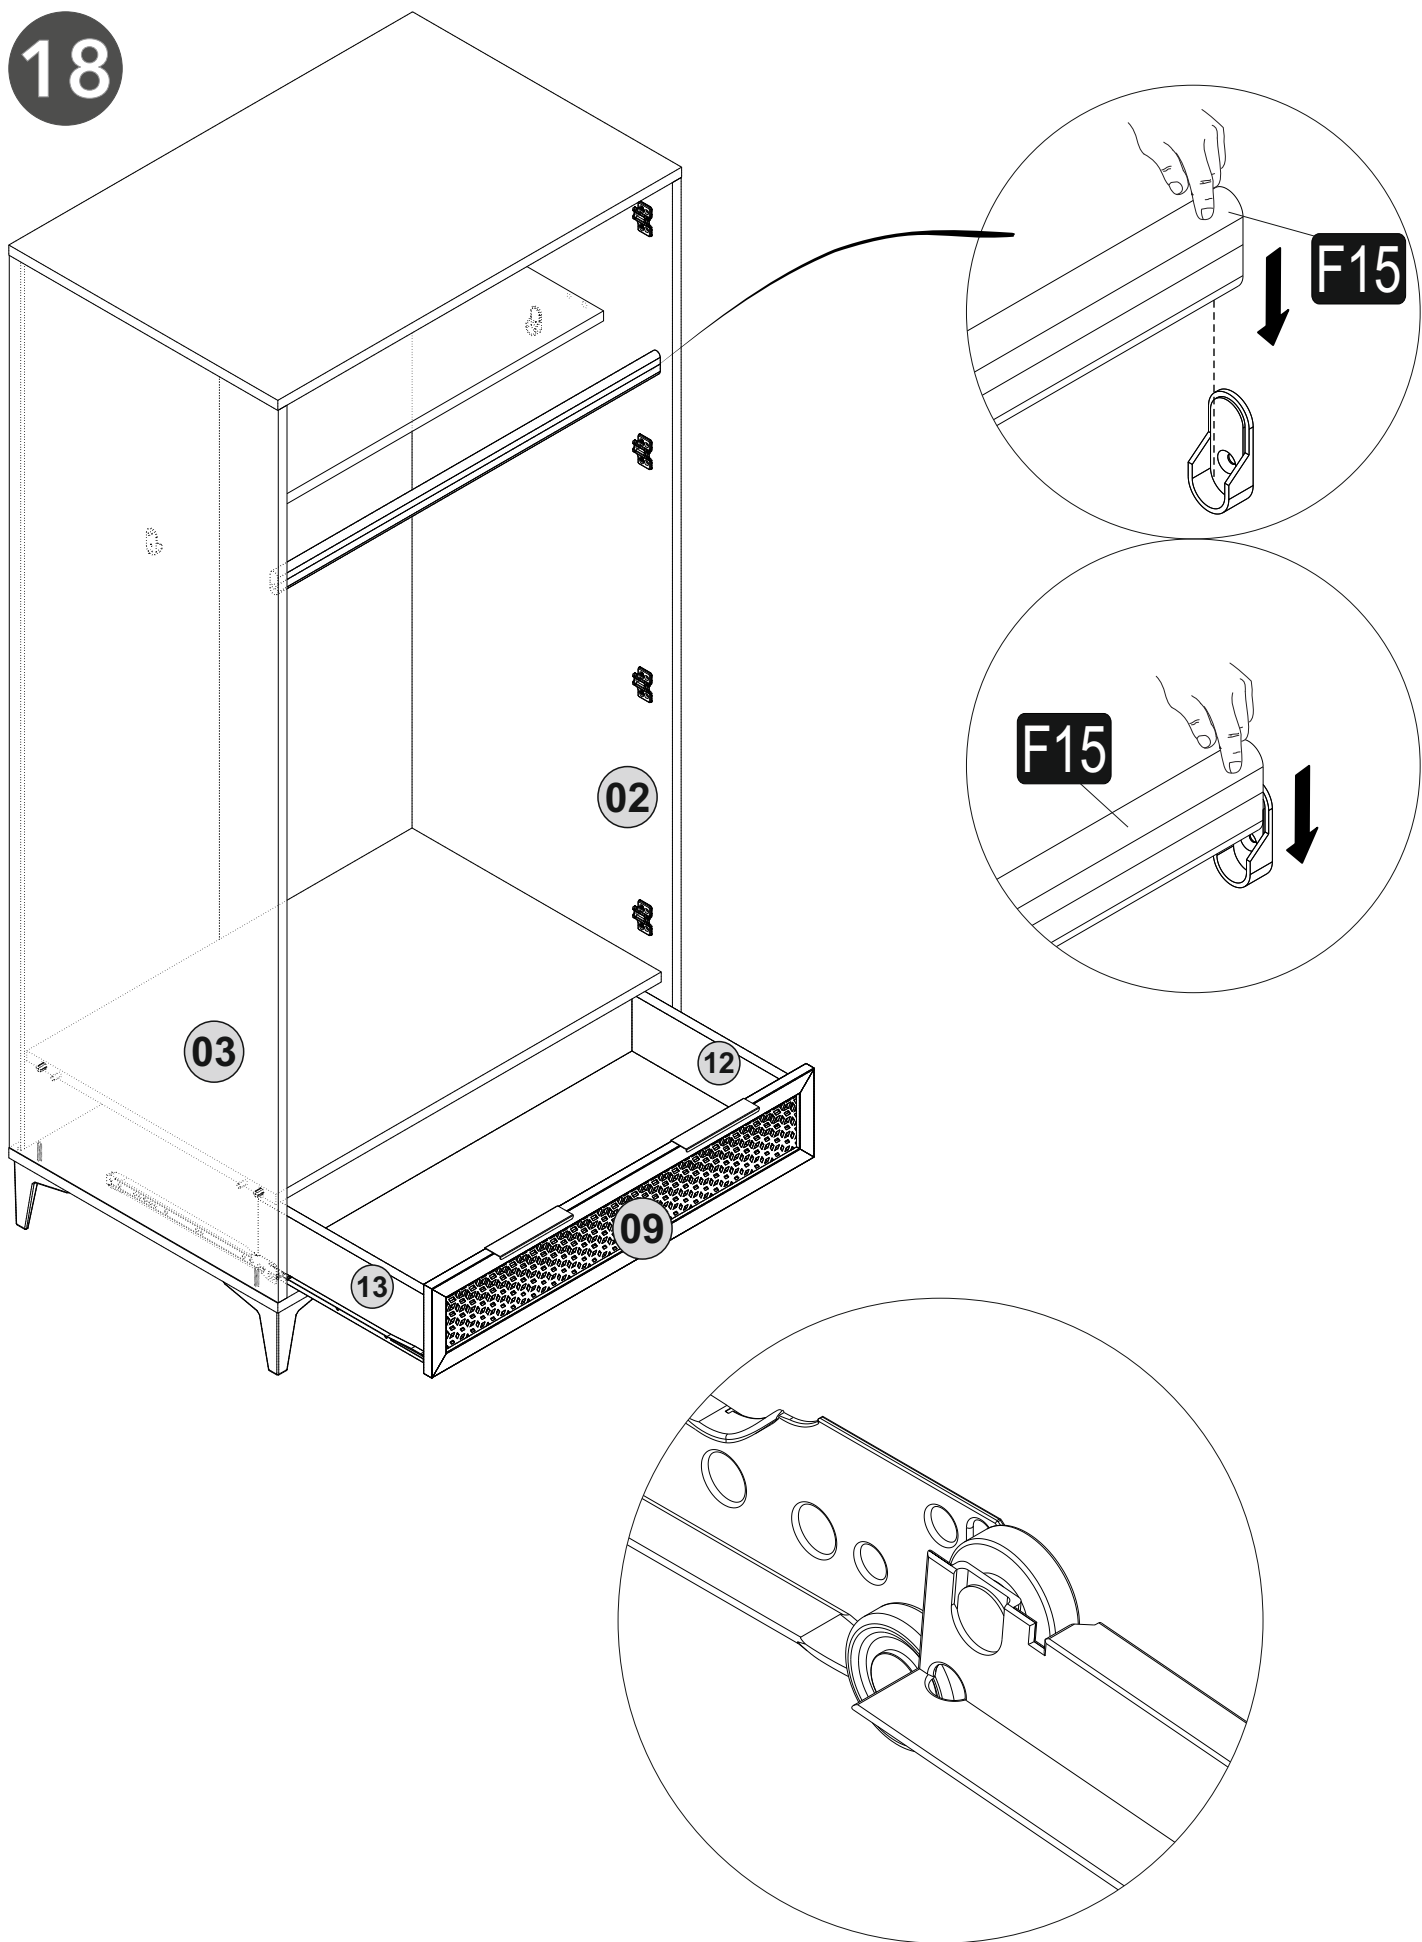



19 x2

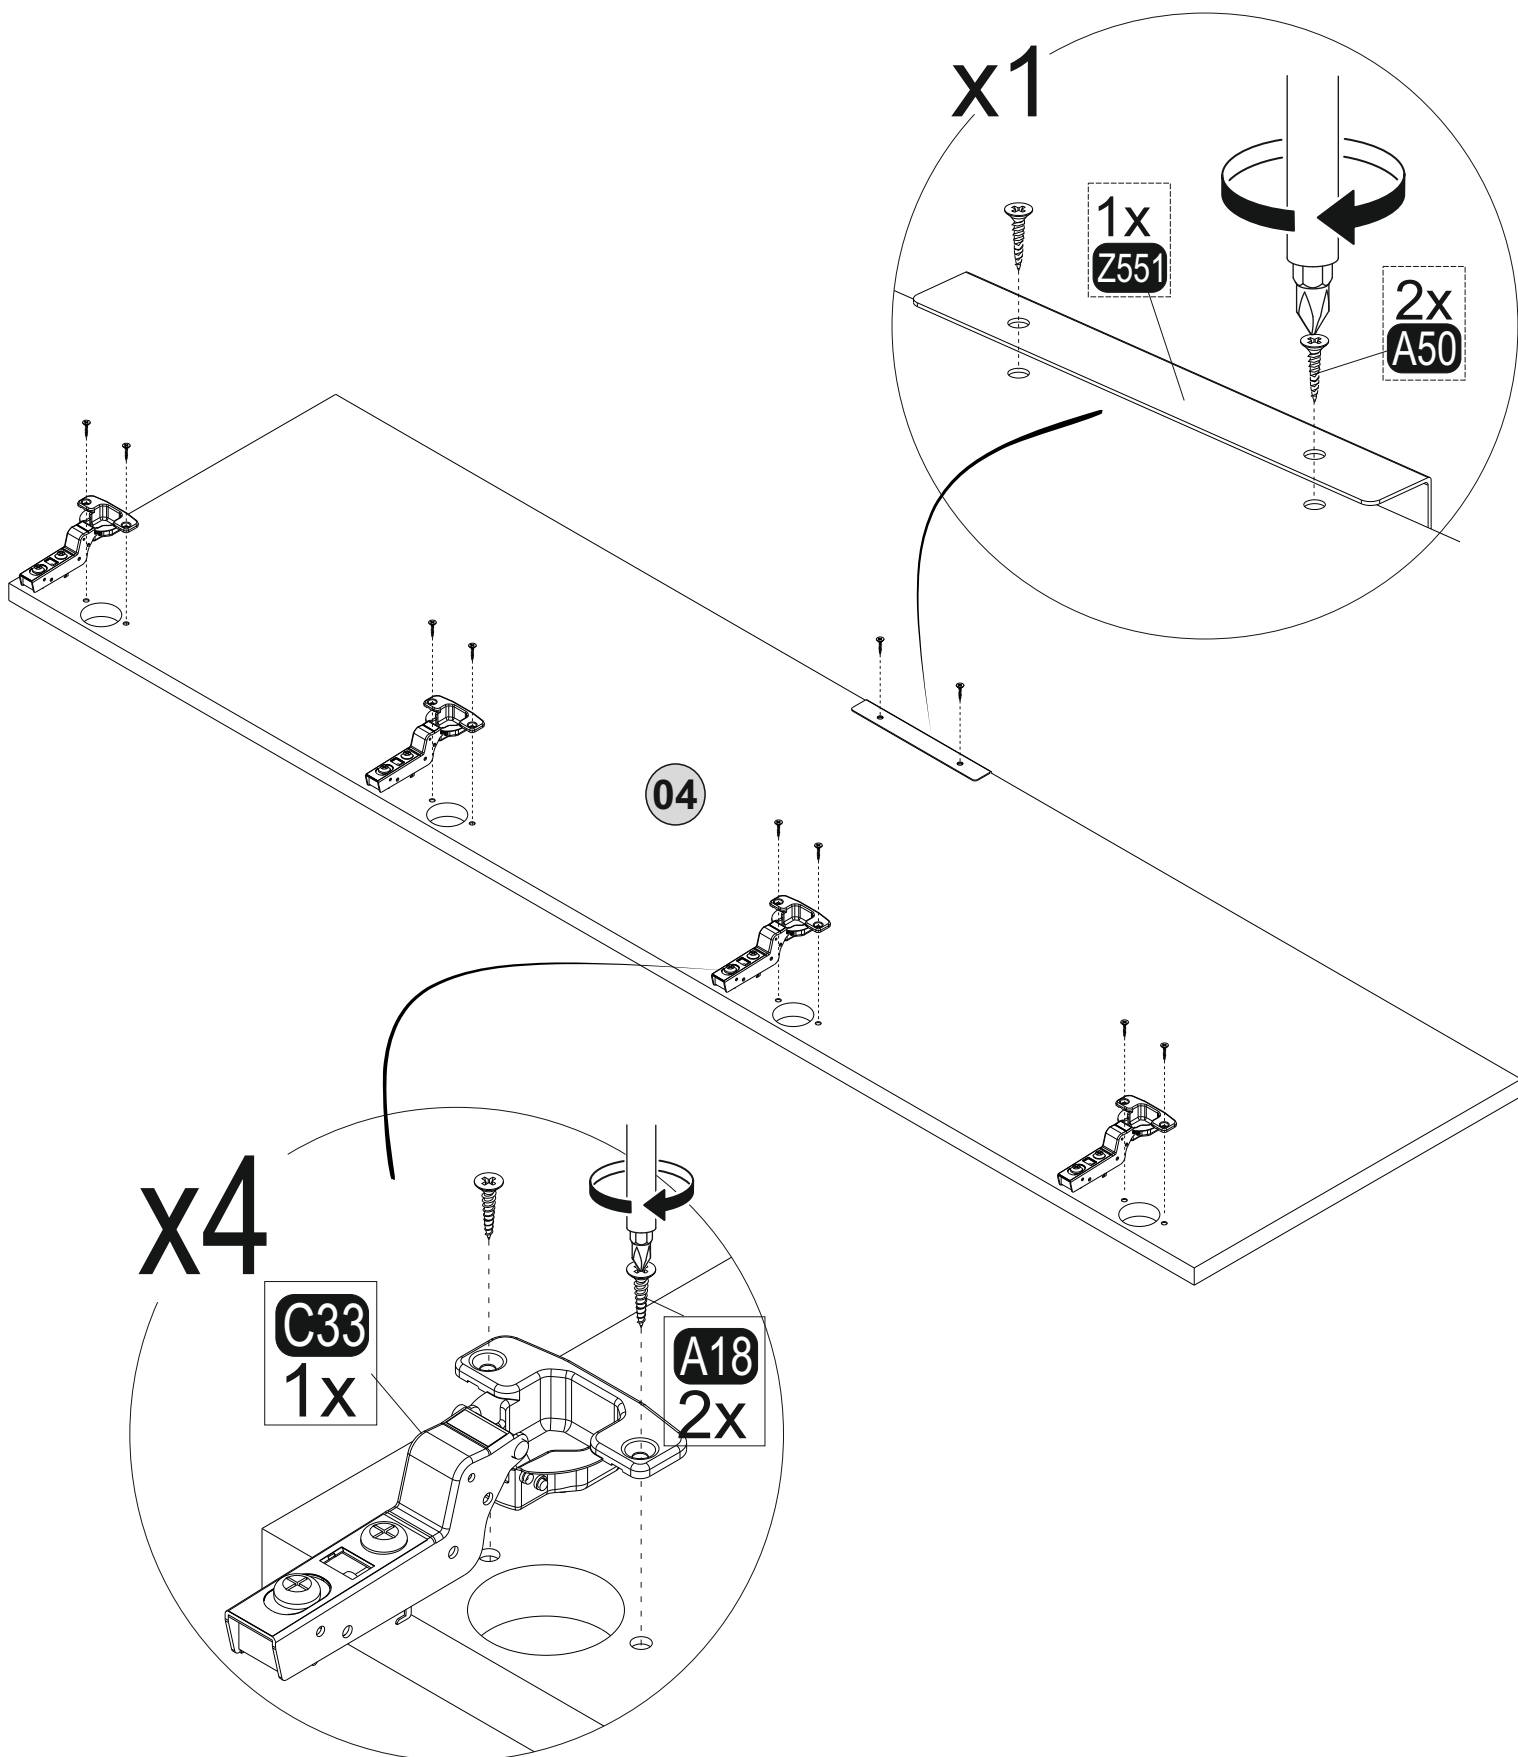

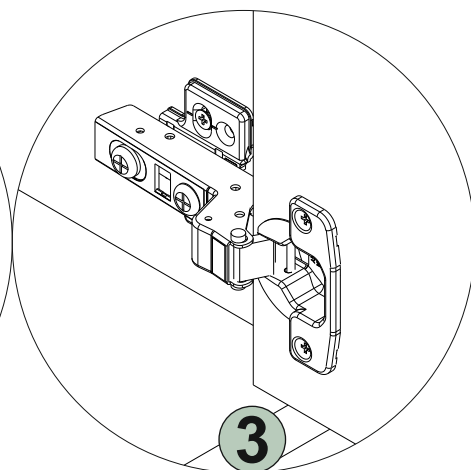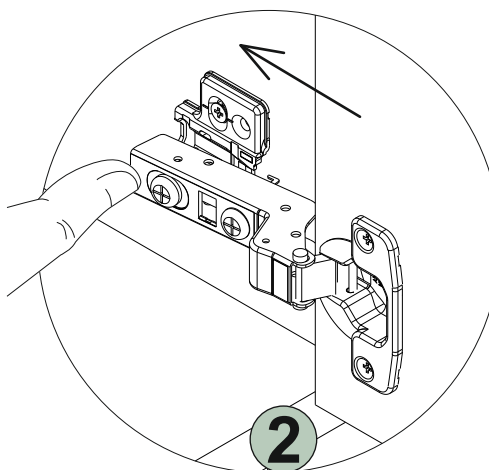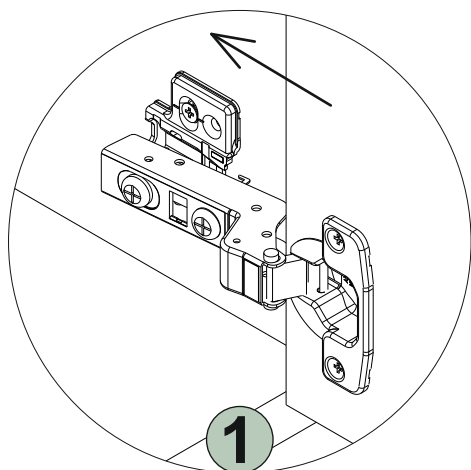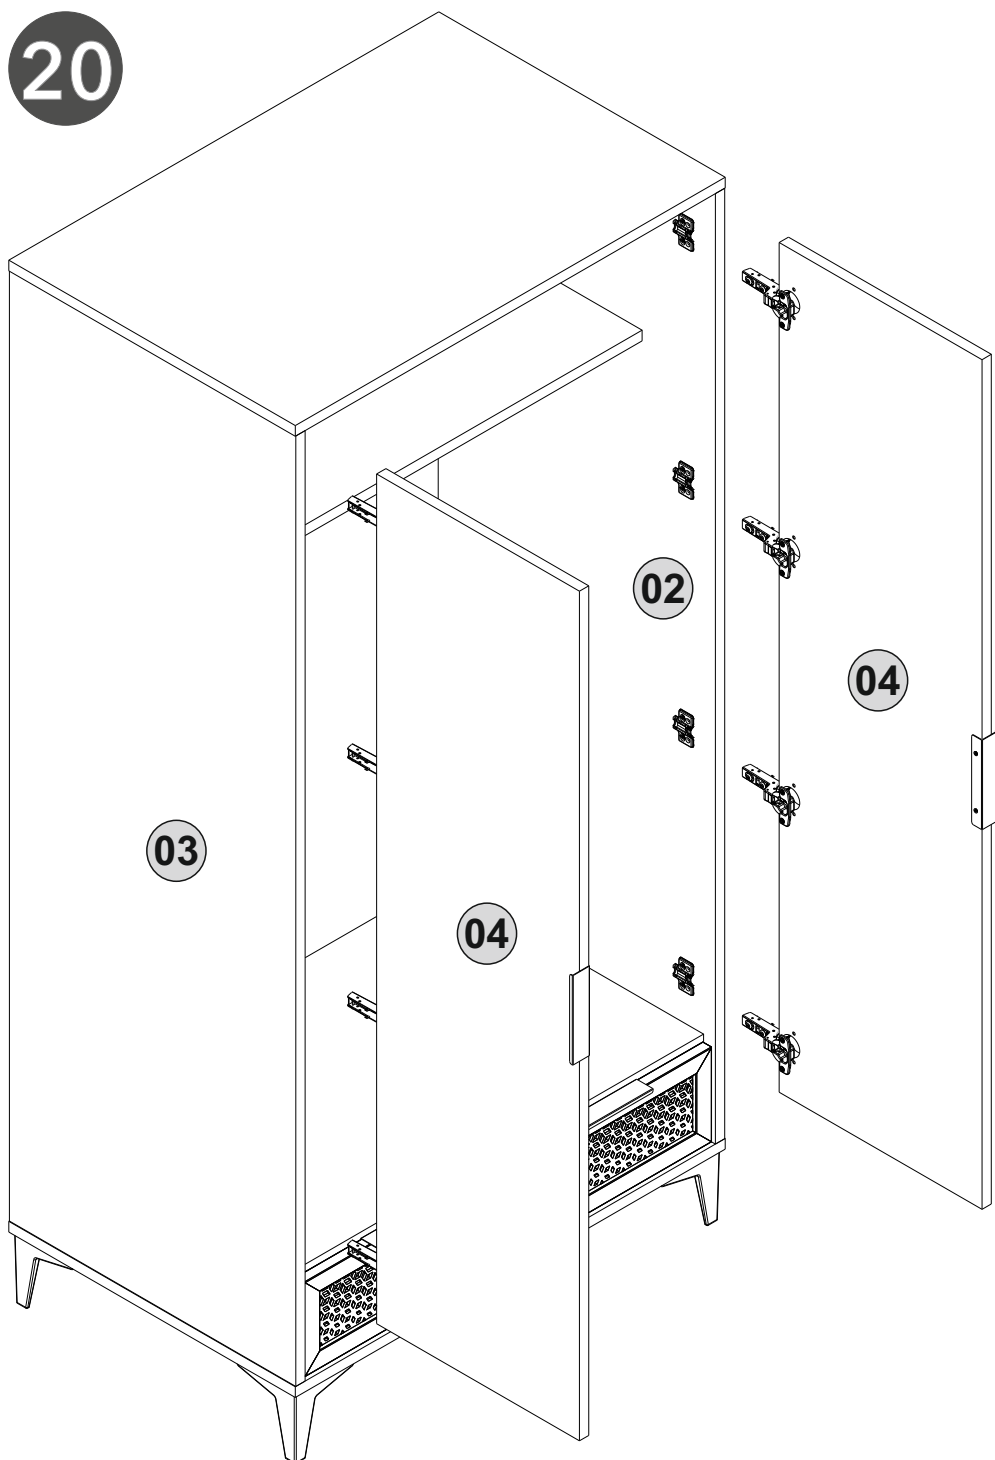


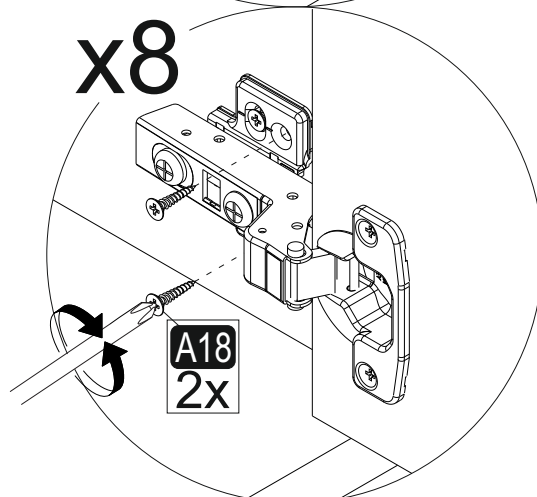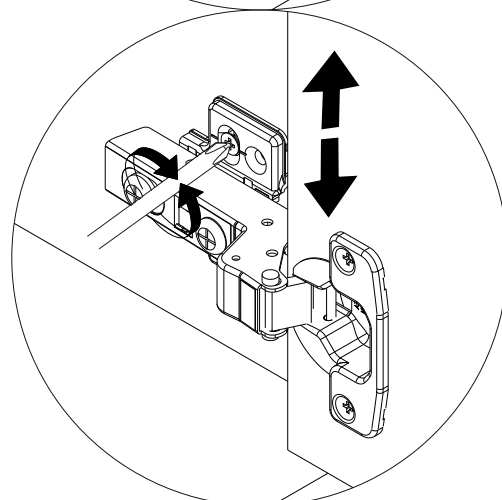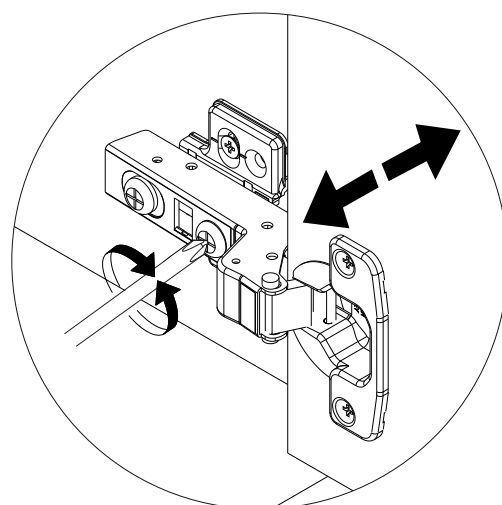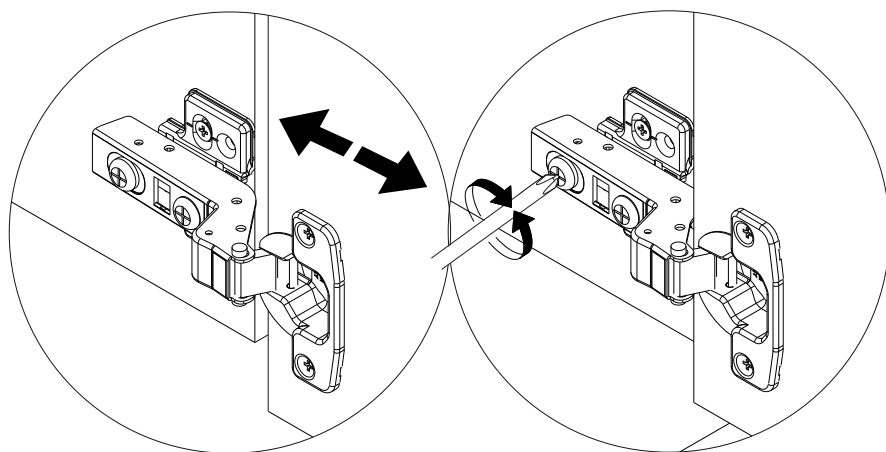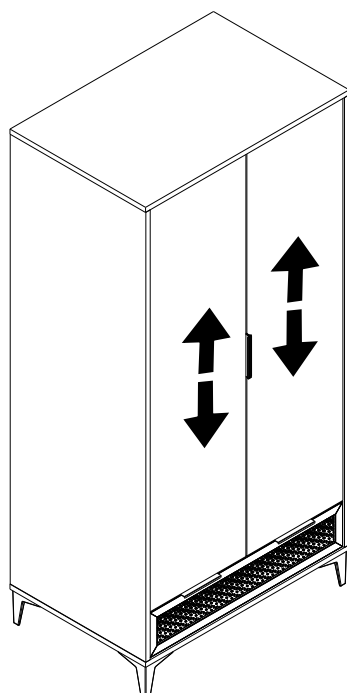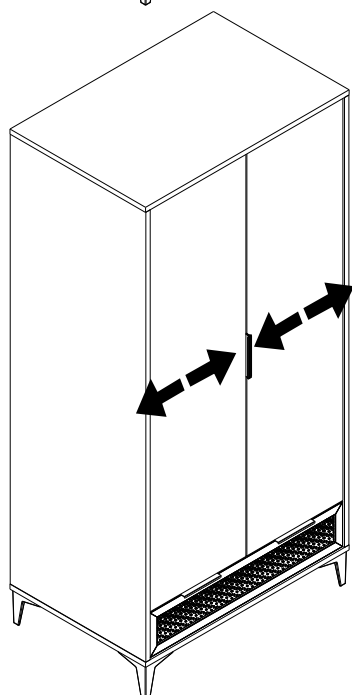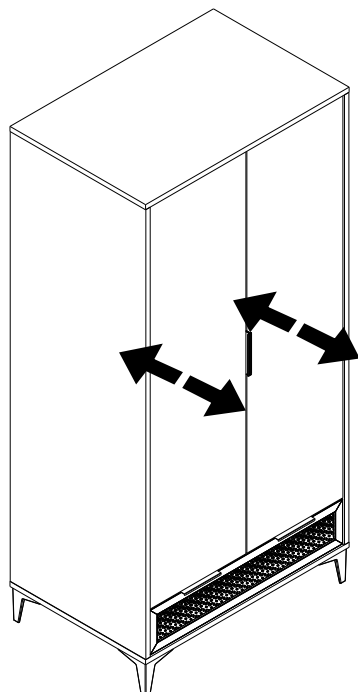

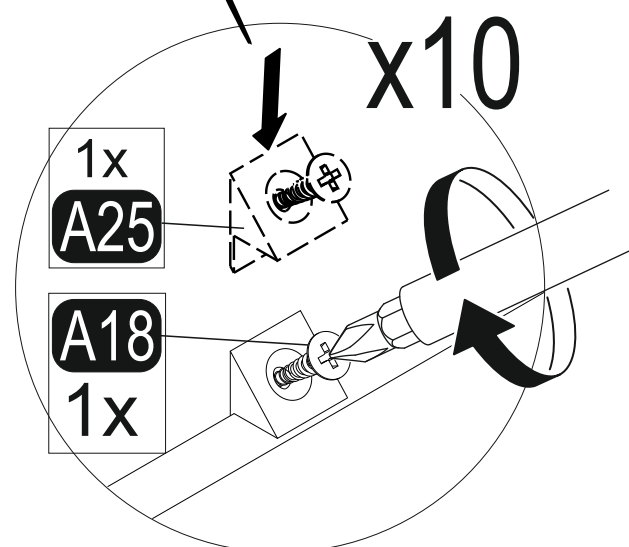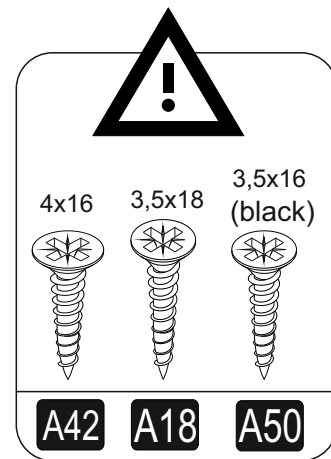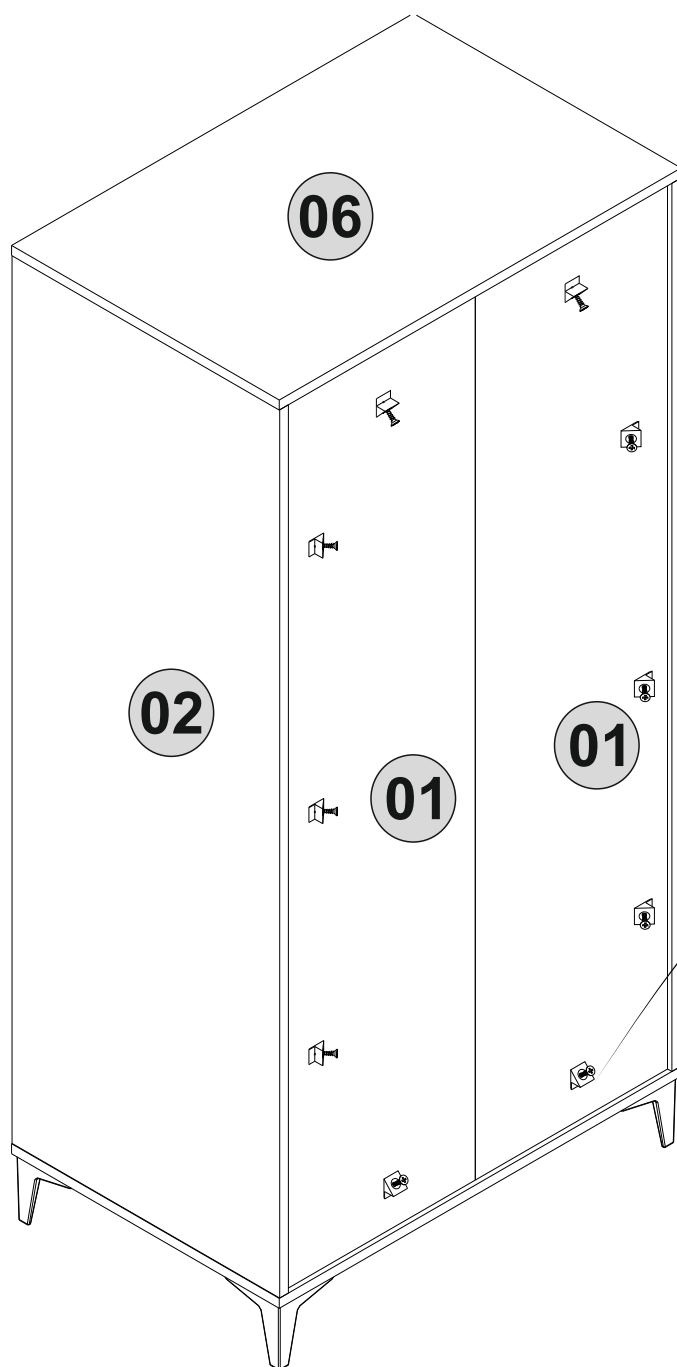

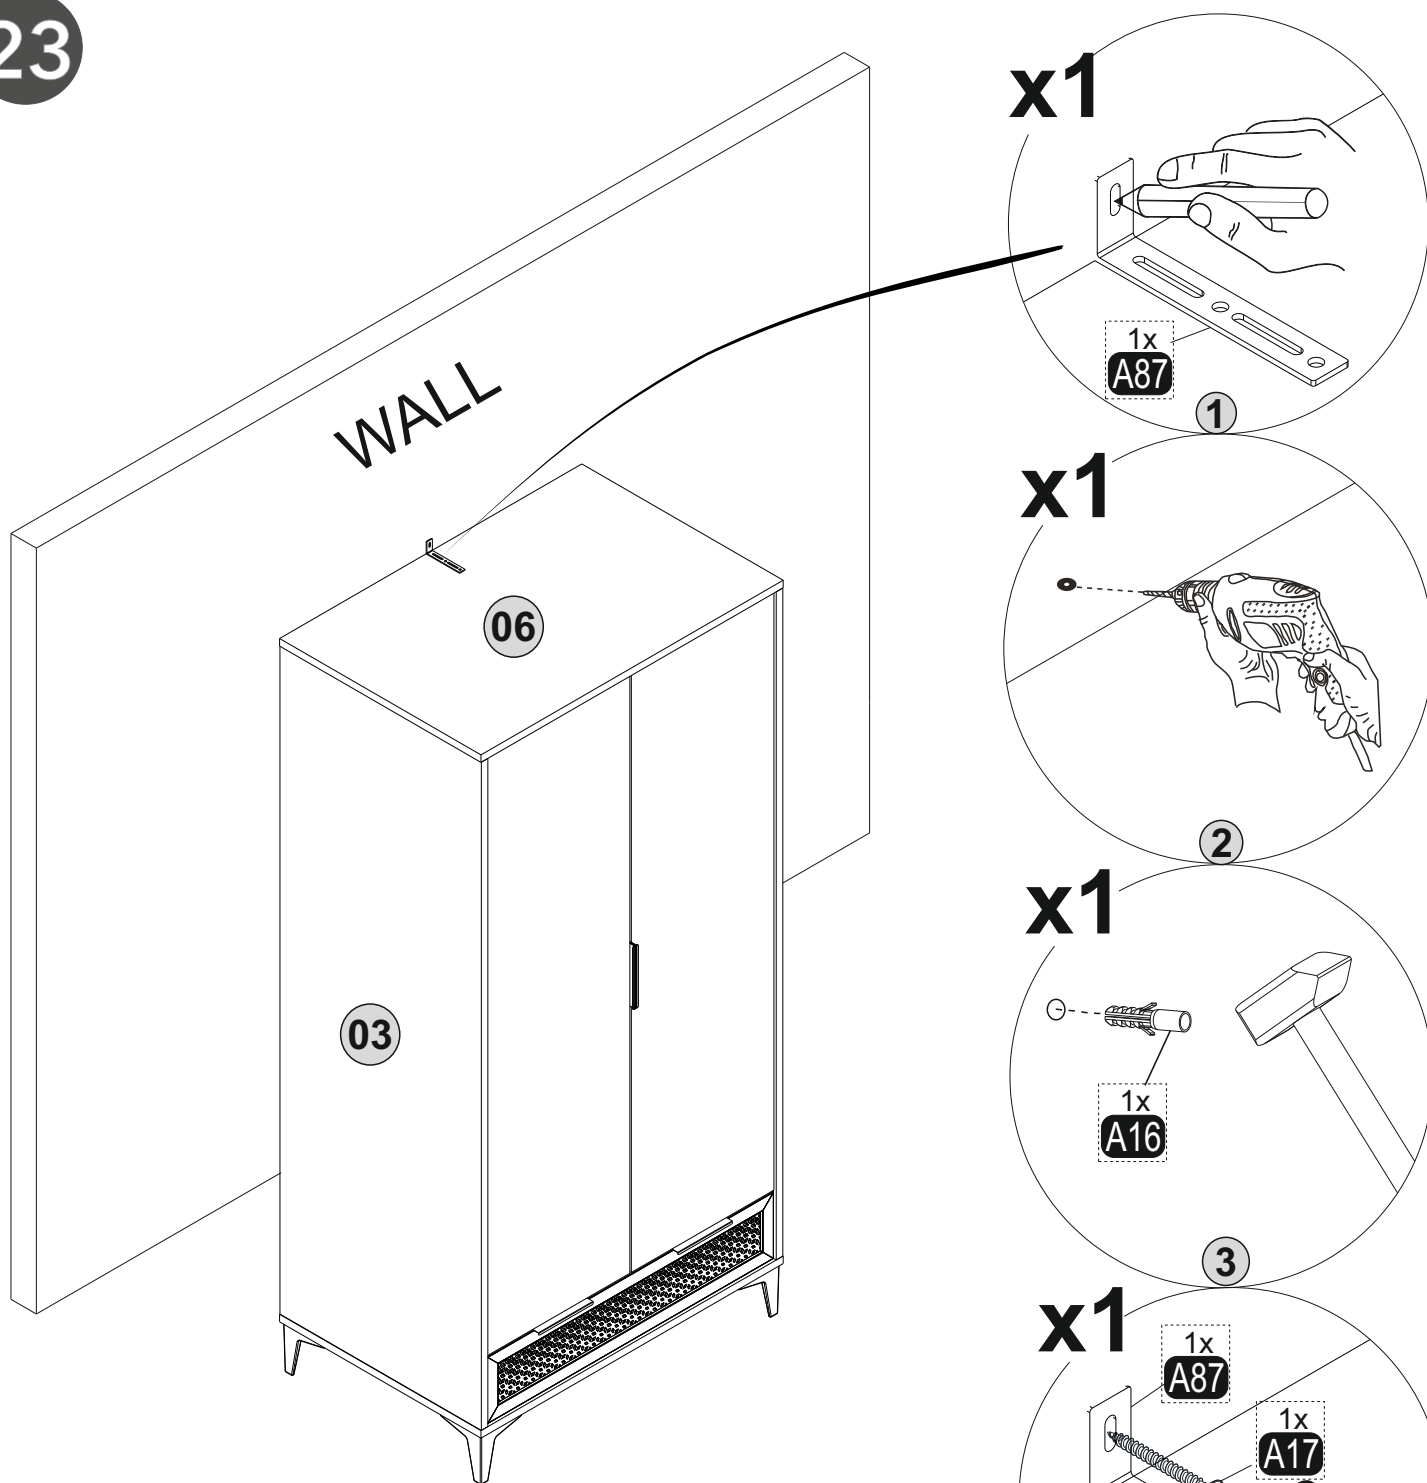

Keep instructions for future reference.

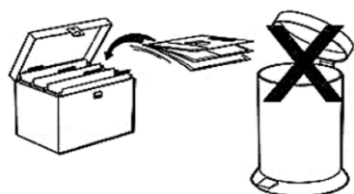

Supplied by:
 GFW THE FURNITURE WAREHOUSE.
 Waterside Distribution Centre.
 Waterside Business Park.
 Johnson Road.
 Lancashire.
 BB3 3RT
www.gfwlimited.co.uk