


EZRA 4 DRAWER CHEST

GFW
THE FURNITURE WAREHOUSE

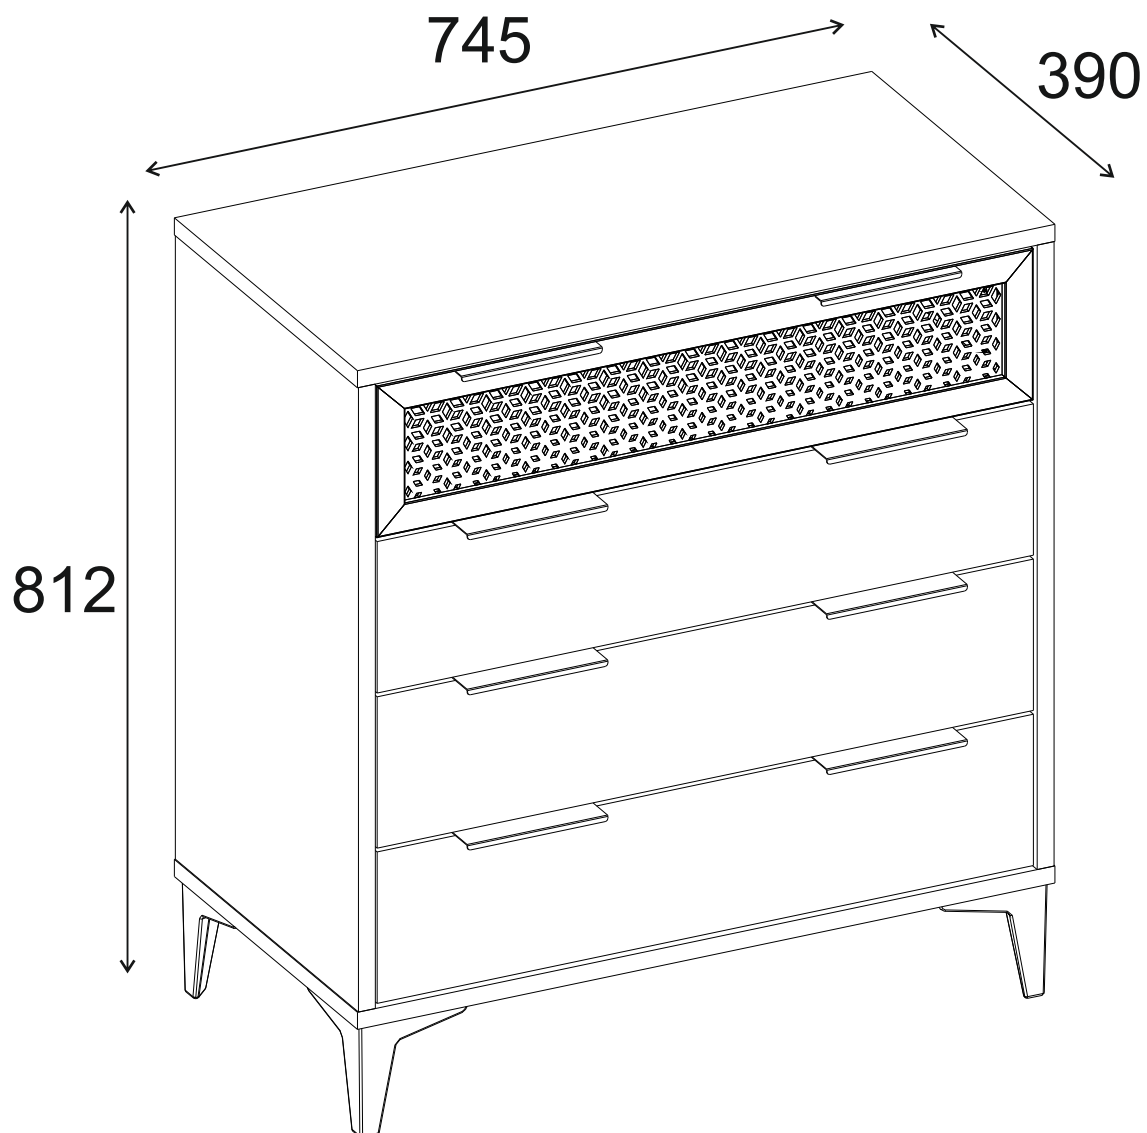

V1 04/25



Dear Customer,

Thank you for purchasing this product.
We design and produce our products for people to love and have fun with them as we do.
The product you bought was subjected to all sorts of tests and quality controls before sending it to you




- When you are ready to start, make sure that you have the right tools, and plenty of space and a clean, dry area for assembly.
- Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to prevent it from scratching.
- Check the pack and make sure you have all the parts listed.
- Ensure that this product is fully assembled as illustrated before use.
- Check all screws or bolts are tightened and inspect regularly
- Tools not included.
- Due to the size of this product we recommend that it is assembled in the room intended for use.



CARE INFORMATION

Never use scourers, abrasives or chemical cleaners.
To clean wipe with a sponge and warm soapy water. Do not use solvent based cleaners or detergents as they can bleach or damage the product.
Do not place hot or warm objects on the surface as these may damage the product.
Always use a suitable heat resistant mat.

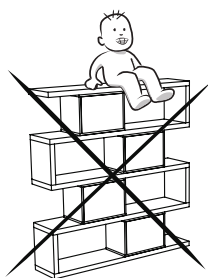






WARNINGS

Keep small parts out of reach of children.
Make sure the legs remain in contact with the floor.
This product should only be used on a firm and level floor.
Do not sit or stand on this product.



DO NOT use power tools to construct this product.
DO NOT over-tighten screws or bolts.
DO NOT use this product if parts are missing, damaged or worn.


We recommend the use of the fixings provided for safety reasons.
N.B If in doubt please consult a qualified trades person. Warning.
Always ensure the area to be drilled is free from hidden electrical wires, water and gas pipes

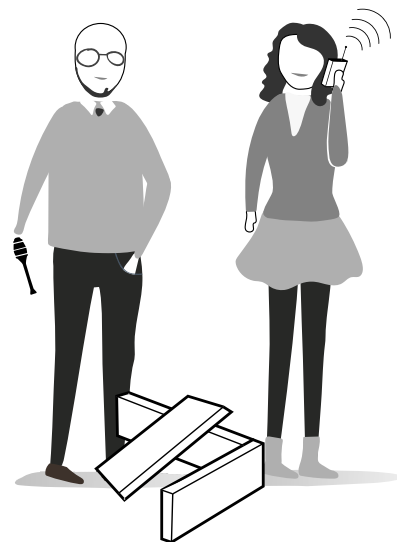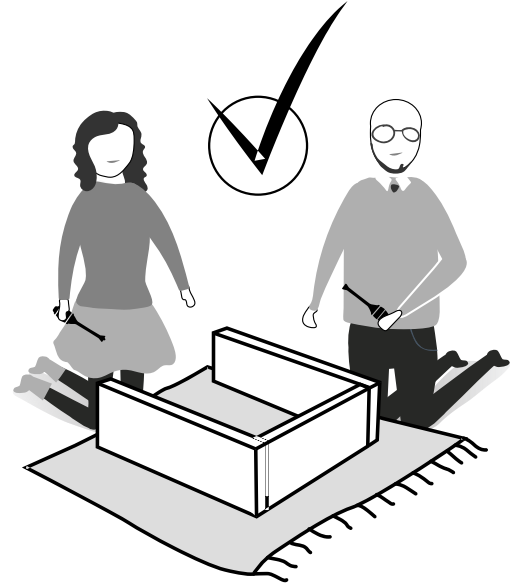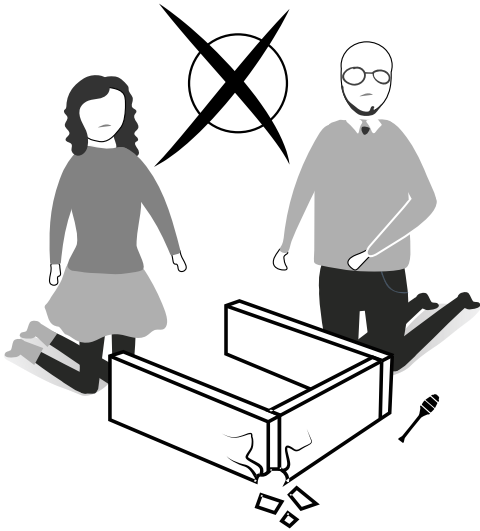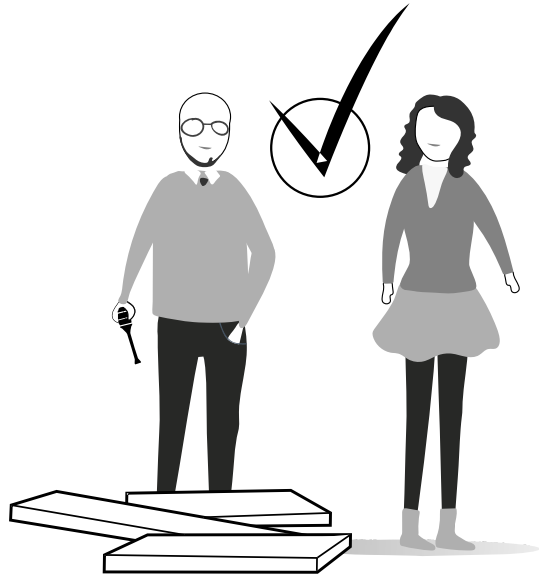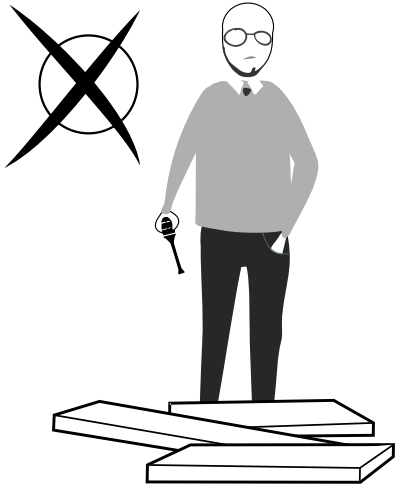


ATTENTION !!

Minifix is the main connection material used in our products.
Before starting assembly, please check the drawings below.


A04

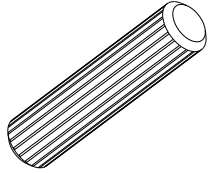


A23

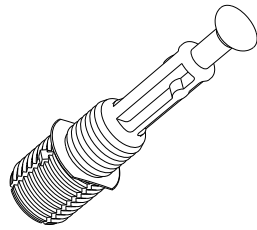


A22

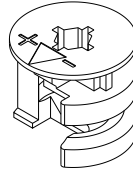


A12

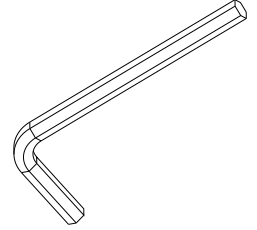


1

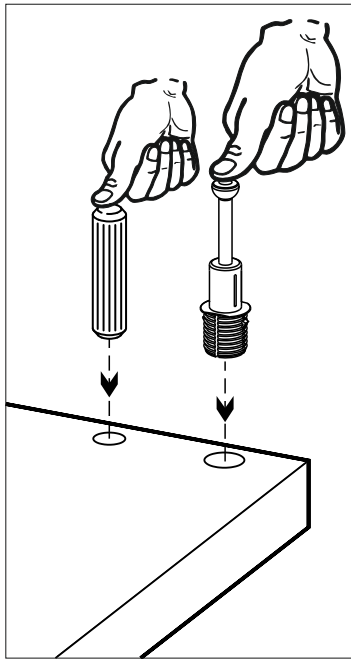


2

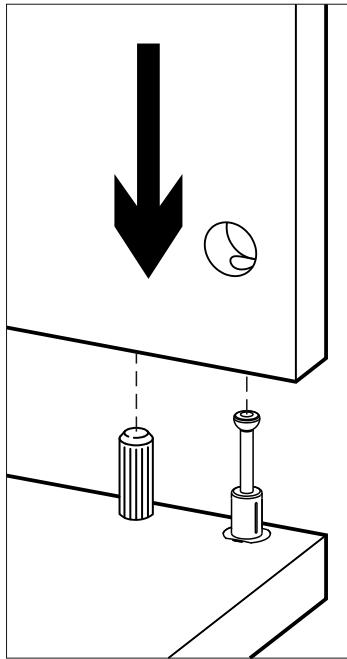

3

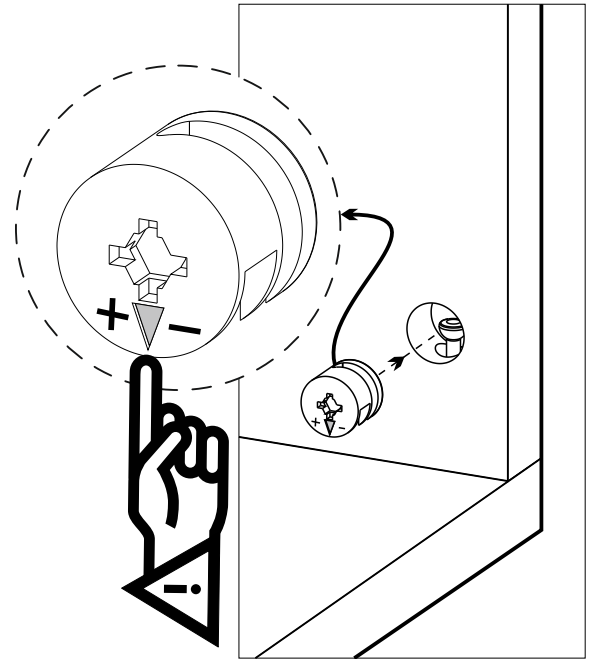

4

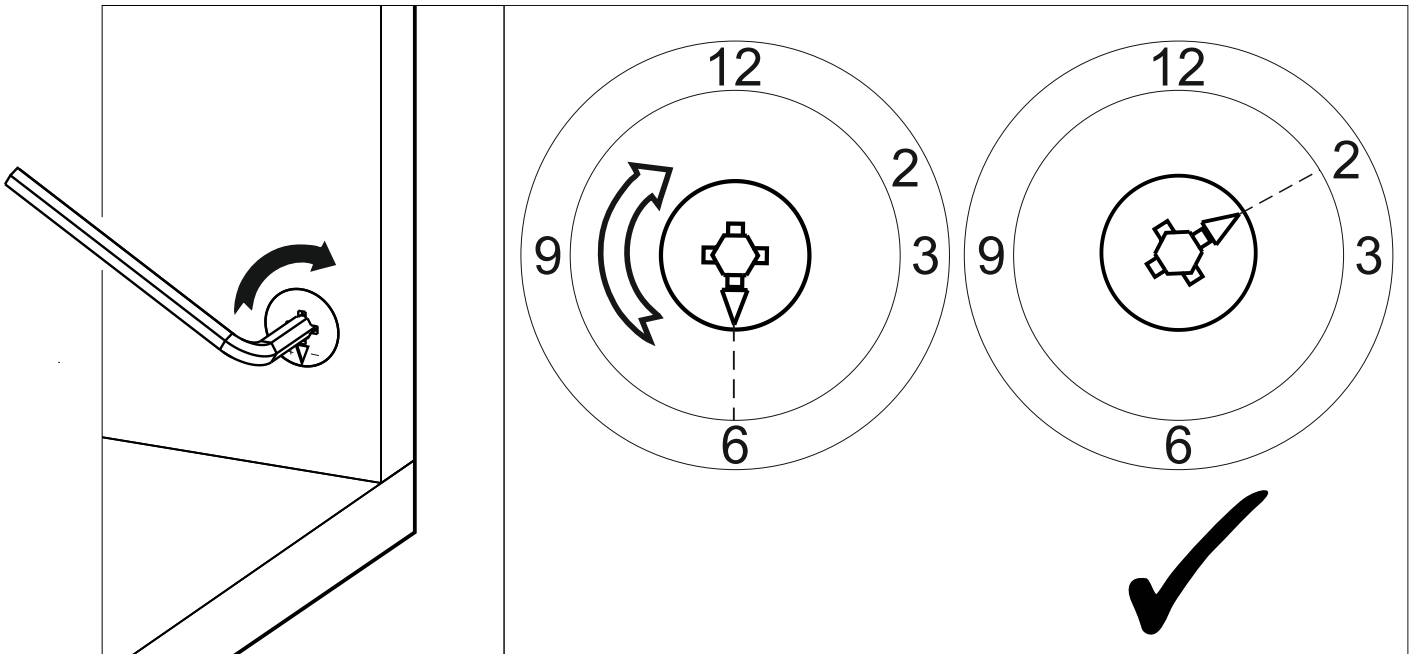

ATTENTION !!


Our products are screw system. Before you proceed with installation try to understand the following




A13




1

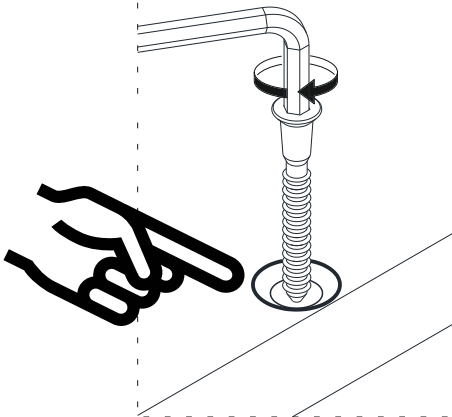


1

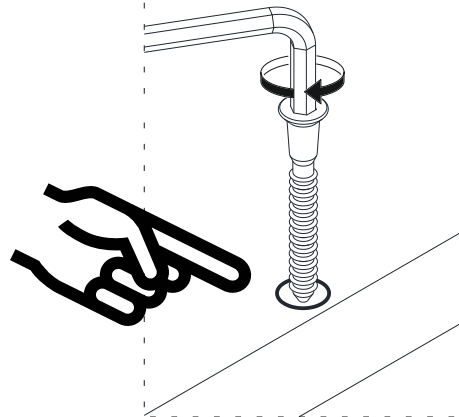


2

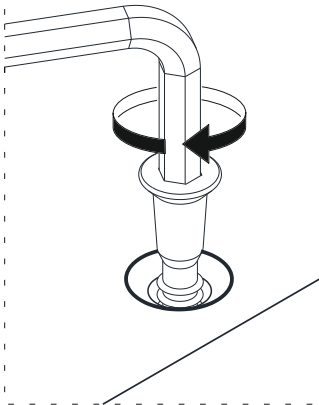


2

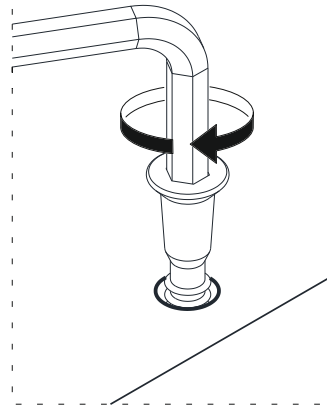


3

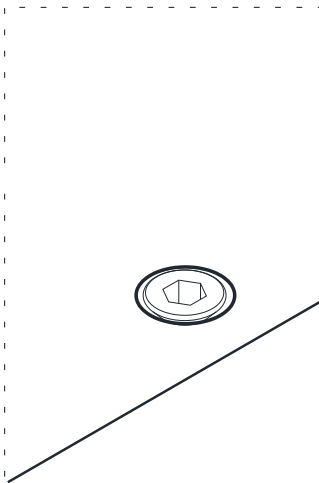

3

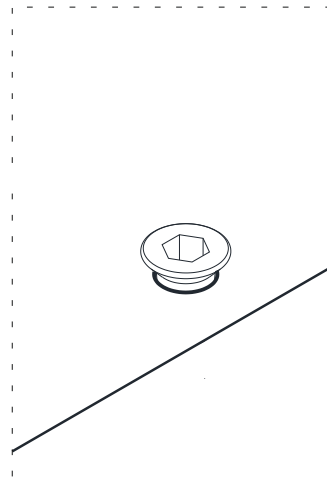












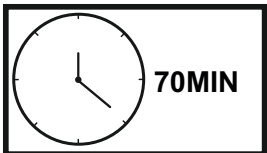



70MIN

Follow the installation steps in the order as shown.
Position the parts as shown in the installation guide steps.




HARDWARE LIST

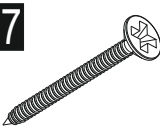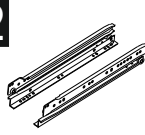A04  Ø8x30 4x	A06  18mm 40x	A12  Allen 1x	A13  50mm 4x	A16  DbØ8 1x
A17  4x50 1x	A18  3,5x18 67x	A22  Minifix k18 36x	A23  Minifix M10 36x	A25  ARK.PL 30x
A42  4x16 4x	A50  3,5x16 (Black) 16x	A69  P.D. 8x	A87  15x90x30 1x	A100  PDMRP 3x
A132.a  120 (black)mm 4x	A132.b  120 (black)mm 4x	B14  20 (black)mm 8x	Z32  Krt300 4x	Z551  K128mm (black) 8x

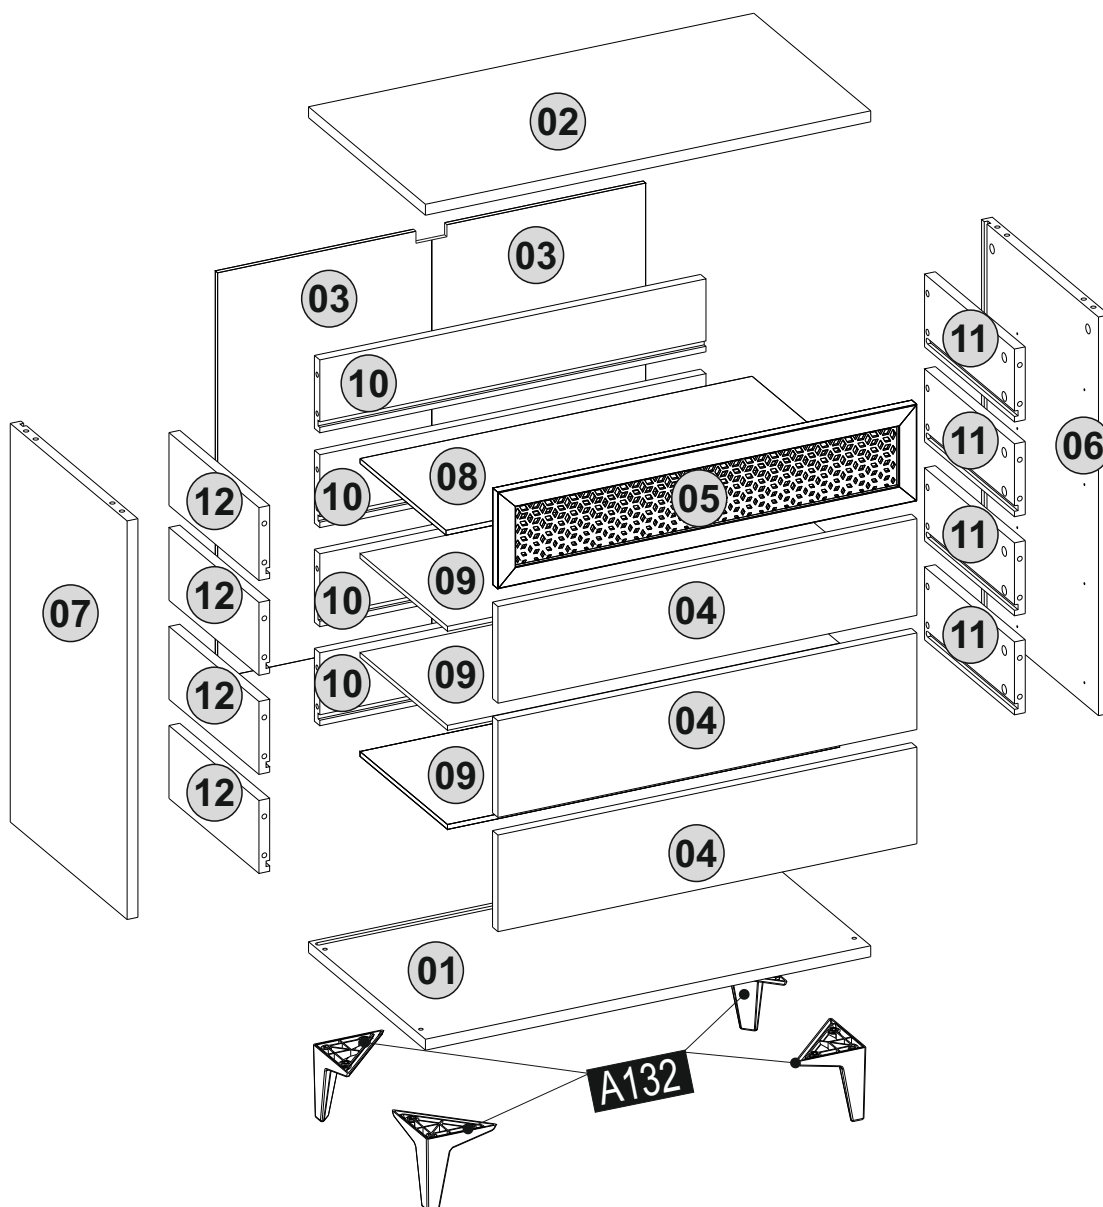

1

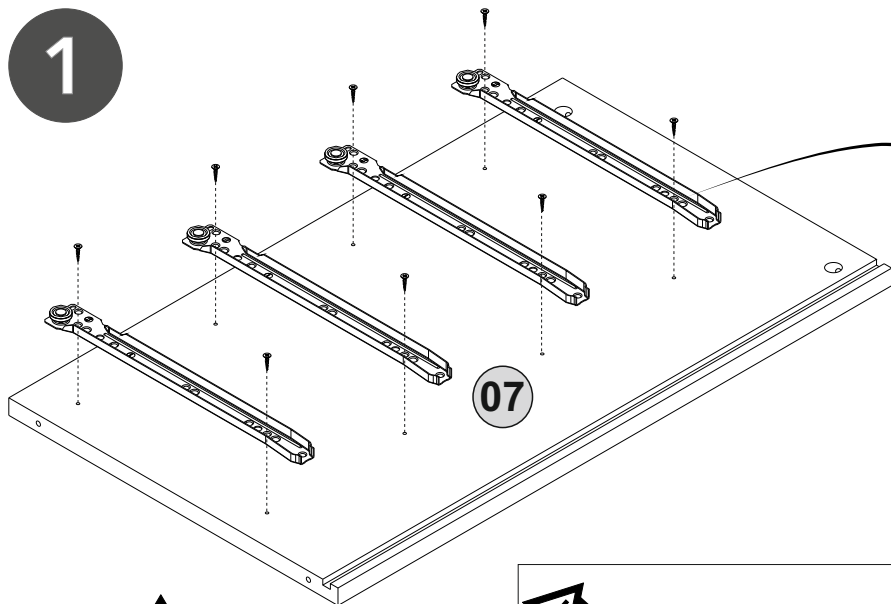


x4

Z32

A18
2x




07

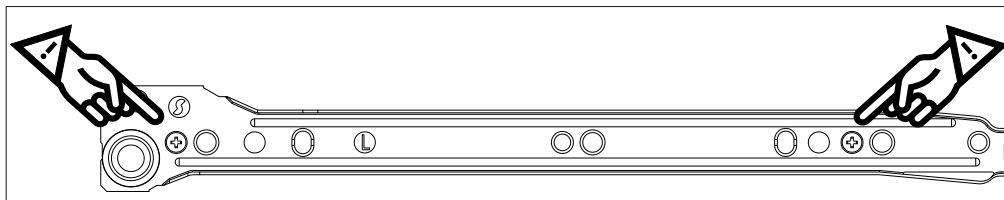

4x16

3,5x18

3,5x16
(black)




A42

A18

A50

2

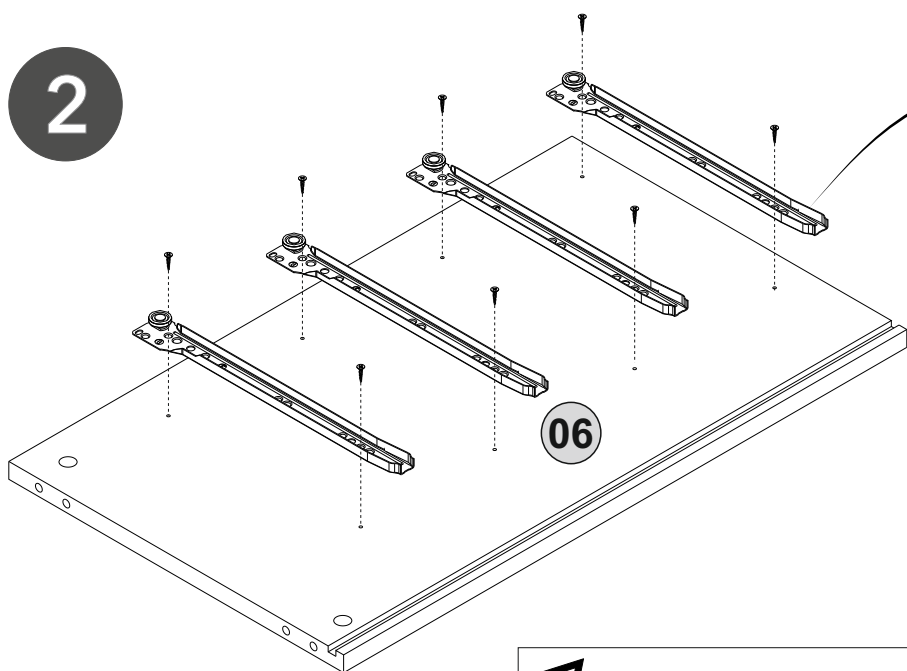


x4


Z32

A18
2x


06

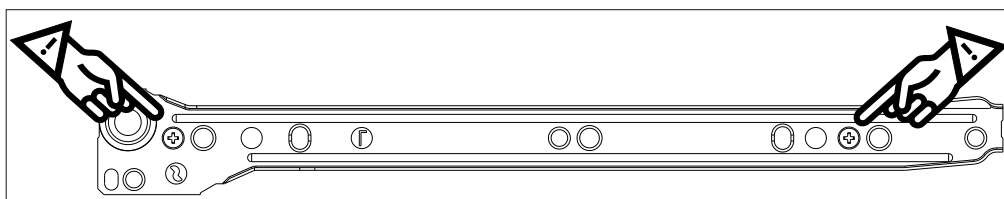


3

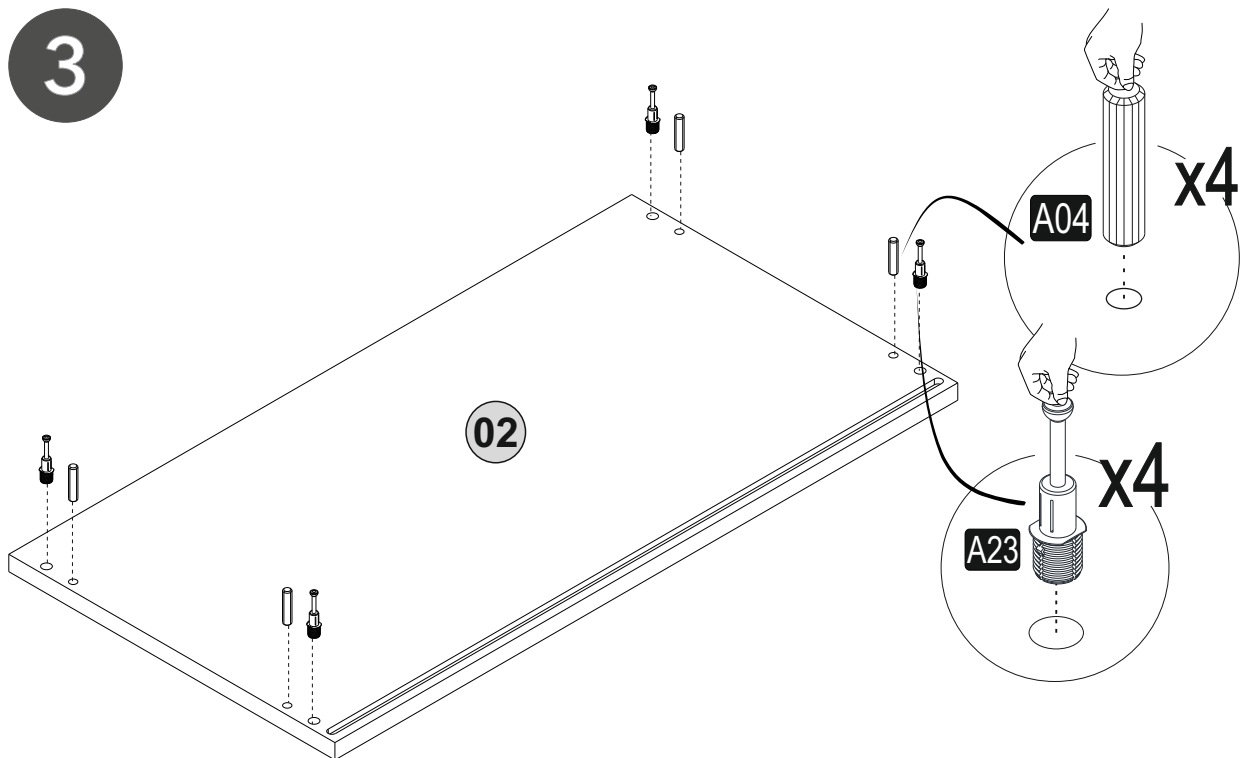


4

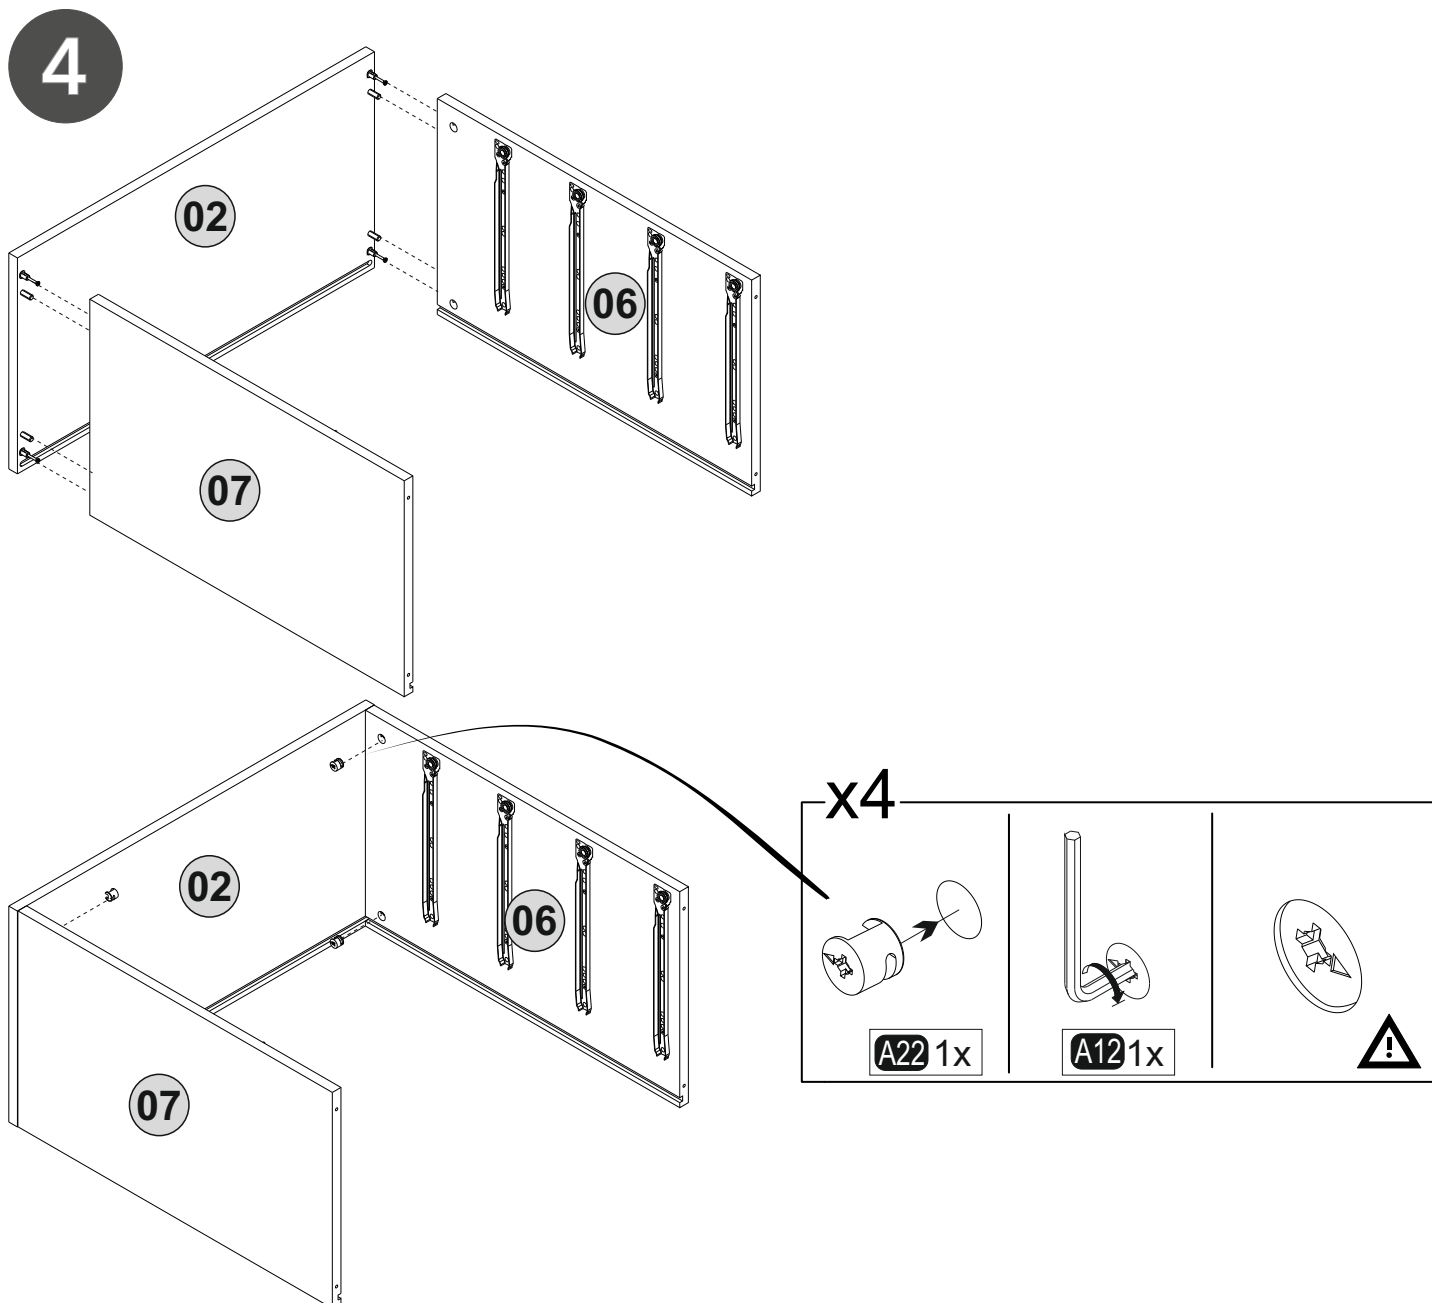


5

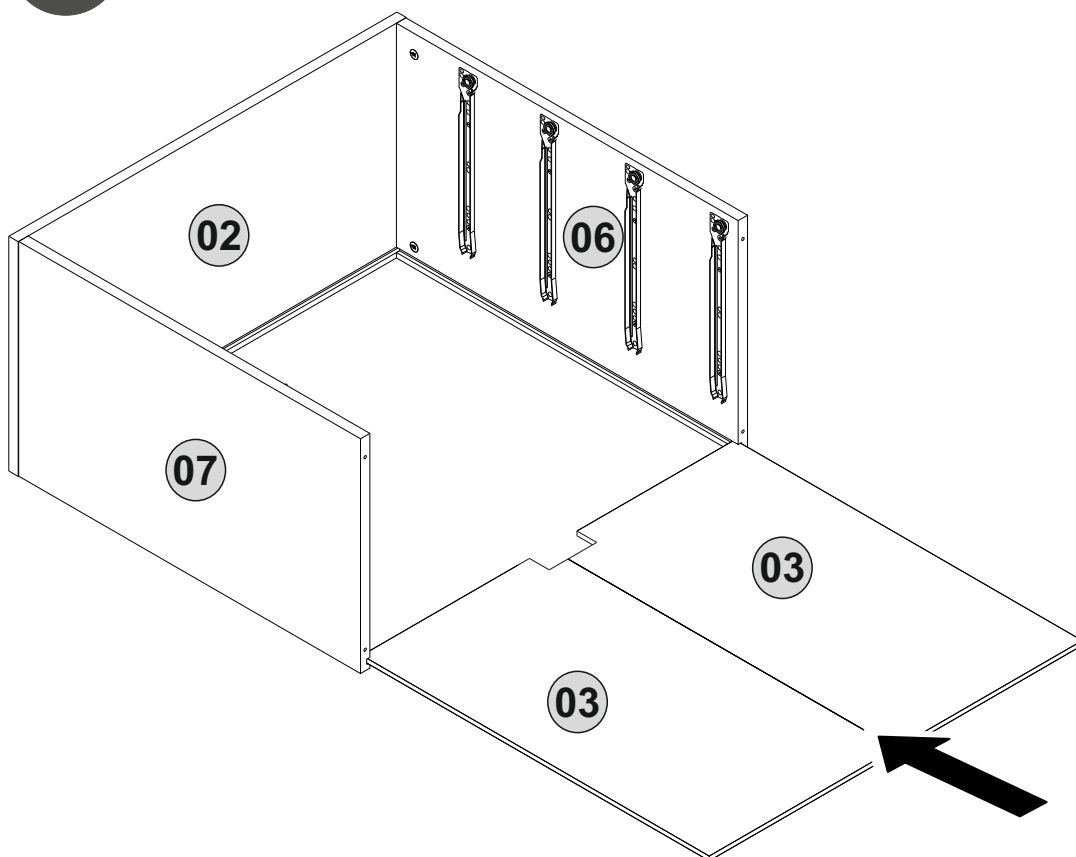


6

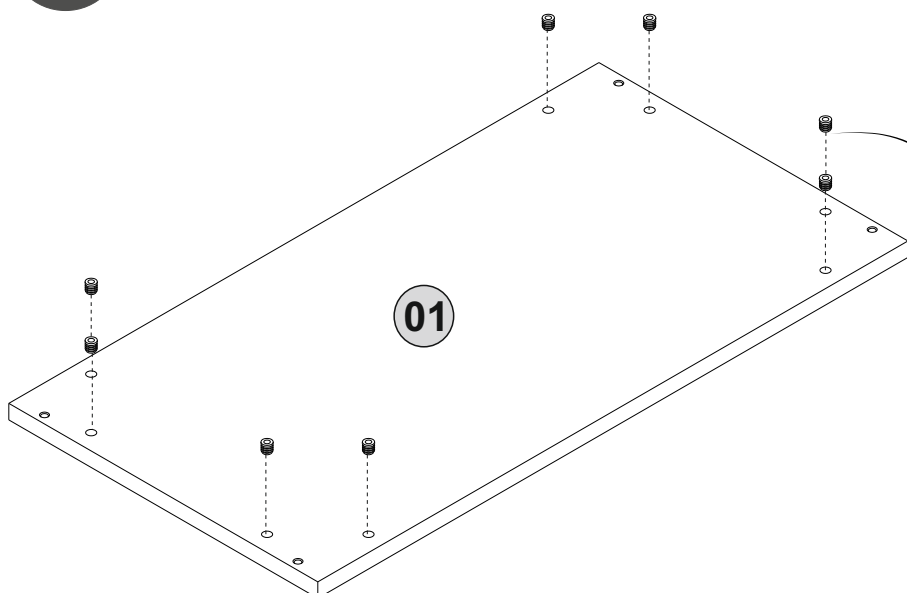


x8

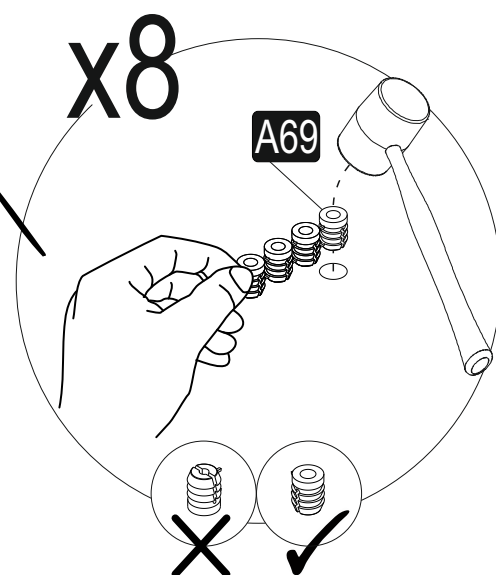


7


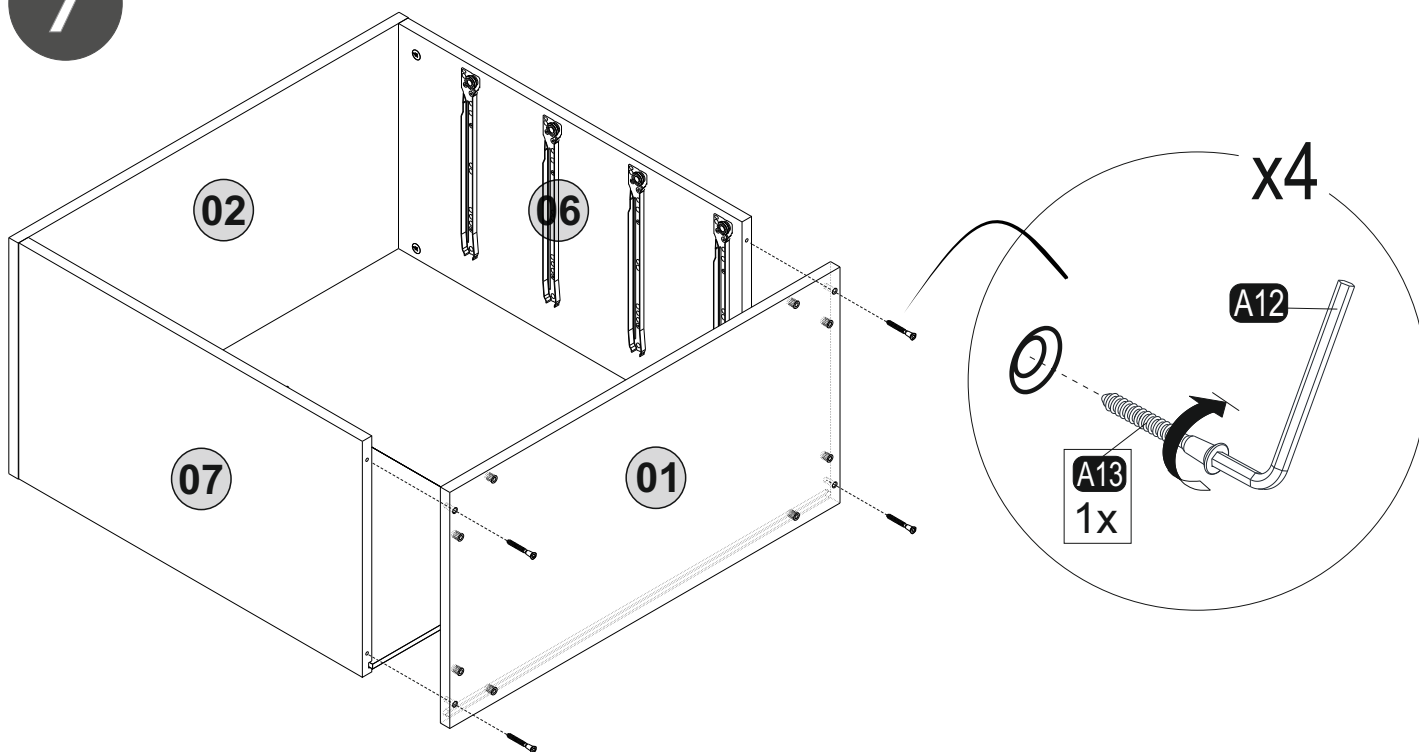



Place a round sticker A06 over each minifix and screw on the drawer.

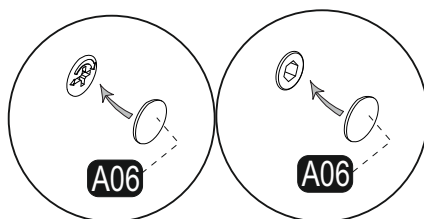


8

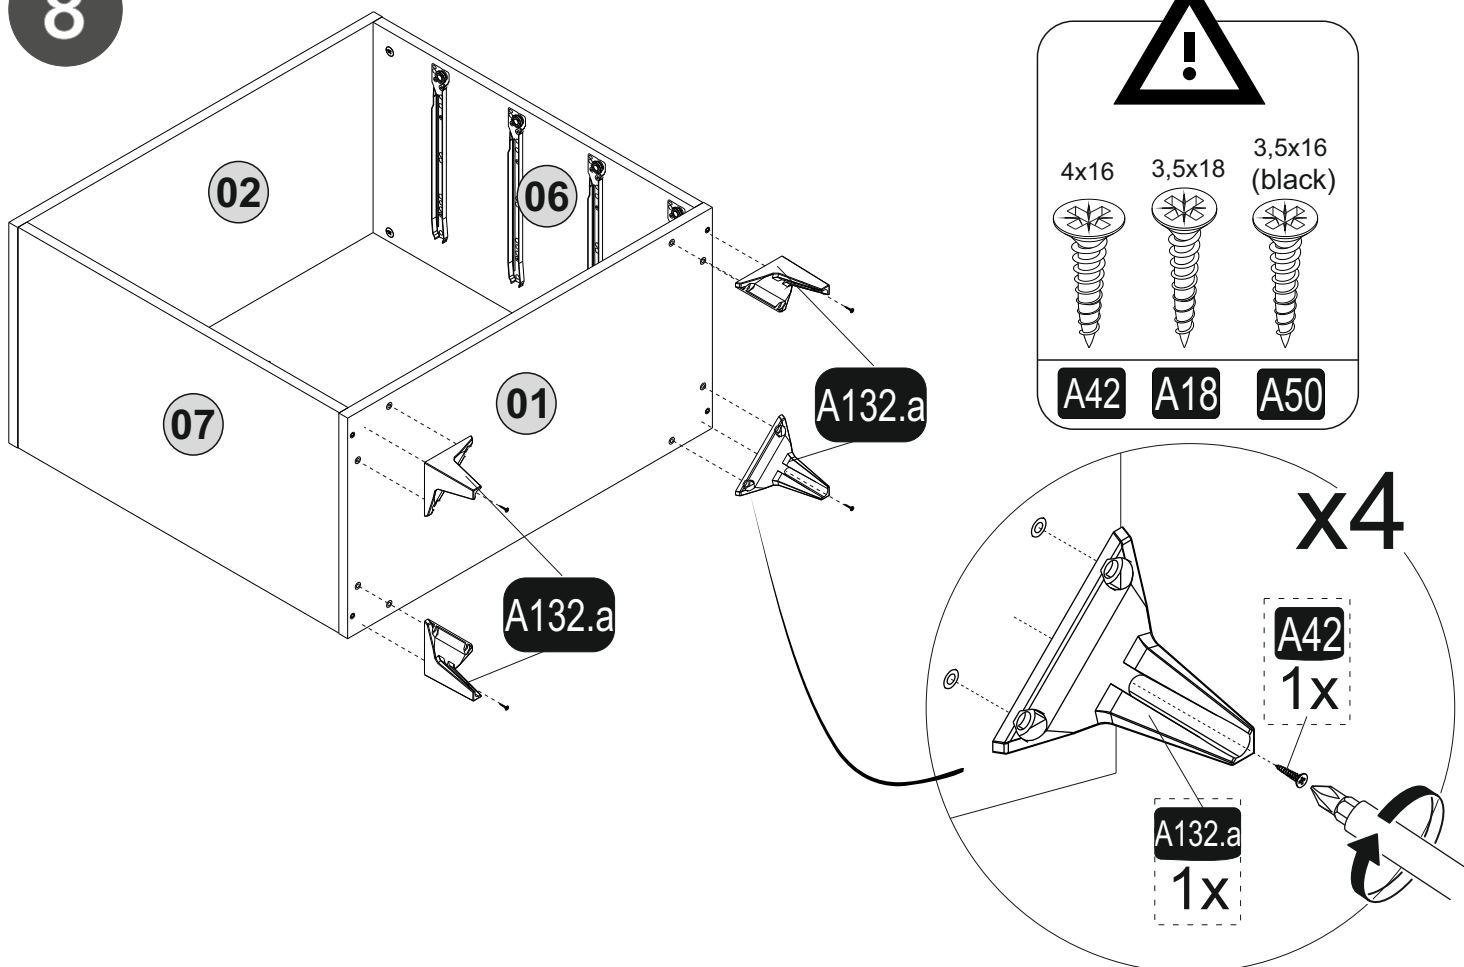

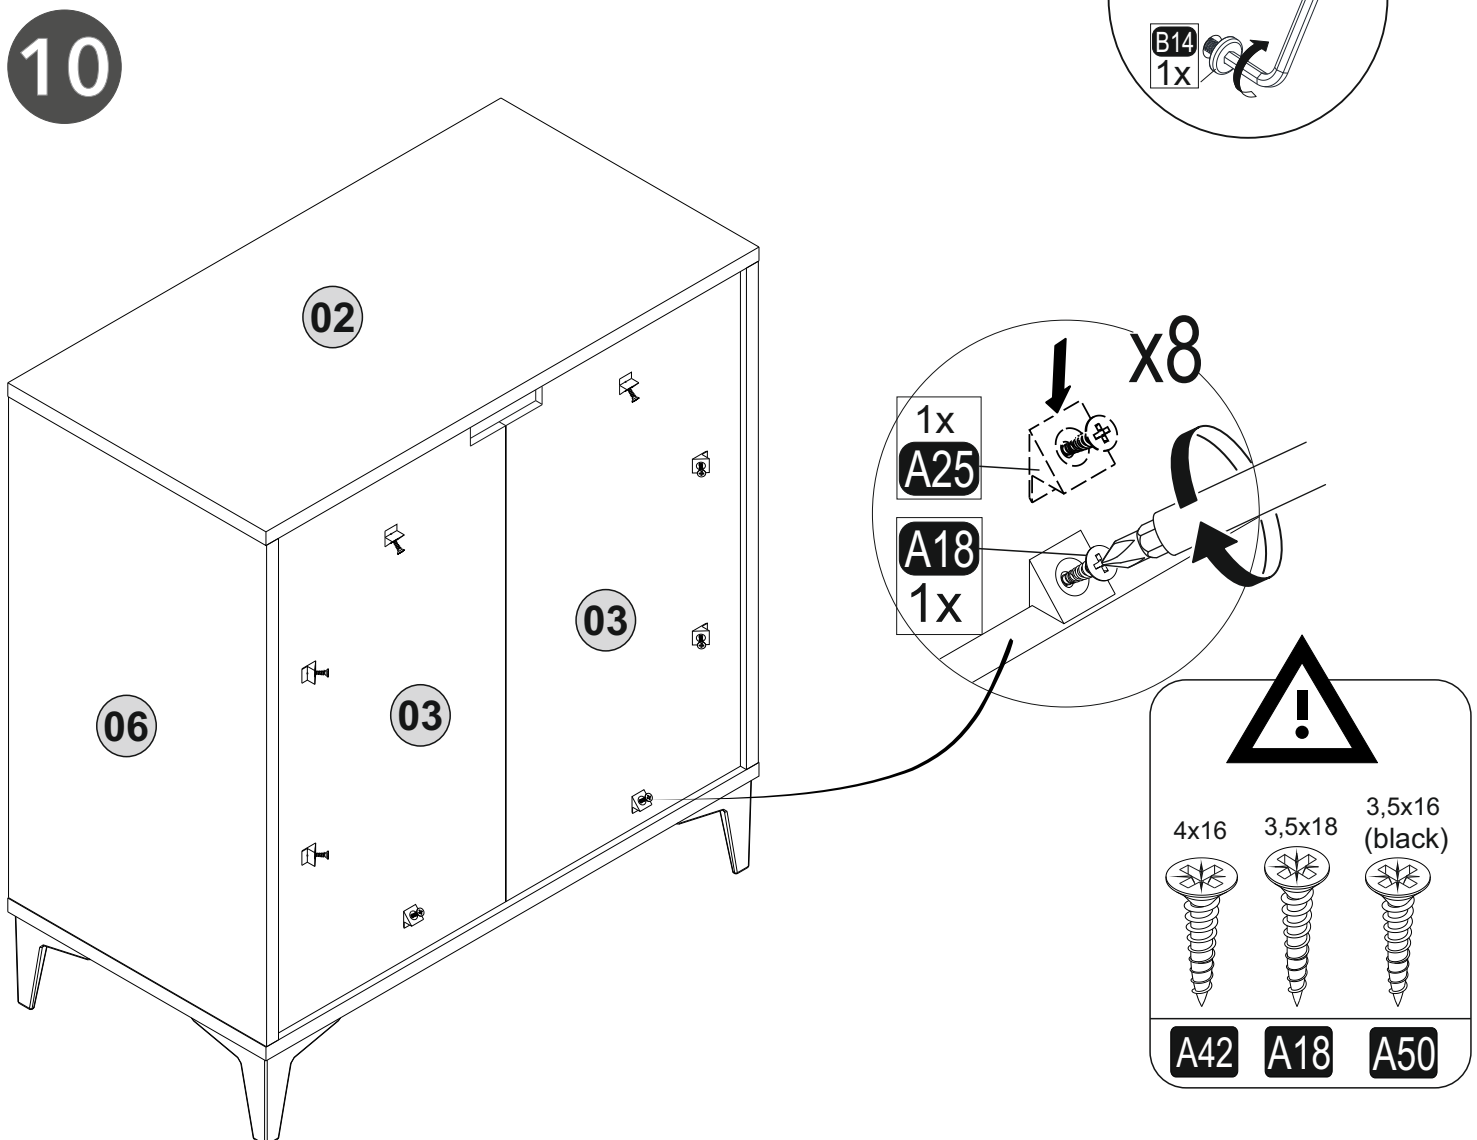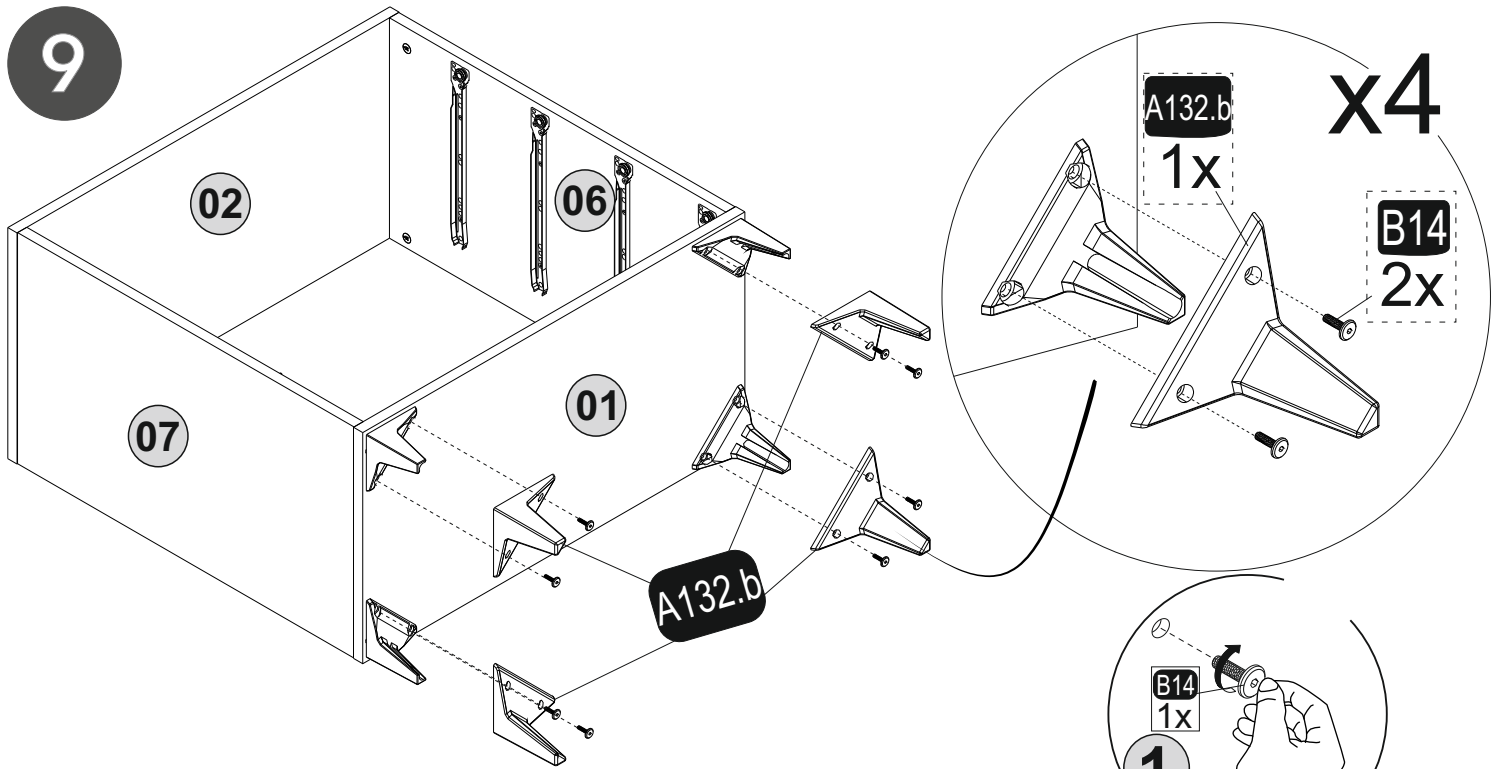


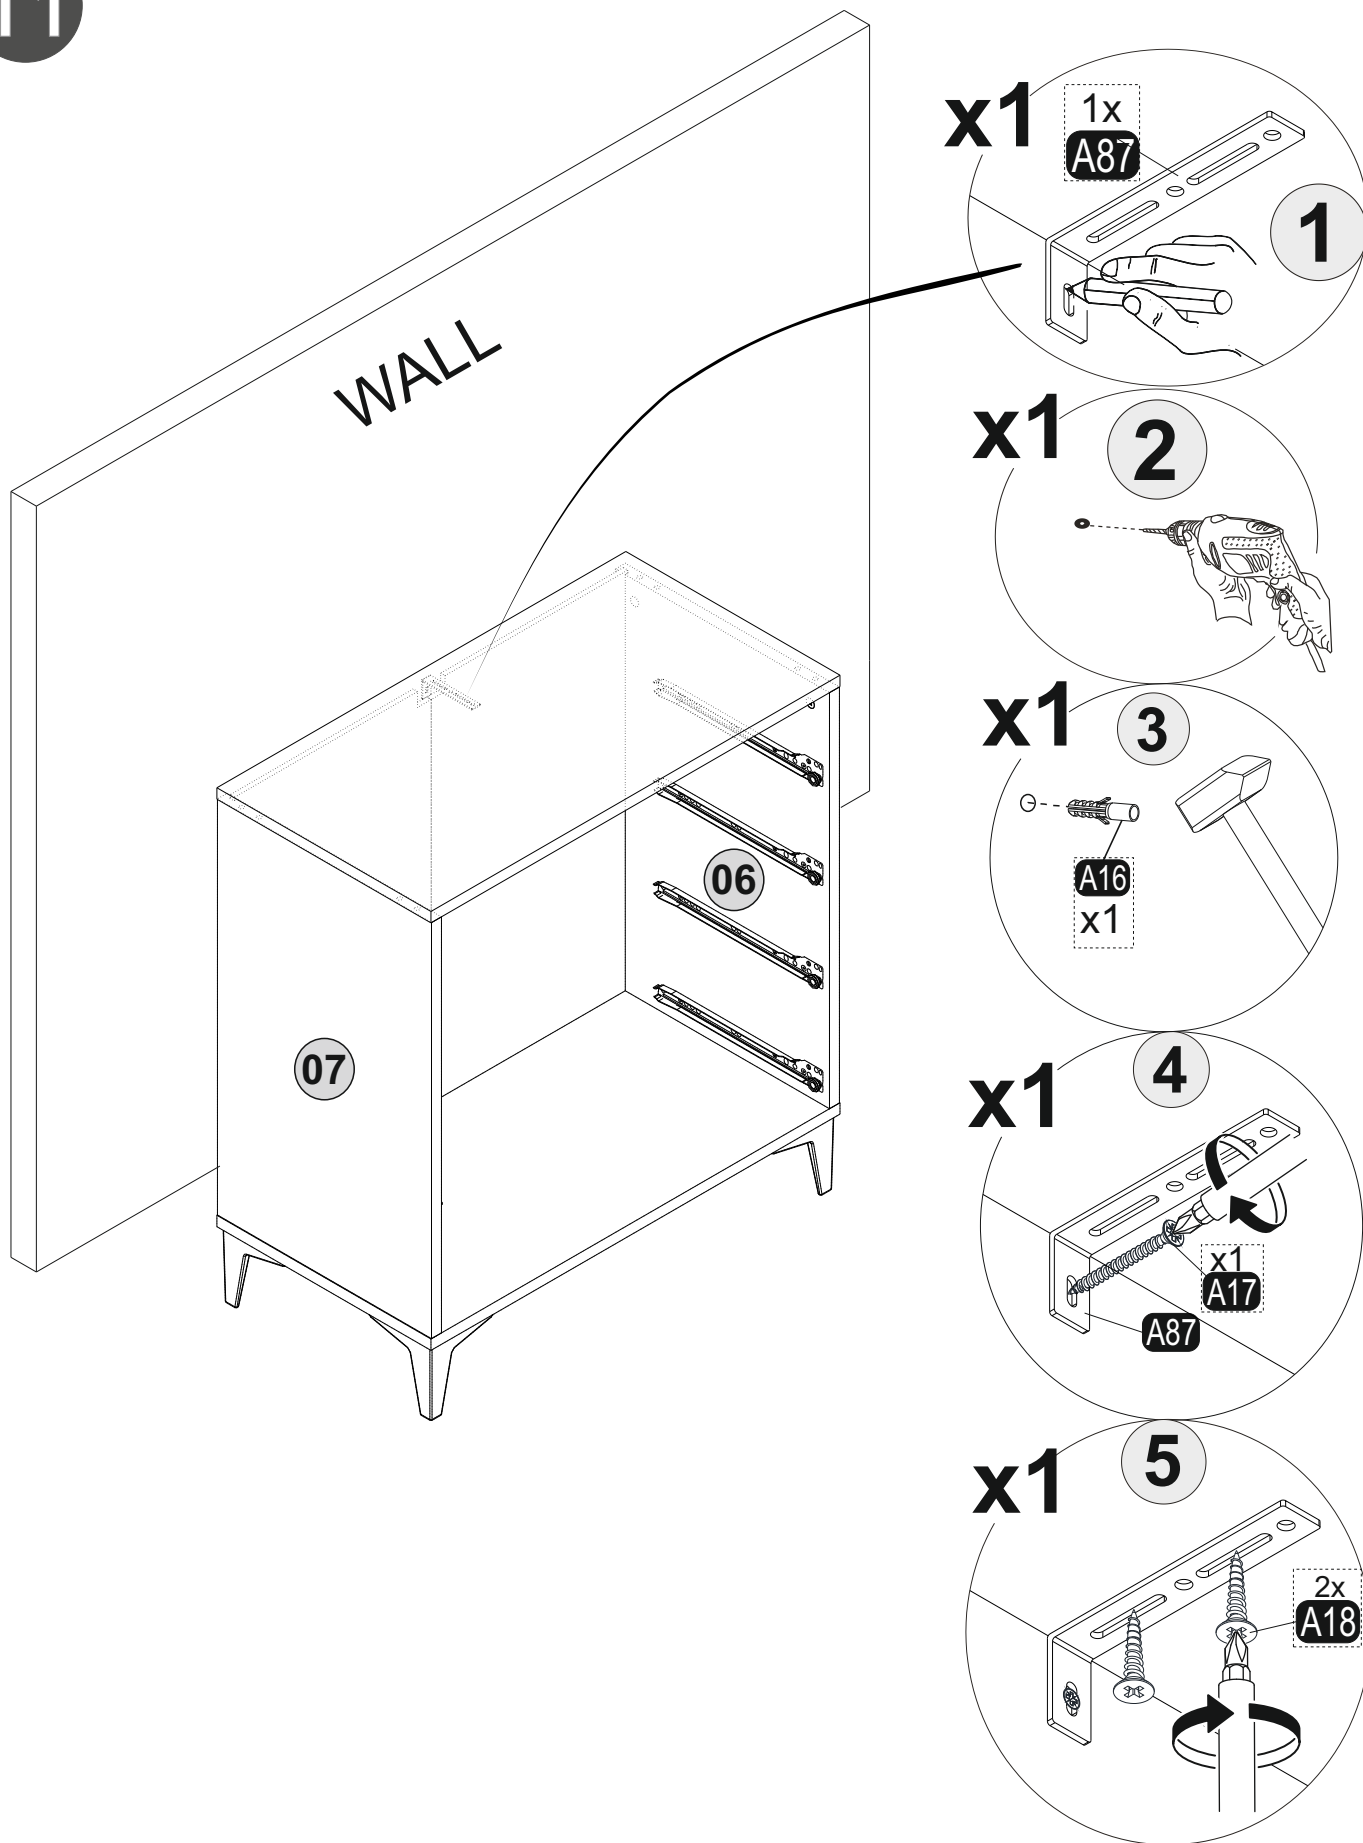



12 x4

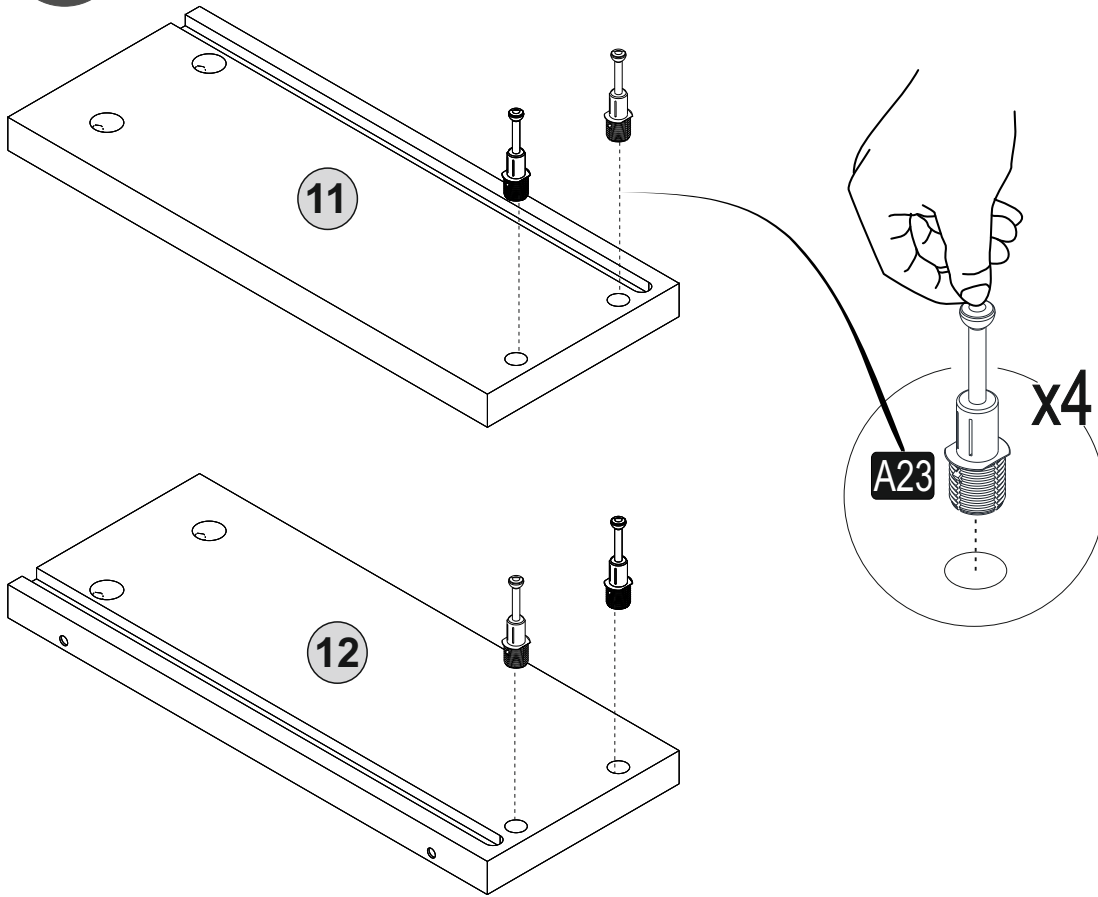



13 x4

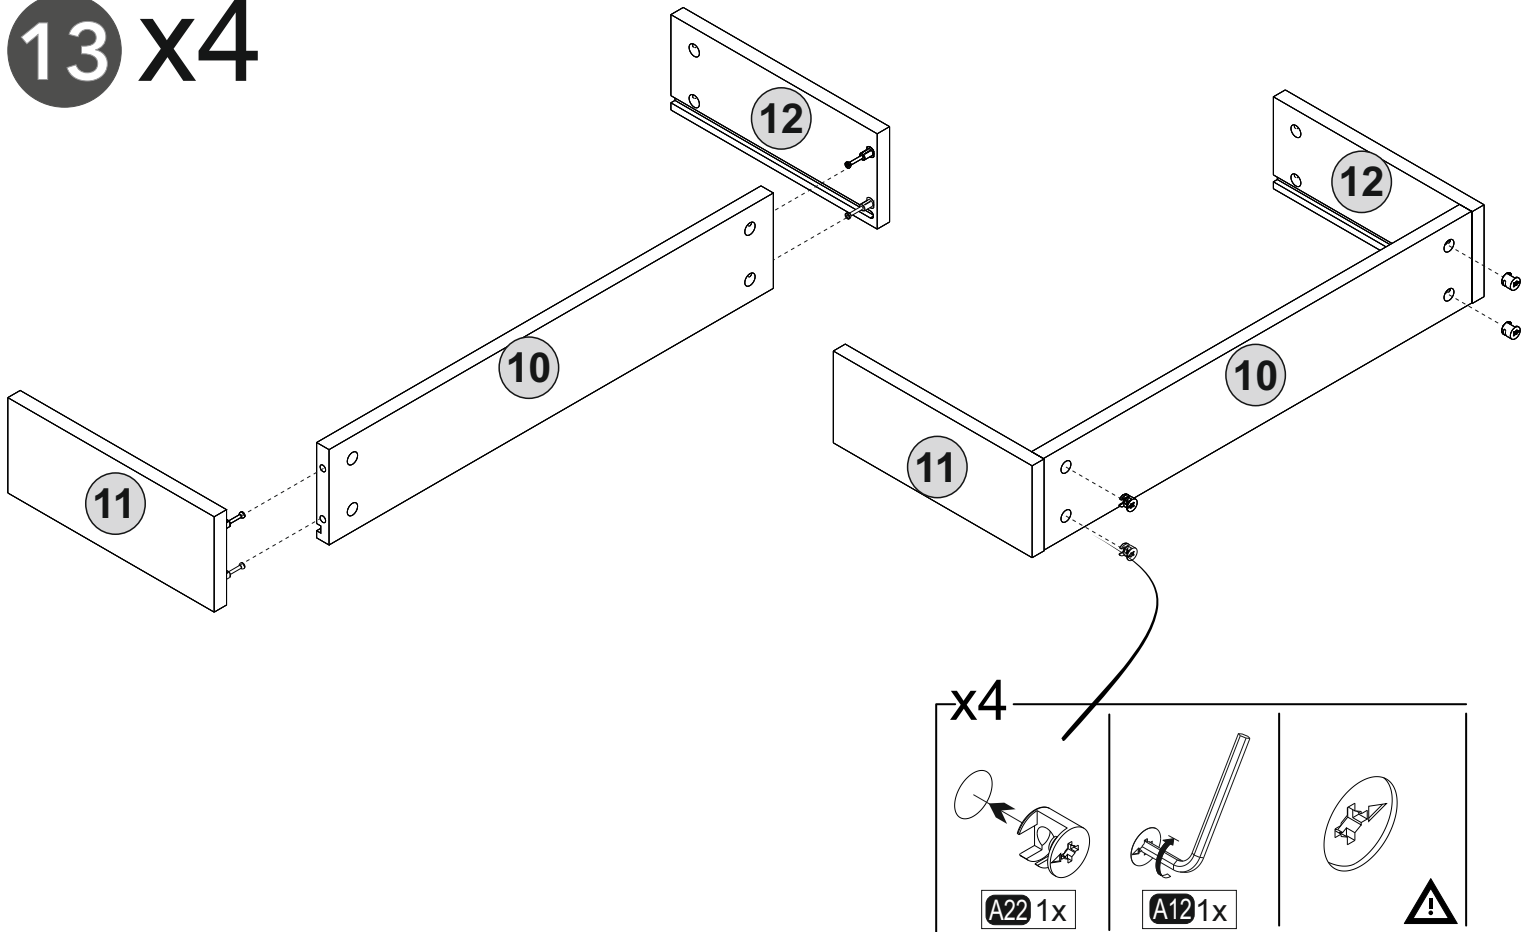







14 x3

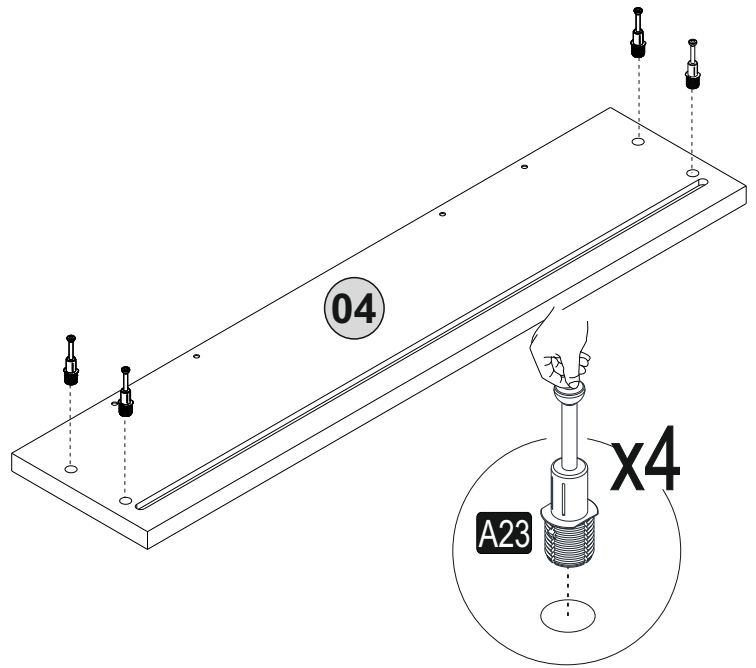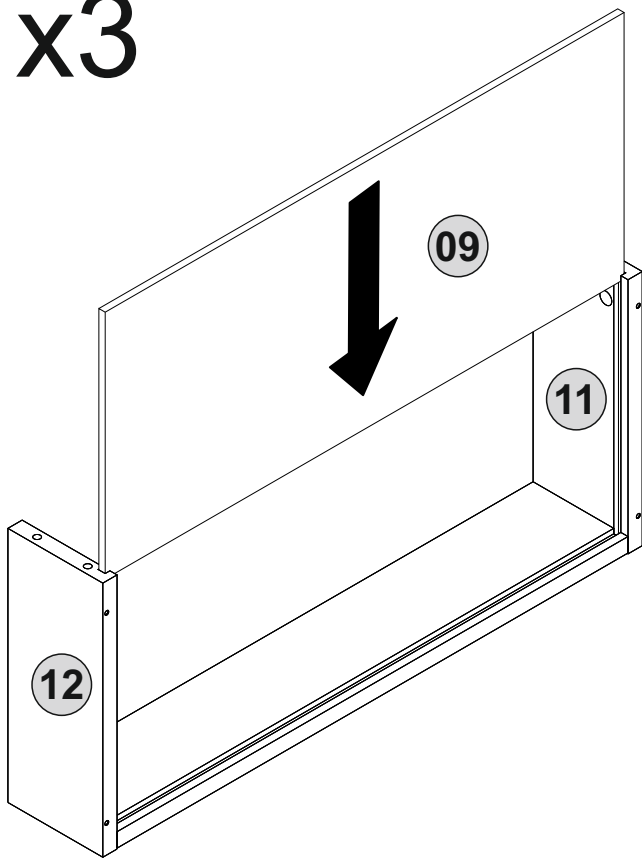







15

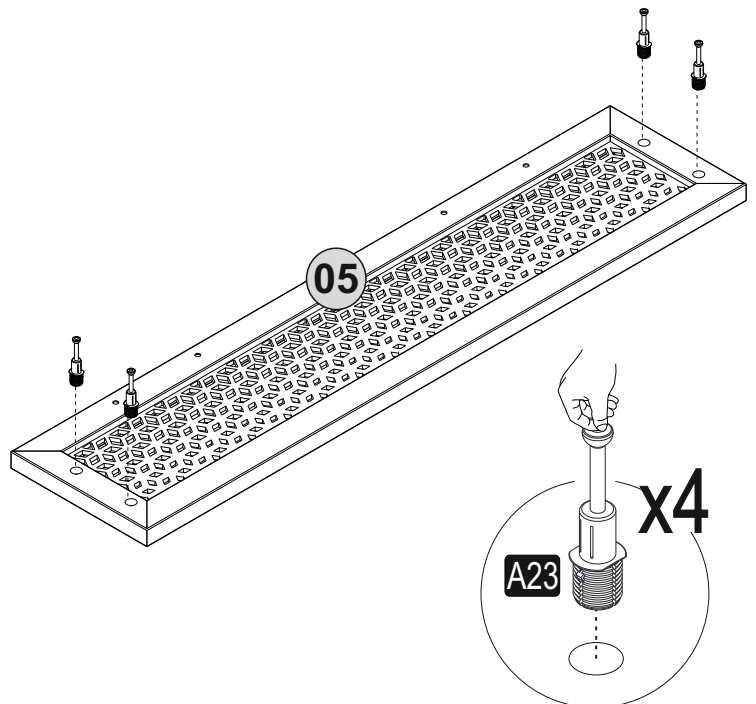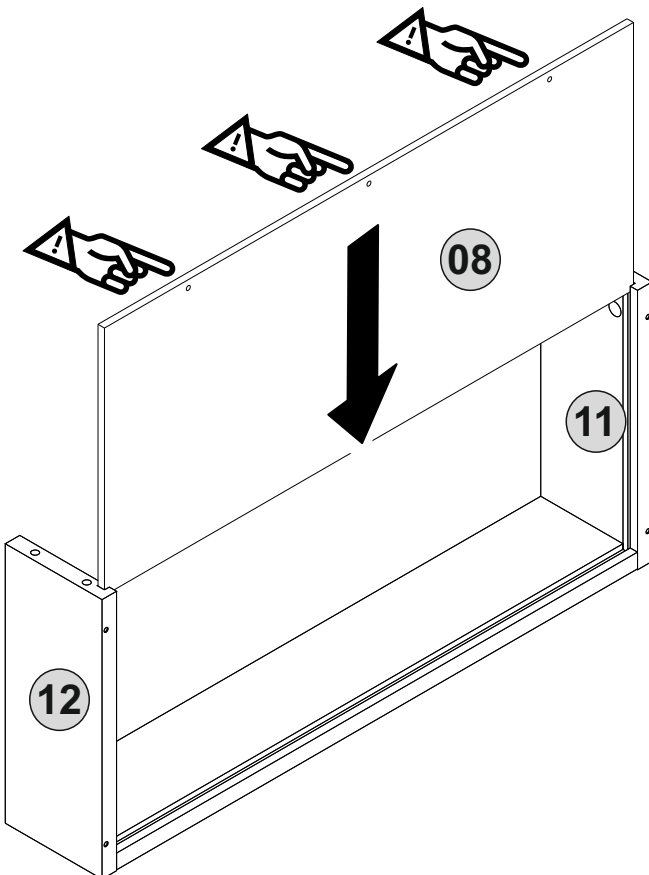


16 x3

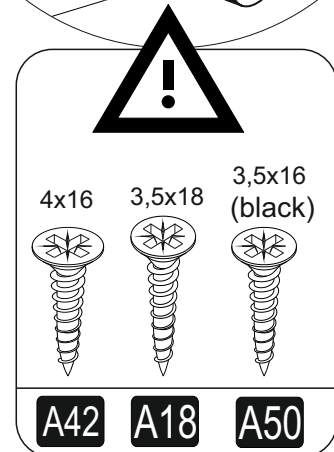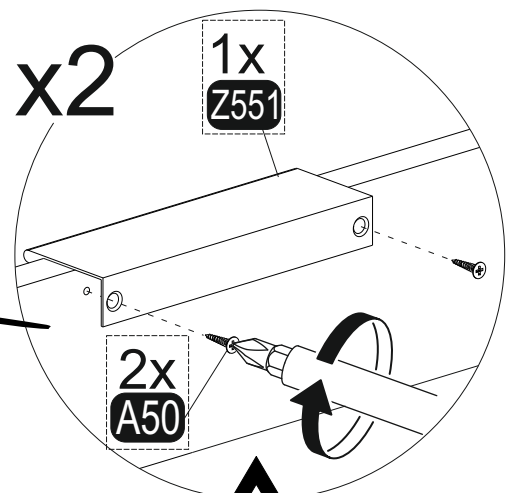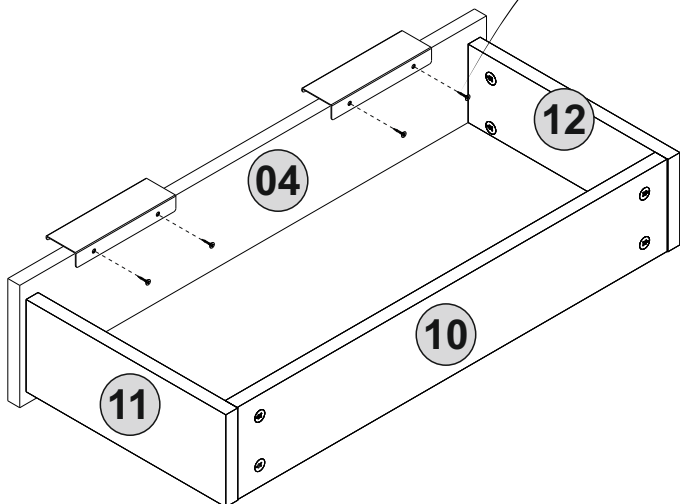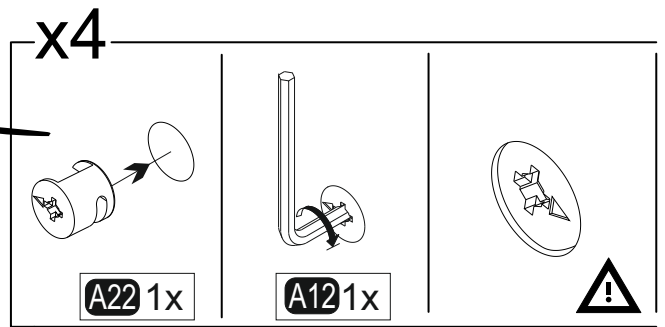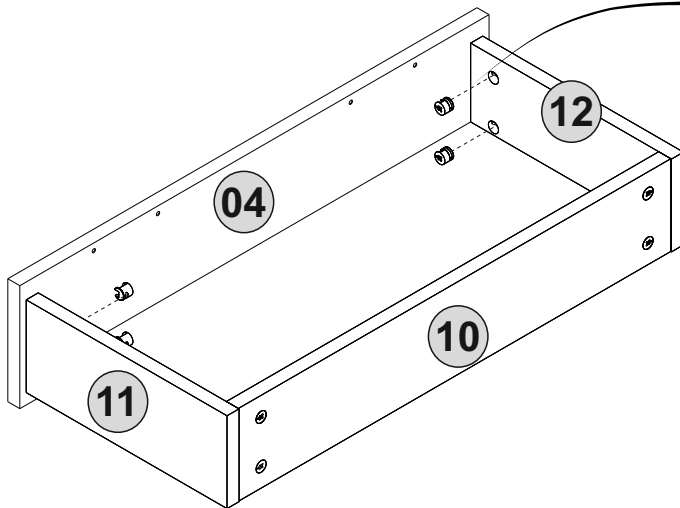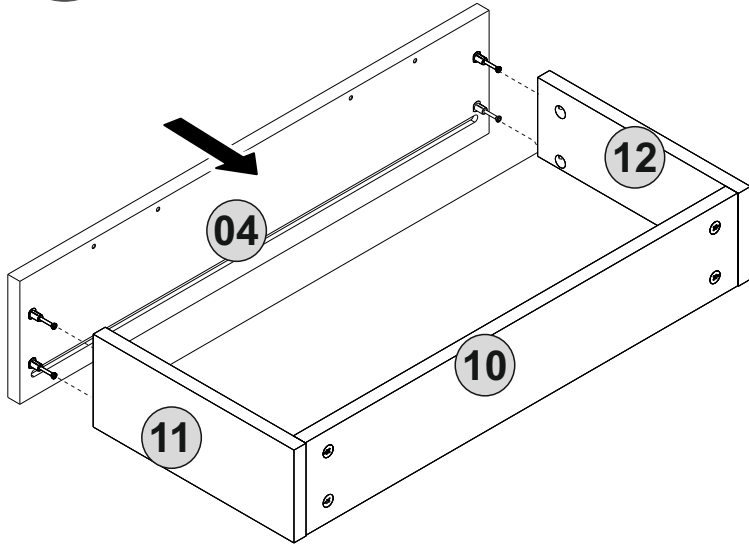

17

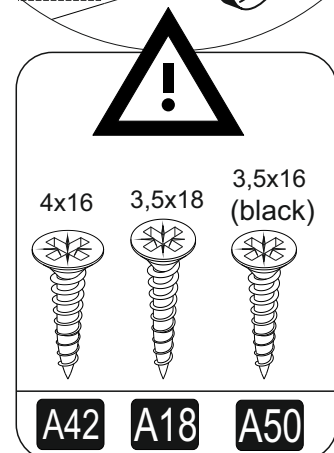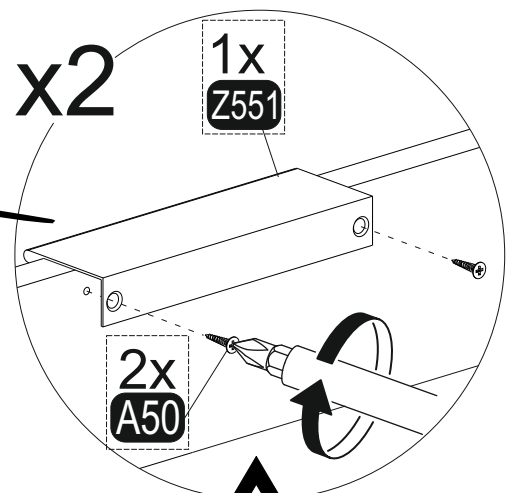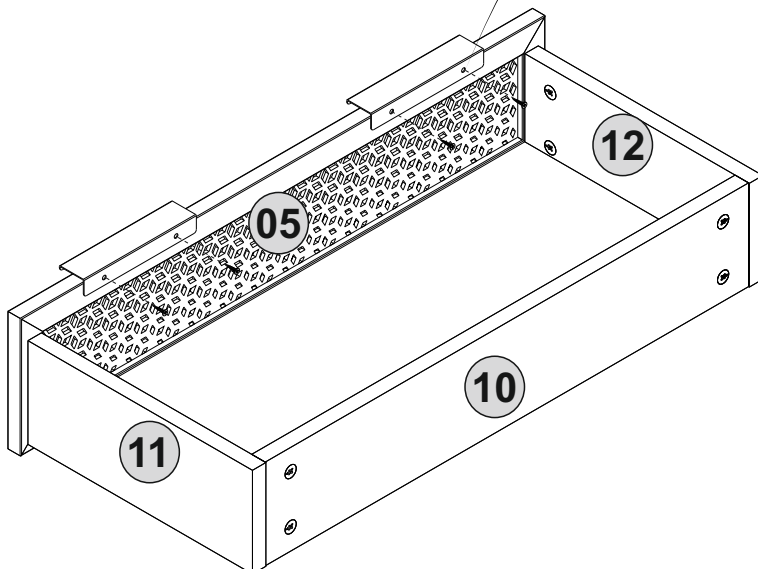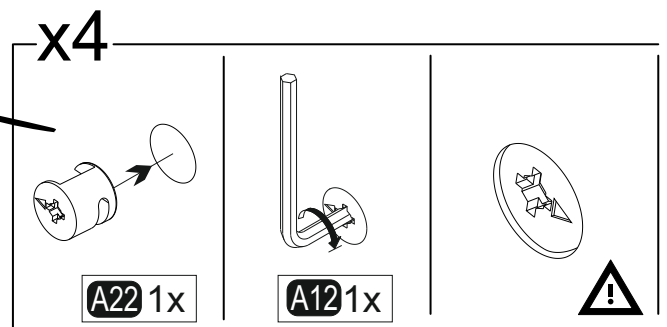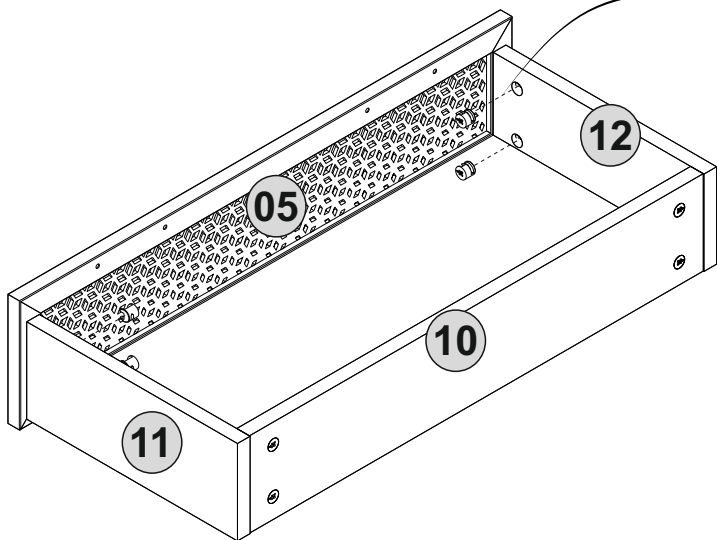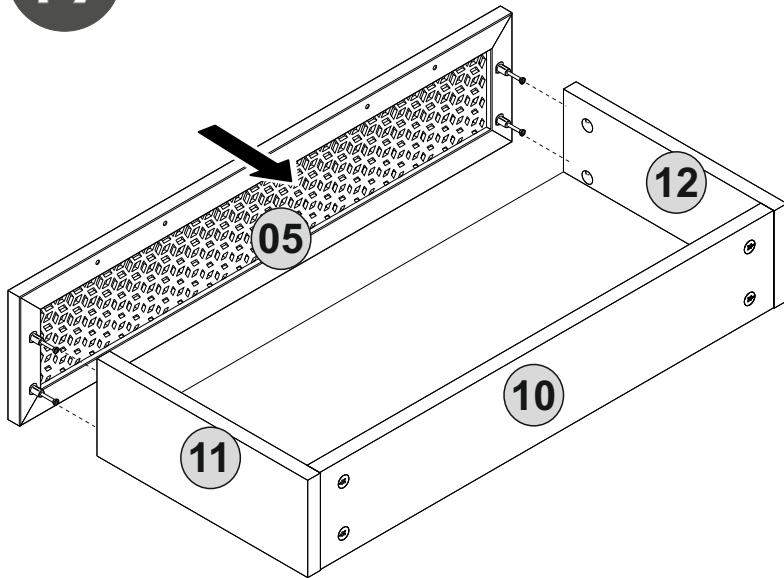

18 x3

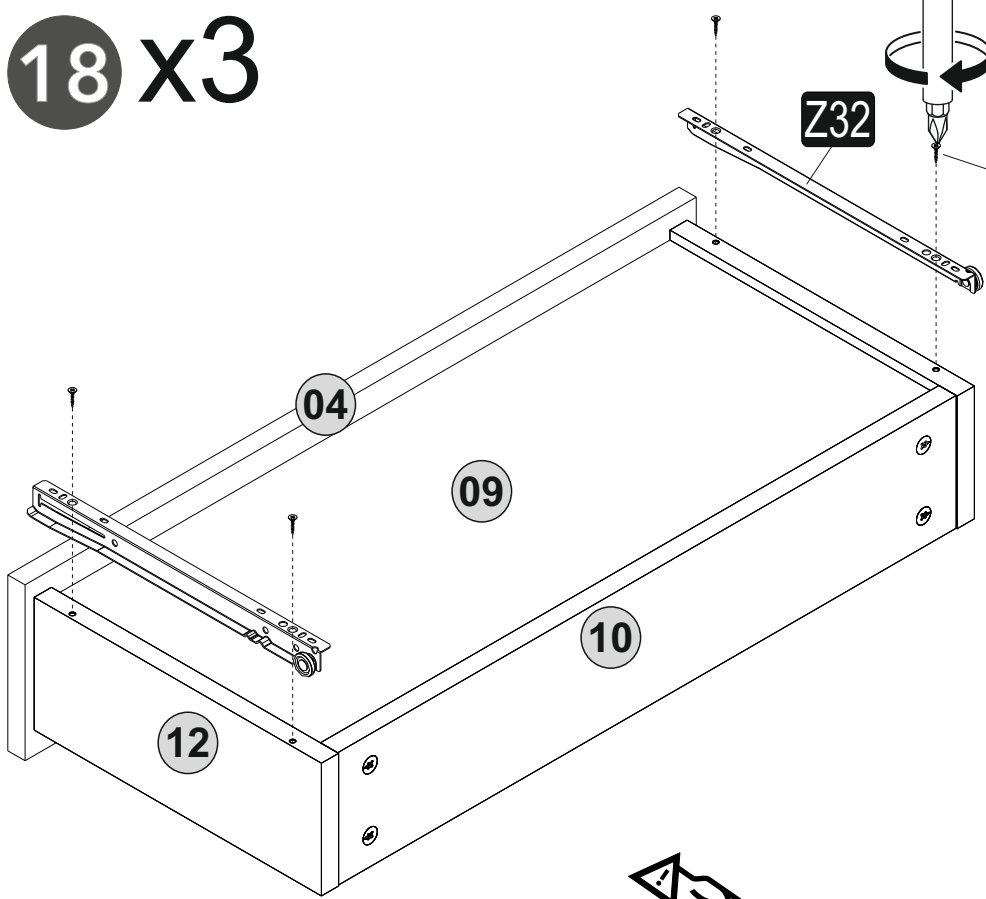




4x
A18



4x16

3,5x18

3,5x16
(black)





A42

A18

A50




19

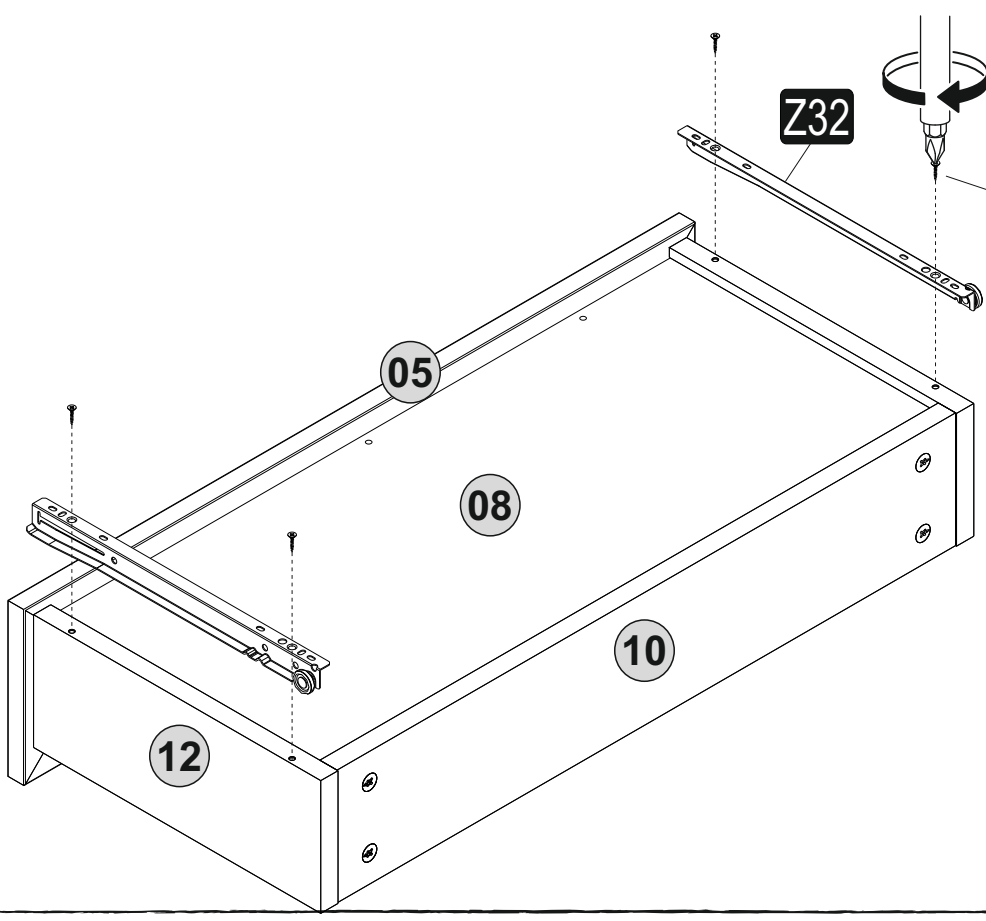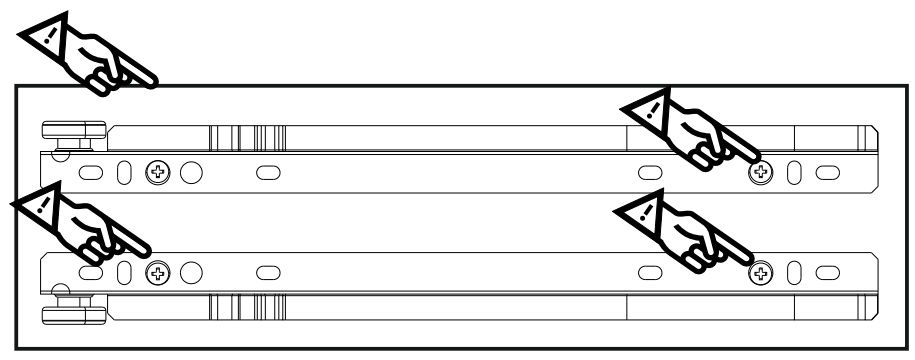





Z32

4x
A18


20 x3

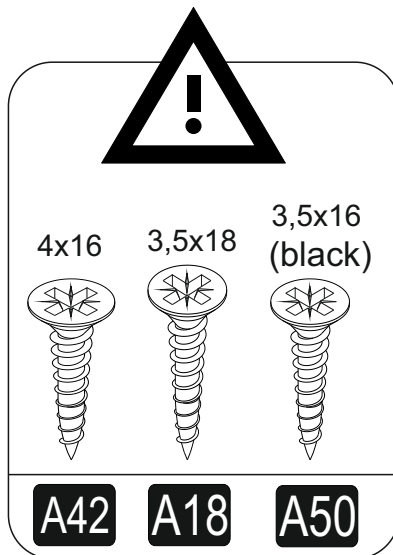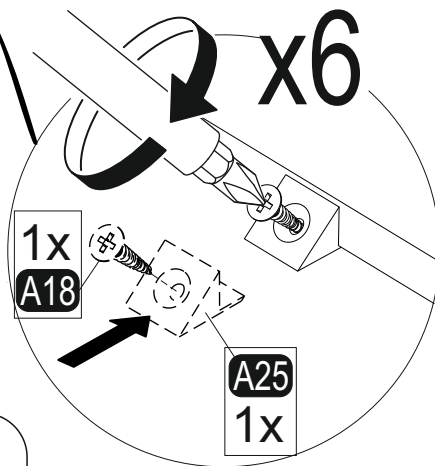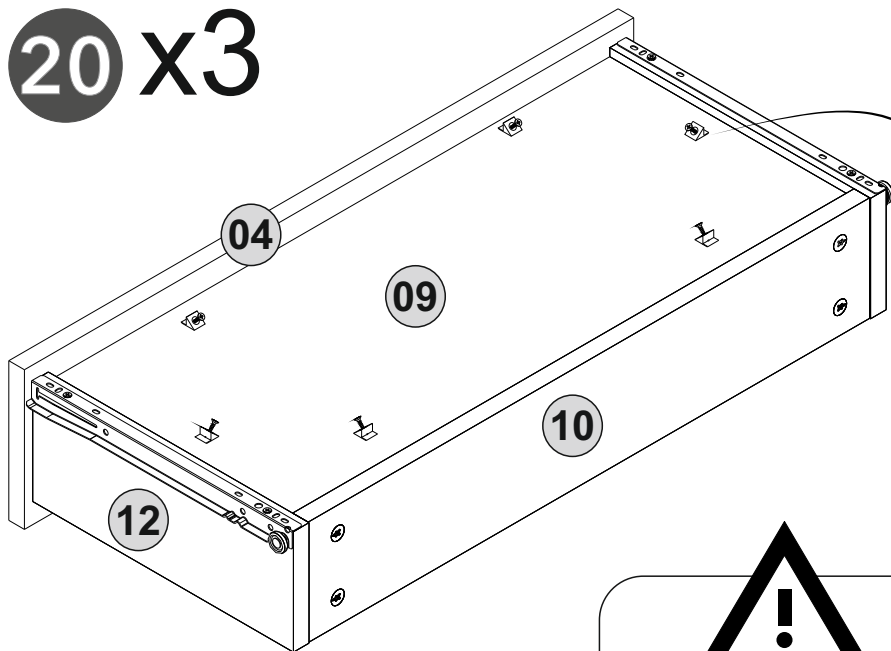



21

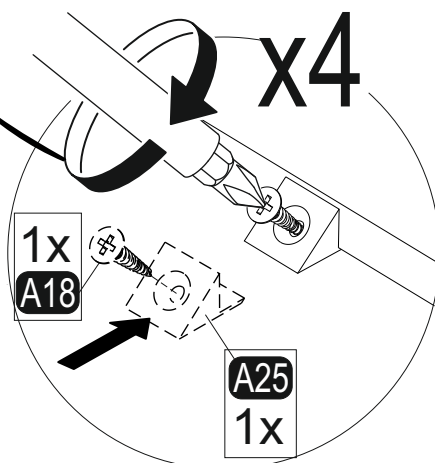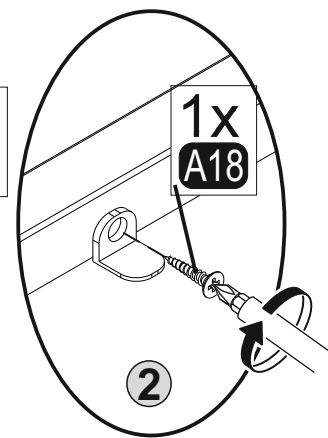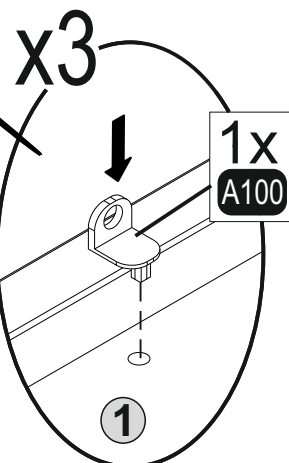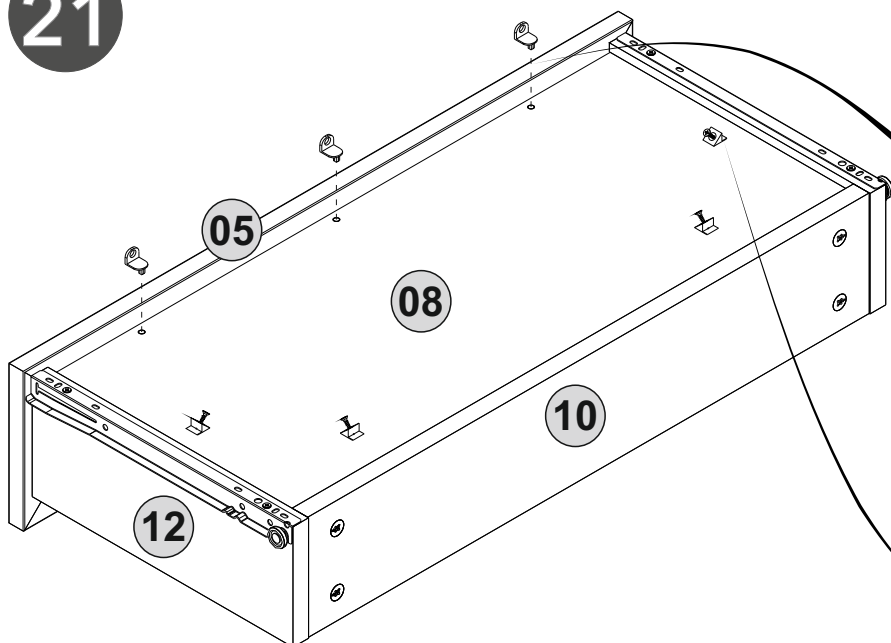


Place a round sticker A06 over each minifix on the chest.

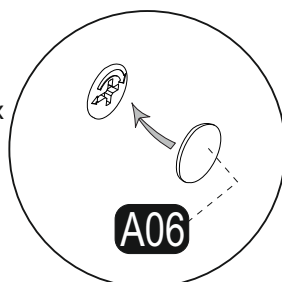


22

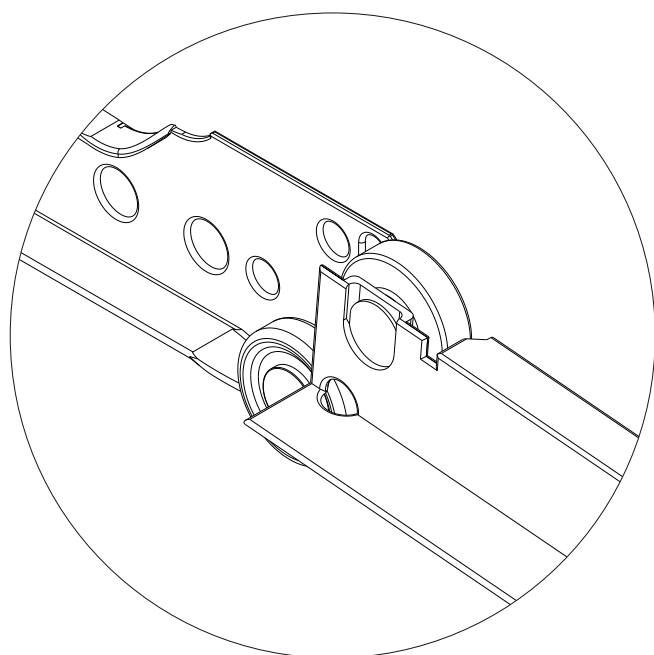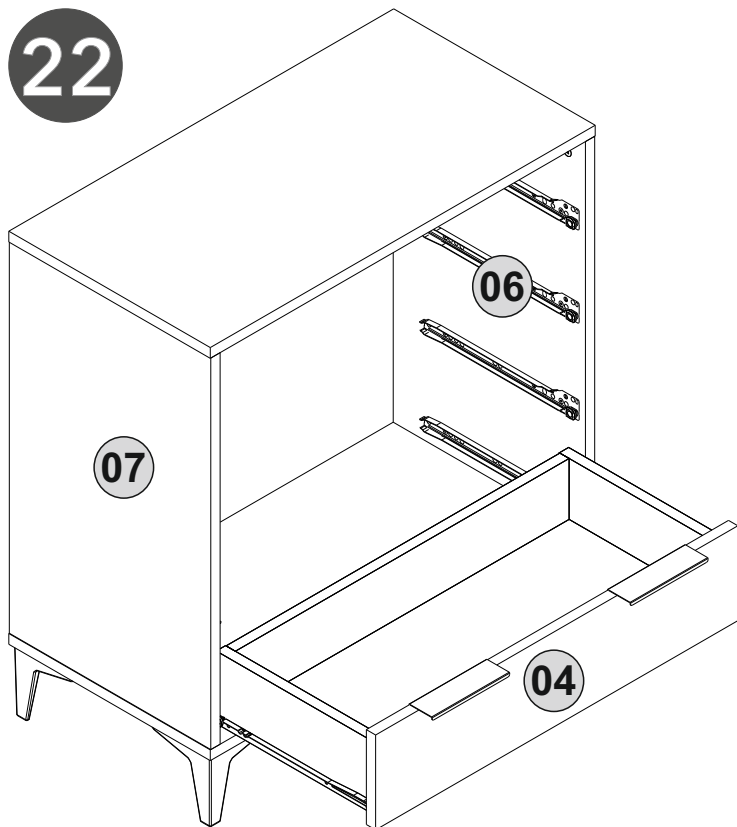


23

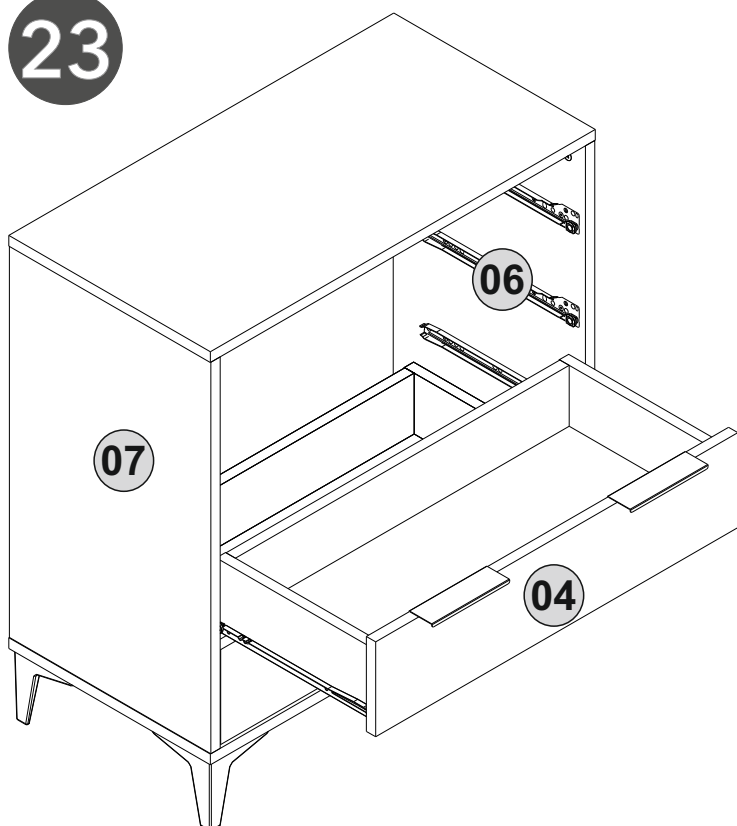

24

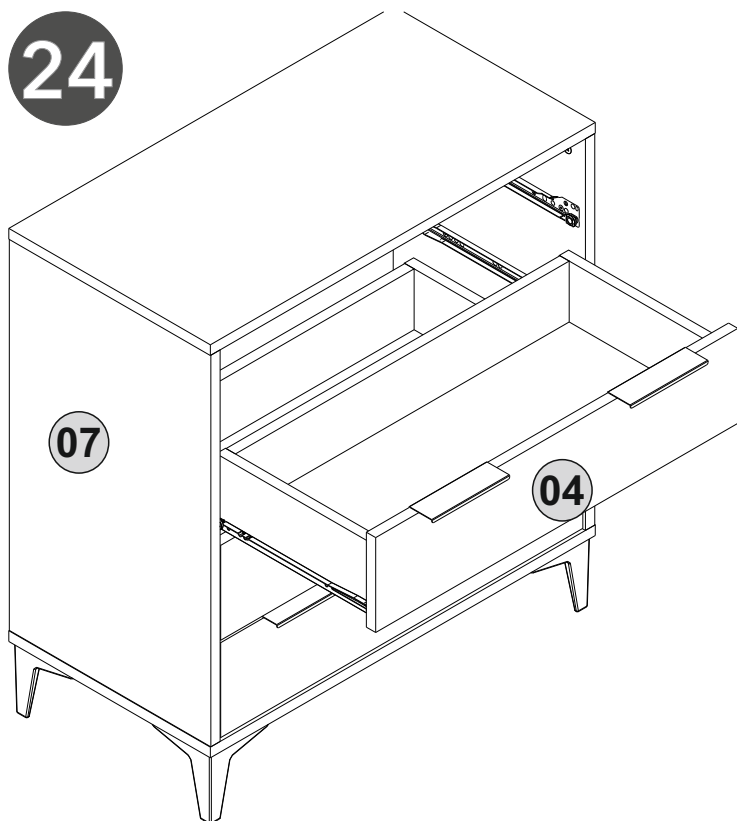

25

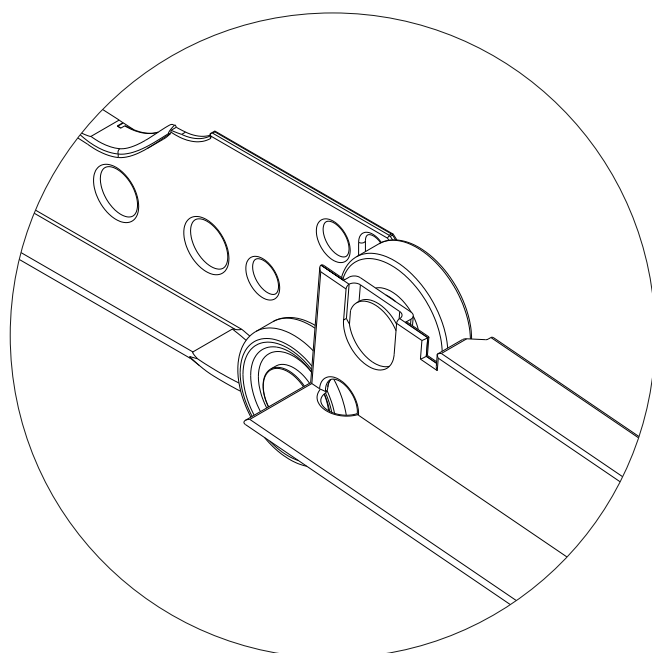

Keep instructions for future reference.



Supplied by:
GFW THE FURNITURE WAREHOUSE.
Waterside Distribution Centre.
Waterside Business Park.
Johnson Road.
Lancashire.
BB3 3RT
www.gfwlimited.co.uk