


PHOEBE DRESSING TABLE WITH STOOL ASSEMBLY INSTRUCTIONS

Thank you for purchasing the PHOEBE DRESSING TABLE WITH STOOL
Please read the instructions carefully to ensure safe operation of the product.

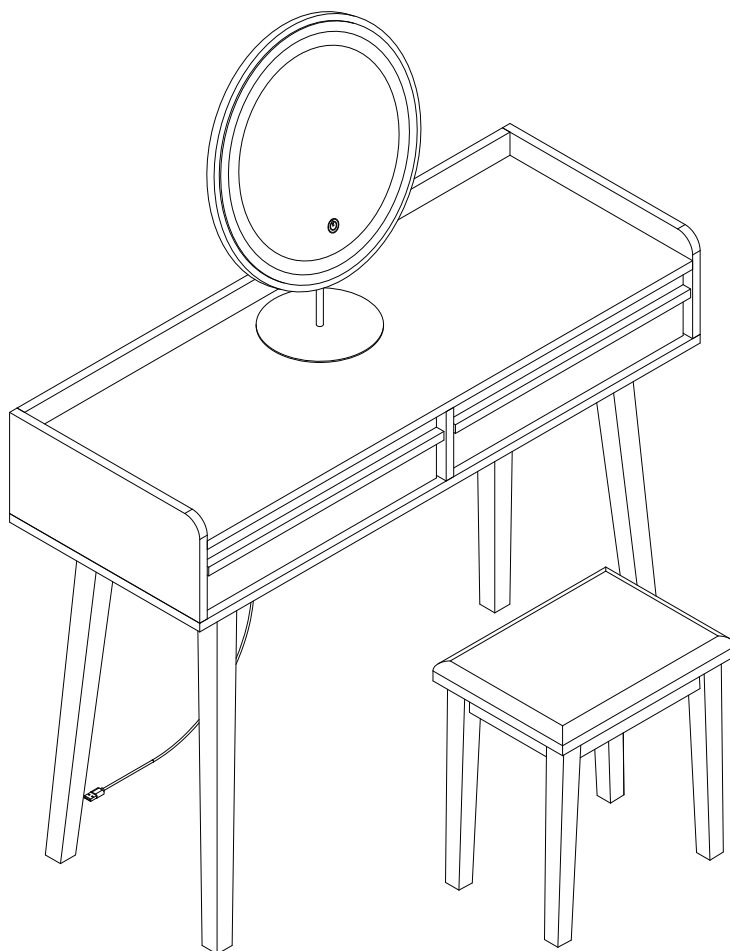

Size: Table: L100xW38xH79cm




Stool: L40xW30xH45cm

PLEASE READ this sheet prior to assembly to familiarise yourself with the various stages of construction.

Carefully open the pack supplied and check the contents against the parts and fittings check list. Do not destroy any of the packaging until you are certain that you have all the necessary parts for the assembly.

CAUTION: There are small components used in the construction of this unit. These loose items should be kept away from young children whilst assembling your unit to avoid the danger of choking hazards.

Tools Required

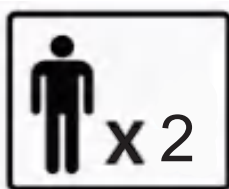

2 Hour
Set Up

PHOEBE DRESSING TABLE WITH STOOL ASSEMBLY INSTRUCTIONS

IMPORTANT - READ CAREFULLY - RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

INFORMATION

Due to the size of this product we recommend that it is assembled in the room intended for use.
When you are ready to start, make sure that you have the right tools, plenty of space and a clean, dry area for assembly.
Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to prevent it from scratching.
Check the pack and make sure you have all the parts listed.
Ensure that this product is fully assembled as illustrated before use.
Check all screws or bolts are tightened and inspect regularly
This product should only be used on firm, level ground.
Keep small parts out of reach of children.
Make sure the legs remain in contact with the ground.
Tools not included.

WARNINGS


DO NOT use power tools to construct this product.
DO NOT use this product if parts are missing, damaged or worn.
DO NOT stand on the product.
DO NOT place very hot or very cold items on the surface unless adequately thick tablemats are used to prevent such items damaging your dresser top
If a glass component is chipped or broken, stop using the product and consult the manufacturer or supplier
We recommend the use of the wall strap provided for safety reasons. If in doubt please consult a qualified tradesperson.
Always ensure the area to be drilled is free from hidden electrical wires, water and gas pipes.

CARE INFORMATION

Never use scourers, abrasives or chemical cleaners.
To clean wipe with a sponge and warm soapy water. Do not use solvent based cleaners or detergents as they can bleach or damage the product.
When cleaning glass panels or mirrors use a damp cloth with washing up liquid or soft soap if necessary;
Do not use washing powders or any other substances containing abrasives, as these may scratch the glass
















PHOEBE DRESSING TABLE WITH STOOL ASSEMBLY INSTRUCTIONS

PART LIST

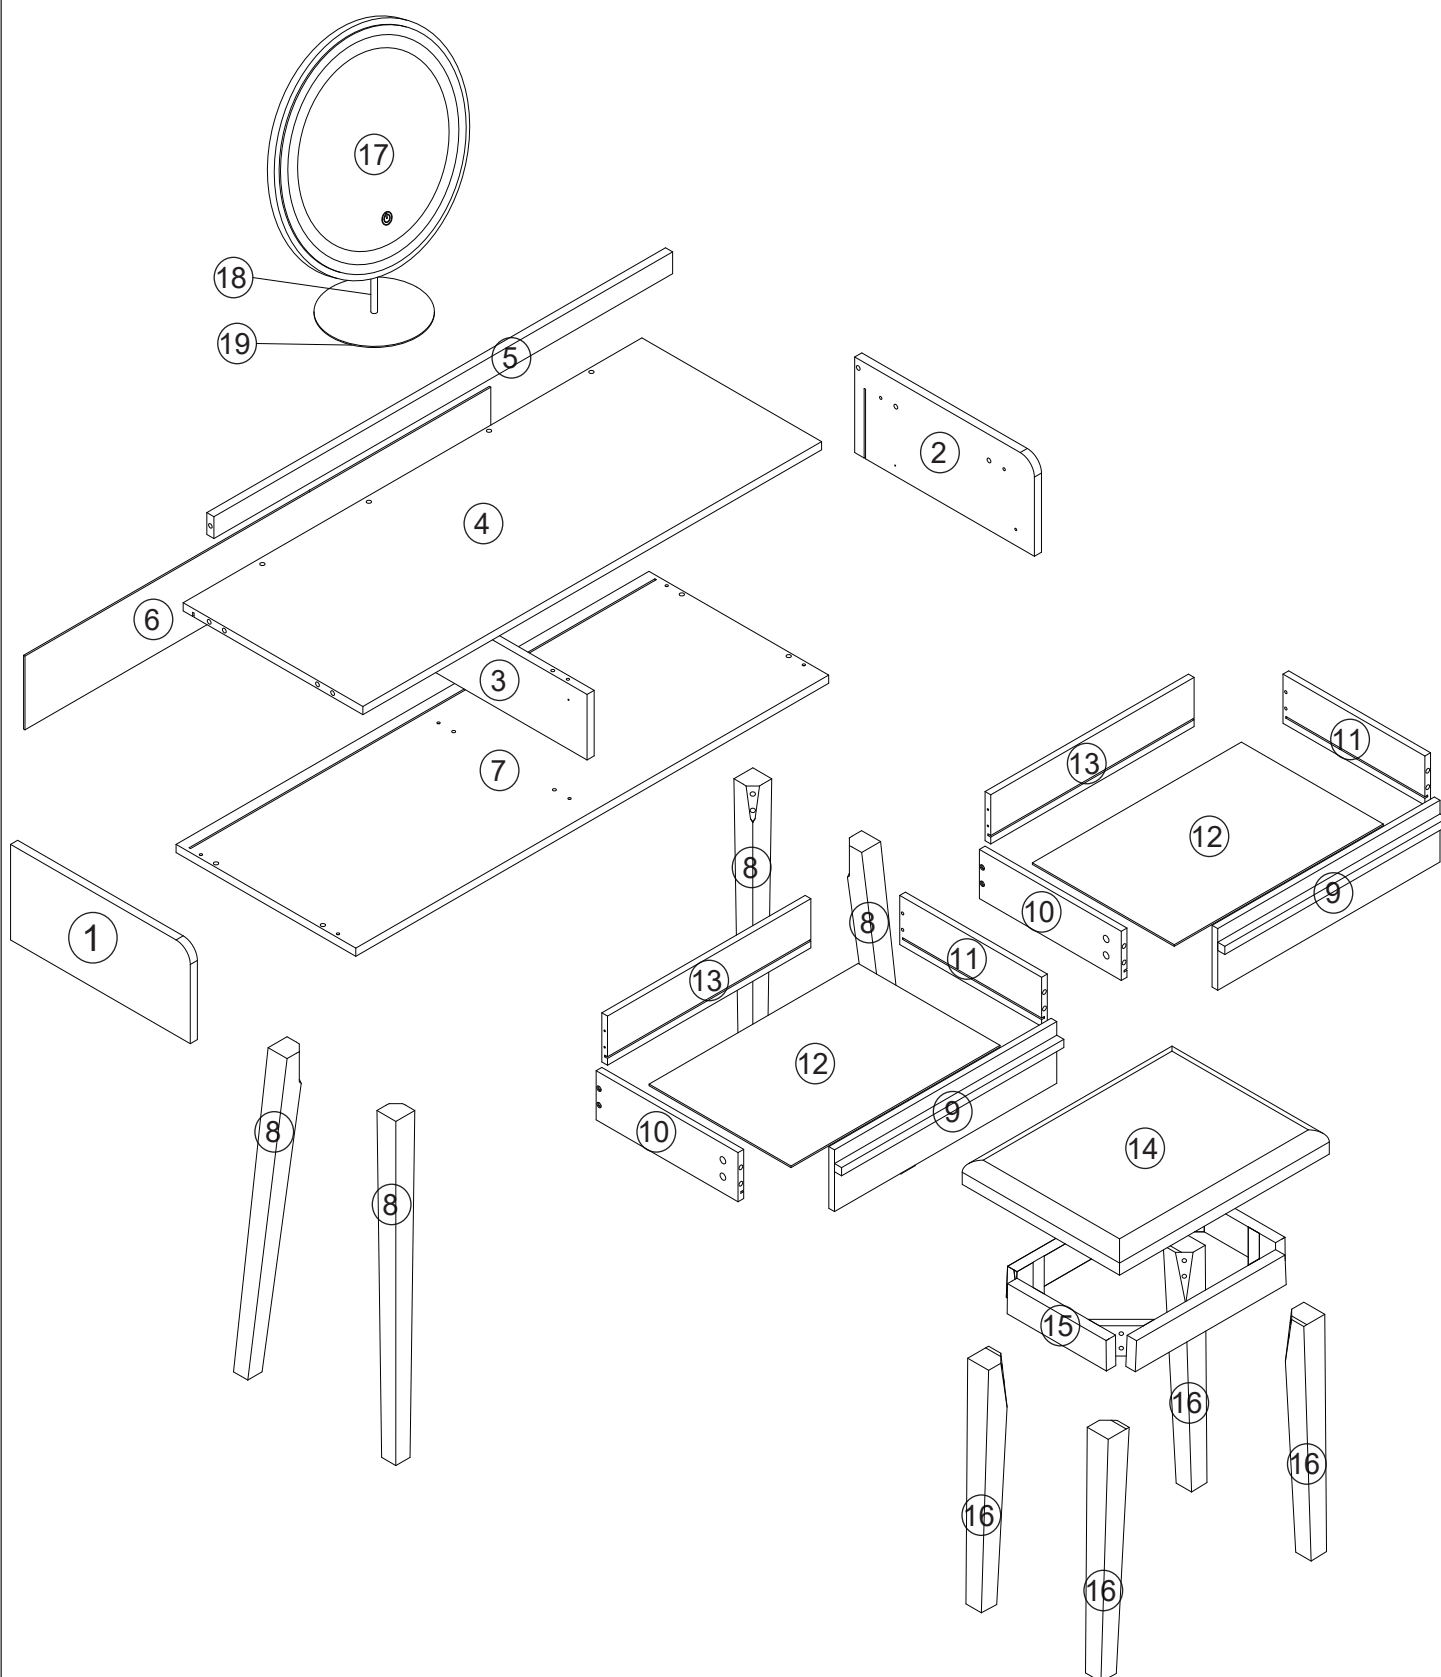




















PHOEBE DRESSING TABLE WITH STOOL ASSEMBLY INSTRUCTIONS

HARDWARE LIST

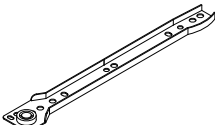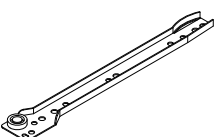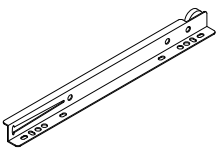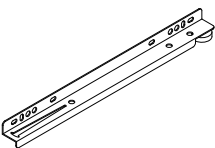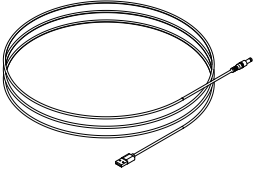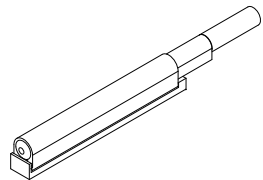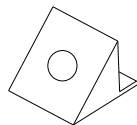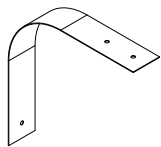
Ax43  Screw M3x12mm	Bx12  Wood dowel M8x30mm	Cx16  Cam bolt M6x35mm	Dx16  Cam M15x11mm
Ex2  Drawer silder	Fx2  Drawer silder	Gx2  Drawer silder	Hx2  Drawer silder
Jx13  Screw M4x30mm	Kx1  Allen key	Lx6  Screw M7x50mm	Mx16  Screw M6x50mm
Nx16  Spring washers	Px18  Flat gasket M6	Qx1  USB Cable	Rx12  Felt pads
Sx2  Screw M4*12mm	Tx1  Screw M6x30mm	Ux2  Drawer rebound device	Wx4  Metal Bracket
Xx6  Back panel support	Yx1  Fabric strip	Zx1  Plastic wall plug	ABx2  Flat gasket M4

PHOEBE DRESSING TABLE WITH STOOL ASSEMBLY INSTRUCTIONS


PART LIST

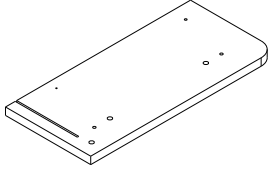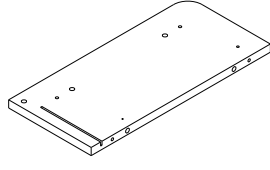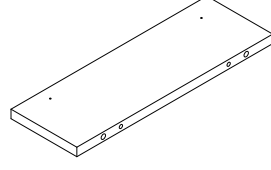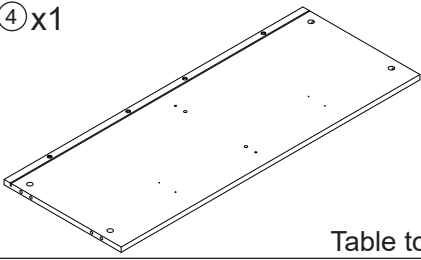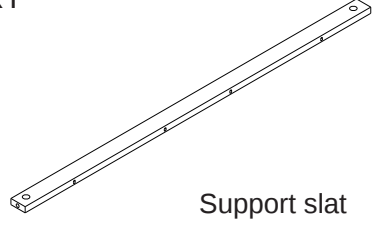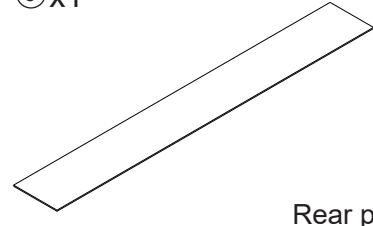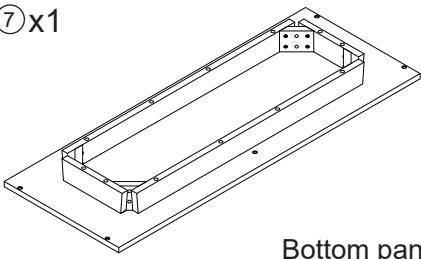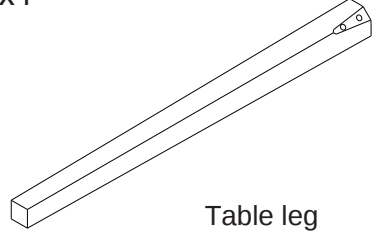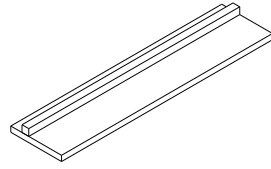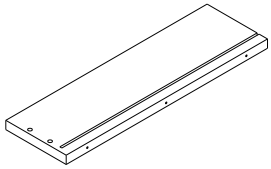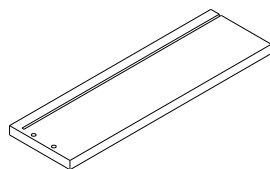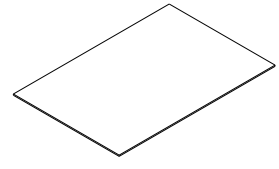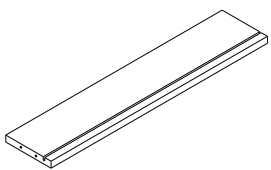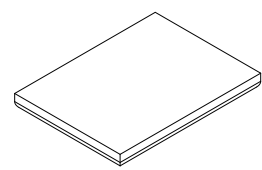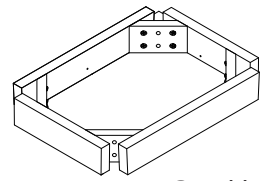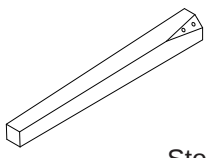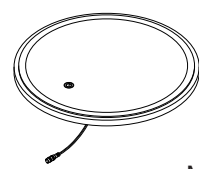① x1  LH side table apron	② x1  RH Side table apron	③ x1  Middle vertical panel
④ x1  Table top	⑤ x1  Support slat	⑥ x1  Rear panel
⑦ x1  Bottom panel	⑧ x4  Table leg	⑨ x2  Drawer front
⑩ x2  LH Drawer side	⑪ x2  RH Drawer side	⑫ x2  Drawer bottom
⑬ x2  Drawer back	⑭ x1  Stool top	⑮ x1  Stool bottom
⑯ x4  Stool leg	⑰ x1  Mirror	⑱ x1  Mirror support
⑲ x1  Mirror base plate		


Instructions For Fastening CAM-BOLT AND CAM-LOCK

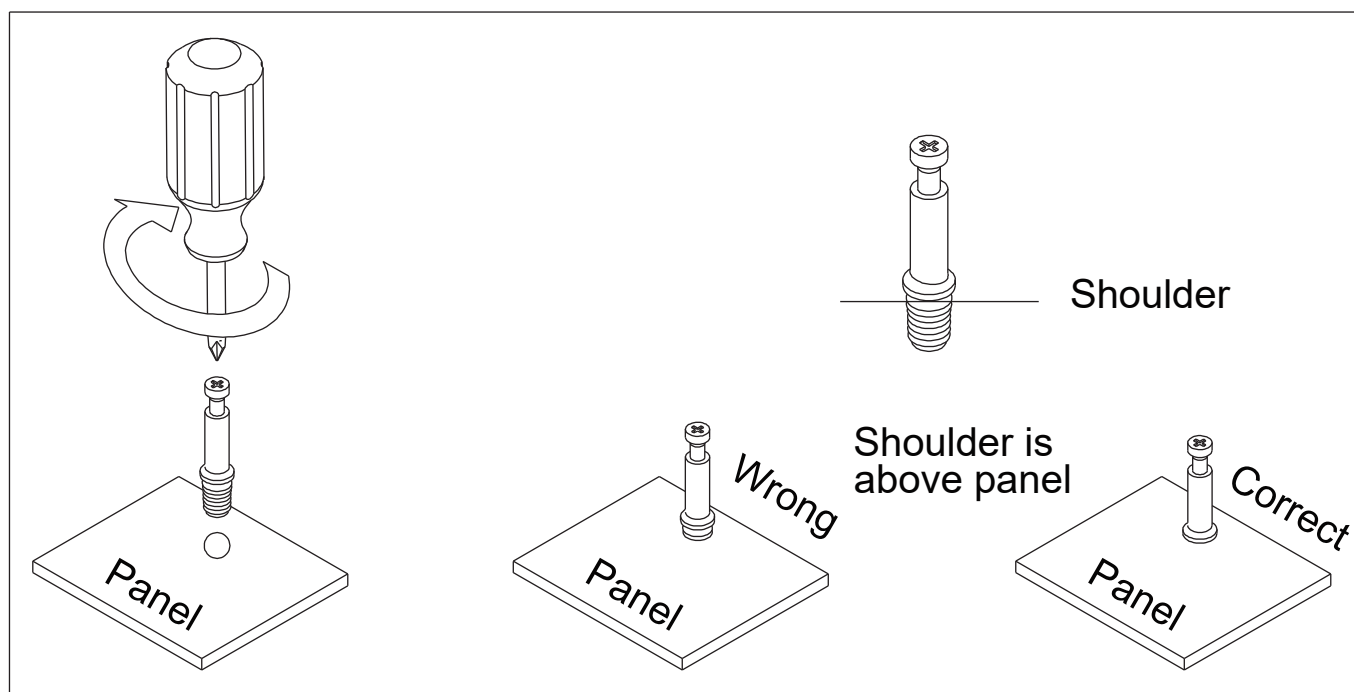

Attach the Cam-bolt to the specific pre-drilled holes on the panel. Use a Phillips Screwdriver to tighten Cam-bolt vertically until shoulder is flush (on the same level) with panel. Do not over-tighten or under-tighten.

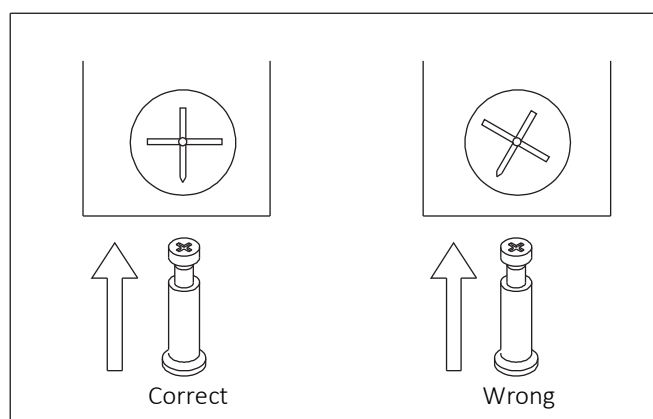


Align the arrow of the Cam-lock to the Cam-bolt head and insert the Cam-lock.

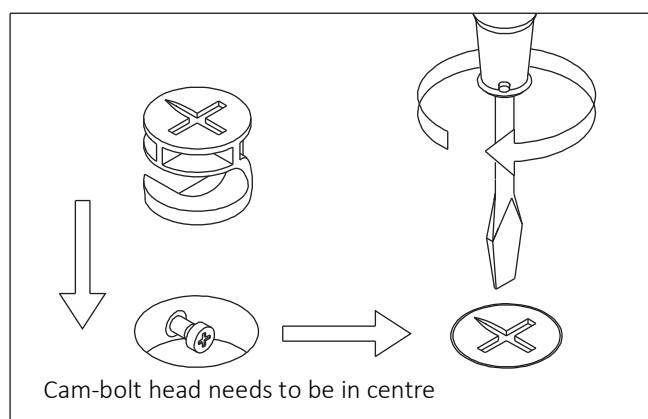

Use a Flat Screwdriver or Phillips Screwdriver to turn the Cam-lock clockwise one half a turn so it locks onto the head of the Cam-lock. Turn only until it is snug. Over-tightening could damage Cam-lock or/and Cam-bolt.

PHOEBE DRESSING TABLE WITH STOOL ASSEMBLY INSTRUCTIONS


STEP 1

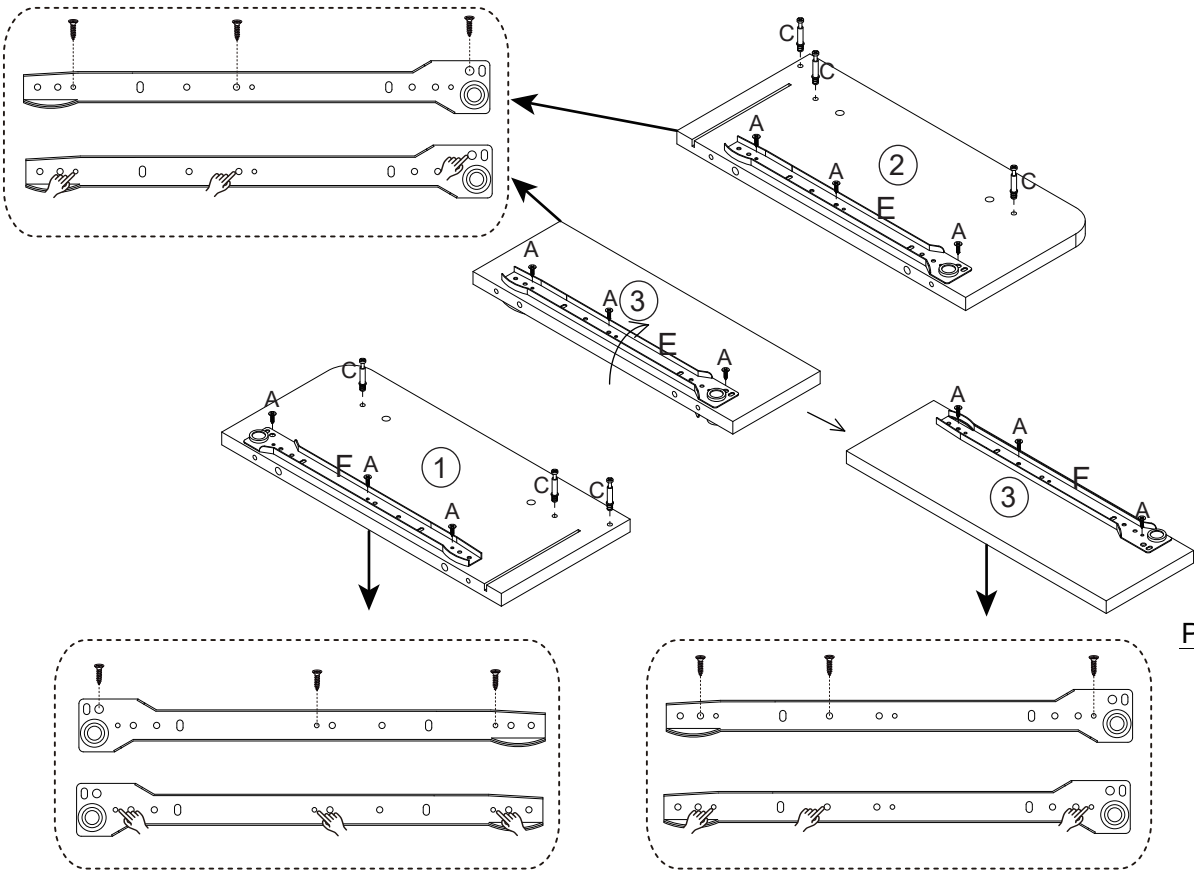

Parts required

①x1
②x1
③x1
Ax12
Cx6
Ex2
Fx2

STEP 2

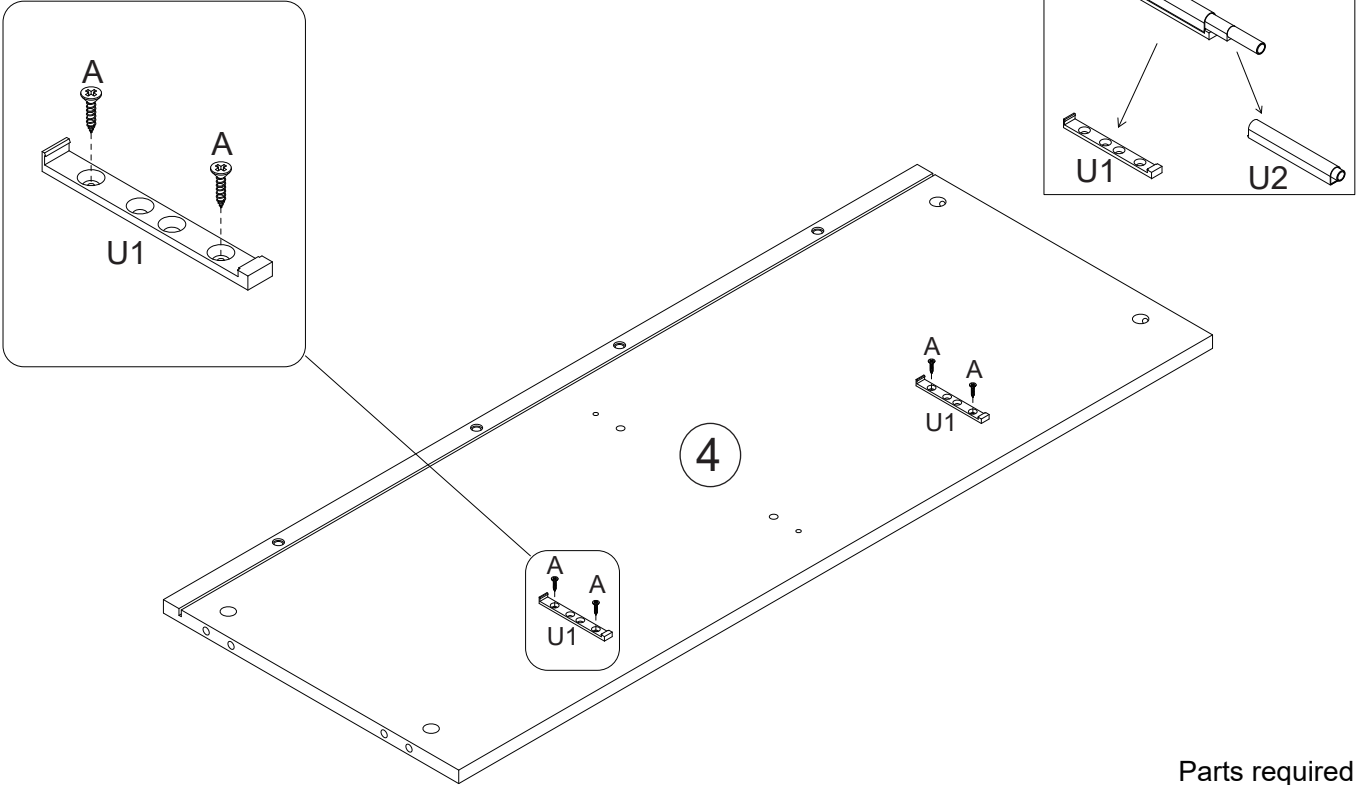


Parts required

④x1
U1x2
Ax4

PHOEBE DRESSING TABLE WITH STOOL ASSEMBLY INSTRUCTIONS

STEP 3

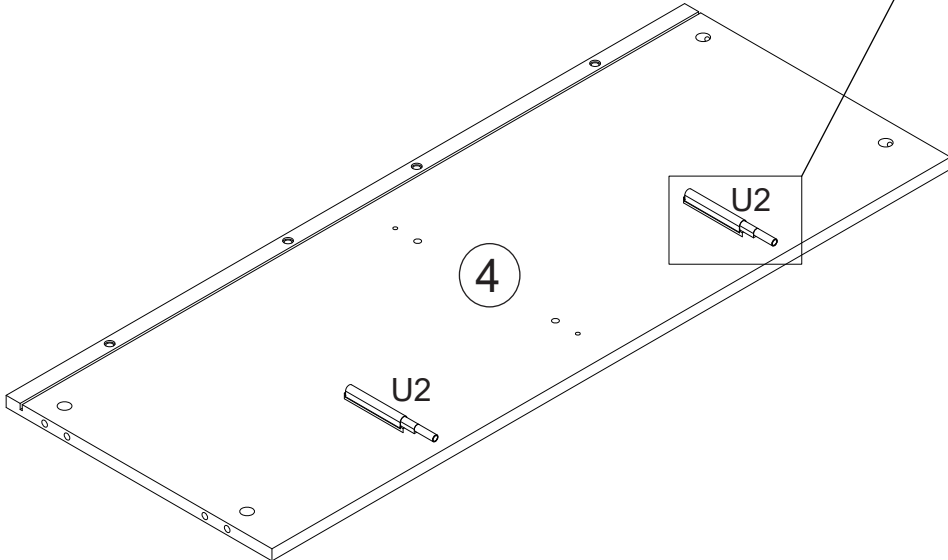


-
- ①
- U2
- U1
- ②
- U2
- U1
- ③
- U2
- U1
- ④
- U

To adjust the length, simply rotate the rebound device

Parts required

U2x2

STEP 4

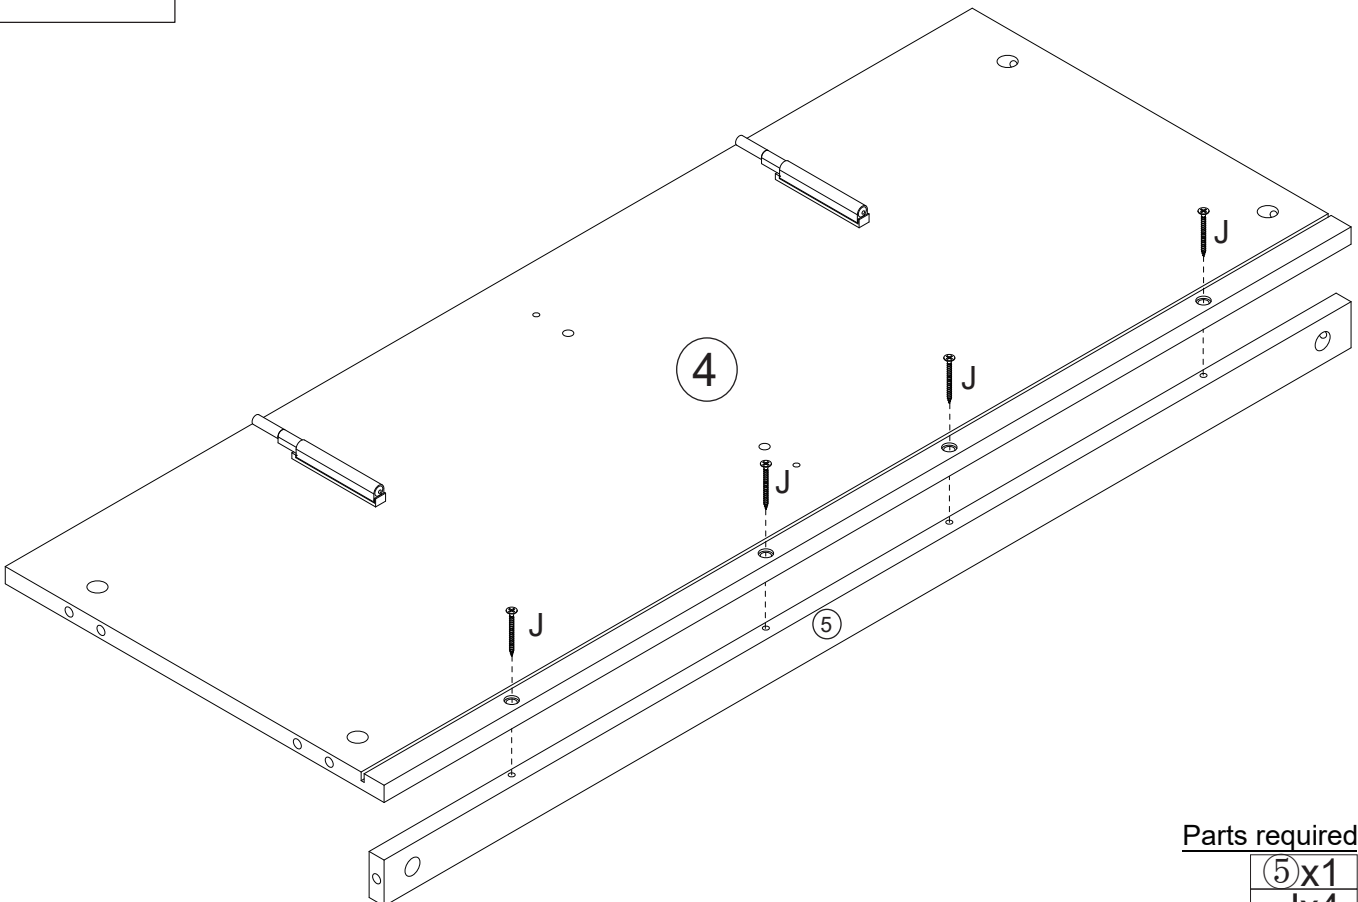


Parts required

⑤x1
Jx4

PHOEBE DRESSING TABLE WITH STOOL ASSEMBLY INSTRUCTIONS


STEP 5

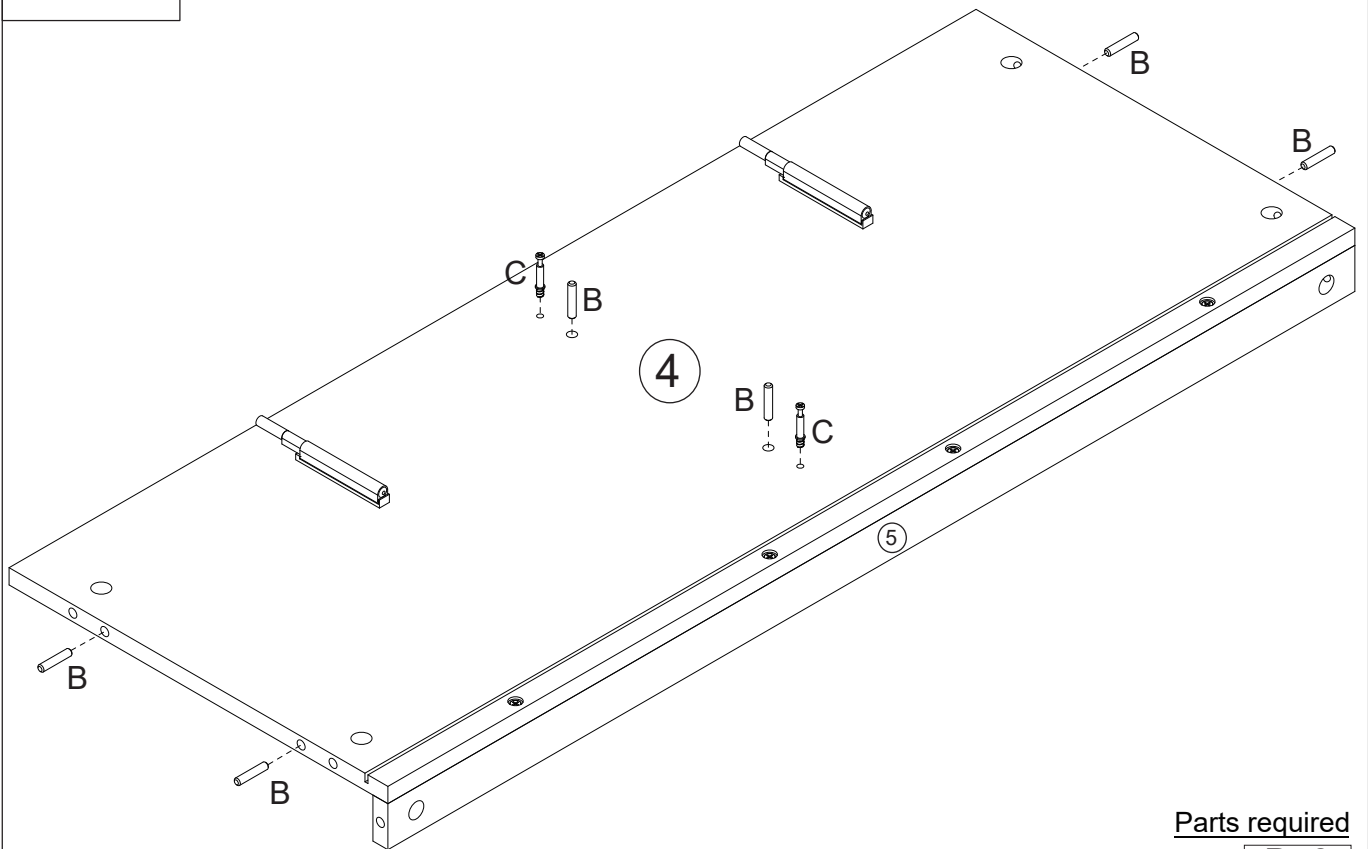

Parts required

Bx6
Cx2

STEP 6

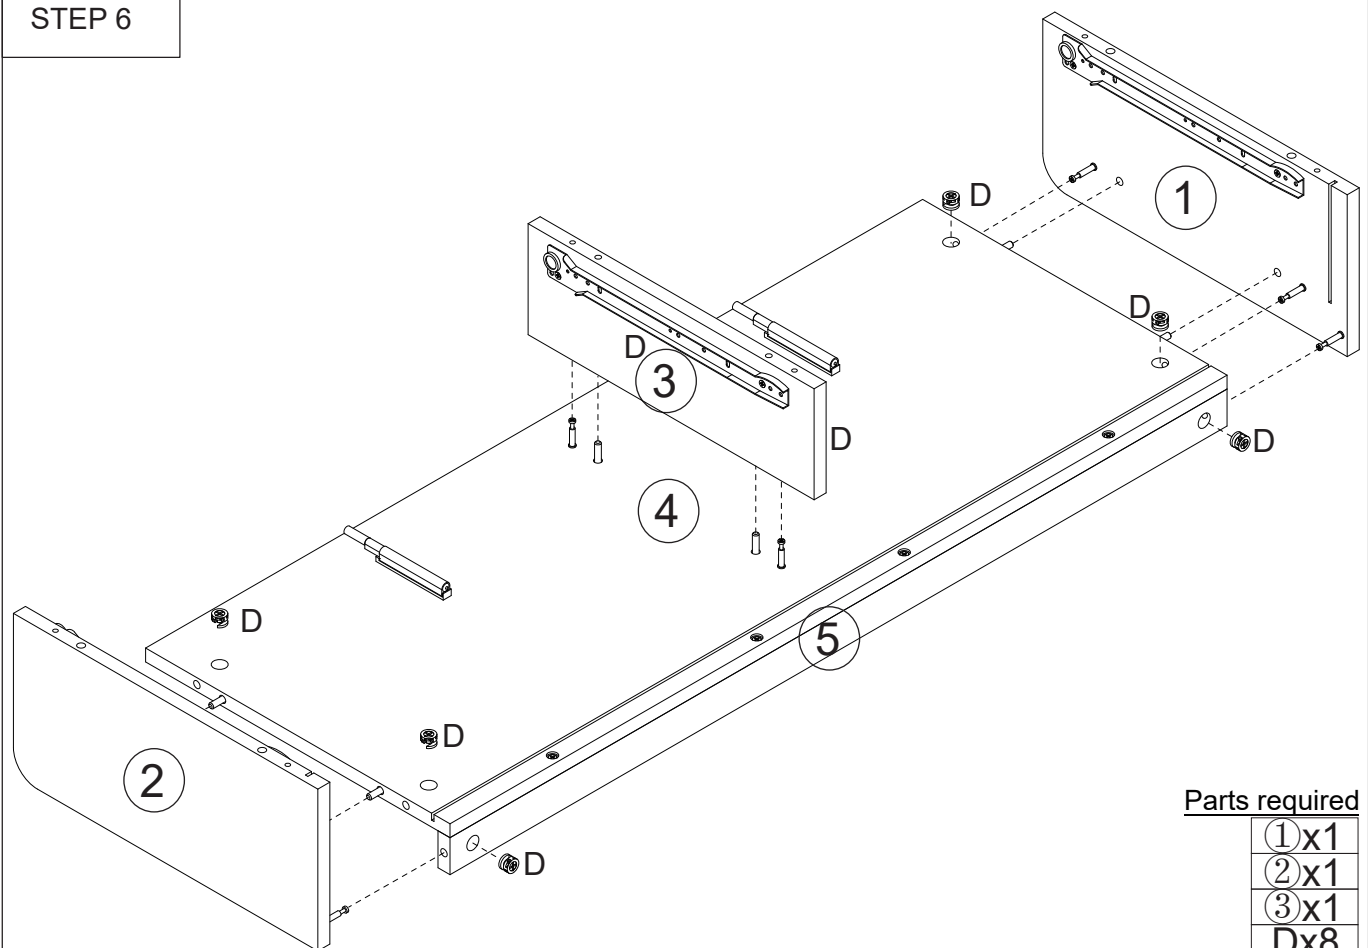


Parts required

①	x1
②	x1
③	x1
Dx8	

PHOEBE DRESSING TABLE WITH STOOL ASSEMBLY INSTRUCTIONS


STEP 7

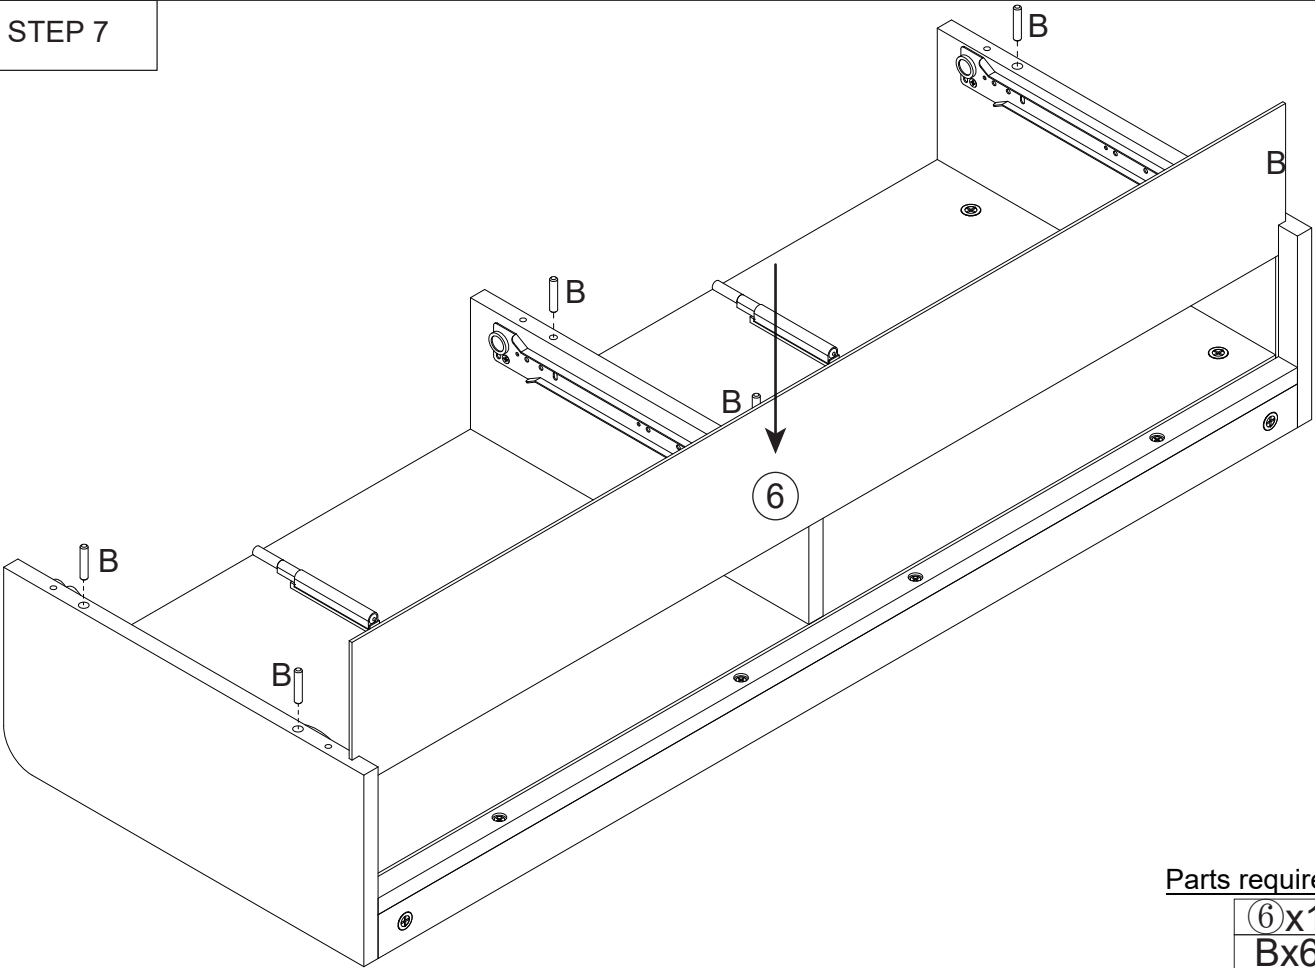

Parts required

⑥x1
Bx6

STEP 8

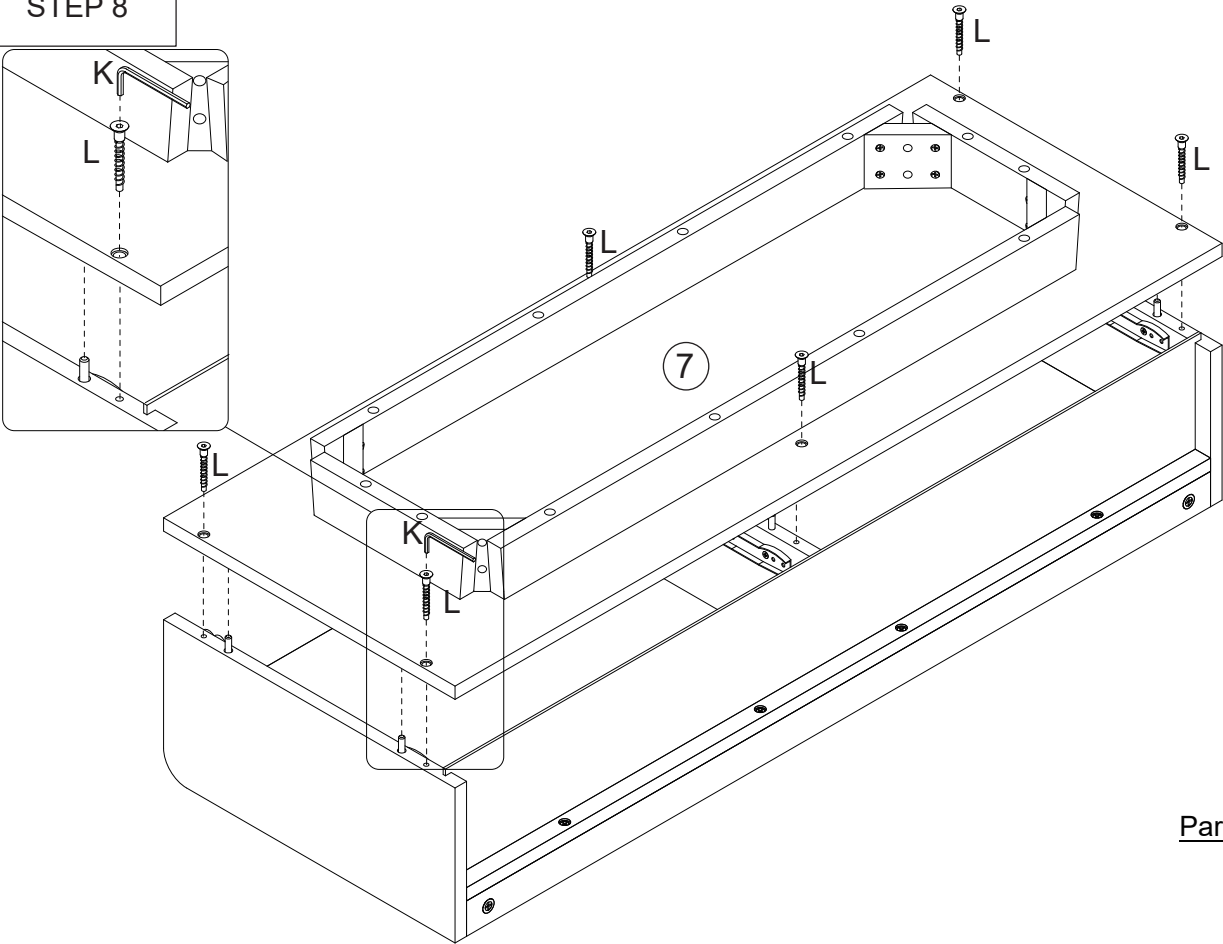

Parts required

⑦x1
Kx1
Lx6

PHOEBE DRESSING TABLE WITH STOOL ASSEMBLY INSTRUCTIONS

STEP 9

Parts required

8	x4
K	x1
M	x8
N	x8
P	x8
R	x4

STEP 10

x2

Parts required

9	x2
C	x8

STEP 11

x2


Parts required

10	x2
11	x2
D	x8

PHOEBE DRESSING TABLE WITH STOOL ASSEMBLY INSTRUCTIONS

STEP 12

x2

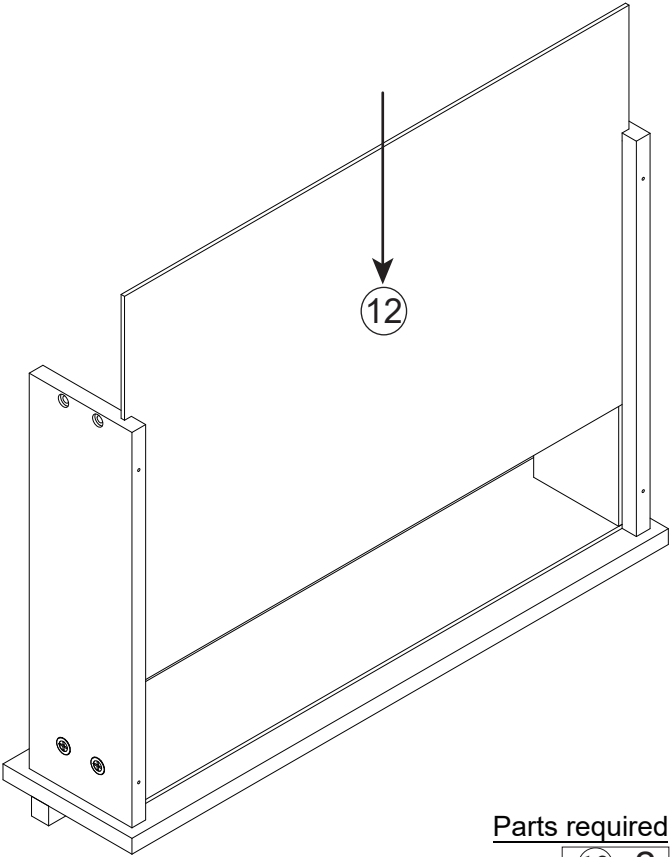


Parts required

12x2

STEP 13

x2

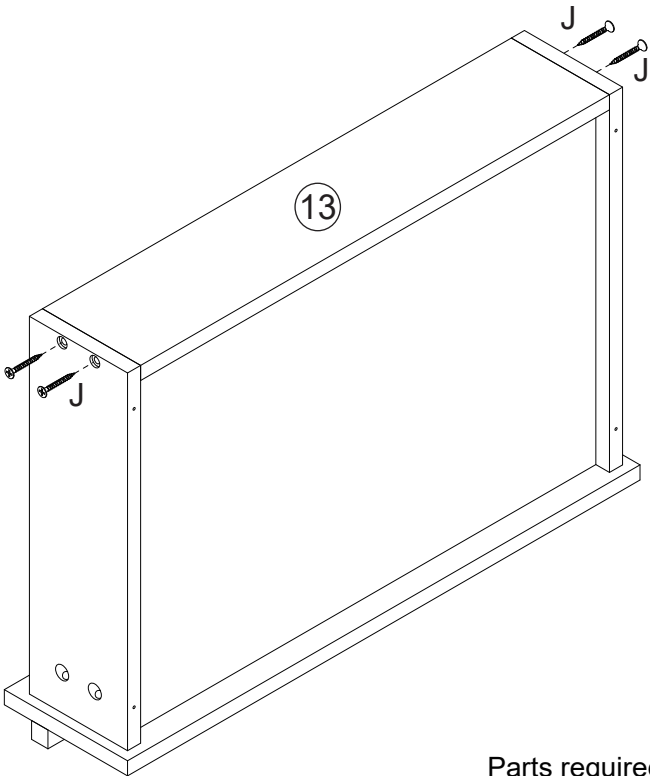


Parts required

13x2

Jx8

STEP 14

x2

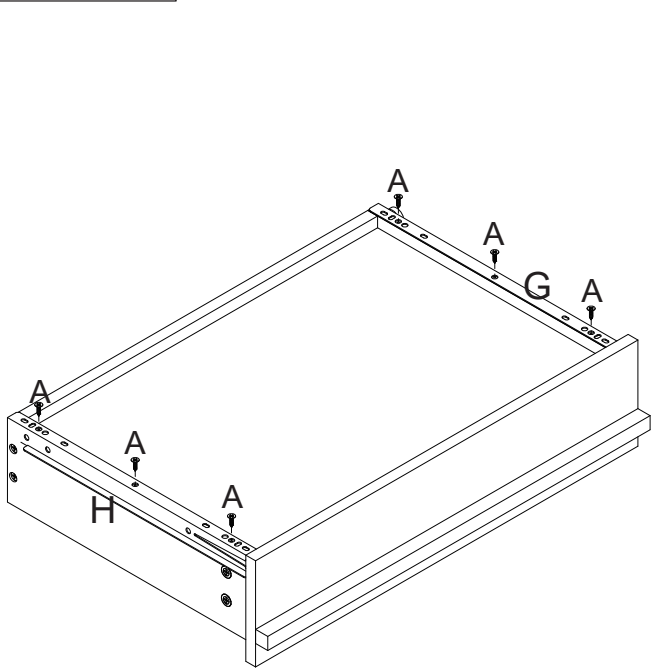


Parts required

Ax12

Gx2

Hx2

STEP 15

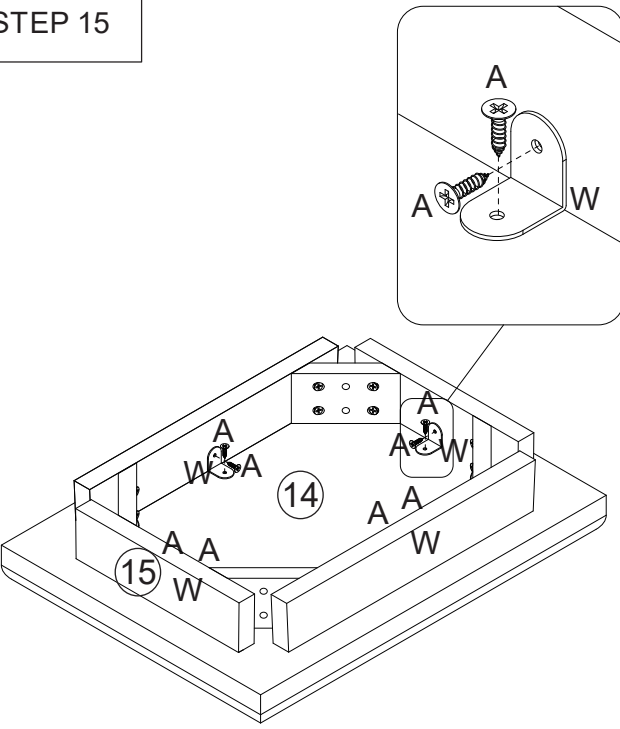

Parts required

14x1


15x1

Ax8

Wx4

PHOEBE DRESSING TABLE WITH STOOL ASSEMBLY INSTRUCTIONS


STEP 16

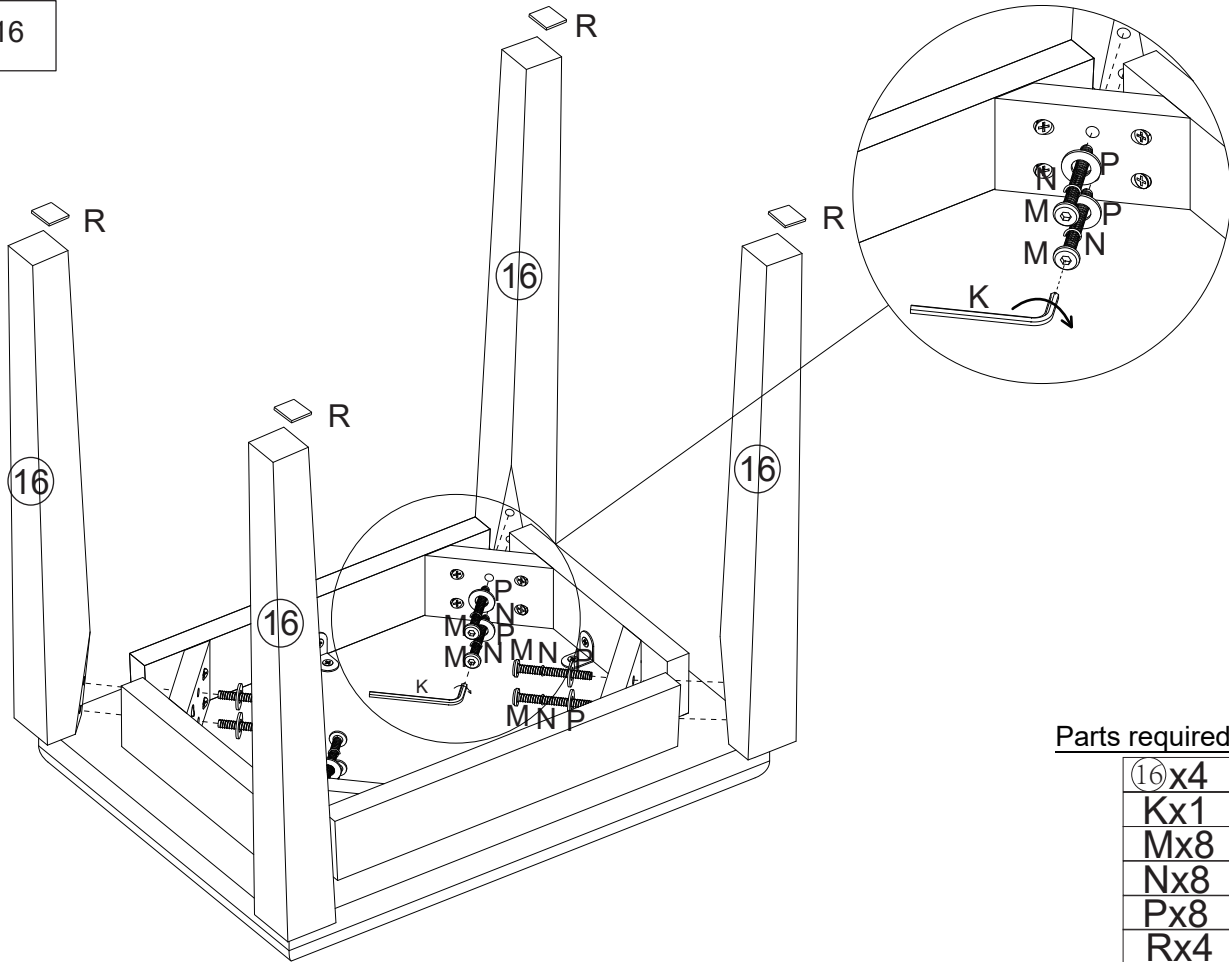

Parts required

16	x4
K	x1
M	x8
N	x8
P	x8
R	x4


STEP 17

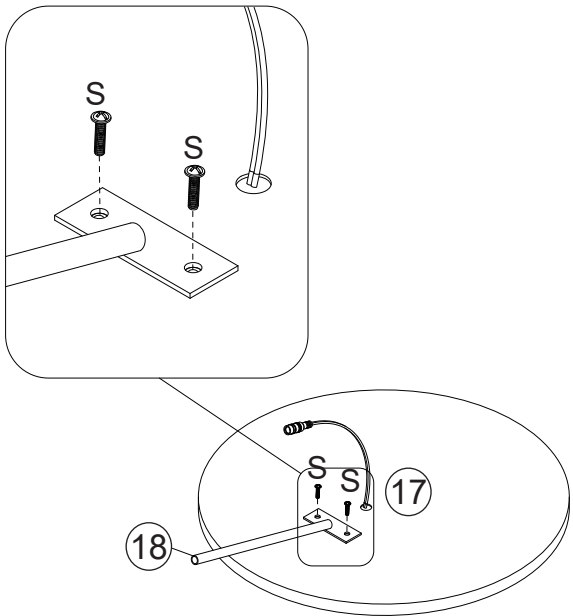

Parts required

17	x1
18	x1
S	x2

STEP 18

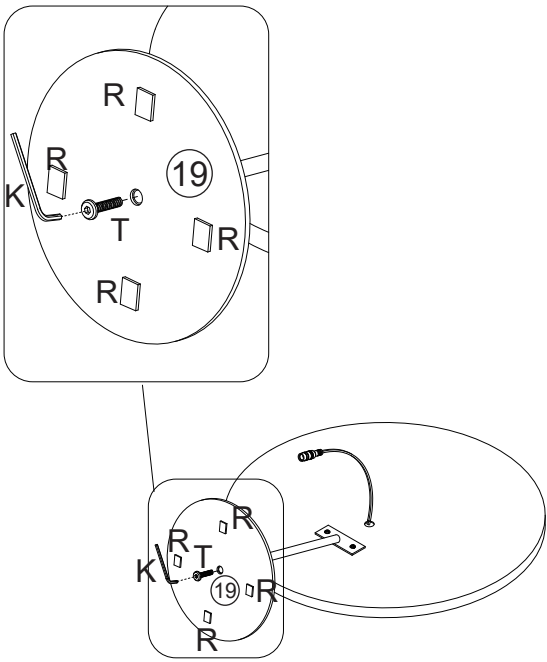


Parts required

19	x1
K	x1
R	x4
T	x1


PHOEBE DRESSING TABLE WITH STOOL ASSEMBLY INSTRUCTIONS

STEP 19

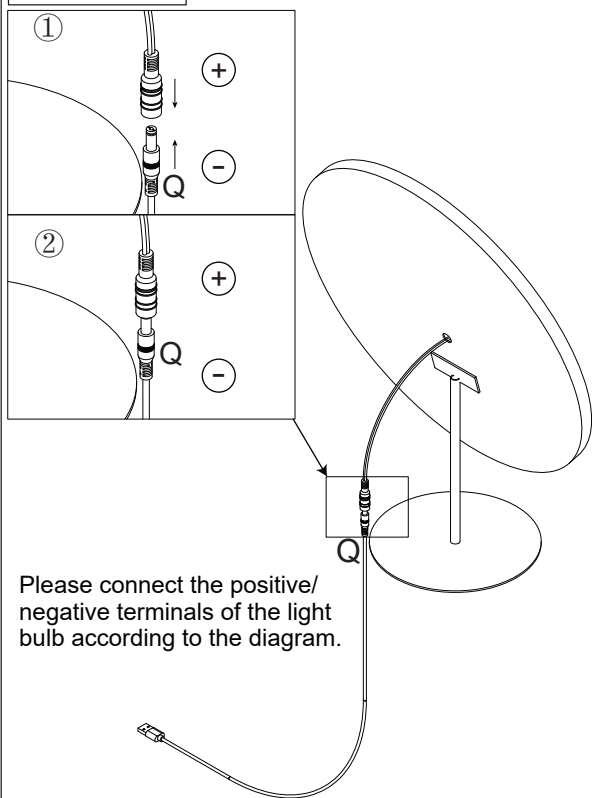

Please connect the positive/
negative terminals of the light
bulb according to the diagram.


STEP 20

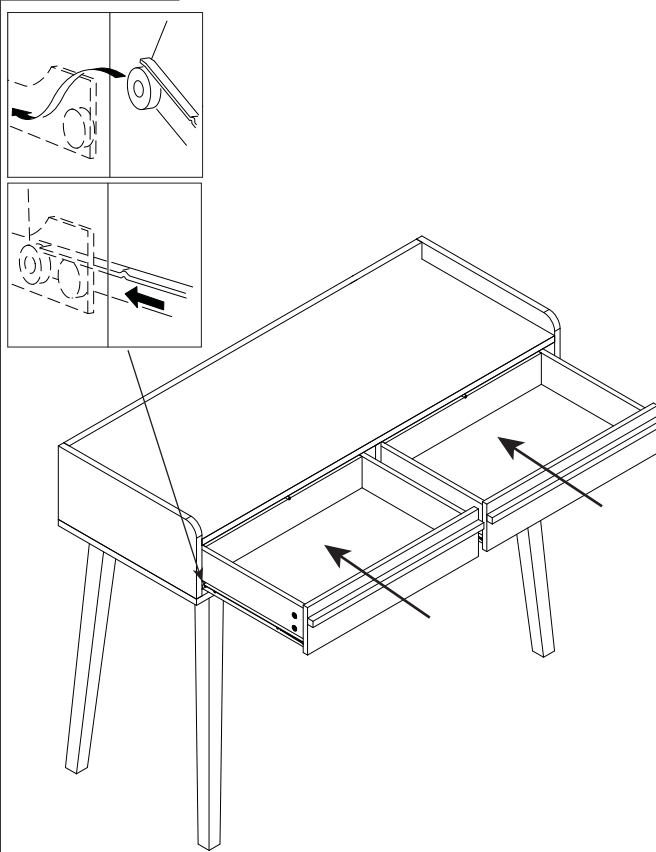

Parts required

Qx1

STEP 21





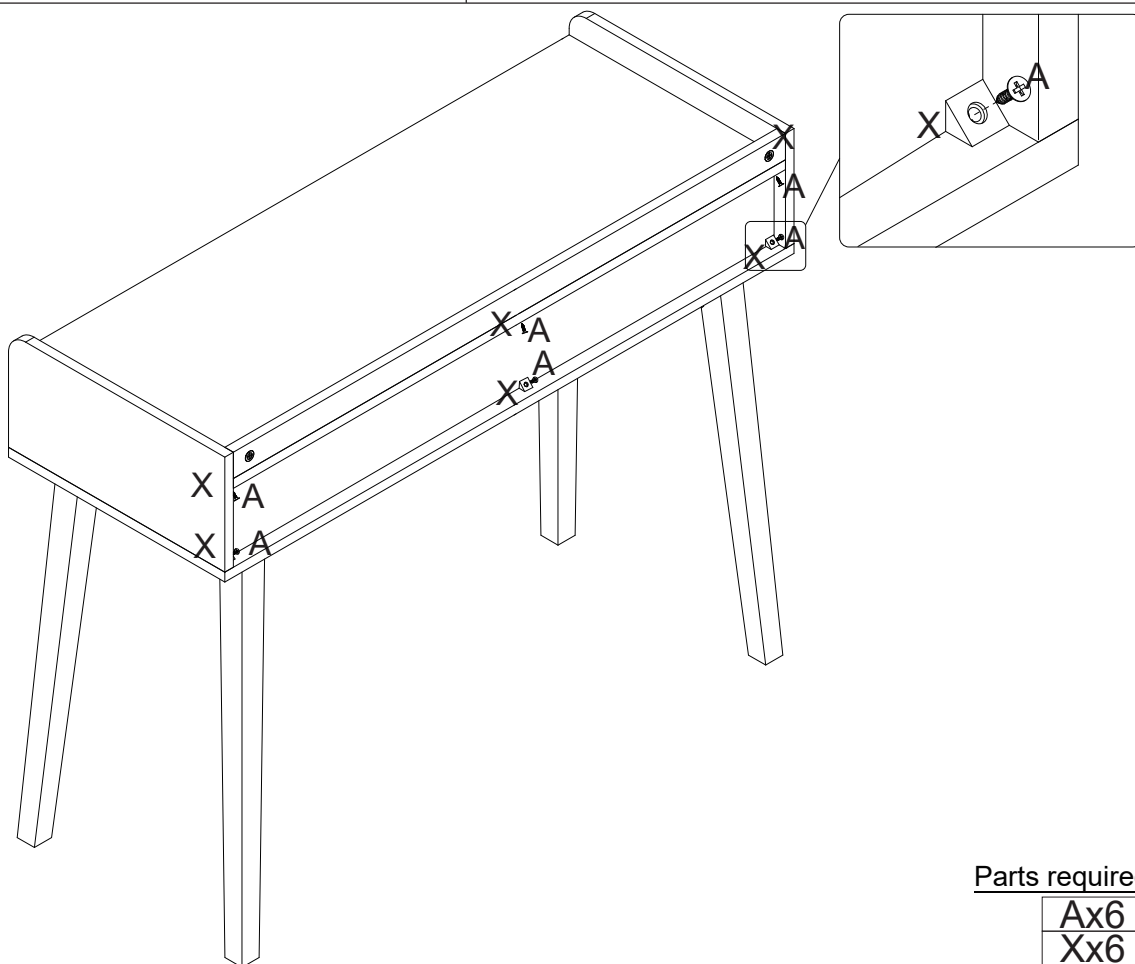


Parts required

Ax6
Xx6

PHOEBE DRESSING TABLE WITH STOOL ASSEMBLY INSTRUCTIONS

STEP 22

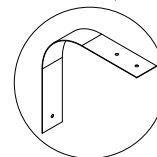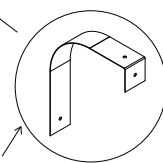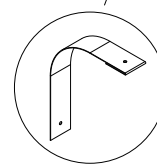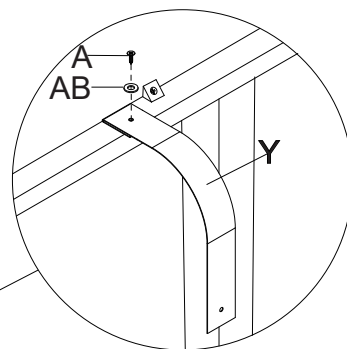
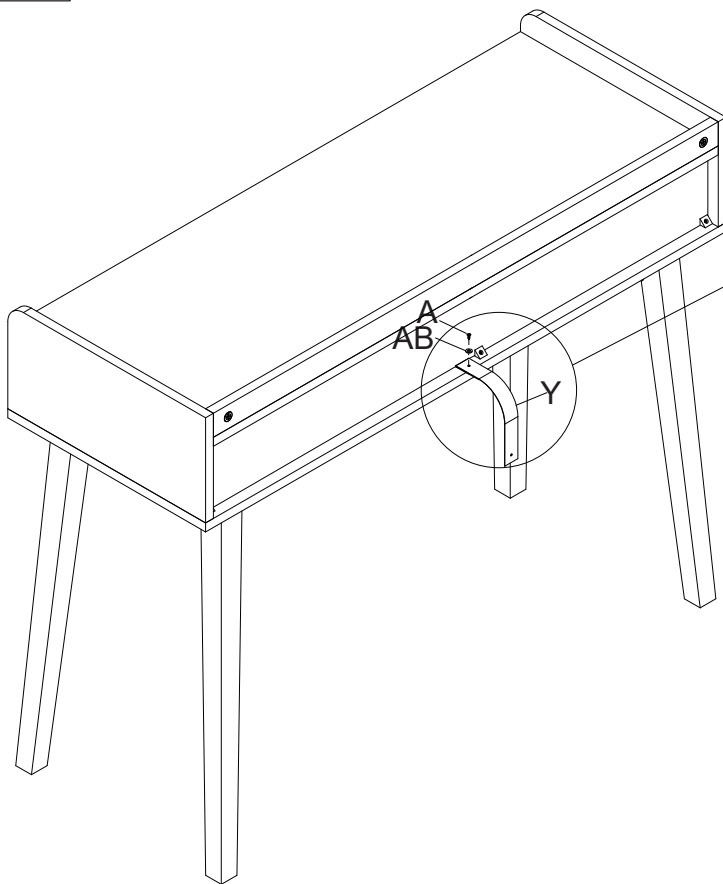


Parts required

Ax1
Yx1
ABx1

STEP 23

Note: The wall fixing plug supplied with this product is suitable for solid and brick wall.
For hollow and stud type walls fixing devices suitable for these types of walls must be obtained separately. Please ensure the fixing is safe and secure before use and that area to be drilled is free from hidden wires, water and gas pipes

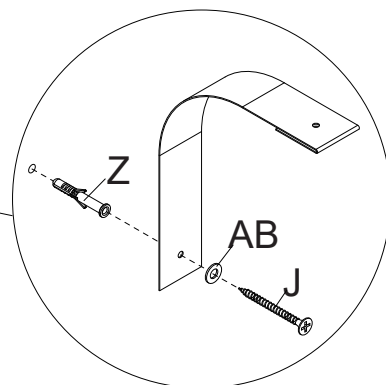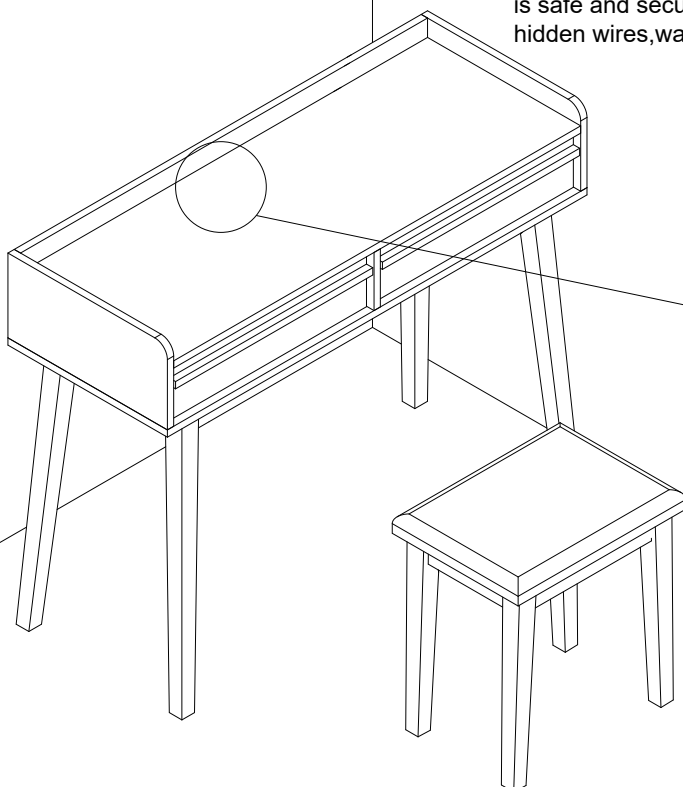


Parts required

Jx1
Zx1
ABx1

STEP 24




Note:
The premium LED light around the mirror can be switched to natural light, warm light and cold light.
1 Touch button to change light color.
2 Long press to adjust the brightness of each light mode.

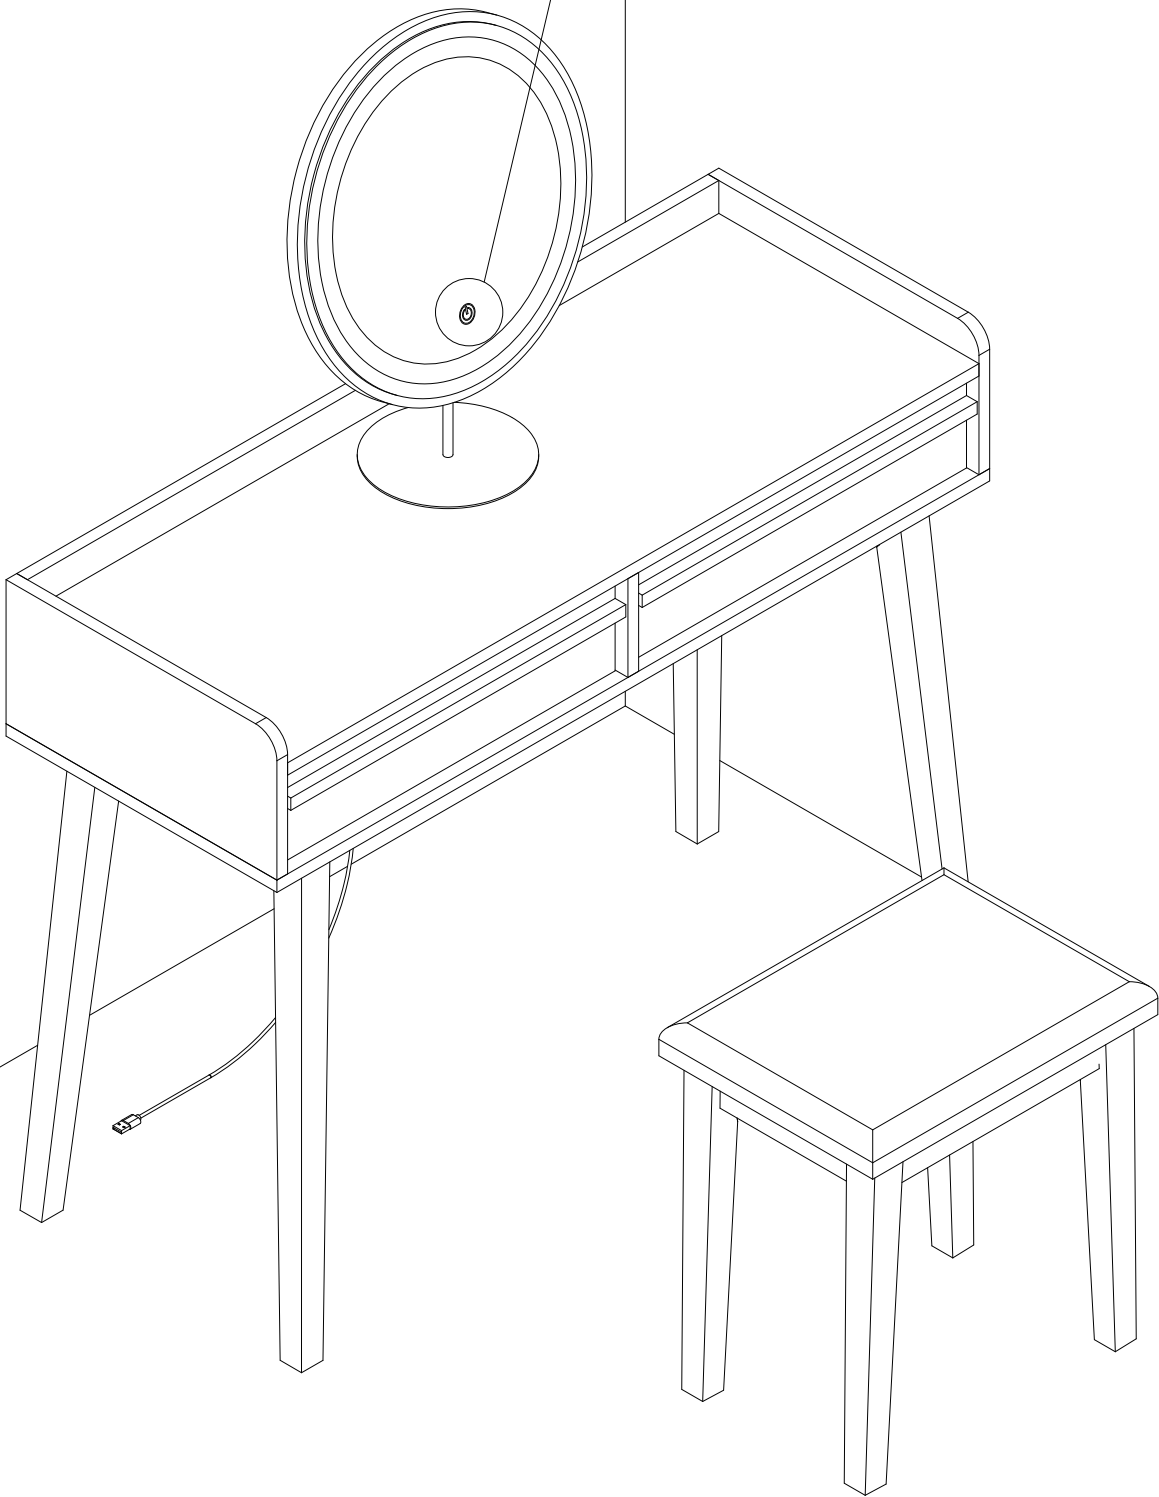


PHOEBE DRESSING TABLE WITH STOOL ASSEMBLY INSTRUCTIONS

Complete Assembly

Your PHOEBE DRESSING TABLE WITH STOOL is now completely assembled.
Periodically check to ensure that the components are in their proper position and free from damage.

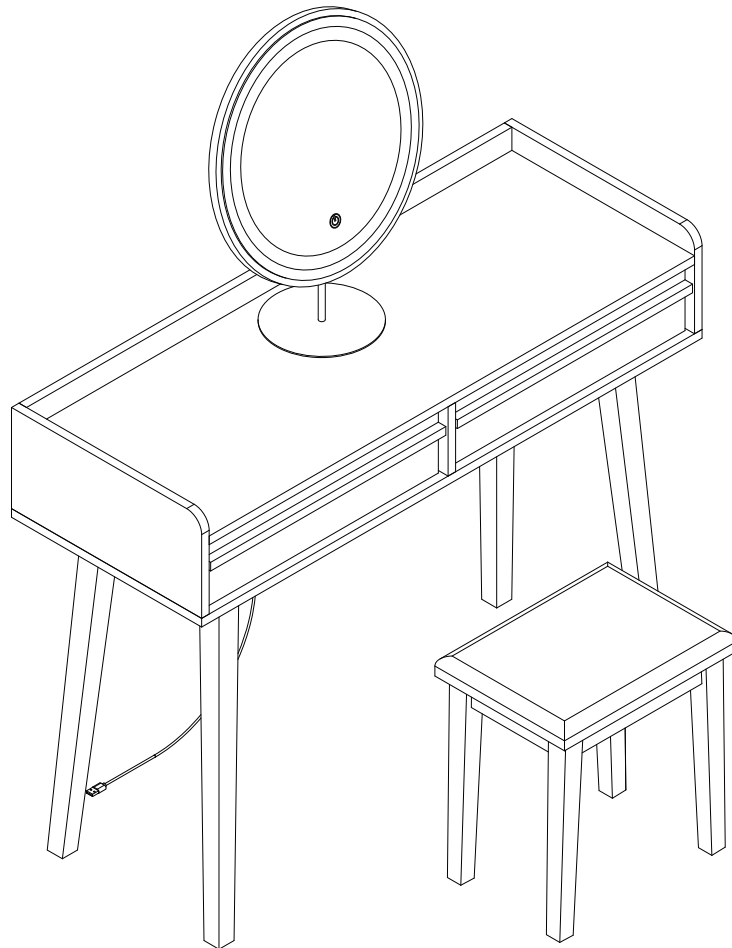

Keep instructions for future reference.

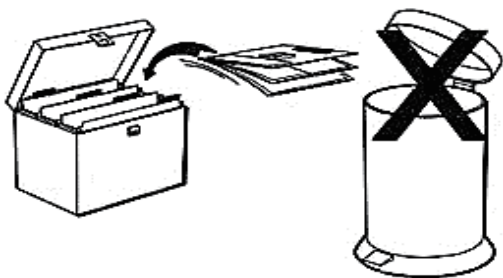

Supplied by : GFW THE FURNITURE
WAREHOUSE
Waterside Distribution Centre
Waterside Business Park
Johnson Road Lancashire
BB3 3RT
www.gfwlimited.co.uk