










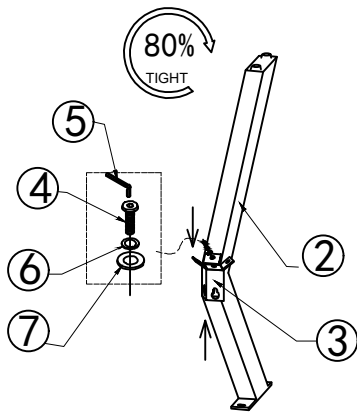


ASSEMBLY INSTRUCTION

APOLLO BEIGE SIDE TABLE:APO14


 X 2	 ① × 1	 ② × 4	 ③ × 1	 M6 X 16mm ④ × 4	 4# ⑤ × 1
 00:15	 $\phi 10.3$ ⑥ × 8	 $\phi 20/8*3$ ⑦ × 8	 M8 X 20mm ⑧ × 4	 5# ⑨ × 1	

STEP 1




Note: DO NOT fully tighten bolts until unit is fully assembled and all bolts are in place.

STEP 2

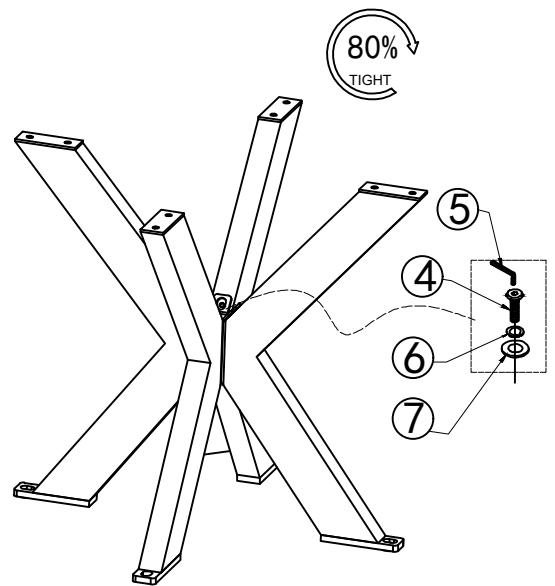

STEP 4

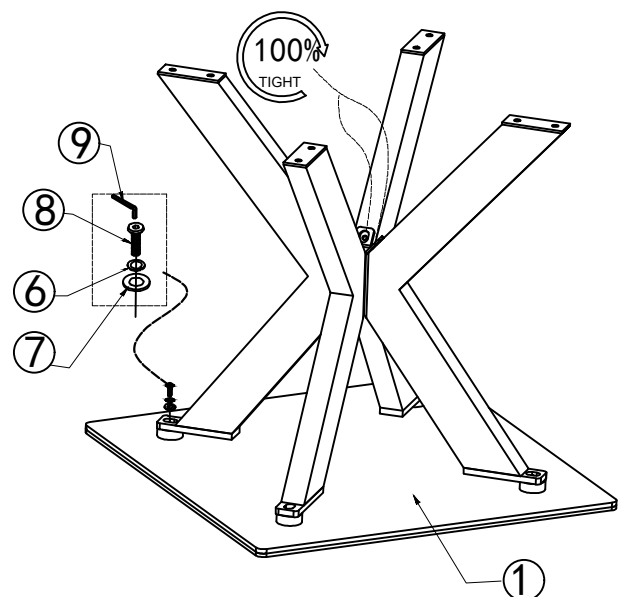

STEP 3

